PHOENIX TESTLAB

Königswinkel 10
32825 Blomberg, Germany
Phone: +49 (0) 52 35 / 95 00-0
Fax: +49 (0) 52 35 / 95 00-10
office@phoenix-testlab.de
www.phoenix-testlab.de

Annex C EUT internal photos

Photo 1: EUT inside view 2
Photo 2: EUT inside view 2
Photo 3: EUT/PCB connection board Mil front side 3
Photo 4: EUT/PCB connection board Mil rear side 3
Photo 5: EUT/PCB DC-DC converter front side view 4
Photo 6: EUT/PCB DC-DC converter rear side view 4
Photo 7: EUT/PCB graphic controller front side view 5
Photo 8: EUT/PCB graphic controller rear side view 5
Photo 9: EUT/PCB LED-Drivingboard front side view 6
Photo 10: EUT/PCB LED-Drivingboard rear side view 6
Photo 11: EUT/PCB light sensor card front side view 7
Photo 12: EUT/PCB light sensor card rear side view 7
Photo 13: EUT/PCB Touchcontroller front side view 8
Photo 14: EUT/PCB Touchcontroller rear side view 8
Photo 15: EUT/PCB USB-HUB&Sound front side view 9
Photo 16: EUT/PCB USB-HUB&Sound rear side view 9

Photo 1: EUT inside view

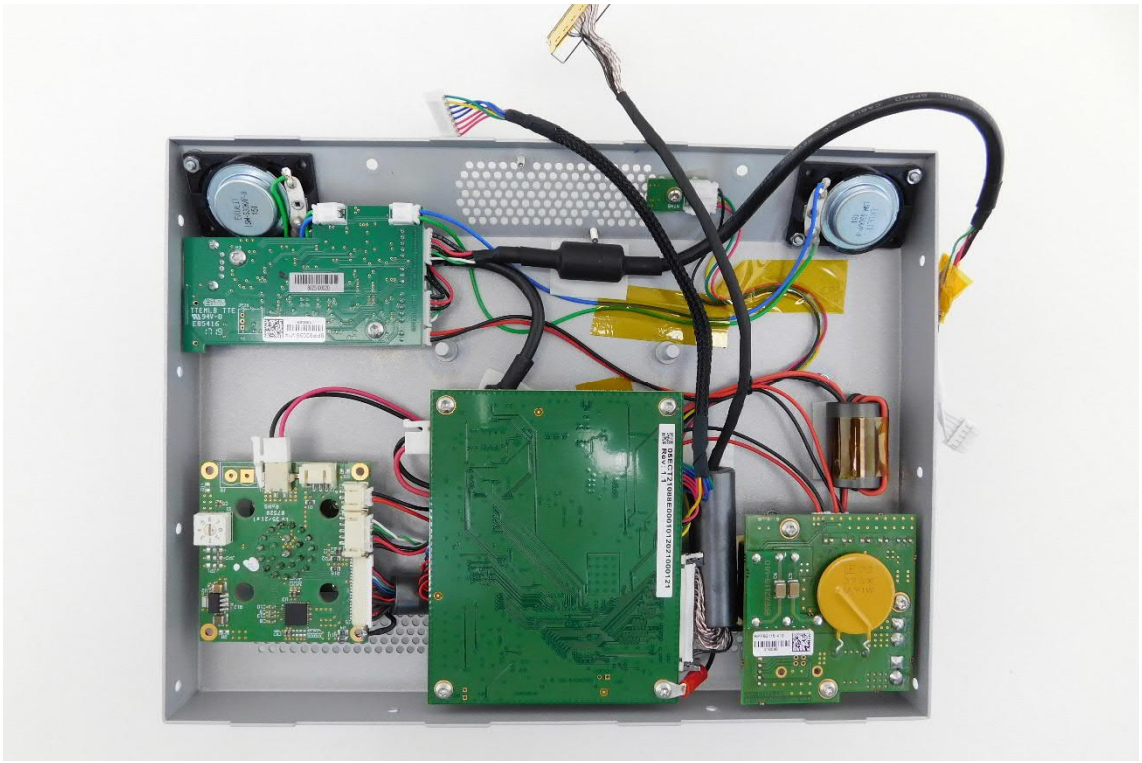

Photo 2: EUT inside view

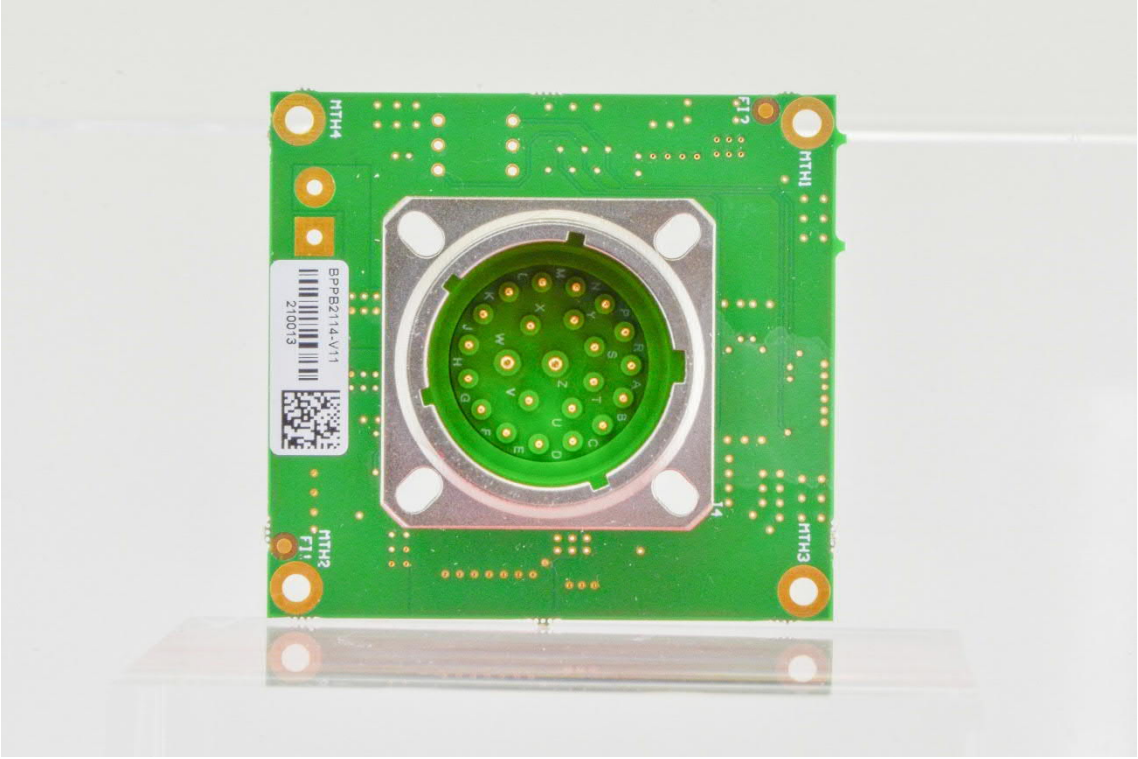

Photo 3: EUT/PCB connection board Mil front side

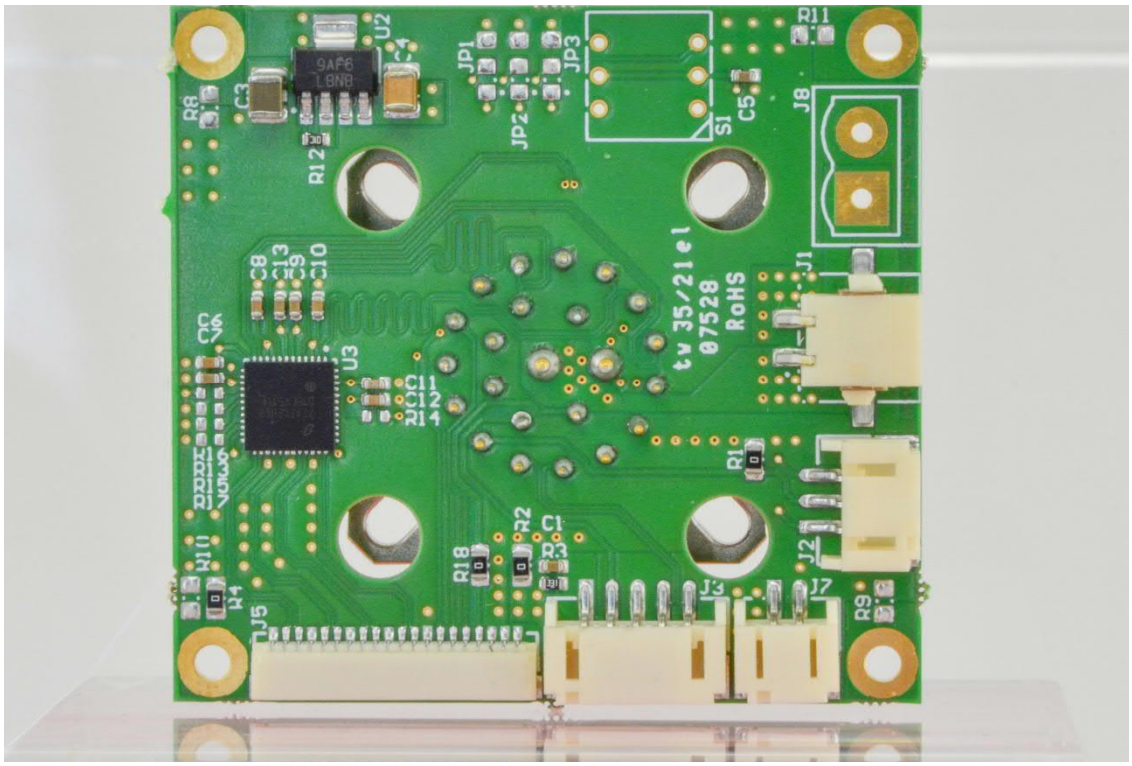

Photo 4: EUT/PCB connection board Mil rear side

Photo 5: EUT/PCB DC-DC converter front side view

Photo 6: EUT/PCB DC-DC converter rear side view

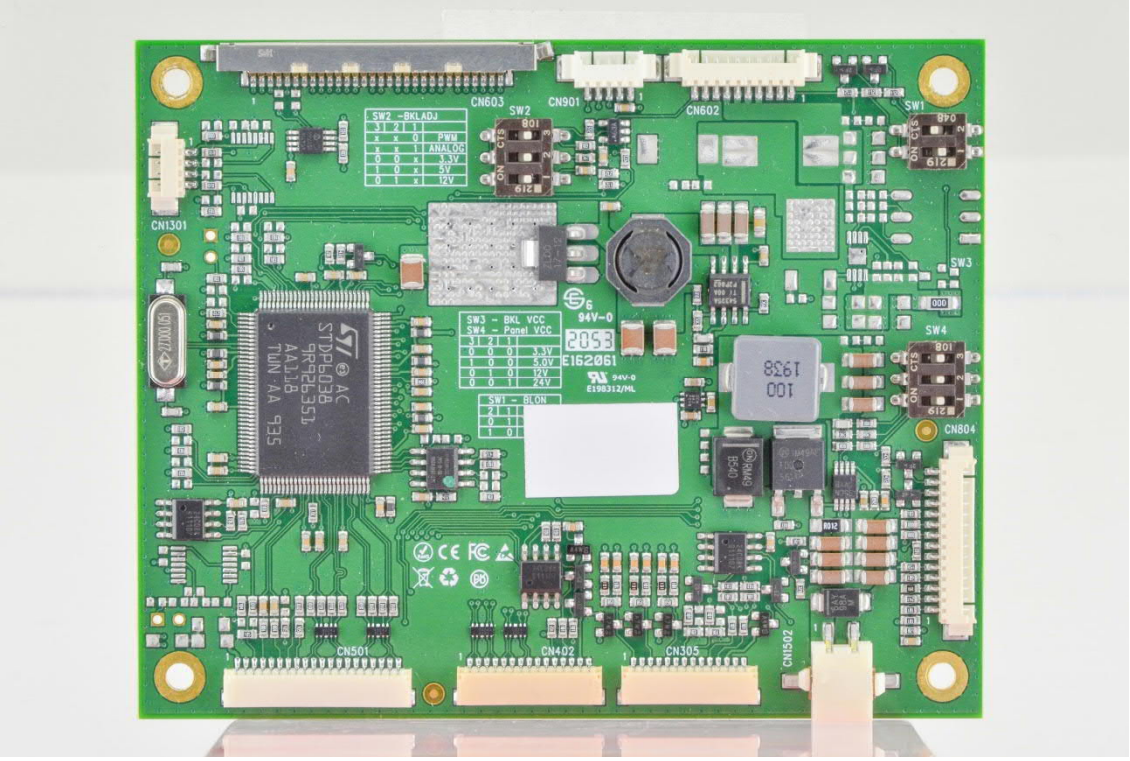

Photo 7: EUT/PCB graphic controller front side view

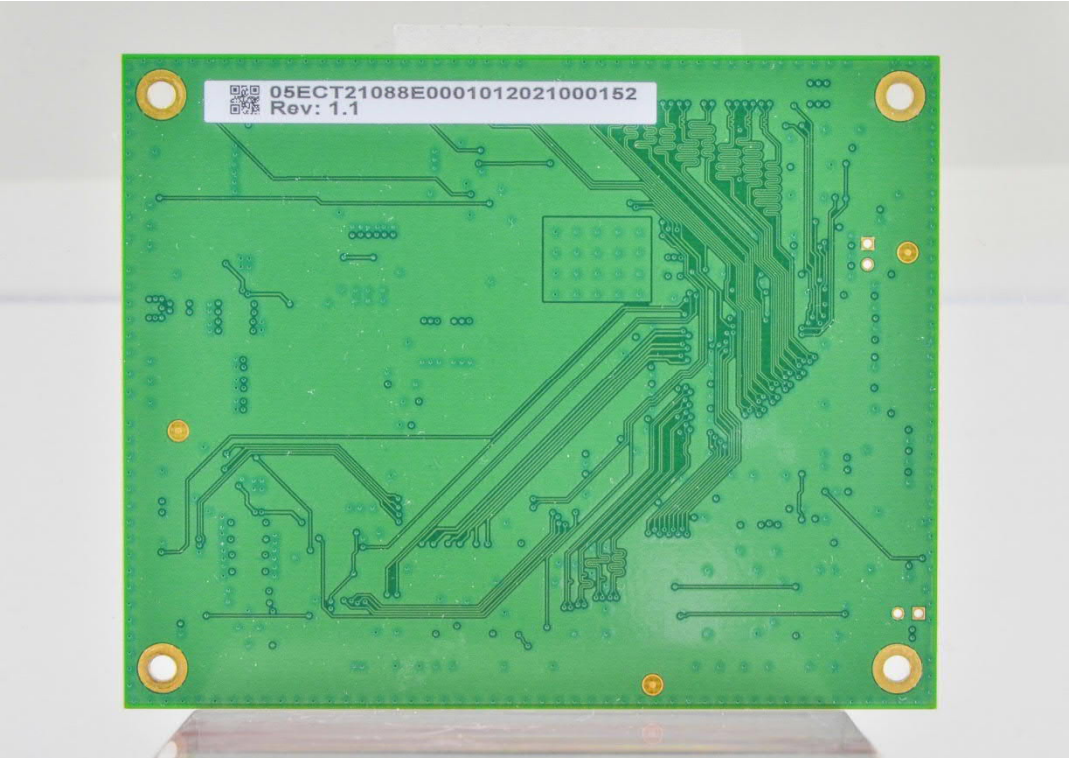

Photo 8: EUT/PCB graphic controller rear side view

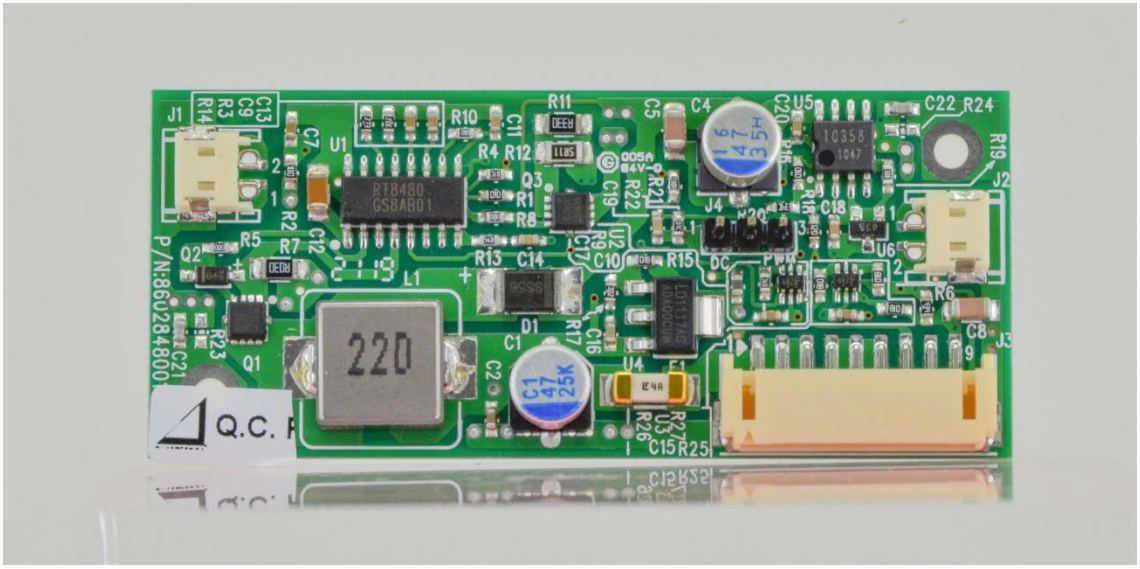

Photo 9: EUT/PCB LED-Drivingboard front side view

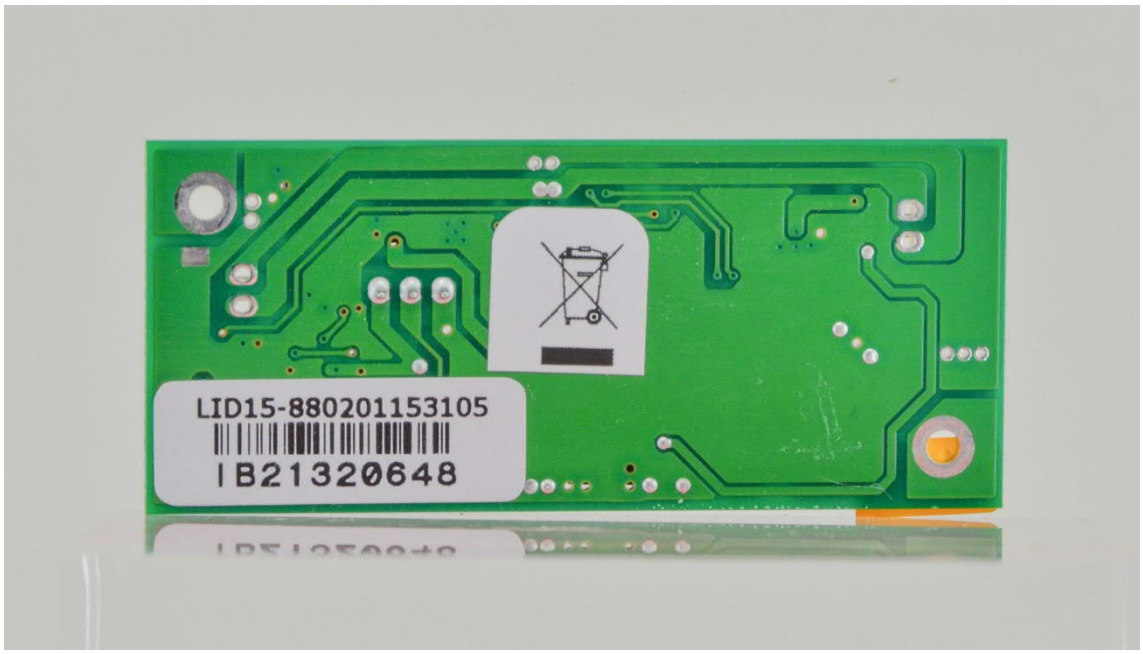

Photo 10: EUT/PCB LED-Drivingboard rear side view

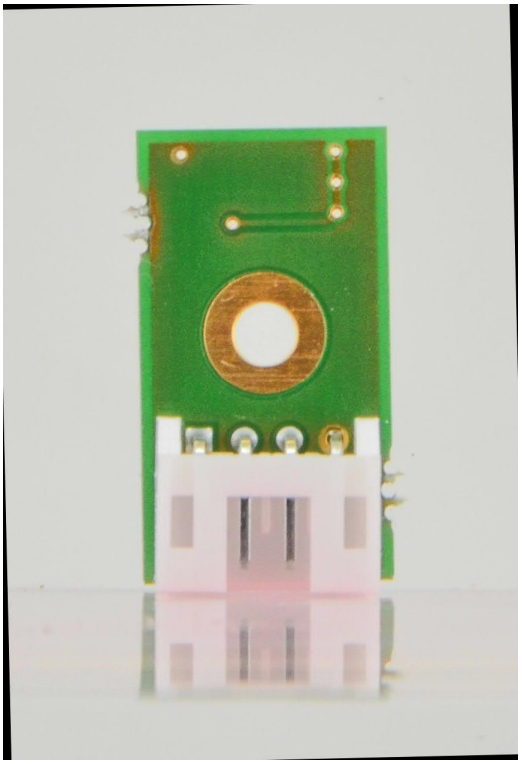

Photo 11: EUT/PCB light sensor card front side view

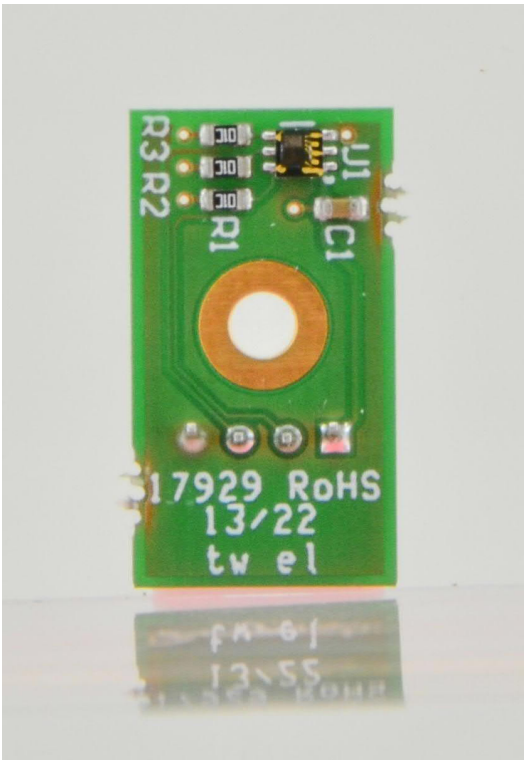

Photo 12: EUT/PCB light sensor card rear side view

Photo 13: EUT/PCB Touchcontroller front side view

Photo 14: EUT/PCB Touchcontroller rear side view

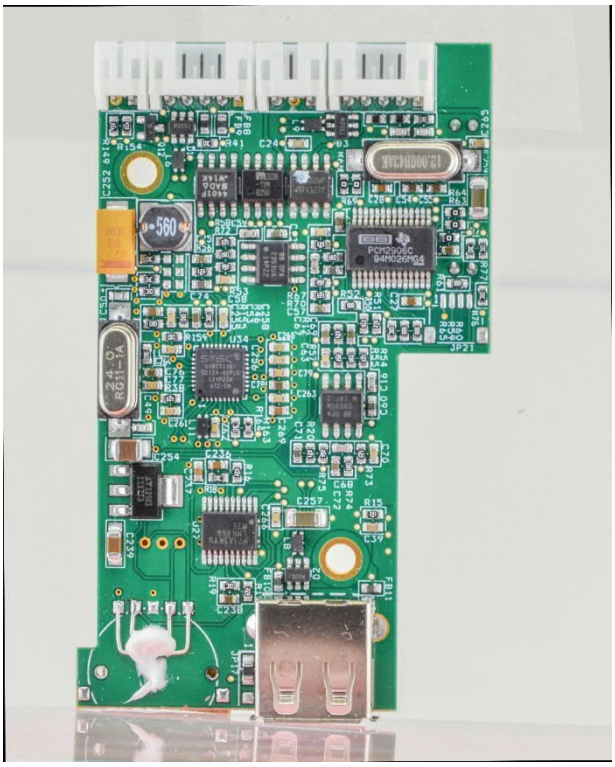

Photo 15: EUT/PCB USB-HUB&Sound front side view

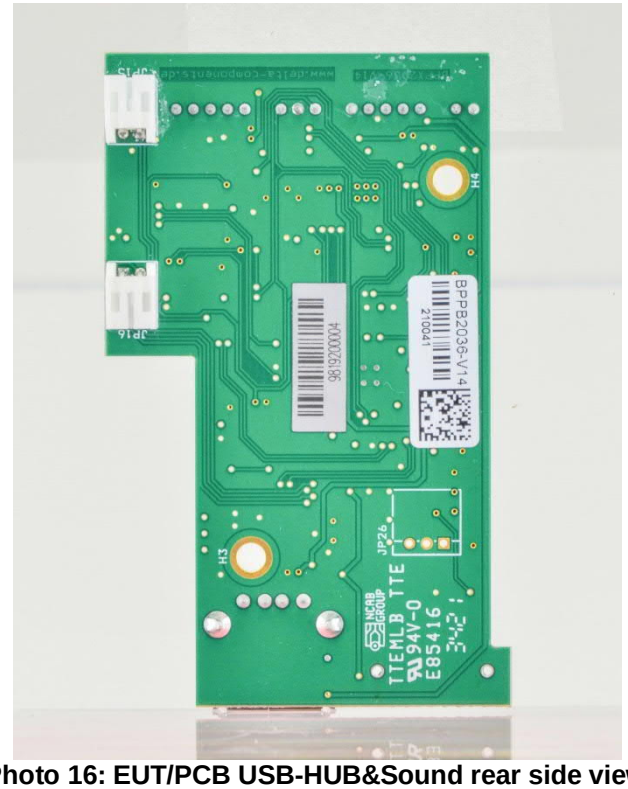

Photo 16: EUT/PCB USB-HUB&Sound rear side view