PLAYBULB

miffy © Mercis bv × MIPOW

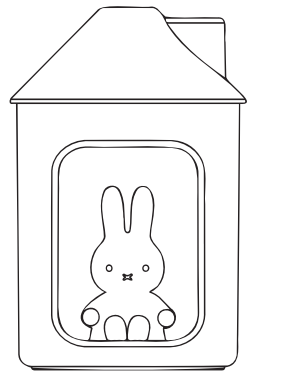

米菲加湿器

使用说明书

playbulb.com | mipow.com

基本参数

产品名称：米菲加湿器
型　　号：BTA700M
输　　入：5V ⎓ 1.0A
输入接口：USB-C
水箱容量：450mL(max)
产品重量：210g(不包含棉棒)
喷雾定时：5-8H
执行标准：GB4706.1-2005
主体材质：ABS+电子+五金
产品尺寸：93×148mm

使用方法



1、向右旋转然后上提起即可打开上壳，将适量水倒入水箱内。
2、将USB充电线连接到适配器或电脑USB插口。
3、接通电源单击“电源开关”，加湿器即开始工作；喷雾模式有三个档位，
单击第一次：一档　双喷雾模式；
单击第二次：二档　单喷雾模式，
单击第三次：三档　间歇喷雾模式，
单击第四次：加湿器停止工作。（以此循环）
4、长按电源开关开启或关闭灯光
双按电源开关切换灯光颜色。
5、使用“PLAYBULB X” APP进行更多灯光操作。

适用水质
自来水、矿泉水(不建议使用纯净水、蒸馏水会影响喷雾效果)

防干烧
双喷模式定时5小时，单喷模式定时8小时，自动关机，继续工作需重新启动。

更换棉棒



往下拔出棉棒管更换棉棒，更换时请注意底部弹簧，需顶紧

第一次使用棉棒时，为达到更好的喷雾效果，请将棉棒浸泡在水中，待棉棒完全湿润后再装回导管里。在长时间使用后发现喷雾量变小时，可以尝试拆下棉棒换另一边安装或更换新的棉棒。

警告：本产品不适用油性香水、香精等液体，否则会损坏机器。

App下载：

下载并安装 PLAYBULB X 应用到移动设备上。

Download on the App Store　Get it on Google play

适用苹果设备：
iPhone 8以上手机

支持大多数安卓4.3和蓝牙4.0及以上版本的安卓设备

产品连接：

- 打开移动设备上的蓝牙.
- 打开安装好的PLAYBULB X 应用，从设备列表中选择 PLAYBULB 图标连接进入。

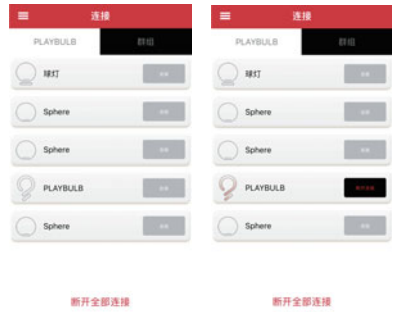

群组：

- 在组栏目下，可选取多个Playbulb设置为一组，同时控制多个Playbulb.
- 可添加多个组.



App菜单：

- 设备
  显示可连接的Playbulb列表.
- 定时器
  可设置Playbulb定时开/关或显示不同的色彩(Playbulb Color还可以设置闹钟)
- 偏好
  1. 可设置移动设备与Playbulb自动连接.
  2. 可设置移动设备震动传感器的灵敏度.
  3. 可设置APP密码
- 关于
  MIPOW公司相关信息.



定时：

例如，如何设置“唤醒”定时器。
1.连接到PLAYBULB
2.进入定时器界面
3.开启“唤醒”模式
4.设定时间
5.设定灯光亮起的周期时间。比如，选择0分钟，灯光在预定的时间立刻全亮；选择1分钟，灯光在预定的时间逐渐亮起，1分钟后全亮
6.开启颜色（不开启的话灯亮时为白光，可选择亮度）
7.设定灯的颜色
8.保存设置，灯光会在预设时间开启。



启用 开启
时间 22:40
周期 0分钟
色彩开关 开启
颜色
音量变化 无变化

光控：

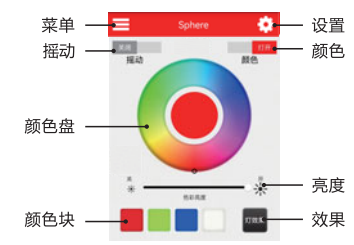

摇动：晃动手机, 灯 会随之变换颜色
颜色：可从颜色盘选取各种颜色,关闭后只有白光.
颜色盘/颜色块：可点选颜色控制相应的色彩
亮度：调节 灯光的亮度.

效果：

控制不同的灯光效果.
- 蜡烛效果
- 闪烁
- 渐变
- 彩虹
- 彩虹渐变



场景：

- 可在默认的三个照片上点选颜色，灯光会对应的色彩.
- 可从手机中添加照片.



设置：

- 更改Playbulb的名称
- 恢复出厂设置



产品中有害物质含量

部件名称	铅（Pb）	汞（Hg）	镉（Cd）	六价铬（Cr（VI））	多溴联苯（PBB）	多溴二苯醚（PBDE）
主机	×	○	○	○	○	○
配件	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
表中标记“×”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。
印刷电路板组件*：包括印刷电路板及其零部件，电子元器件等
根据产品型号不同，您所购买的产品可能不会含有以上所有部件
在中华人民共和国境内销售的电子电气产品必须标识此标志，标志内的数字代表在正常的使用状态下的产品的环保使用期限。

保修卡须知

多谢选购MIPOW产品，本产品出厂时符合相关规定 标准并经过严格审核。我司为客户提供自购买之日起十二个月内的保修服务。需要保修服务时，请出示正本和发票正本，并详细填写保修相关内容。保修服务只限于产品在正常使状态下出现的质量问题。不适用于因人为损坏、粗暴操作、不正确的使用、人为摔伤、外力挤压、进水、人为拆装修改、过度高温、外壳人为磨损或不可抗力的损坏(如地震、水灾、火灾、飓风或战争等),保修逾期的,保修服务将收取相应的维修费。

注:MIPOW拥有对上述所有条件之最终裁决权,并随时对条款和条件作出更改,而无需另行通知。

保修卡

品名:
型号:
购买日期:
销售点:
客户姓名:
移动电话:
联系地址:
故障描述:

请仔细填写您的信息，请将此保修卡剪下，连同需维修产品一起寄回我司维修中心 。

RoHS

售后服务中心
售后客服电话:400-0064769
www.mipow.com|www.playbulb.com

扫码关注

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

caution：this device is intended used in a uncontrolled environment, please keep at least 20cm away from the device while it works

Specification：

Product name: miffy humidifier
Input: 5V ⎓ 1.0A
Water tank capacity: 450mL(max)
Product size: 93×148mm
Main material: ABS + electronics+metal
Model number：BTA700M
Input：USB-C
Spray Timer: 5-8h
Product Weight: 210g

Instructions for Use：



1. Rotate the top cover to the right and then lift it up to open, fill the water tank with clean water.
2. Connect the USB charging cable to a power adapter or a computer USB port.
3. Press the Power Button once to turn on the humidifier. There are three mist modes:
1st Press: mode 1 — Dual mist
2nd Press: mode 2 — Single mist
3rd Press: mode 3 — Intermittent mist
4th Press: Stop operation
(The modes cycle in this order.)
4. Long press ON/OFF button to turn the night light on or off.
Double press ON/OFF button to change the light color.
5. Download and use the “PLAYBULB X” App for additional lighting controls.

Suitable Water: Tap water, mineral water.Purified water and distilled water are not recommended, as it may affect the mist performance.

Dry-Run Protection: Humidifier will automatically shut down after 5 hours in Dual Spraying Mode, and automatically shut down after 8 hours in Single Spraying mode. Press the power buton to restart work.

Replacing the Cotton Wick:



When replacing the cotton wick, make sure the spring at the bottom is properly positioned and firmly pressed in place.

Before first use, soak the cotton wick in water until it is fully saturated.This helps achieve better mist performance. After soaking, reinstall the wick into the tube.If the mist output becomes weak after long-term use, remove the cotton wick and try reinstalling it with the other end facing up, or replace it with a new one.Pull the wick tube downward to remove the cotton wick.

Warning: Do not use oil-based perfumes, essential oils, fragrances, or similar liquids, as they will damage the device.

PLAYBULB X App Download

Download and install the PLAYBULB X App onto mobile device

Download on the App Store　Get it on Google play

Apple devices:
iPhone 8 and above

Android version:
Support most Android device of Android 4.3 and Bluetooth 4.0 or above version

Connection:

- Turn on your mobile device's Bluetooth.
- Open the PLAYBULB X App, choose and connect the PLAYBULB Sphere from the device list, after connected, tap the PLAYBULB sphere icon /name into App main interface.

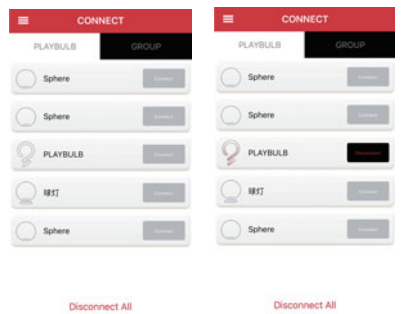

Group:

- choose several PLAYBULBs as one group to control them at the same time.
- available to create several groups



App Menu：

- Devices
  show all connectable PLAYBULBS
- Timer
  set up PLAYBULB on / off or colors display at certain time (PLAYBULB color supports alarm clock function.)
- Preferences
  1.set up automatic reconnection.
  2.Set up the sensitivity of the mobile device vibration sensor.
  3. Set up App password.
- About
  MIPOW introduction.



Timer:

how to set "Wake Up" timer:
1.Connect your PLAYBULB.
2. Go to "Timer".
3.Slide the OFF/ON button to ON.
4.Set the time.
5. Set cycle time for lights on.
For example,
Select 0 minute, the light will be fully lit at the predetermined time
Select 1 minute, the light will be gradually lit at the predetermined time, and full lit after 1 minute
6. Turn on the color (default color is white when the color is turn off, brightness is optional)
7. Set the color of the light
8. Save the Settings, the light will turn on at the preset time.



Enabled On
Time 22:40
Period 0 Minutes
Color Switch On
Color
Volume Change No Change
Volume

Light Control：



Shake: shake your phone to change color randomly.
Color: select color on the color wheel. If turn off, PLAYBULB will only show white light.
Color wheel/block: tap to select color to make it show on PLAYBULB.
Brightness: adjust the light brightness of PLAYBULB

Effect：

make PLAYBULB display different light effects.
- candle
- flashing
- pulsing
- rainbow
- rainbow fading



Scene：

- tap to select colors on the three default pictures and PLAYBULB Will display the Corresponding colors.
- available to add scene pictures from your mobile device.



Setting

- rename PLAYBULB
- factory reset



WARRANTY CARD：

Thank you for your purchase MIPOW's product. MIPOW warrants this producthas been tested and proved to be qualified for delivery in conformity with standard. This Limited Warranty for the product shall last for twelve (12)months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided. This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damageor loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme temperatures; unauthorized modifications; unauthorized opening or repair; forces of nature; or other actions beyond the reasonable control of MIPOW. In case of when the warranty does not apply, repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service center.

MPOW reserves the right to amendment and the final interpretation of the above terms without prior notice.

WARRANTY CARD
Product Name:
Model No.:
Purchase Date:
Dealer Shop:
Customer Name:
Order No./ Website Name:
Mobile Phone No.:
Contact Addr.:
Postal Code:
Failure Description:

For more efficiency on handling your case,pleaseprovide correct info and mail with the failure productto MIPOW authorized repair center.

RoHS

MIPOW Customer Support Center:
www.mipow.com|support@mipow.com
www.playbulb.com