Portable Sound Machine N20



glocusent


Catalogue

English - (1-5)
Deutsch - (7-11)
日本語 - (12-16)
About Glocusrnt - (17-22)
Glocusent Customer Support - - - - - - - - - - - - - - - - - - (23)

Scan the QR Code for 36-month upgraded VIP warranty

For Customer Service
www.glocusent.com | service@glocusent.com

Product Overview

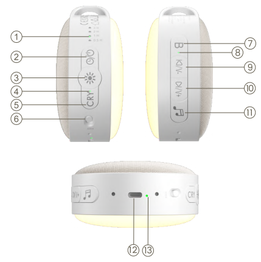

①.Timer Indicators
②.Power & Timer Button
③.Light Button
④.Cry Detection Indicator
⑤.Cry Detection Button
⑥.Child Lock
⑦.Bluetooth Button
⑧.Bluetooth Indicator
⑨.Previous Track/Volume Down Button
⑩.Next Track/Volume Up Button
⑪.Audio Mode Button
⑫.Type-C Input Port
⑬.Power & Charging Indicator

Power On/Off

Press" ⏻ "button to power on.
Press and hold" ⏻ "button to power off.

Timer Setting

When the device is on, press" ⏻ " button to enable/disable timer and adjust timer setting.

Cancel Timer → Timer 0.5H → Timer 1H → Timer 2H → Timer 3H

Audio Mode Setting

Mode Switch

Press the" ♫ "button to switch playback mode.

White Noise Sleep → Lullaby → Cheer up Music

Press and hold the " ♫ " button to switch playback mode.

Track Skip

Short press the" ᴋ⊃/ᴠ- "button to skip to the previous track.
Short press the" ᴅ⊂/ᴠ+"button to skip to the next track.

Volume Control

Press and hold the " ᴋ⊃/ᴠ- " button to decrease the volume.
Press and hold the " ᴅ⊂/ᴠ+" button to increase the volume.

Track List

White Noise For Sleep

S01	Light Rain	S11	Air Conditioning
S02	Breeze in Leaves	S12	TV Static
S03	Torrent	S13	Hair Dryer
S04	Ocean Waves	S14	Sandpaper Sound
S05	Rain Dripping	S15	Thunderstorm
S06	Crickets	S16	Train
S07	Bird Song	S17	Airplane Cabin
S08	Wind Sound	S18	Campfire
S09	Small Fan	S19	Heartbeat
S10	Electric Fan	S20	Uterine Rhythm

Lullaby

S21	Brahms	S26	Lullaby
S22	Little Lamb	S27	London Bridge
S23	Humpty Dumpty	S28	Black Sheep
S24	Your Hair	S29	LittleSpider
S25	Little Star	S30	Hey Diddle

Cheer Up Music

S31	Dickory Dock	S34	Clap Along
S32	Rabbit	S35	Little Boy
S33	Cake		

Bluetooth Setting

Bluetooth Connection

1. Short press the" Ｂ "button to enter Bluetooth mode, and the Bluetooth indicator will flash.
2. Search for and select" **N20** "on your Bluetooth-enabled device to pair. Once paired successfully, a connection tone will sound and the Bluetooth indicator will stay solid.

Bluetooth Disconnection

In Bluetooth mode (whether paired or not), short press the " Ｂ "or " ♫ " button to exit Bluetooth mode.

Bluetooth Reset

When connected to another device via Bluetooth, press and hold " Ｂ "button to disconnect and place the device into discoverable mode, allowing it to be found for a new pairing.

Night Light Setting

Short press the " ☼ "button to turn light on/off and adjust brightness.

Light off → Level 1 → Level 2 → Level 3 → Level 4

Press and hold the " ☼ "button at any brightness level to turn off the light directly.

Note: The night light can be turned on independently when the device is powered off.

Child Lock

To Lock: Slide the child lock down to LOCK to lock the buttons.
To Unlock: Slide it up to unlock.

Cry Detection

Cry Detection Feature: When enabled, the device will automatically play a preset soothing sound upon detecting a baby's cry.

Press the " CRY" button to turn the cry detection feature on/off.
(The indicator will light up solid white or turn off accordingly.)

Soothing Audio Settings: The soothing audio can be set to white noise, lullaby, or a pre-recorded voice. Please configure these settings via the App.

Pairing Your Device with the Glo Night App


1. Download the Glo Night App from the App Store (iOS) or Google Play (Android).
2. Turn on the Bluetooth on your smartphone.
3. Open the app, tap the "+" icon in the top right corner, and search for "N19."
4. Tap the device icon and follow the on-screen instructions to complete pairing.

Glo Night App
For Nights So Sweet

Google Play | App Store

NOTICE
For the simplest, most intuitive full control of your device, we recommend using the Glo Night APP. Alternatively, you can access most core functions directly via the device's physical buttons, with manual operation instructions detailed below.

Produktübersicht

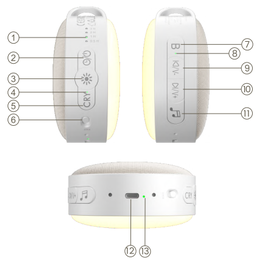

①.Timer-Anzeigen
②.Ein-/Aus- und Timer-Taste
③.Lichttaste
④.Weinerkennungsanzeige
⑤.Weinerkennungstaste
⑥.Kindersicherung
⑦.Bluetooth-Taste
⑧.Bluetooth-Anzeige
⑨.Taste „Vorheriger Titel/Lautstärke verringern"
⑩.Taste „Nächster Titel/Lautstärke erhöhen"
⑪.Audiomodus-Taste
⑫.USB-C-Anschluss
⑬.Betriebs- und Ladeanzeige

Ein-/Ausschalten

Drücken Sie die Taste „⏻", um das Gerät einzuschalten.
Halten Sie die Taste „⏻" gedrückt, um das Gerät auszuschalten.

Timer-Einstellungen

Wenn das Gerät eingeschaltet ist , drücken Sie die Taste „⏻ ", um den Timer zu aktivieren/deaktivieren und die Timer-Einstellungen anzupassen.

Timer abbrechen → Timer 0.5 Std → Timer 1 Std → Timer 2 Std → Timer 3 Std

Audiomodus-Einstellungen

Moduswechsel

Drücken Sie die Taste „♫", um den Wiedergabemodus zu wechseln.

Weißes Rauschen Schlaf → Schlaflied → Muntermacher Musik

Halten Sie die Taste „♫ " gedrückt, um den Wiedergabemodus zu wechseln.

Titel überspringen

Drücken Sie kurz die Taste „ᴋ⊃/ᴠ-", um zum vorherigen Titel zu springen
Drücken Sie kurz die Taste „ᴅ⊂/ᴠ+", um zum nächsten Titel zu springen.

Lautstärkeregelung

Halten Sie die Taste „ᴋ⊃/ᴠ-" gedrückt, um die Lautstärke zu verringern.
Halten Sie die Taste „ᴅ⊂/ᴠ+" gedrückt, um die Lautstärke zu erhöhen.

Titelliste

Weißes Rauschen zum Einschlafen

S01	Leichter Regen	S11	Klimaanlage
S02	Blätterrauschen	S12	TV-Rauschen
S03	Sturzbach	S13	Haartrockner
S04	Meereswellen	S14	Sandpapiergeräusch
S05	Tropfender Regen	S15	Gewitter
S06	Grillen	S16	Zug
S07	Vogelgesang	S17	Flugzeugkabine
S08	Windgeräusch	S18	Lagerfeuer
S09	Kleiner Ventilator	S19	Herzschlag
S10	Elektrischer Ventilator	S20	Mutterleibgeräusche

Wiegenlied

S21	Brahms	S26	Wiegenlied
S22	Kleines Lamm	S27	London Bridge
S23	Humpty Dumpty	S28	Schwarzes Schaf
S24	Dein Haar	S29	Kleine Spinne
S25	Kleiner Stern	S30	Hey Diddle

Aufmunternde Musik

S31	Dickory Dock	S34	Klatsch mit
S32	Kaninchen	S35	Kleiner Junge
S33	Kuchen		

Bluetooth-Einstellungen

Bluetooth-Verbindung

1. Drücken Sie kurz die Taste „ Ｂ ", um den Bluetooth-Modus zu aktivieren. Die Bluetooth-Anzeige blinkt.
2. Suchen Sie auf Ihrem Bluetooth-fähigen Gerät nach „N20 " und wählen Sie es zum Koppeln aus. Nach erfolgreicher Kopplung ertönt ein Verbindungston und die Bluetooth-Anzeige leuchtet dauerhaft.

Bluetooth-Verbindung trennen

Drücken Sie im Bluetooth-Modus (gekoppelt oder ungekoppelt) kurz die Taste „ Ｂ " oder „ ♫ ", um den Bluetooth-Modus zu verlassen.

Bluetooth-Reset

Wenn das Gerät über Bluetooth mit einem anderen Gerät verbunden ist, halten Sie die Taste „Ｂ" gedrückt, um die Verbindung zu trennen und das Gerät in den Sichtbarkeitsmodus zu versetzen, damit es für eine neue Kopplung gefunden werden kann.

Nachtlicht-Einstellungen

Drücken Sie kurz die Taste „ ☼ ", um das Licht ein- und auszuschalten und die Helligkeit anzupassen.

Light off → Level 1 → Level 2 → Level 3 → Level 4

Halten Sie die Taste „ ☼ " bei jeder Helligkeitsstufe gedrückt, um das Licht direkt auszuschalten.

Hinweis: Das Nachtlicht kann auch bei ausgeschaltetem Gerät eingeschaltet werden.

Kindersicherung

Zum Sperren: Schieben Sie die Kindersicherung nach unten auf LOCK ", um die Tasten zu sperren.
Zum Entsperren: Schieben Sie die Kindersicherung nach oben, um die Tasten zu entsperren.

Weinerkennung

Weinerkennungsfunktion: Wenn diese Funktion aktiviert ist, spielt das Gerät automatisch einen voreingestellten beruhigenden Klang ab, sobald es das Weinen eines Babys erkennt.

Drücken Sie die Taste „CRY", um die Weinerkennungsfunktion ein-/auszuschalten. (Die Anzeige leuchtet entsprechend dauerhaft weiß oder erlischt.)

Einstellungen für beruhigende Klänge: Der beruhigende Klang kann auf weißes Rauschen, ein Wiegenlied oder eine vorab aufgenommene Stimme eingestellt werden. Bitte konfigurieren Sie diese Einstellungen über die App.

Koppeln Ihres Geräts mit der Glo Night App

Koppeln Ihres Geräts mit der Glo Night App


1. Laden Sie die Glo Night App aus dem App Store (iOS) oder Google Play (Android) herunter.
2. Schalten Sie Bluetooth auf Ihrem Smartphone ein.
3. Öffnen Sie die App, tippen Sie oben rechts auf das „+"-Symbol und suchen Sie nach „N20(BLE)".
4. Tippen Sie auf das Gerätesymbol und folgen Sie den Anweisungen auf dem Bildschirm, um die Kopplung abzuschließen.

Glo Night App
For Nights So Sweet

Google Play | App Store

HINWEIS
Für eine möglichst einfache und intuitive Steuerung Ihres Geräts empfehlen wir die Glo Night App. Alternativ können Sie die meisten Kernfunktionen direkt über die physischen Tasten des Geräts bedienen. Eine Anleitung zur manuellen Bedienung finden Sie weiter unten.

製品概要

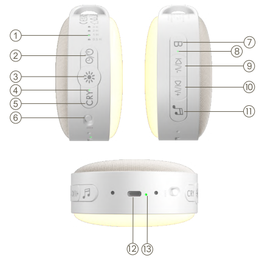

①.タイマーインジケーター
②.電源&タイマーボタン
③.ライトボタン
④.泣き声検知インジケーター
⑤.泣き声検知ボタン
⑥.チャイルドロック
⑦.Bluetoothボタン
⑧.Bluetoothインジケーター
⑨.前のトラック/音量ダウンボタン
⑩.次のトラック/音量アップボタン
⑪.オーディオモードボタン
⑫.タイプC入力ポート
⑬.電源&充電インジケーター

電源オン/オフ

「⏻」ボタンを押すと、電源が入ります。
「⏻」ボタンを長押しすると、電源が切れます。

タイマー設定

デバイスがオンの状態で「⏻」ボタンを押すと、
タイマーの有効/無効およびタイマー設定の調整ができます。

キャンセルタイマー → タイマー 0.5時間 → タイマー 1時間 → タイマー 2時間 → タイマー 3時間

オーディオモード設定

モードスイッチ

「♫」ボタンを押すと、再生モードを切り替えることができます。

睡眠のためのホワイトノイズ → 子守唄 → 元気が出る音楽

「♫」ボタンを長押しすると、再生モードを切り替えることができます。

トラックスキップ

「ᴋ⊃/ᴠ-」ボタンを短押しすると、前のトラックに戻ります。
「ᴅ⊂/ᴠ+」ボタンを短押しすると、次のトラックに進みます。

音量調節

「ᴋ⊃/ᴠ-」ボタンを長押しすると、音声が下がります。
「ᴅ⊂/ᴠ+」ボタンを長押しすると、音声が上がります。

トラックリスト

睡眠のためのホワイトノイズ

S01	小雨	S11	エアコン
S02	木々のそよ風	S12	テレビの砂嵐
S03	大雨	S13	ヘアドライヤー
S04	波の音	S14	紙やすりの音
S05	雨だれ	S15	雷雨
S06	コオロギ	S16	電車
S07	鳥のさえずり	S17	飛行機の客室
S08	風の音	S18	キャンプファイヤー
S09	小型扇風機	S19	心臓の鼓動
S10	扇風機	S20	子宮リズムe

子守唄

S21	ブラームス	S26	子守唄
S22	子羊ちゃん	S27	ロンドン橋
S23	ハンプティダンプティ	S28	黒い羊
S24	あなたの髪	S29	小さなクモ
S25	小さな星	S30	ヘイ ディドル

元気が出る音楽

S31	ディコリードック	S34	手をたたこう
S32	ウサギ	S35	小さな男の子
S33	ケーキ		

Bluetooth設定

Bluetooth接続

1.「Ｂ」ボタンを短押ししてBluetoothモードになると、Bluetoothインジケーターが点滅します。
2. Bluetooth対応デバイスで「N20」を検索して選択し、ペアリングしてください。
ペアリングが成功すると、接続音が鳴り、Bluetoothインジケーターが点灯します。

Bluetooth切断

Bluetoothモード（ペアリング済みか否かを問わず）では、
「Ｂ」または「♫」ボタンを短押しするとBluetoothモードが終了します。

Bluetoothリセット

Bluetooth で別のデバイスに接続されている場合、「Ｂ」ボタンを長押しすると、接続が切断され、デバイスが検出可能モードになり、新しいペアリングが可能です。

ナイトライト設定

「☼」ボタンを短押しすると、ライトのオン/オフと明るさの調整ができます。

Light off → Level 1 → Level 2 → Level 3 → Level 4

どの明るさレベルでも「☼」ボタンを長押しすると、ライトを直接消灯できます。

注: ナイトライトは、デバイスの電源がオフの状態でも単独で点灯できます。

チャイルドロック

ロックするには: チャイルドロックを「LOCK」の位置までスライドさせると、ボタンがロックされます。
ロックを解除するには: 上にスライドさせるとロックが解除されます。

泣き声検知

泣き声検知機能：この機能を有効にすると、赤ちゃんの泣き声を検知した際に、あらかじめ設定された心地よい音声を自動的に再生します。
「CRY」をボタンを押すと、泣き声検知機能をオン/オフにすることができます。
（インジケーターは、状況に応じて白色に点灯または消灯します。）

心地よい音声設定：心地よい音声は、ホワイトノイズ、子守唄、または録音済みの音声に設定できます。これらの設定はアプリから行ってください。

Glo Nightアプリとのペアリング

Glo Nightアプリとのペアリング方法

1. App Store（iOS）またはGoogle Play（Android）からGlo Night アプリをダウンロードしてください。
2. スマートフォンのBluetoothをオンにしてください。
3. アプリを開き、右上隅の「+」アイコンをタップして、「N20(BLE)」を検索してください。
4. デバイスアイコンをタップし、画面の指示に従ってペアリングを完了してください。

Glo Night App
For Nights So Sweet

Google Play | App Store

注意事項
デバイスを最もシンプルかつ直感的に操作するには、Glo Nightアプリのご利用をお勧めします。また、デバイスの物理ボタンからもほとんどの主要機能に直接アクセスできます。手動操作の手順については、以下をご覧ください。

Precautions

1. Use a 5V output wall plug to make sure the portable sound machine is working at its full capacity.
2. Please avoid placing this light in an extreme temperature environment (either too hot or too cold).
3. Please charge it at least once every 6 months to maintain the battery's lifespan.

Disposal:When you are ready to dispose of the product after wearing it out, please make sure to follow the instructions of your local government for environmental and safety purposes.

How To Charge The Portable Sound Machine

1. Simply plug the provided USB-C cable into the charging port in the portable sound machine, and connect it with a 5V power charger.
2. It takes about 3 hours to fully charge the portable sound machine.
3. Please fully charge the product before first use.

Note: The charging indicator light will turn solid red while the portable sound machine is charging and will turn solid green when it is fully charged.

Product Specifications

Model	N20
Input	5V ⎓ 1A
Battery	Lithium
Battery Capacity	1200mAh
Charging time	2.5-3 hours
Dimensions	10.7*9.6*5 cm / 4.2*3.8*2 in
Weight	187.9 g / 6.6 oz
Certificate	FCC-ID, CE, UKCA, ICID□C-tick

Include

Portable Sound Machine	×1
USB-C Cable	×1
User Manual	×1
Hanging Ring	×1


About Glocusent

Ever since we saw our first sunrise illuminate the beautiful Colorado Springs, we've become a lighting product company that believes that light is a critical element to capturing the magic in moments. No progress was ever made in the dark, and we're here to deliver that light to ensure that our users are always progressing. From neck lights to portable ring lights, every one of our products is designed to provide light in a way that's simple and convenient. At Glocusent, we refer to three core principles; glory, focus, and moments.

Glory: We're about bringing light to your life, and we believe life is filled with glory, whether that's in your career or with your family. Let us shine a light on that glory.

Focus: Our team at Glocusent is focused on creating innovative lights and lamps that are convenient, smart, and tailored to its user. In the wise words of Roy T. Bennett, "Life is short; focus on what really matters; you should change your priorities over time." With our lights, you can focus on what matters.

Moment: Moments are fleeting. Your lives are filled with beauty, romance, and happiness. Our innovative lights are there to help you capture the moments.

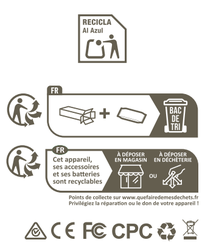

Warning: To avoid danger of suffocation, keep this bag away from children and babies. Do not use this bag in cribs, beds, baby carriages or playpens. This bag is not a toy.

FCC& ISED Statement

This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s).Operation is subject to the following two conditions:
(1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.
Cet appareil est conforme à la partie 15 des règles de la FCC et aux normes RSS exemptées de licence d'Industrie Canada. Le fonctionnement est soumis aux deux
conditions suivantes :(1)cet appareil ne doit pas causer d'interférences nuisibles, et (2)cet appareil doit accepter toute interférence reçue,
y compris les interferences pouvant entraîner un fonctionnement indés
Changes or modifications to this unit not expressly approved by the party responsible forcompliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonableprotection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance withthe instructions, may cause harmful interference to radio communications. However, there is noguarantee that interference will not occur in a particular installation.

If this equipment doescause harmful interference to radio or television reception, which can be determined by turningthe equipment off and on, the user is encouraged to try to correct the interference by one ormore of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
This device meets the exemption from the routine evaluation limits in section 6.6 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.
cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.6 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.
This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.
Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.
Radiation Exposure Statement for camera
This equipment should be installed and operated with minimum distance 0 cm between the radiator & your body.
Cet équipement doit être installé et utilisé à une distance minimale de 0 cm entre le radiateur et votre corps.

Glocusent Customer Support

Have questions, concerns, or feedback about Glocusent Portable Sound Machine(N20)?
Email us at **service@glocusent.com.**
Our team will respond to your email in a swift time.

You're currently covered by our 24-month worry-free warranty. But there's more! You can easily bump that up to a 36-month VIP Service warranty. It's all on us - either a replacement, a full refund or a chance to try out our new products, Simply swing by our website and register your purchase to make the upgrade, we've got your back.

www.glocusent.com/pages/warranty

Alternatively, you can scan the QR code below to register your purchase:

For Customer Service
www.glocusent.com | service@glocusent.com

N20-包装-20260614-78*110mm