
# Projector
# Model:ZMLF2001


—

USER MANUAL

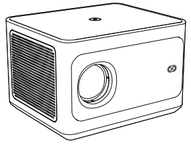



## PACKING LIST



1 Projector



2 Remote



3 User Manual



4 Power Cable



5 HDMI Cable




6 AV Cable






## FUNCTION OVERVIEW

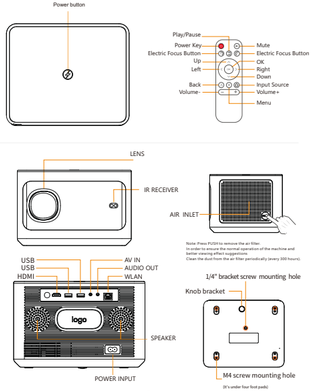






## QUICK START

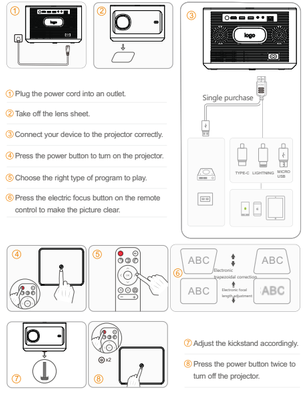


① Plug the power cord into an outlet.

② Take off the lens sheet.

③ Connect your device to the projector correctly.

④ Press the power button to turn on the projector.

⑤ Choose the right type of program to play.

⑥ Press the electric focus button on the remote control to make the picture clear.

⑦ Adjust the kickstand accordingly.


⑧ Press the power button twice to turn off the projector.






## INPUT SOURCE

### A Multimedia Connection



After the USB flash drive is inserted, the USB flash drive icon will pop up automatically in the top menu of the projection home page.

### B HDMI Connection




### C AV Connection








## FUNCTION USE

### I Wi-Fi Connecting

Set up--Click wifi--Selection network--Enter the code--Done



### J Bluetooth connection


Settings -- Bluetooth -- Connect other peripherals -- Manual search -- Done.








## PROJECTION CONNECTION

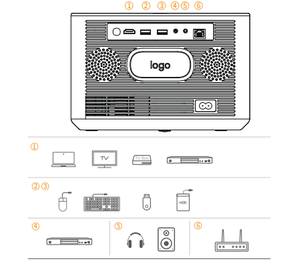


## PROJECTION DISTANCE & SIZE








## SPECIFICATION

| Display Technology | Light Source | Native Resolution | Resolution Supported |
|---|---|---|---|
| LCD | LED | 1920×1080 | 576i、576P、720i、720P、1080i、1080P |

| Projection Distance | Projection Size | Focus | Aspect Ratio |
|---|---|---|---|
| 1.38M-9.05M | 50"-330" | Auto | 4:3/16:9/auto |

| Speaker | Electronic Keystone | Unit Dimension | Installation Type |
|---|---|---|---|
| 10W/4Ω*2 | ±50° | 244*202.5*166mm | Front/Rear/Ceiling |


| Power Supply | Unit Net Weight | Video Format Supported | Photo Format Supported |
|---|---|---|---|
| AC100-240V | 3.0kg | VP9/H.265/AVS2-P2/H.264/MPEG-4/WMV/AVS-P16/MPEG-2/MPEG-1 Real Video 8/9/10 | JPEG/BMP/PNG |

| Ports | Audio Format Supported | | |
|---|---|---|---|
| HDMI*1/USB*2/ AV IN*1/Audio Out*1 RJ45 port*1 | MP3/WMA/OGG/AAC/ FLAC/RM | | |





## NOTICE

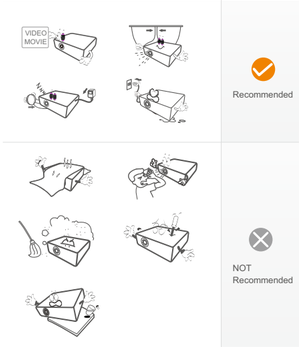






## TROUBLESHOOTING GUIDE

1.BlurryImage

*Press the electronic focus button on the remote control to adjust.
*Projector and screen/wall must be in effective distance.

2.Remote Unresponsive

*Make sure remote points at IR receiver directly.
*Do not cover IR receiver.
*Check the battery.

3.Mobile Connection

iOS: Genuine lightning to HDMI cable.
Android: Micro USB to HDMI adapter/Type C to HDMI cable.

4.Upside DownImages

Enter "Menu" on projector or remote to flip the projection image.



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference.

(2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:This equipment has been tested and found to comply with the limits for a class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequence energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a particular installation.if this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This equipment should be installed and operated with a minumum distance of 20 cm between the radiator and your body.

RoHS FC CE

MADE IN CHINA