Charging interface: Type-c

STK-7039RG




无线游戏手柄

适用于N-S / Lite / OLED / Android / IOS 13.0+ /PC

使用说明书

V1.1

按键功能介绍

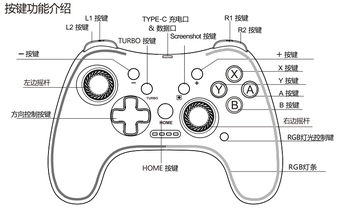

休眠模式&回连

休眠模式： 五分钟内无任何操作，此手柄将进入休眠模式；

唤醒功能&回连： 短按HOME键手机将自动唤醒Switch游戏主机并回连主机, 或上次无线连接的设备;

关机

长按 “HOME” 键3秒后关机。

RGB 灯光控制

按一次RGB灯光控制键可进行灯光控制, 按键切换发光方式：呼吸灯发光模式 -长亮发光模式（停止切换颜色）-熄灭；

N-Switch连接模式

* 连接之前，请确保主机上的飞行模式已关闭

步骤1:在主机界面找到 手柄 选项，如图片1所示，点击进入下级菜单：



图片1



图片2

步骤2:点击如图2所示 更改握法/顺序，进入主机搜索游戏手柄配对模式，如图3所示；

步骤3：按下 Y+HOME 按键，手柄开机,指示灯以跑马灯的闪烁方式寻找主机配对，3-4秒左右后,手柄连上主机。指示灯1长亮。



图片三

回连: 短按HOME键

主机与手柄成功配对连接后，主机休眠时，按下HOME按键即可唤醒主机，并进行快速回连。

注意：

本产品支持在待机模下按HOME按键唤醒主机。

如果出现以下任意一种情况，请参阅首次配对与连接进行重新连接。

1、 游戏手柄升级

2、 游戏手柄复位

3、 无法通过按HOME按键开机与主机回连

马达振动调节及指示

此功能只在SWITCH手柄模式有效，手柄与SWITCH主机配对成功后，默认为强振100%，同时长按“L1+L2+R1+R2”组合键1秒调节振动强弱，调节成功有振动提示，指示灯对应相对应的振感，共有四档可调节振动效果（最强振感-中振感-弱振感-无振），轮回切换。



操作模式及开机方法

模式	Switch手柄模式	Android手柄模式	iOS MFI手柄模式	Pc有线手柄模式	
				X-Input模式	D-Input模式
开机方式	Y+HOME	X+HOME	A+HOME	有线手柄模式	
LED	LED1	LED1+LED4	LED1,2,3	LED1,2,3	LED1+LED4
回连	HOME	HOME	HOME		

安卓游戏手柄模式

步骤1：按 X+HOME 组合键开机，直至 LED1 & LED4 指示灯快速闪烁进入匹配状态；

步骤2：打开设备端的蓝牙设置界面，开启 蓝牙 ，点击搜索；

步骤3：蓝牙搜索显名称为 STK-7039 的设备，点击匹配连接；

步骤4：连接成功后，LED1+LED4 灯长亮。



Xbox Wireless Controller 模式:适用IOS13.0+,安卓系统

步骤1：按 A+HOME 组合键开机，直至LED1,LED2 & LED3 指示灯快速闪烁进入匹配状态；

步骤2：打开设备端的蓝牙设置界面，开启 蓝牙 ，点击搜索；


步骤3：蓝牙搜索显名称为 Xbox Wireless Controller 的设备，点击匹配连接；

步骤4：连接成功后，LED1,2,3 灯长亮。



PC 有线游戏手柄模式


X-Input 模式



手柄与TYPE-C连接后插入电脑端，待系统识别为X-Input模式后，LED1 , LED2 , LED3长亮，即可使用。

有线手柄默认为X-Input模式，Winodw7、8、10系统无需安装驱动；

D-Input 模式



在X-Input模式下，长按HOME键5秒，待系统识别为D-Input模式后，LED1 & LED4长亮，即可使用。

Turbo / Auto 功能设置

TURBO功能设置：

* TURBO+火力键按一次， 开手动连发功能；
* TURBO+火力键按二次， 开自动连发功能；
* TURBO+火力键按三次， 关闭TURBO功能；

TURBO 频率功能调节设置：3档位调节设置：

* 按住TURBO键+方向键上：调节成功，快速的振动提示，最快速的TURBO频率，约在每秒20次；
* 按住TURBO键+方向键下：调节成功，慢速的振动提示，最慢速的TURBO频率，约在每秒5次；
* TURBO AUTO功能工作时, LED指示灯根据档位频率闪烁：最快-中速-慢闪
* TURBO最快速频率为20次/秒；中速频率在10次/秒；最慢速频率为5次/秒；

TURBO清除功能：

* 长按TURBO键，5秒钟关闭所TURBO; 4个指示灯同时闪烁3次，并带1秒振动提示；

出厂水平校准

步骤1：请确保游戏手柄处于关机状态，并将其至于水平且平坦表面；

步骤2：同时按下 “ - ，B ，HOME三个按键，LED1 & LED2 与LED3 & LED4两组灯交替闪烁；

步骤3：按下 “ + ” 按钮，4个LED指示灯开始以跑马灯方式交替闪烁；

步骤4：大约10-15秒左右，指示灯熄灭，游戏手柄的水平校准完成。

摇杆校准

如果游戏当中的角色出现自动漂移的情况，请参照以下步骤完成 “摇杆校准” 。

步骤1：系统设置 手柄与感应器 校正摇杆；

步骤2：进入校正摇杆界面，按照游戏主机操作指南进行操作。

升级及手柄高级功能设置

微信公众号关注Keylinker,下载Keylinker APP并安装至手机，解锁游戏手柄的更多功能。



更改按键设置

更改摇杆设置

升级游戏手柄



游戏手柄升级步骤1



游戏手柄升级步骤2

手柄规格

产品尺寸: 157 X 108 X 55mm ±2mm
连接方式：Bluetooth 5.0
无线频率:2.402 ~ 2.480GHz
电池容量：800MA
充电时间：2-2.5H
连续使用时间：6-14H
Polyshine 3D 摇杆,使用寿命 500,000次
2个振动马达

质保说明

请使用正规品牌的电源适配器,以免使用其它不合格的电源适配器导致不能充电的质量问题引发的硬件故障,在保修期内,我们将负责给予免费维修，更多详情咨询客服人员,谢谢!

保修说明(保修范围仅限主机,不包含配件及赠品)

1.凡购买本产品的用户,将根据国家有关规定享有“三包”服务.

2.若购买的产品本身存在质量问题,未受人为损坏,未经拆修,包装完好不影响二次销售前提下,在规定期限内可进行更换.(仅限于同款产品)

3.购买本产品享受半年免费维修服务.

4.属于以下情况者免费保修失效,提供维修服务,但维修时将收取相应的配件及人工成本费用:

4.1 人为因素造成损坏,包括非正常工作环境下使用,不按照使用说明书使用所引发的损坏等;

4.2 用户私自拆机,自行维修,改装,经非本公司维修部门或非授权机构维修的;

4.3 因不可抗力造成的损坏;

4.4 无产品保修卡和有效购买凭证(发票),又无法查证用户信息档案的;

4.5 商品条码机生产日期被更改的;外包装;

4.6 超过质保期的;

注意事项

请使用正规品牌的电源适配器,以免使用其它不合格的电源适配器导致不能充 电或损坏本产品.(此仅限于内置锂电池的游戏手柄)适配器电压不得大于5V!

请勿在高湿或高温环境中使用和存放本产品.

请勿强烈敲击摔打和用力扭拉本产品的部件.


请勿私自拆开本产品.

请勿将液体渗入本产品.

请勿使用化学液体清洁本产品.

请将产品置放儿童不易接触的地方,以免发生意外.

Key Function Instruction

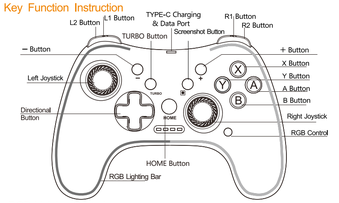

RGB Lighting Control

Press button to switch the light mode: RGB Breathing Light Mode - Long Light Mode (stop switching color) - Light Off;

Controller Mode & Operation

MODE	Switch Controller	Android HID Controller	MFI Controller	PC Controller	
				X-Input Mode	D-Input Mode
CONNECTION	Y+HOME	X+HOME	A+HOME	Cable Connection	
LED	LED1	LED1+LED4	LED1,2,3	LED1,2,3	LED1+LED4
RECONNECTION	HOME	HOME	HOME		

N-S Controller Mode

(Power on your N-S Console, then follow the steps to pair and connect your controller.)

Step 1:Find Controllers Option.

Step 2:Click Change Grip/Order .

Step 3:Press Y+HOME button power on gamepad,4 LED lights blink in turn,waiting for the connection to complete.

5-7s later, the controller will connect to console automatically.

Reconnect: **Press HOME Button**

If your controller was once paired and connected to your N-S console, press the HOME button to rapidly connected next time.

Note:

The gamepad support press HOME button to wake up the console under sleep mode.You just need to press HOME button to finish reconnect.

When one of the following conditions occur, please reconnect referring to first time to pair and connect.

1.Upgrade

2.Reset

3.Change the console.

* Please make sure turn off the Airplane Mode when you connect controller to switch console

If you meet the problem as follows, please try to **calibration**:

1. During the game, the character's perspective screen automatically moves in a certain direction;
2. 2. When the motion sensing function is running, the operation is not smooth or the direction is confused;

Factory Motion Controls Calibration

Step 1:Please make sure your controller stays tat power off status,then put it on flat surface.

Step 2:Press the"+"B"HOME" 3 buttons simultaneously,the Group A indicators and Group B indicators will flash alternately.(LED1&LED2/ LED3&LED4)

Step 3:Press the "+" button and 4 LED indicators will flash alternately.

Step 4:After about 15 seconds,all indicators will turn off, which means the controller finish calibrating.

Calibrate Control Sticks

If the characters in the games is automatically drifting,please complete the "calibrate motion controls"by following steps:

Step 1: System Setting-Controller and Sensors-Calibrate Control Sticks

Step 2: Enter calibrate control sticks interface,operate it according to the guide on NS console.

Sleeping Mode & Reconnect

Sleeping Mode: The controller will turn into sleeping mode automatically without any operation within 5 minutes.

Wake up & Reconnect: Press HOME button shortly, the controller will power on and reconnect the device, which connected last time.

Power Off

Press HOME button long with 3-5 seconds, the controller will power off with all LED lights off.

Adjust Vibration Intensity

There are 4 levels of vibration intensity: The Strongest Vibration, Moderate Vibration, The Weakest Vibration, None vibration


Step 1: Please make sure you connect the controller to the switch console.

Step 2: Press 4 buttons (L, ZL, R and ZR) simultaneously for 5 seconds.

Step 3: Then release the 4 buttons when you feel the vibration.

The vibration mode can be adjusted by repeating the above operations.

Vibration Intensity Indication



Turbo / Auto Function

Buttons (which called short function buttons) can be set TURBO/ AUTO : A/ B/ X/ Y/ L/ ZL/ R/ ZR button

Enable/ Disable the TURBO / AUTO speed function:

Step 1: Press the Turbo button and one the function button simultaneously , to enable the Turbo speed function,

Step 2: Repeat the step1 to enable the AUTO function.

Step 3: Repeat the Step1 to disable AUTO function.

Adjust TURBO speed :

Press the TURBO button simultaneously the directional button Up / Down,

Press TURBO+Direction UP button to adjust the TURBO to faster,

Press TURBO+Direction DOWN button to adjust the TURBO to slower.

Clear TURBO /AUTO function:

Press the TURBO button with 5 second long ,wait the LED1,2,3,4 light and turn to flashes together with 1 second's vibration. Then all TURBO function cleared.

Charging Indication

Connect the controller with N-Switch console basement, it will start charging,

The LED4 will flashes together with the RGB light switch color automatically.

Note:

1.It can not be full charged while the RGB light power on. Please close the RBG light with press the RGB Control button twice while charging.

2.If the pro controller wired communication function turn on ,while connect to N-S basement, the controller will turn to wired controller function after connected;

3.If there is another controller wireless connected while charging, the RGB controller will not show LED charging, only RGB light switch;



Android Game Controller Mode



Step 1: Press X+HOME button to power on the gamepad, LED1+LED 4 will be twinkling and wait for pairing,

Step 2: Open the interface of Settings on android device, open Bluetooth,

Step 3: Scan the devices and get the name of STK-7039RG , click the device into Paring and Connect automatically,

Step 4: LED1+LED4 indicator will be long on after connected successfully.

Reconnecting:

Press HOME button shortly to power on the gamepad, it will connect automatically.

Note:

1. The Android Game Controller mode allow player to play the android games from google play market, which the games can support game controller ;

Xbox Wireless Controller Mode for PC, Android & IOS13.0 above



Step 1: Press A+HOME button to power on the gamepad, LED1,2,3 will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android / IOS device, open Bluetooth,

Step 3: Scan the devices and get the name of Xbox Wireless Controller , click the device into Paring and Connect automatically,

Step 4: LED1,2,3 indicator will be long on after connected successfully.

Reconnecting:

Press HOME button shortly to power on the gamepad, it will connect automatically.


PC Wired Controller Mode

X-Input Mode



Connect controller to pc with type-c cable, after windows system recognized, the controller will start to work, LED 1,2,3 light will be long on.

D-Input Mode




Under the mode of X4nput, press the HOME button long to switch X4nput to D4nput Mode.


Update

If there is problem for the connection while the console update, we can offer the update method as follows:

You can download the “Keylinker” app from the google play or apple store, then instal to your cellphone; follow the step to update your controller



1. Search the controller



2. After connected, click “Update device”

Specification

Product name: Multifunctional gamepad
Model number: KMD-NS-4763
Product size: 152x115x58mm
Product weight: 220g
Power supply: built-in 800mAh polymer battery
Charging interface: Type-c
Game time: 5-10h
Charging time: 2-2.5H
Packing: color box
Package Contents: gamepad, charging cable, instruction manual

Adjust Joystick Sensitivity & Dead Zone



In the APP, click on the Joystick option and you can adjust the sensitivity of the left and right joysticks according to your game needs.

FAQ:

Problem 1: The LED4 do not flashes while the controller plug to Switch console basement.

Solve Method: The controller support wired switch controller function, If the pro controller wired communication function turn on ,while connect to N-S basement, the controller will turn to wired controller function after connected, The LED4 will not flashes! You need to turn off the pro controller wired communication, the LED4 will turn to normal.

Panel to Close the Pro Controller Wired Communication



Problem 2: The Joystick stuck after long playing.

Solve Method: Press down the joystick head strong if there is stuck problem, it will solve the problem.

Problem 3: Can not full charged the Controller.

Solve Method: Press the RGB Control button to close the RGB lightings. We strongly recommend use the 5V1A power to charge the controller.

Problem 4: Can not charge the controller.

Solve Method: The temperature lower than 2 degree, or higher than 45 degree, the controller will stop the charging. So, please check if the room temperature is during this scope;

Problem 5: After press HOME button, it can not power off the controller, the RGB lights still on.

Solve Method:

5.1 You can press the RESET button to try to power off the controller.

5.2 If you controller connect to phone (use the keylinker app to do the program function, it will happen this situation.) Close the BT function on cellphone system, it will solve the problem.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.