



B610A4151
MANUAL DE USUARIO

USER MANUAL



INSTRUCCIONES DE SEGURIDAD

¡Atención! Este manual contiene importantes medidas de seguridad e información del uso correcto del producto con el fin de evitar accidentes. Por favor lea detenidamente el manual antes de usar el dispositivo.

- Por favor no exponer a humedad o polvo o altas temperaturas.
- Evitar caídas o golpes fuertes, no ejercer sobre la pantalla movimientos violentos, esto podría causar anomalías o daños en la pantalla.
- Por favor seleccione el volumen apropiado. Si utiliza auriculares, el volumen no debe ser demasiado alto; si genera distorsión, baje el volumen.
- Por favor cargue el producto en las siguientes condiciones:
 - Cuando el ícono de la batería muestre que no tiene carga,
 - El sistema se apaga automáticamente y la puesta en marcha no termina.
 - Los botones de operación no responden.
- Cuando el dispositivo esté cargando, por favor no desconecte repentinamente, esto podría provocar errores.
- Para aquellos casos que, debido a daños en el producto, reparación u otras causas se borre la memoria, la empresa no se hace responsable por su contenido.
- No desmonte el producto, no utilice alcohol, ni solvente o benceno para limpiar la unidad.
- El USB se utiliza para la transmisión de datos y carga.
- Esta tableta no es de ninguna manera resistente al agua o salpicaduras.

Observación: todas las imágenes de este manual son sólo a modo ilustrativo, pueden tener variaciones con el producto real.



No arroje la batería o el dispositivo a la basura. Consulte con su municipio la forma correcta de despachado de componentes electrónicos. Ayúdenos a cuidar el planeta.

SAFETY INSTRUCTIONS

Attention! This manual contains important safety measures and information on the correct use of the product to prevent accidents. Please read the manual carefully before using the device.

Please do not expose to moisture, dust, or high temperatures.

Avoid drops or strong impacts; do not apply violent movements to the screen, as this could cause abnormalities or damage to the display.

3

Please select an appropriate volume. If using headphones, the volume should not be too high; if it causes distortion, lower the volume.

Please charge the product under the following conditions:

When the battery icon shows it has no charge,

The system shuts down automatically and startup does not complete.

The operation buttons do not respond.

When the device is charging, please do not disconnect it suddenly, as this could cause errors.

The company is not responsible for any content loss in cases where memory is erased due to product damage, repair, or other causes.

Do not disassemble the product; do not use alcohol, solvents, or benzene to clean the unit.


The USB port is used for data transmission and charging.

This tablet is in no way water-resistant or splash-proof.

Note: All images in this manual are for illustrative purposes only and may vary from the actual product.

Do not dispose of the battery or device in the trash. Consult your municipality for the correct way to dispose of electronic components. Help us take care of the planet.

DESCRIPCIÓN GENERAL

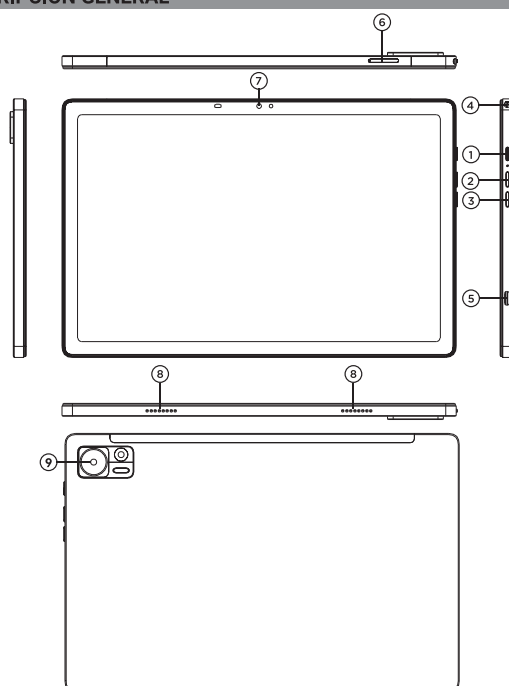

- 1. Power On/Off Button
- 2. TF/SIM Card Slot
- 3. Volume +
- 4. Front Camera
- 5. Volume -
- 6. Speakers
- 7. 3.5mm Headphone Jack
- 8. Rear Camera
- 9. USB Type-C

- ① Botón de encendido/apagado
- ② Volumen +
- ③ Volumen -
- ④ Entrada de auriculares 3.5mm
- ⑤ USB tipo C
- ⑥ Ranura para tarjeta TF/SIM
- ⑦ Cámara frontal
- ⑧ Parlantes
- ⑨ Cámara posterior



MODO DE USO

Gestión de la batería y la carga:

Antes del primer uso, asegúrese de que la batería del dispositivo está completamente cargada. Sólo tiene que conectar la interfaz USB para cargar. Las dos primeras veces de carga manténgala cerca de 5 horas, después sólo tardará 2.5 horas en cargarse.

Observaciones: esta tableta con batería usa un adaptador estándar (Entrada AC 100-240V / Salida: DC9.0V/2A), la interfaz USB puede cargar.

Durante la carga, el ícono de la batería se animará. Cuando haya terminado la carga, el mismo indicará que llegó al 100% y dejará de animarse.

Con el fin de prolongar la vida útil del producto, se sugiere utilizar toda la energía de la batería antes de volver a cargarla.

Observaciones:

- Si no usa la tablet por un periodo prolongado de tiempo, con el fin de evitar daños, por favor cárguela y préndala una vez por mes.
- El dispositivo debe estar en estado de espera para llegar a tiempo de carga normal, debido a que con el dispositivo en uso, el consumo de la pantalla puede causar mayor tiempo de carga.

Funciones del botón encendido/apagado:

- Para prender la tablet presione y mantenga por dos segundos el botón.
- Para apagar la tablet presione y mantenga por dos segundos el botón, luego seleccione la opción de apagar.
- Presionar para bloquear.
- Presionar y mantener por 6 segundos para resetear.

Modo Avión:

Para usar su unidad sin Wi-Fi cambie a Modo Avión.

Vaya a Ajustes > Conexiones inalámbricas y redes > Modo Avión

MODE OF USE

5

Battery Management and Charging:

Before first use, ensure the device's battery is fully charged. Simply connect the USB interface to charge. For the first two charges, keep it charging for about 5 hours; afterwards, it will only take about 2.5 hours to fully charge.

Notes: This tablet with a battery uses a standard adapter (AC Input 100-240V / Output: DC9.0V/2A), the USB interface can be used for charging.

During charging, the battery icon will animate. When charging is complete, the icon will indicate 100% and stop animating. To prolong the product's lifespan, it is suggested to use all the battery energy before recharging it.




Para mostrar las notificaciones que aparecen en la parte superior izquierda de la pantalla, debe arrastrarlas hacia abajo.

Interfaz de funcionamiento del equipo:

Descripción de la interfaz principal

Después del arranque, entrará en la interfaz principal.

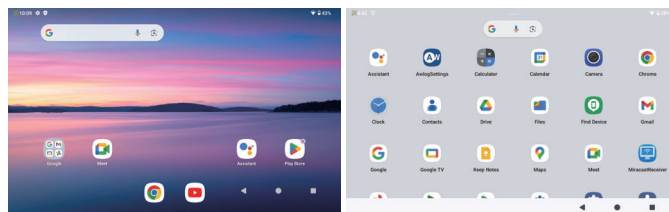

En la pantalla principal se puede:

- Gestionar los principales iconos del software de interfaz, una pulsación prolongada 3 segundos en los iconos, entonces usted los podrá arrastrar a cualquier parte de la interfaz.
- Eliminar iconos: mantenga pulsado el icono 3 segundos, arrastre el mismo hasta el icono de la papelera de reciclaje, una vez que se ponga roja suelte la mano, entonces el icono se eliminará.
- Cambiar el fondo de pantalla: Si toca la pantalla un momento, aparece un cuadro de diálogo "Seleccionar fondo de pantalla".

Utilización del panel táctil

Después de la principal zona de la pantalla táctil se encuentra la barra de status donde sus tres principales botones le servirán de atajo.

- ☐ No importa en qué interfaz esté la pantalla, puede volver a la pantalla principal a través de pulsar la tecla de función.
- ◀ En las diferentes aplicaciones, puede volver a la interfaz de menú anterior.
- ⌵ En las diferentes aplicaciones, pulsando la tecla menú en la esquina superior derecha de la pantalla táctil, aparecerá la interfaz de configuración.

Battery Management and Charging:

Before first use, ensure the device's battery is fully charged.⁶ Simply connect the USB interface to charge. For the first two charges, keep it charging for about 5 hours; afterwards, it will only take about 2.5 hours to fully charge.

Notes: This tablet with a battery uses a standard adapter (AC Input 100-240V / Output: DC9.0V/2A), the USB interface can be used for charging.

During charging, the battery icon will animate. When charging is complete, the icon will indicate 100% and stop animating. To prolong the product's lifespan, it is suggested to use all the battery energy before recharging it.

Notes:

If you do not use the tablet for an extended period, to avoid damage, please charge it and turn it on once per month.

The device should be in standby mode to achieve normal charging time, because when the device is in use, the screen consumption may cause longer charging times.

Power On/Off Button Functions:

To turn on the tablet, press and hold the button for two seconds.

To turn off the tablet, press and hold the button for two seconds, then select the shutdown option.

Press briefly to lock.

Press and hold for 6 seconds to reset.

Airplane Mode:

To use your unit without Wi-Fi, switch to Airplane Mode.

Go to Settings > Wireless & Networks > Airplane Mode

RESOLUCIÓN DE PROBLEMAS

<i>El dispositivo no puede iniciar</i>	Compruebe la carga de la batería.
	Conecte el adaptador, luego puede volver a intentarlo.
	Después de la carga si no inicia, por favor póngase en contacto con el fabricante.
<i>Después de la pantalla de inicio o la imagen de apertura, el dispositivo se apaga</i>	La carga no es suficiente, cargue el equipo por favor.
<i>El auricular no emite volumen</i>	Comprobar que el volumen no esté en cero.
	Compruebe si el archivo de música no está dañado. Intente reproducir otra pista de música, si el archivo se ha dañado puede llevar un ruido grave o sonido con saltos.
<i>No se puede copiar el archivo de música</i>	Comprobar que la conexión entre el ordenador y el dispositivo sea correcta.
	Compruebe que el espacio de almacenamiento de memoria sea suficiente.
	Compruebe que el cable USB no esté dañado.

ESPECIFICACIONES

Sistema Operativo	CPU
Android 13.0 / 14.0 PIE 64 BITS	Mediatek 1.4/ 1.5 / 2.0 / 2.3 / 2.6 Ghz 4/8/10 Core
Memoria RAM	Memoria de almacenamiento
2GB/3GB/4GB/6GB/8GB	32GB/64GB/128GB
Pantalla	Tarjeta TF
8.0/ 10.1/ 10.5/ 11.0/ 12.5 1280x800/1920x1200 LCD IPS	Soporta hasta 128GB
Puerto de Audio	Puerto USB
3.5mm Jack miniplug	Tipo C
Wi-Fi	Bluetooth
802.11ac/b/g/n	5.0
Batería	Cámara
Polímero de Litio 3.8V 5000/6000/6500/7000/8000 mAh	2+5MP/5+8MP/5+13MP/8+10MP/8+13MP

Fuente de alimentación: Entrada 100-240V~ · 50/60Hz · 0.35A MAX · Clase II. Salida 9V --- 2A

Equipment Operating Interface:

Main Interface Description

After booting, you will enter the main interface.

On the home screen you can:

Manage the main software interface icons; press and hold an icon for 3 seconds, then you can drag it anywhere on the interface.

Delete icons: Press and hold an icon for 3 seconds, drag it to the recycle bin icon, release your finger once it turns red, then the icon will be deleted.

Change the wallpaper: If you touch and hold the screen, a "Select Wallpaper" dialog box will appear.

Using the Touch Panel

Below the main area of the touch screen is the status bar, where its three main buttons will serve as shortcuts.

No matter which interface the screen is on, you can return to the home screen by pressing the function key.

In different applications, you can return to the previous menu interface.

In different applications, pressing the menu key in the upper right corner of the touch screen will bring up the settings interface.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Operations in the 5.15-5.35GHz band are restricted to indoor usage only.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm(8 inches)during normal operation.