


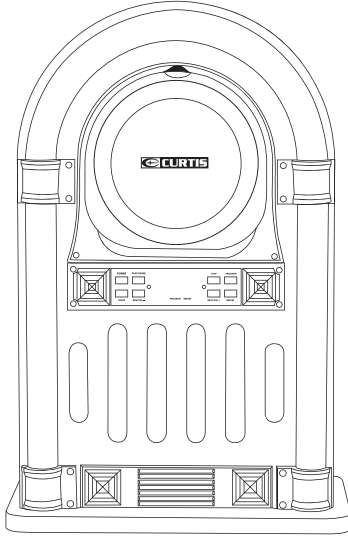

## JUKEBOX WITH CD PLAYER

BT/CD/AUX/LED SCREEN/LED  
Model No: CRCD2860BT  
INSTRUCTION MANUAL



CURTIS™ IS A REGISTERED  
TRADEMARK OF CURTIS INTERNATIONAL LTD.

1

### DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

#### NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user in order to continue improving and developing its technology.

### Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the jukebox from the mains power supply.

Wipe down the jukebox with a soft, damp cloth and dry thoroughly.

#### Do not:

Do not use abrasive cleaning solvents to clean the jukebox.  
Do not immerse the jukebox in water or any other liquid.  
Do not expose the remote control to extremely high or low temperatures, as this may destroy the battery.

### In the Box

Mini Jukebox with CD player  
Power Adaptor

Line-in Aux. Cable  
Instruction Manual

### Features

Bluetooth Version: 5.0  
Wireless Range: 10 m  
Speaker Output: 6 W  
Power Supply: 5 V 1.5 A

Colour Changing LED Lights  
CD Player: CD-R/CD-RW  
Power Adaptor (Included)  
Line-in Aux. Cable (Included)

### Specifications


Product Code: CRCD2860BT  
Bluetooth Version: 5.0  
Wireless Range: 10 m  
Speaker Output: 6 W

Power Supply: 5 V 1.5 A  
Frequency Response:  
80 Hz–18 kHz  
Operating Frequency: 2.4 GHz

### Description of Parts

For the Jukebox:


1. Mini Jukebox with CD player Main Unit
2. Colour Changing LED Lights
3. Built-in CD Player
4. Disk Tray
5. On/off Switch
6. 5 V 1.5 A DC Charging Port
7. Aux. Input Jack

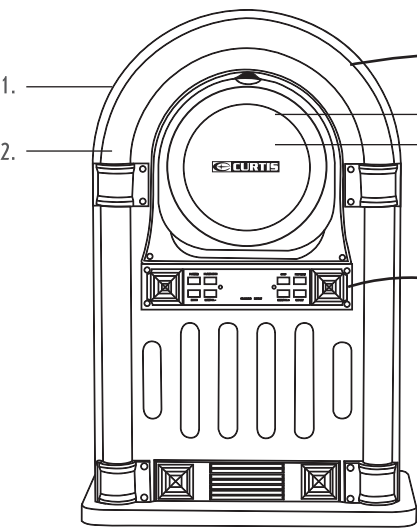

3

For the Control Panel:

8. LCD Display Screen
9. Standby Light
10. Standby/Power Button (POWER)
11. Play/Pause Button (PLAY/PAUSE)
12. Stop Button (STOP)
13. Programme Button (PROG)
14. Mode Button (MODE)
15. Skip/Volume – Button (REW/VOL –)
16. Skip/Volume + Button (REW/VOL +)
17. Repeat/LED Button (REPEAT/\*)

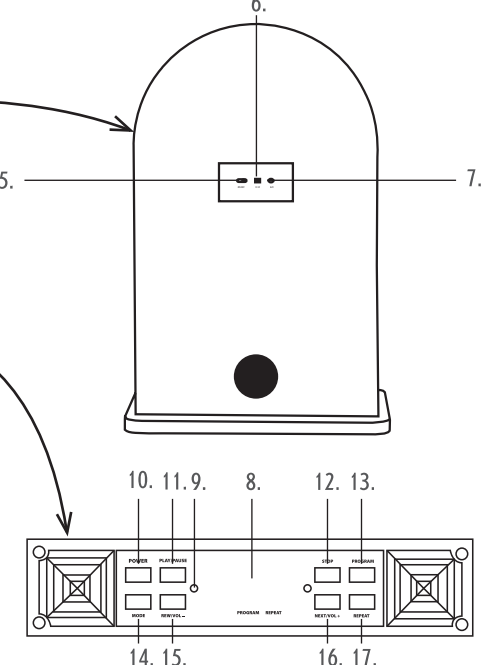

4

### Instruction for Use

#### Using the Mini Jukebox with CD Player

STEP 1: Plug the DC input jack on the power adaptor into the DC input port on the reverse of the jukebox and then plug the adaptor into the mains power supply and switch it on.

STEP 2: Turn on the jukebox by sliding the on/off switch on the reverse of the jukebox to the 'On' position and then press 'POWER' on the control panel.

STEP 3: Cycle between functions by pressing 'MODE' until the desired operation is selected (CD, Bluetooth and Aux. mode). The selected mode will be visible on the LCD display screen.

STEP 4: To pause the track, press 'PLAY/PAUSE'; push the relevant button again to resume the track.

STEP 5: Adjust the volume by using 'REW/VOL +' and 'REW/VOL –'. Press and hold 'REW/VOL +' to increase the volume; decrease the volume by pressing and holding 'REW/VOL –'.

STEP 6: Switch to the next track by pressing 'REW/VOL +'; play the previous track by pressing 'REW/VOL –'.

STEP 7: To turn on the colour changing LED lights, press and hold 'REPEAT/\*' for approx. 3 seconds; the jukebox will automatically begin to cycle through the various colours. When playing track, press one time 'REPEAT/\*' to repeat one track, press twice to repeat all track.

STEP 8: To turn off the jukebox completely, press 'POWER' on the control panel and then slide the on/off switch to the 'Off' position.

### Modes

The jukebox must be turned on before using any of the following modes.

#### Bluetooth Mode

STEP 1: Once the jukebox has been turned on, it will automatically enter Bluetooth mode and the LCD display screen will flash 'BT'.  
STEP 2: Search for the jukebox using a Bluetooth compatible device. Select 'CURTIS CRCD2860BT' to connect and pair. Once a connection has been made, the LCD display screen will show 'BT' to signal that the jukebox is now paired with the Bluetooth compatible device.

5

STEP 3: To unpair or remove a Bluetooth compatible device from the jukebox, turn off the Bluetooth function on the compatible device. The jukebox can now be paired with a new compatible device.  
Note: Once connected, sound can be controlled using the jukebox control panel or the relevant controls on the Bluetooth compatible device.

#### Aux. Mode

Connect one end of the line-in Aux. cable to the Aux. input port on the reverse of the jukebox and the other end to an MP3 player or other compatible audio source.

Press the 'MODE' button to AUX mode, the LED display will show 'AU'.  
Note: Once connected, sound can be controlled using the relevant controls on the compatible audio source.

#### CD Mode

##### Inserting a CD

STEP 1: Press 'MODE' until CD Mode is selected.

STEP 2: To access the built-in CD player, open the disk tray.

STEP 3: Insert the CD to be played with the artwork visible.

STEP 4: To turn the CD player on, close the disk tray.

#### Listening to a CD

STEP 1: Turn on the CD player following the instructions in the section entitled 'Inserting a CD'.

STEP 2: To control the sound when a CD is inserted into the jukebox, follow the instructions in the section entitled 'Using the Mini Jukebox with CD Player'.

STEP 3: To repeat the current track, press 'REPEAT/\*'; a red dot will flash to the right of the track number shown on the LCD display screen.

STEP 4: Repeat the entire CD by pressing 'REPEAT/\*' a second time; the red dot next to the track number will remain solid.

STEP 5: Cancel the repeat function by pressing 'REPEAT/\*' once more.

6

STEP 6: Switch to the next programmed track by pressing 'REW/VOL +'; play the previous track by pressing 'REW/VOL –'.  
STEP 7: To end CD playback, press 'STOP'.  
Note: The LCD display screen will show the track number once a CD is playing. When a track is paused, the track number shown on the LCD display screen will flash.

#### Programming a Playlist

STEP 1: End CD playback by pressing 'STOP'.

STEP 2: Press 'PROG'; the LCD display screen will flash '01', signalling that a playlist can now be programmed.

STEP 3: Use 'REW/VOL +' and 'REW/VOL –' to select a track and then press 'PROG' to select it as the first to be played. The LCD display will now flash '02'.

STEP 4: Repeat step 3 to set the play order of up to 20 tracks (depending how many are on the CD).

STEP 5: Cancel programming by pressing 'STOP'.

STEP 6: Press 'PLAY/PAUSE' to begin playback of the new playlist.

STEP 7: To exit the programmed playlist press 'STOP' twice. Press 'PLAY/PAUSE' to resume normal playback of the CD.

Note: Once playing, sound can be controlled using the jukebox. During programming, a red dot will illuminate to the left of the track number show on the LCD display screen.

#### Troubleshooting

The jukebox has no power.

The power adaptor has not been plugged in properly. Check that the power adaptor has been properly connected.

The jukebox has not been switched on at the mains power supply. Switch on the jukebox at the mains power supply.

The jukebox is in standby mode. Press 'POWER' to activate the jukebox.

The jukebox has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly using the jukebox or paired Bluetooth device.

Unable to pair a device with the jukebox.  
The Bluetooth device is not compatible with the jukebox. Make sure that the Bluetooth device is compatible with the jukebox and that the Bluetooth function on the device is switched on.

7

### FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### 90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement

8

being sent, the product must be rendered inoperable or returned to us.  
This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE. PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.  
RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

9

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

For service assistance and product information, please email support@curtissc.com or call 1-800-968-9853. Curtis International Ltd. 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com




10



## JUKEBOX WITH CD PLAYER

BT/CD/AUX/LED ÉCRAN/LED  
Numéro de modèle : CRCD2860BT  
MANUEL D'INSTRUCTION

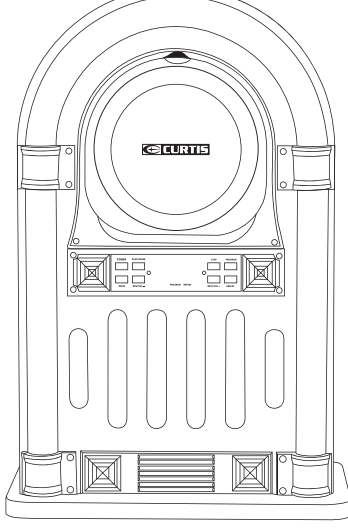

CURTIS™ EST UNE MARQUE  
DÉPOSÉE DE CURTIS INTERNATIONAL LTD

1

### CHER CLIENT

Afin d'obtenir les meilleures performances de votre produit, veuillez lire attentivement ce manuel d'instruction avant de l'utiliser et conservez-le pour référence future.

#### NOTE

Cet appareil peut être soumis à des modifications de spécifications, de caractéristiques et/ou de opérations sans préavis à l'utilisateur afin de continuer à améliorer et à développer sa technologie.

### Entretien et maintenance

Avant de tenter tout nettoyage ou entretien, éteignez le juke-box et débranchez le juke-box de l'alimentation électrique principale.

Essayez le juke-box avec un chiffon doux et humide et séchez soigneusement.

Ne pas:

N'utilisez pas de solvants de nettoyage abrasifs pour nettoyer le juke-box.

Ne plongez pas le juke-box dans l'eau ou tout autre liquide.

N'exposez pas le juke-box à des températures extrêmement élevées ou basses, car cela pourrait détruire la batterie.

### Dans la boîte

Mini Juke-box avec lecteur CD  
Adaptateur pour l'alimentation

Câble AUX d'entrée de ligne  
Manuel d'instruction

### Caractéristiques

Version Bluetooth : 5.0  
Portée sans fil : 10 m  
Sortie haut-parleur : 6 W  
Alimentation : 5 V 1.5 A

Lumières LED à changement de couleur  
Lecteur CD : CD-R/CD-RW  
Adaptateur pour l'alimentation (inclus)  
câble AUX d'entrée de ligne (inclus)

### Spécifications


Code produit : CRCD2860BT  
Version Bluetooth : 5.0  
Portée sans fil : 10 m  
Sortie haut-parleur : 6 W

Alimentation : 5 V 1.5 A  
Fréquence de réponse: 80 Hz-18 kHz  
Fréquence de opération : 2,4 GHz

### Description des pièces

Pour le Juke-box :


1. Mini Juke-box avec lecteur CD
2. Lumières LED à changement de couleur
3. Lecteur de CD intégré
4. Plateau de disque
5. Interrupteur marche/arrêt
6. Port de charge 5 V 1,5 A DC
7. Prise d'entrée AUX

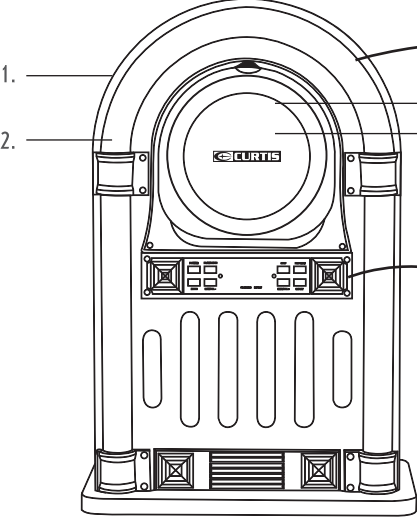

3

Pour le panneau de contrôle :

8. Écran d'affichage LCD
9. Lumière de veille
10. Bouton Veille/Alimentation (POWER)
11. Bouton Lecture/Pause (PLAY/PAUSE)
12. Bouton d'Arrêt (STOP)
13. Bouton de Programme (PROG)
14. Bouton Mode (MODE)
15. Bouton de Saut/Volume – (REW/VOL –)
16. Bouton de Saut/Volume + (REW/VOL +)
17. Bouton de Répétition/LED (REPEAT/\*)

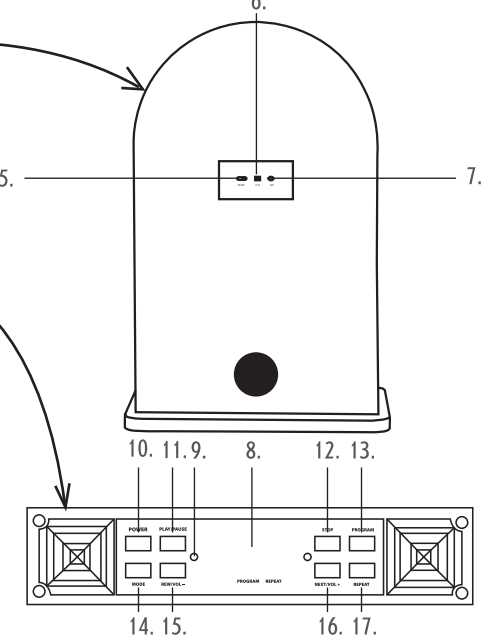

4

### Mode d'emploi

#### Utilisation du Mini Juke-box avec lecteur CD

ÉTAPE 1 : Branchez la prise d'entrée DC de l'adaptateur pour l'alimentation dans le port d'entrée DC à l'arrière du juke-box, puis branchez l'adaptateur dans l'alimentation électrique principale et allumez-le.

ÉTAPE 2 : Allumez le juke-box en faisant glisser l'interrupteur marche/arrêt situé à l'arrière du juke-box sur la position « On », puis appuyez sur « POWER » sur le panneau de contrôle.

ÉTAPE 3 : Passez d'une fonction à l'autre en appuyant sur « MODE » jusqu'à ce que l'opération souhaitée soit sélectionnée (mode CD, Bluetooth et Aux.). Le mode sélectionné sera visible sur l'écran LCD.

ÉTAPE 4 : Pour mettre la piste en pause, appuyez sur « PLAY/PAUSE »; Appuyez et maintenez « REW/VOL+ » pour augmenter le volume; diminuez le volume en appuyant et en maintenant « REW/VOL– ».

ÉTAPE 5 : Réglez le volume en utilisant « REW/VOL + » et « REW/VOL – ».

ÉTAPE 6 : Passez à la piste suivante en appuyant sur « REW/VOL+ »; lre la piste précédente en appuyant sur « REW/VOL– ».

ÉTAPE 7 : Pour allumer les lumières LED à changement de couleur, appuyez et maintenez enfoncé « REPEAT/\* » pendant environ 3 secondes ; le juke-box commencera automatiquement à parcourir les différentes couleurs. Lors de la lecture d'une piste, appuyez une fois pour répéter une piste, appuyez deux fois pour répéter toutes les pistes.

ÉTAPE 8 : Pour éteindre complètement le juke-box, appuyez sur « POWER » sur le panneau de commande, puis faites glisser l'interrupteur marche/arrêt sur la position « OFF ».

### Modes

Le juke-box doit être allumé avant d'utiliser l'un des modes suivants.

#### Mode Bluetooth

ÉTAPE 1 : Une fois le juke-box allumé, il entrera automatiquement en mode Bluetooth et l'écran LCD clignotera « BT ».

ÉTAPE 2 : Recherchez le juke-box à l'aide d'un appareil compatible Bluetooth. Sélectionnez 'CURTIS CRCD2860BT' pour vous connecter et jumeler. Une fois la connexion établie, l'écran LCD affichera 'BT' pour signaler que le juke-box est maintenant couplé avec l'appareil compatible Bluetooth.

5

ÉTAPE 3 : Pour dissocier ou retirer un appareil compatible Bluetooth du juke-box, désactivez la fonction Bluetooth sur l'appareil compatible. Le juke-box peut maintenant être couplé avec un nouvel appareil compatible.  
Note : Une fois connecté, le son peut être contrôlé à l'aide du panneau de contrôle du juke-box ou des contrôles correspondantes sur l'appareil compatible Bluetooth.

#### Mode AUX

Connectez une extrémité du câble AUX d'entrée de ligne au port d'entrée AUX à l'arrière du juke-box et l'autre extrémité à un lecteur MP3 ou à d'autres sources audio compatibles.

Appuyez sur le bouton « MODE » pour passer en mode AUX, et l'écran LED affichera « AU ».

Note : Une fois connecté, le son peut être contrôlé à l'aide des contrôles appropriés de la source audio compatible.

#### Mode CD

Insertion d'un CD

ÉTAPE 1 : Appuyez sur « MODE » jusqu'à ce que le mode CD soit sélectionné.

ÉTAPE 2 : Pour accéder au lecteur de CD intégré, ouvrez le plateau de disque.

ÉTAPE 3 : Insérez le CD à lire avec l'œuvre visible.

ÉTAPE 4 : Pour allumer le lecteur de CD, fermez le plateau du disque.

#### Écouter un CD

ÉTAPE 1 : Allumez le lecteur de CD en suivant les instructions de la section intitulée « Insertion d'un CD ».

ÉTAPE 2 : Pour contrôler le son lorsqu'un CD est inséré dans le juke-box, suivez les instructions de la section intitulée « Utilisation du Mini Juke-box avec lecteur CD ».

ÉTAPE 3 : Pour répéter la piste en cours, appuyez sur « REPEAT/\* » ; un point rouge clignote à droite du numéro de piste affiché sur l'écran LCD.

ÉTAPE 4 : Répétez l'intégralité du CD en appuyant une seconde fois sur « REPEAT/\* » ; le point rouge à côté du numéro de piste restera solide.

ÉTAPE 5 : Annulez la fonction de répétition en appuyant une fois de plus sur « REPEAT/\* ».

ÉTAPE 6 : Passez à la piste programmée suivante en appuyant sur « REW/VOL+ » ; lre la piste précédente en appuyant sur « REW/VOL– ».

6

ÉTAPE 7 : Pour terminer la lecture du CD, appuyez sur « STOP ».  
Note : L'écran d'affichage LCD affichera le numéro de suivi une fois qu'un CD est en cours de lecture. Lorsqu'une piste est en pause, le numéro de suivi affiché sur l'écran LCD clignote.

#### Mode CD

ÉTAPE 1 : Arrêtez la lecture du CD en appuyant sur « STOP ».

ÉTAPE 2 : Appuyez sur « PROG » ; l'écran d'affichage LCD clignotera «01», signalant qu'une liste de lecture peut maintenant être programmée.

ÉTAPE 3 : Utilisez « REW/VOL+ » et « REW/VOL– » pour sélectionner une piste, puis appuyez sur « PROG » pour la sélectionner comme la première à être lue. L'écran LCD va maintenant clignoter «02».

ÉTAPE 4 : Répétez l'étape 3 pour définir l'ordre de lecture de 20 pistes maximum (selon le nombre de pistes sur le CD).

ÉTAPE 5 : Annulez la programmation en appuyant sur « STOP ».

ÉTAPE 6 : Appuyez sur « PLAY/PAUSE » pour commencer la lecture de la nouvelle liste de lecture.

ÉTAPE 7 : Pour quitter la liste de lecture programmée, appuyez deux fois sur « STOP ». Appuyez sur «PLAY/PAUSE » pour reprendre la lecture normale du CD.

Note: Une fois la lecture terminée, le son peut être contrôlé à l'aide du juke-box. Pendant la programmation, un point rouge s'allume à gauche du numéro de piste affiché sur l'écran LCD.

#### Dépannage

Le juke-box n'a pas d'alimentation.

L'adaptateur pour l'alimentation n'a pas été branché correctement. Vérifiez que l'adaptateur pour l'alimentation a été correctement connecté.

Le juke-box n'a pas été mis sous tension sur le secteur.

Allumez le juke-box au niveau de l'alimentation secteur.

Le juke-box est en mode veille. Appuyez sur « POWER » pour activer le juke-box. Le juke-box n'a pas de son.

Le niveau du volume est réglé trop bas. Vérifiez que le niveau du volume est réglé sur un niveau audible et ajustez-le en conséquence à l'aide du juke-box ou de l'appareil Bluetooth couplé.

Impossible de jumeler un appareil avec le juke-box.  
Le périphérique Bluetooth n'est pas compatible avec le juke-box.

Assurez-vous que l'appareil Bluetooth est compatible avec le juke-box et que la fonction Bluetooth de l'appareil est activée.

7

### Déclaration FCC

NOTE : cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère des utilisations et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement cause des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.

-Connectez l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.

- Consultez le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide

Les changements ou modifications non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorité de l'utilisateur à faire fonctionner l'équipement.

Cet appareil est conforme à la partie 15 des règles de la FCC. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles.
- (2) cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

#### 90 jours de garantie

Ce produit est garanti contre tout défaut de matériel et de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine. Pendant cette période, votre seul recours est la réparation ou le remplacement de ce produit ou composant jug