


RF REMOTE CONTROL

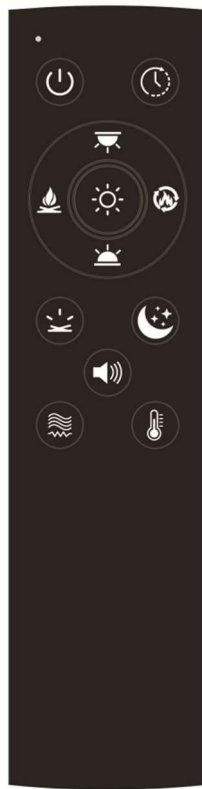

Model Number:	RX1
FCC ID:	2A8S3-RX1
IC:	29420-RX1
Battery:	3V (AAA*2)

Instruction of buttons:

1. Turning on/off the appliance

Turn the Rocker switch  to turn on the appliance. Press  to turn on or turn off the electric fire.

2. Timer

Press  button to activate countdown shutdown, selectable from 60min-120min-180min-240min-300min-360min-420min-480 minutes. OFF option for Cancel countdown shutdown setting.

3. Down light

Press  button to select down light color: 3 color options (1-2-3-off), with the corresponding number displayed on the screen, the off option is for turning off the down light.

4. Flame Colors

Press  button to select Flame color: 7 color options (1-2-3-4-5-6-7), with the corresponding number displayed on the screen, the off option is for turning off the ember bed light.

5. Flame effects

Press  button to select Flame effect: 4 flame effect options (1-2-3-4), with the corresponding number displayed on the screen.

6. Flame Display Screen Brightness.

Press  button to select flame display screen brightness: 5 brightness options (1-2-3-4-5), with the corresponding number displayed on the screen. Adjust the appropriate flame display brightness according to the indoor light intensity to achieve the optimal viewing effect.

7. Ember Bed LED Colors

Press  button to select ember bed colors: 13 color options (1-2-3-4-5-6-7-8-9-10-11-12-13-off), with the corresponding number displayed on the screen, the off option is for turning off the ember bed light.

8. Log light brightness

Press  button to select log light brightness: 3 brightness options (1-2-3-off), with the corresponding number displayed on the screen, the off option is for turning off the log light.

9. Night mode



Press  button to Enable Night Mode or Exit Night Mode, when night mode is activated, only the ember bed light remains on at low brightness, while all other lights and the flame effect are turned off. The heater can operate normally. If the heater is switched off, this mode will enter an ultra-low power consumption state (5 watt). Additionally, the ceiling light and ember bed light can still be turned on and their colors selected in this mode. Press this button again to exit night mode, and the flame effect will revert to its default settings.

10. Cracking sound



Press  button to turn on or turn off the cracking sound and the on or off displayed on the screen.

11. Electric heating control



Press  button to turn on or turn off the electric heater. The fireplace has two heating Settings- half power (690 W) and full power (1380 W), the corresponding option displayed on the screen.

12. Temperature setting




Turn on the heater first before using the temperature setting function, then press  button to select the desired temperature: 8 selectable temperature levels (60°F-64°F-68°F-72°F-76°F-80°F-84°F-88°F), the off option is for cancel temperature setting.

13. Pairing of the Electric Fireplace and the Remote Control



Turn on the appliance, press  and  hold the 2 buttons indicated for 5 seconds for pairing of the Electric Fireplace and the Remote Control.

Télécommande RF

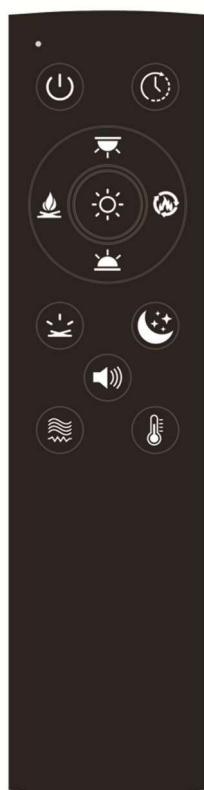

Numéro de modèle: RX1
Identifiant FCC: 2A8S3-RX1
IC: 29420-RX1
Batterie: 3V (AAA*2)

Instruction des boutons:

1. Mise en marche/arrêt de l'appareil

Tournez l'interrupteur à bascule pour mettre l'appareil en marche. Appuyez sur  la touche pour allumer ou éteindre le foyer électrique.

2. Minuterie

Appuyez sur  la touche pour activer l'arrêt différé. Durées au choix: 60min-120min-180min-240min-300min-360min-420min-480 min. L'option OFF permet d'annuler le réglage de l'arrêt différé.

3. Éclairage inférieur

Appuyez sur  la touche pour choisir la couleur de l'éclairage inférieur: 3 couleurs au choix (1-2-3-arrêt). Le numéro correspondant s'affiche à l'écran; l'option arrêt permet d'éteindre l'éclairage inférieur.

4. Couleurs de flamme

Appuyez sur  la touche pour choisir la couleur de la flamme: 7 couleurs au choix (1-2-3-4-5-6-7). Le numéro correspondant s'affiche à l'écran; l'option arrêt permet d'éteindre l'éclairage du lit de braises.

5. Effets de flamme

Appuyez sur  la touche pour sélectionner l'effet de flamme: 4 effets au choix (1-2-3-4). Le numéro correspondant s'affiche à l'écran.

6. Luminosité de l'écran d'affichage de la flamme

Appuyez sur  la touche pour régler la luminosité de l'écran d'affichage de la flamme: 5 niveaux de luminosité (1-2-3-4-5). Le numéro correspondant s'affiche à l'écran. Ajustez la luminosité selon l'intensité lumineuse intérieure pour obtenir un effet visuel optimal.

7. Couleurs LED du lit de braises

Appuyez sur  la touche pour choisir la couleur du lit de braises: 13 couleurs au choix (1-2-3-4-5-6-7-8-9-10-11-12-13-arrêt). Le numéro correspondant s'affiche à l'écran; l'option arrêt permet d'éteindre l'éclairage du lit de braises.

8. Luminosité de l'éclairage des bûches



Appuyez sur la touche pour régler la luminosité de l'éclairage des bûches : 3 niveaux de luminosité (1-2-3-arrêt). Le numéro correspondant s'affiche à l'écran; l'option arrêt permet d'éteindre l'éclairage des bûches.

9. Mode nuit



Appuyez sur la touche pour activer ou quitter le mode nuit. Lorsque le mode nuit est activé, seul l'éclairage du lit de braises reste allumé à faible intensité; tous les autres éclairages et effets de flamme sont éteints. La fonction de chauffage continue de fonctionner normalement. Si le chauffage est arrêté, l'appareil passe en mode très basse consommation (5 watts). Dans ce mode, l'éclairage plafonnier et l'éclairage du lit de braises restent activables avec sélection de couleur. Appuyez à nouveau sur la touche pour quitter le mode nuit; l'effet de flamme reprend ses paramètres par défaut.

10. Son de crépitement



Appuyez sur la touche pour activer ou désactiver le son de crépitement; l'état marche/arrêt s'affiche à l'écran.

11. Réglage du chauffage électrique



Appuyez sur la touche pour allumer ou éteindre le chauffage électrique. Le foyer dispose de deux niveaux de chauffage : demi-puissance (690 W) et pleine puissance (1380 W). L'option correspondante s'affiche à l'écran.

12. Réglage de température

Activez d'abord le chauffage pour utiliser la fonction de réglage de température, puis appuyez sur



la touche pour sélectionner la température souhaitée : 8 niveaux réglables (60°F-64°F-68°F-72°F-76°F-80°F-84°F-88°F). L'option arrêt permet d'annuler le réglage de température.

13. Appairage du foyer électrique et de la télécommande



Mettez l'appareil sous tension, Appuyez sur les touches et , puis maintenez les deux touches indiquées pendant 5 secondes pour réaliser l'appairage entre le foyer électrique et la télécommande.

Warning/ Avertissement:

This device complies with Part 15 of the FCC Rules / Industrie Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.