


1HORA


AUT214

ANC AUDÍFONOS INALÁMBRICOS

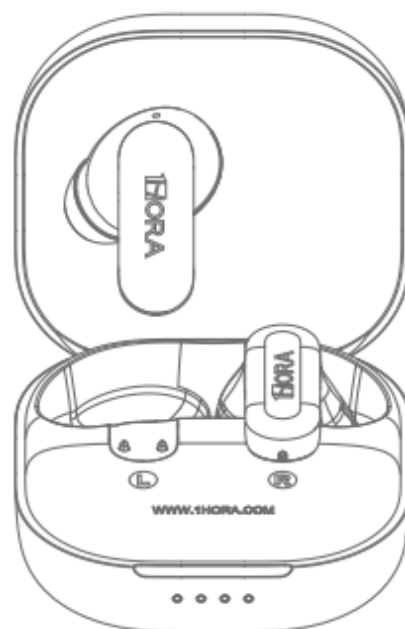

MANUAL DE USUARIO

Guía Rápida

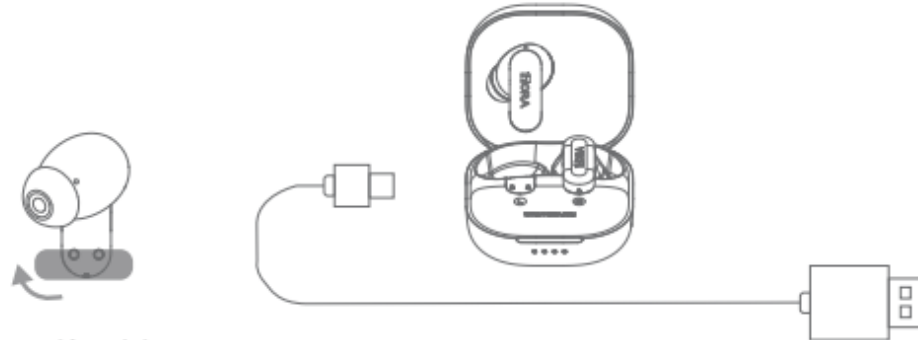

Configuración Inicial

- Retire la etiqueta protectora antes del primer uso.
- Cargue completamente el estuche y los audífonos durante **1.5** horas.

Un audífono no emite sonido?

- Desactive Bluetooth en su dispositivo.
- Coloque ambos audífonos en el estuche durante **30** segundos.
- Sáquelos, espere 1 minuto y vuelva a conectarlos al Bluetooth.

Emparejamiento

1. Encienda el estuche de carga y saque los audífonos. Los audífonos se emparejarán automáticamente entre sí. Los audífonos emitirán un sonido de aviso para indicar que están listos para emparejarse.
2. Abra la función de Bluetooth en su teléfono, busque y seleccione "1HORA-AUT214". Los audífonos se conectarán con éxito al teléfono y recibirá un mensaje de confirmación que dice "Conectado".



Resumen del Producto



- 1. Caja de Carga
- 2. Audífonos
- 3. Botón Táctil

- 4. Interfaz de Carga
- 5. Puerto de Carga Tipo-C

Lista de Empaque



Audífonos*2



Estuche de Carga*1



Almohadillas para audífonos*6
(Incluidas las colocadas en los audífonos)



Cable Tipo-C de
1 Metro*1



Manual del
Usuario*1

Cargar

Cargar los Audífonos:

Coloque los audífonos en el estuche de carga, la luz indicadora blanca del estuche se encenderá y apagará siempre que los audífonos estén cargados completamente.

Cargar el Estuche de Carga:

Cuando la batería del estuche de carga está baja, la luz indicadora blanca del estuche parpadea. Conecte el estuche al cargador usando el cable Tipo-C incluido. Durante la carga, la luz indicadora blanca parpadea, y está siempre encendida cuando el estuche está completamente cargado.

Indicador LED

Cargando la Caja de Carga:

- Luz Blanca Parpadeando: Cargando
- Luz Blanca Encendida Constante :Completamente cargada

Cargar los Audífonos en el Estuche de Carga:

- Luz Blanca Parpadeando: Recordatorio de batería baja
- Luz Blanca Encendida Constante : Audífonos en carga (la luz blanca se apaga cuando están completamente cargados)

Control Telefónico

Responder una Llamada:

Toque una vez el botón táctil en cualquier audífono.



Colgar una Llamada:

Toque dos veces el botón táctil en cualquier audífono.



Rechazar una Llamada:

Mantenga presionado el botón táctil en cualquier audífono durante 1,5 segundos.

Control de Música

Reproducir/Pausar:

Toque 1 vez el botón táctil en cualquier audífono.



Siguiente Canción:

Toque 2 veces el botón táctil en cualquier audífono.



Canción Anterior:

Toque 3 veces el botón táctil en cualquier audífono.

Asistente de Voz

Activar Siri:

Mantenga presionado el botón táctil en cualquier audífono durante 1,5 segundos (cuando la música está en pausa).



Preguntas Frecuentes (Q&A)

Preguntas sobre Duración de Reproducción:

¿Cuánto dura con una carga completa?

Dura más de 24 horas con el uso del estuche de carga, y 6 horas de reproducción para los audífonos con un volumen del 100%.

Problemas de Conexión:

Si los audífonos no se conectan o emparejan con su teléfono o computadora:

1. Intente colocar los audífonos en la caja de carga y espere 1 minuto antes de abrirla nuevamente para reiniciarlos.
2. Asegúrese de que la función Bluetooth del dispositivo esté habilitada y de que los audífonos estén dentro de un rango de 1 metro del dispositivo.
3. Si el problema persiste, intente reiniciar el Bluetooth del dispositivo o desvincular y volver a vincular los auriculares.

Problemas de Carga:

Si los audífonos no se cargan correctamente:

1. Verifique que la de carga y los puertos de carga estén limpios y sin residuos.
2. Asegúrese de que los audífonos estén correctamente alineados con los pines de carga en la caja.
3. Si el problema persiste, intente usar un cable o cargador de carga diferente para determinar si el problema proviene de los accesorios.

Problemas de Falta de Sonido:

Si sus audífonos no tienen sonido, puede probar los siguientes pasos de solución:

1. Verifique la conexión Bluetooth: Asegúrese de que los audífonos Bluetooth se hayan emparejado correctamente con el dispositivo de audio. Una conexión fallida puede resultar en la ausencia de sonido.
2. Verifique la configuración de volumen: Asegúrese de que la configuración de volumen esté ajustada correctamente. Si el volumen está demasiado bajo o silenciado, no habrá sonido.
3. Pruebe con otro dispositivo: Conecte los audífonos a un dispositivo de audio diferente para ver si el problema persiste. Esto ayudará a determinar si el problema está en los auriculares o en el dispositivo de audio original.
4. Pruebe con otra fuente de audio: Pruebe los audífonos con una fuente de audio diferente, como una canción o video diferente, para descartar problemas con el archivo multimedia específico.
5. Limpie el conector de los audífonos: si hay residuos o suciedad en el conector de los auriculares, puede interferir con la conexión de audio. Use un paño limpio o aire comprimido para eliminar cualquier obstrucción.

Instrucciones de Seguridad

1. Al usar este producto mientras camina, preste atención a su entorno para evitar causar o verse involucrado en accidentes de tráfico.
2. Antes de usar, reduzca el volumen al mínimo para evitar que los ruidos fuertes repentinos dañen su audición. No suba el volumen demasiado alto para proteger sus oídos.
3. Si este producto cae en sustancias inflamables o líquidos, como agua, deje de usarlo de inmediato para evitar incendios, mal funcionamiento o descargas eléctricas.
4. No intente abrir el producto, ya que puede provocar un mal funcionamiento o una descarga eléctrica. No podemos garantizar el rendimiento si el interior ha sido modificado manualmente.
5. No cargue el producto con las manos mojadas ni toque el puerto de carga para evitar descargas eléctricas.
6. Si se siente incómodo al usar este producto, deje de usarlo de inmediato.
7. Si está utilizando un dispositivo médico como un marcapasos, consulte a su médico antes de usar este producto.
8. Mantenga este producto fuera del alcance de los niños pequeños y no permita que lo usen.

Declaración de Garantía

Ofrecemos un servicio de garantía de 12 meses para este producto, pero las siguientes situaciones no están cubiertas por la garantía.

- 1.El período de garantía ha expirado.
- 2.La tarjeta de garantía ha sido alterada y no coincide con el código y el cuerpo del producto.
- 3.Malfuncionamiento o daño causado por un uso inadecuado, abuso, transporte inadecuado, uso, mantenimiento o almacenamiento.
- 4.Malfuncionamiento o daño causado por fuerza mayor (como terremotos, guerras, incendios, etc.) o accidentes.
- 5.Daño a cremalleras o hebillas debido a una fuerza excesiva.
- 6.Costuras rotas o desgarradas causadas por sobrecarga.
- 7.Daño causado por cualquier objeto afilado.
- 8.Productos con signos de quemaduras o inmersión en agua.
- 9.Daño causado por desmontaje o modificación no autorizados.
- 10.Envejecimiento, decoloración, desgaste, agrietamiento y otros desgastes que ocurren durante el uso normal del producto.
- 11.Si se cambia o daña la etiqueta de identificación original del producto, esta garantía quedará anulada. La integridad y apariencia del producto y los materiales acompañantes no están cubiertos por la garantía. Por favor, inspeccione y presente objeciones en el acto al recibir el producto.

Servicio al Cliente | Customer Service




support@1hora.com



www.1hora.com

Quick Guide

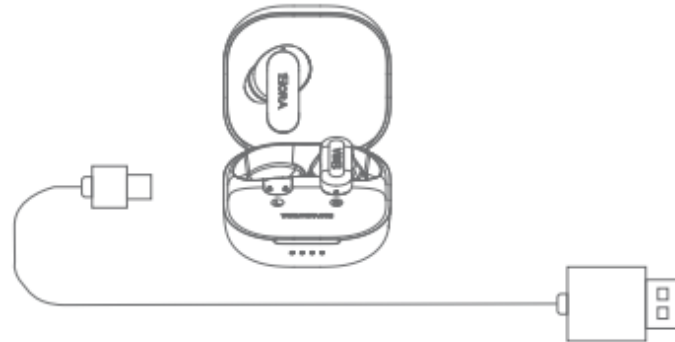

Initial Setup

- Remove the protective label before first use.
- Fully charge the case and earbuds for **1.5** hours.

No sound in one earbud?

- Turn off Bluetooth on your device.
- Put both earbuds back in the case for **30** seconds.
- Take them out, and reconnect via Bluetooth.

Pairing

1. Open the charging case and take out the earbuds. The earbuds will automatically power on and pair with each other. The earbuds will emit a beep to indicate pairing is complete.
2. Turn on the Bluetooth function on your phone, search and select "1HORA-AUT214". The earbuds will successfully connect to the phone and you will receive a "Connected" confirmation message.



Product Overview



1. Charging Case
2. Earbuds
3. Touch Button

4. Charging Interface
5. Type-C Charging Port

Packing List



Earbuds*2



Charging Case*1



Ear Tips*6

(Includes ear tips mounted on the earbuds)



1 Meter Type-C
Cable *1



User Manual*1

Charging Instructions

Earbuds Charging:

Put the earbuds into the charging case. The white indicator light of the charging case will be on and it will go out when it is fully charged.

Charging the Case:

When the charging case is low on power, use the included Type-C charging cable to charge it and the white indicator light will flash, and the white indicator light stays on when it is fully charged.

LED Indicator

Charging the Charging Case:

- White Light Flashing: Charging
- Steady White Light : Fully charged

Charging Case to Charge Earbuds:

- White Light Flashes: Low battery reminder
- Steady White Light: Earbuds is charging (white light turns off when earbuds are fully charged)

Phone Control

Answer Call:

Single tap either earbud.



End Call:

Double-tap either earbud.



Reject Call:

Press and hold either earbud for 1.5s.



Music Control

Play/Pause:

Single tap either earbud.



Next Song:

Double-tap either earbud.



Previous Song:

Triple-tap either earbud.



Voice Assistant

Activate Siri:

Press and hold either earbud for 1.5s (while music is paused).



Frequently Asked Questions (FAQs)

Playback Duration Issues:

How long does it last with a full charge?

It lasts more than 24 hours total listening time with the charging case, and 6 hours playtime for the earbuds with 100% volume.

Connectivity Issues:

If the earphones are not connecting or pairing with your smartphone or computer:

1. Try to place the earbuds in the charging case and wait for 1 minute before reopening it to reset.
2. Ensure that the Bluetooth function on the device is enabled and that the earbuds are within 1 meter range of the device.
3. If the issue persists, try restarting the device's Bluetooth or unpairing and re-pairing the earbuds.

Charging Issues:

If the earphones are not charging properly:

1. Check if the charging case and charging ports are clean and free from debris.
2. Ensure that the earphones are properly aligned with the charging pins in the case.
3. If the issue persists, try using a different charging cable or charger to determine if the problem lies with the accessories.

No Sound Issues:

If your headphones have no sound, you can try the following troubleshooting steps:

1. Check Bluetooth connection: Ensure that the Bluetooth earbuds have successfully paired with the audio device. A failed connection may result in no sound.
2. Check the volume settings: Ensure that the volume settings are properly adjusted. If the volume is set too low or muted, there will be no sound.
3. Test with another device: Connect the headphones to a different audio device to see if the issue persists. This will help determine if the problem is with the headphones or the original audio device.
4. Try a different audio source: Test the headphones with a different audio source, such as a different song or video, to rule out any issues with the specific media file.
5. Clean the earbuds jack: If there is debris or dirt in the earbuds jack, it may interfere with the audio connection. Use a clean cloth or compressed air to remove any obstructions.

Safety Instructions

1. When using this product while walking, pay attention to your surroundings to avoid causing or being involved in traffic accidents.
2. Before use, please turn the volume to the lowest level to prevent sudden loud noises from damaging your hearing. Do not turn the volume up too high to protect your ears.
3. If this product falls into flammable or liquids, such as water, please stop using it immediately to prevent fire, malfunction, or electric shock.
4. Do not attempt to disassemble the product to avoid malfunction or electric shock. We cannot guarantee its performance if the internals have been manually modified.
5. Do not touch the charging port with wet hands when charging to avoid electric shock.
6. If you feel uncomfortable while using this product, please stop using it immediately.
7. If you are using medical device such as a pacemaker, please consult your doctor before using this product.
8. Keep this product out of reach of children and do not allow them to use it.

Warranty Statement

We provide a 12-month warranty service for this product, but the following situations are not covered by the warranty.

1. Warranty period has expired.
2. Warranty card has been altered and does not match the product code and body.
3. Malfunction or damage caused by misuse, abuse, improper transportation, use, maintenance or storage.
4. Malfunction or damage caused by force majeure (such as earthquakes, wars, fires, etc.) or accidents.
5. Damage to zippers or buckles due to excessive force.
6. Stitching or tearing caused by overloading.
7. Damage caused by any sharp object.
8. Products with signs of burning or water immersion.
9. Damage caused by unauthorized disassembly or modification.
10. Aging, discoloration, wear and tear, cracking, and other wear and tear that occur during normal use of the product.
11. If the original identification label of the product is changed or damaged, this warranty will be void.

Completeness and appearance of the product and accompanying materials are not covered by the warranty. Please inspect and raise objections on the spot when receiving the product.

FCC Warning

FCC ID:2A9HV-AUT214

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.