

Get started

Quick Guide

Insert SIM card

The phone is a DUAL SIM mobile phone allowing you to use two fully active networks.
To insert SIM card(s):
1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) (See figure below).



3. Finally insert the battery and replace the rear cover of the mobile phone.

Insert Memory card

1. Power off the mobile phone and remove the rear cover and battery.
2. Insert the Micro SD card into the slot.
3. Finally insert the battery and the rear cover of the mobile phone.
Note: Use only compatible memory cards for use with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.



Charge the Battery or Connect to a computer

You can charge your battery using the charger or connect the USB cable (supplied with this phone) to the computer.
Note: Please use the specific battery, otherwise it may cause explosion.



Keys and parts

Quick Guide

This smart phone supports 3G Card and gives you marvelous feelings to experience on Camera, Video recorder, FM radio, Music and Sound recorder. Let you install various APPs, games, and more (supports APK format) by downloading from Play Store.



Lock and Unlock the Screen

Quick Guide

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up, and then drag the lock to the right side to unlock.




Make a call
On the start screen choose number to make a call, and enter a complete phone number to make a call.



Maintenance & Safety

Quick Guide

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's manual accessible at all times after reading it.
1. After sales service
Kindly refer to the Warranty Card provided in the sales package box.
2. Battery and Adapter Safety
Charger and adapter are designed for indoor use only.
• Please use the specific battery, otherwise it will cause explosion.
• Please dispose of your battery properly.
• Do not disassemble or puncture the battery.
• Keep the battery's metal contacts clean.
• Recharge the battery after long periods of non-use to maintain battery life.
• Battery life will vary due to usage patterns and environmental conditions.
• The self-discharge function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, reset it, and turn the phone on.
3. General Notice
Using a damaged battery or charging a battery in your mouth may cause serious injury.
• Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near



your phone. The magnetism of the phone may damage the data stored in the magnetic disk.
• Taking your phone for long period of time may reduce call quality due to heat generated during use.
• When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
• Using the phone in proximity to sensitive equipment (i.e. TV or Radio) may cause interference to the phone.
• Do not remove your phone's wires. If this happens, remove the battery and take it to an Authorized Service Center.
• Do not wear your phone.
• The data saved in your phone might be deleted due to unstable use, repair of the phone, or upgrade of the software.
Please backup your important phone numbers (Ring tones, text messages, voice messages, photos, and videos could also be deleted). The manufacturer is not liable for damage due to the loss of data.
• Do not turn your phone on or off when the phone is close to your eyes.

DOWNLOAD FULL USER MANUAL
See [www.sendtelmobile.com](#) for SUPPORT menu.
See [www.sendtel.com](#) for product details and enter the model name
SEND CENTER

WARNING


FCC RF Exposure Information and Statement:
The SAR limit of FCC (FCC) is 1.6W/kg averaged over one gram of tissue. Model Number: FLARE LITE (FCC ID: 2AB56A-FLARELITE) has also been tested against the SAR limit. The higher SAR value recorded under the worst during actual contribution for use of the head 1.29 W/kg, and when present next to the body is 1.44 W/kg. ... The phone was tested for harmful interference with the power cord unplugged.
• Using the phone in proximity to sensitive equipment (i.e. TV or Radio) may cause interference to the phone.
• Do not remove your phone's wires. If this happens, remove the battery and take it to an Authorized Service Center.
• Do not wear your phone.
• The data saved in your phone might be deleted due to unstable use, repair of the phone, or upgrade of the software.
Please backup your important phone numbers (Ring tones, text messages, voice messages, photos, and videos could also be deleted). The manufacturer is not liable for damage due to the loss of data.
• Do not turn your phone on or off when the phone is close to your eyes.
Note: The equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to part 15 of the FCC Rules. There are no required precautions to prevent harmful interference in a residential installation. The equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to nearby communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment to a different power outlet or to a different circuit.
• Consult the dealer or an experienced radio/TV technician for help.

Comenzar

Guía Rápida

Insertar tarjeta SIM

El teléfono es Dual SIM, lo cual le permite la opción de tener dos proveedores de servicio.
Para insertar la(s) tarjeta(s) SIM:
1. Apagar el teléfono, remover la tapa y la batería.
2. Insertar la tarjeta SIM cuidadosamente en el(s) espacio(s) designado(s) para ello (ver figura adjunta).

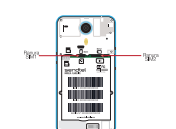

3. Finalmente insertar la batería y colocar la tapa del teléfono.

Insertar tarjetas de memoria

1. Apagar el teléfono, remover la tapa y la batería.
2. Insertar la tarjeta Micro SD en el espacio designado para ello.
3. Finalmente insertar la batería y la tapa del teléfono.
Nota:
Usar solo tarjetas de memoria compatibles con este dispositivo. Tarjetas de memoria incompatibles podrían dañar la tarjeta del dispositivo y corromper la data almacenada en la misma.



Cargar la Batería o Conectar a un computador

Se puede cargar la batería usando el cargador o conectando el cable USB (suministrado con este teléfono) al computador.
Nota:
Favor utilizar solo la batería específica de este modelo, podría ocasionar una explosión.



Teclas y partes

Guía Rápida

El teléfono inteligente soporta tarjeta 3G y le brinda una maravillosa experiencia cuando usa las diferentes funciones como la cámara, la grabadora de video, la radio FM, reproductor de música y grabadora de sonido. Le permite instalar diversas aplicaciones, juegos, y más (soporta formato APK) descargándolos desde Play Store.



Bloquear y Desbloquear la Pantalla

Guía Rápida

Presionar el botón de encendido para entrar en el modo de Suspensión, la pantalla será bloqueada; presionar el botón de encendido nuevamente para activar de nuevo la pantalla y arrastrar el cerrojo hacia el lado derecho para desbloquear.



Hacer una llamada
En la pantalla de inicio seleccionar el icono de teléfono y introducir el número telefónico completo para hacer una llamada.



Mantenimiento y Seguridad

Guía Rápida

Por favor lea detenidamente la siguiente información para su seguridad, uso adecuado de su teléfono y prevenir daños.
Por favor guarde este guía en un lugar accesible luego de haberlo leído.
1. Servicio Post Venta: Refiérase a la tarjeta de Garantía en la Caja.
2. Cargador y adaptador: El cargador y el adaptador, están diseñados solo para uso en interiores.
3. Información y cuidado de la batería
• Por favor utilizar solamente la batería suministrada, de lo contrario la unidad podría explotar.
• Por favor desmontar la batería adecuadamente.
• No desarmar ni hacer cortocircuito de la batería.
• Mantener limpia las conexiones metálicas de la batería.
• Recargar la batería luego de un largo periodo sin haberla usado para mantener la vida de la batería.
• El tiempo de vida de la batería puede variar de acuerdo al entorno y al red.
• La función de auto-protección de la batería apaga el teléfono cuando su operación está en un estado anormal. En este caso, quite la batería del teléfono, reseteéelo, y enciéndalo el teléfono.



Atención General
• Use únicamente en mal estado o colocar la batería en su caja puede causar daños severos.
• No coloque su teléfono cerca de otros aparatos u objetos con componentes magnéticos como la sonaja de crédito, tarjetas telefónicas, bobinas de subterráneos, etc. El magnetismo podría dañar los datos almacenados en el teléfono.
• Hacer prolongadamente por teléfono puede reducir la calidad de la llamada y producir calor.
• User el teléfono cerca de aparatos receptores de onda puede causar interferencias como por ejemplo la TV o la Radio.
• No sumergir su teléfono en agua. En caso que esto ocurra, por favor retire la batería y llevar su teléfono a un centro de servicio autorizado.
• Los datos almacenados en su teléfono pueden ser formados si el equipo sufre de alguna reparación o actualización de Software. Por favor haga un respaldo de su teléfono antes de entregárselo en un centro de servicio autorizado o bien antes de hacerle una actualización de software. El fabricante no será responsable por la pérdida de información en los teléfonos.
• No pretenda ni intente su teléfono cuando éste se encuentre cerca de su rostro.
• Cuando el teléfono no se usa o se usó por un largo periodo de tiempo, guardarlo descargado de un lugar seguro.
• No pretar su teléfono
• Este dispositivo cumple con los requisitos FCC. La operación está sujeta a las siguientes dos condiciones:
(1) Este dispositivo no puede causar interferencia dañina, y

(2) este dispositivo debe aceptar cualquier interferencia recibida, incluso las interferencias que puedan provocar un funcionamiento no deseado o cambios o modificaciones no aprobadas expresamente por la parte responsable del cumplimiento, pueden anular la autoridad del usuario para operar el equipo.
COMUNICATE
Twitter Facebook YouTube Instagram
@sendtel @sendtel @sendtel @sendtel
CALL CENTER
VENEZUELA
0 800 100 9221
COLOMBIA
BOGOTÁ 432 02 02 al 93
Línea Nacional - 01 800 1200 1200
servicio@sendtelmobile.com