
封面

MONOPRICE

Horizon ANC TrueWireless™ Earphones

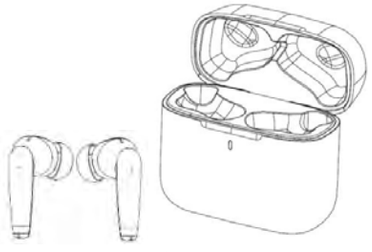

P/N 43452

User's Manual

FCC ID： 2ADDH43452

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- Although this device carries an IPx4 rating and is sweatproof, do not expose it to more than incidental splashing water.
- Do not expose this device to excessive vibration or extreme force, shock, or fluctuations in temperature or humidity.
- Do not use this device while operating a motor vehicle or heavy equipment, walking in traffic, or any other situation in which situational awareness is a key to safety.
- Avoid prolonged exposure to excessive volume levels, which could cause hearing damage. Reduce the volume to minimum before wearing these earphones, then increase the volume to a comfortable listening level.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source. Do not leave it in direct sunlight.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- This device contains a Lithium battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding the full charge.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user serviceable parts. Do not attempt to open, service, or modify this device.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website **www.monoprice.com** or via email at **support@monoprice.com**. Check the website for support times and links.

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x Pair TrueWireless™ Earphones

1x Charging Case

1x USB Charging Cable (Type-A to Type-C®)

1x User's Manual


1x Thank You Card

3x Pair Ear Tips (S/M/L)

PRODUCT OVERVIEW

Earphones

1. Earphones LED Indicators (1 on each)
2. Touch Area (1 on each)
3. Noise Cancelling Microphone (1 on each)
4. Voice Microphone (1 on each)
5. Charging Contact (1 on each)

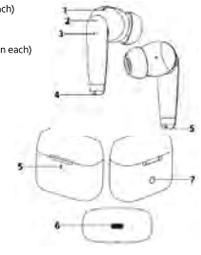

Charging Case

6. Charging Case LED Indicator
7. USB Type-C® Charging Port
8. Multifunction Button

CHARGING

Charge the battery before first use and at least once every three months to keep it fresh and capable of holding the full charge. Perform the following steps to charge the **Earphones** and **Charging Case**.

Earphones

1. Open the **Charging Case**.
2. Insert the **Earphones** into the **Charging Case**. The **Earphones LED Indicators** will be solid white, indicating that charging is in progress.

3. When charging is complete, the **Earphones LED Indicators** will turn off.

Charging Case



1. Plug one end of the included **USB Charging Cable** into the **USB Charging Port** on the **Charging Case**, then plug the other end into a USB power source, such as a computer, wall charger, or power bank (available separately). The **Charging Case LED Indicator** illuminates white to indicate that charging is in progress.
2. When charging is complete, the **Charging Case LED Indicator** will be on. Unplug the **USB Charging Cable** and store it in a safe place for future use.

PAIRING

Perform the following steps to pair the **Earphones** with your mobile device.

1. Open the **Charging Case**.
2. Remove the **Earphones** from the **Charging Case**. The **Earphones LED Indicators** will illuminate white for 1 second to indicate that they are powered on.
3. If the **Earphones** have already been paired with a device and that device is powered on and within range, the **Earphones** will automatically connect to that device. Otherwise, the **Earphones** will enter Bluetooth® pairing mode. The **Earphones LED Indicator** on the **Right Earphone** will begin flashing white, indicating that they are in Bluetooth pairing mode.
4. Open the Bluetooth settings on your mobile device and scan for available Bluetooth devices.

5. Locate and select the **MP43452** entry. If prompted for a passcode, enter **0000** (four zeros), **8888** (four eights), **1111** (four ones), or **1234**. The **Earphones** will connect to your device and the **Earphones LED Indicator** on the **Right Earphone** will turn off.

*Note that if the **Earphones** do not enter Bluetooth pairing mode automatically or if you want to cancel an existing pairing, press and hold the **Multifunction Button** on the **Charging Case** for 10 seconds to cancel any existing pairings and put the **Earphones** in Bluetooth pairing mode.(Please put the earphone in the charging case and open the cover of the case.)*

OPERATION

: Remove the **Earphones** from the **Charging Case** to turn them on. Place the **Earphones** in the **Charging Case** to turn them off. Note that the **Earphones** will automatically power off if there is no audio or controls inputs for 10 minutes or if the battery level is low.

: Quickly double press the **Right or Left Earphone** to Start or Pause play.

: Quickly triple press the **Left Earphone** to skip back to the Previous Track.

: Quickly triple press the **Right Earphone** to skip forward to the Next Track.

: Single press the **Left Earphone** to Increase the Volume. Wait 1 second, then repeat to continue increasing volume.

: Single press the **Right Earphone** to Decrease the Volume. Wait 1 second, then repeat to continue decreasing volume.

: When an incoming call is received, double press the **Right or Left Earphone** to Answer the Call.

: While a call is in progress, double press the **Right or Left Earphone** to Hang Up.

: When an incoming call is received, press and hold the **Right or Left Earphone** for 2 seconds to Reject the Call.

: Press and hold the **Right Earphone** for 2 seconds to turn your device's Voice Assistant on.

Reset: Place the **Earphones** in the **Charging Case**, then press and hold the **Multifunction Button** on the **Charging Case** for 10 seconds to Reset the **Earphones** to the factory default settings and allow the **Earphones** to pair each other again, in the event the pairing was lost. The **Earphones LED Indicators** will flash 3 times, indicating that the factory reset was successful.

ANC: Press and hold the **Left Earphone** for 2 seconds to turn ANC (Active Noise Cancelling) on or off. ANC is off by default.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** or through email by sending a message to **tech@monoprice.com**. Check the website for support times and links.

To download the latest drivers, firmware, manuals, etc., go to **www.monoprice.com** and type the **P/N** into the search bar. If available, support files are linked at the bottom of the product page.

REGULATORY COMPLIANCE

Notice for FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC Radiation Exposure Statement:
The equipment complies with FCC Radiation exposure limits set forth for uncontrolled enviroment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

EU Conformity with applicable directives

This equipment complies with the essential requirements listed below:

- Radio Equipment Directive (RED) 2014/53/EU
- RoHS 2 Directive 2011/65/EU with Directive (EU) 2015/863

UK Conformity with the relevant Union harmonization legislation

This equipment complies with the essential requirements listed below:

- Radio Equipment Regulations 2017
- Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Qualcomm® is a trademark of Qualcomm Incorporated, registered in the United States and other countries. TrueWireless™ is a trademark of Qualcomm Technologies International, Ltd. Qualcomm® TrueWireless™ is a product of Qualcomm Technologies International, Ltd.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

SIZE: 60X85MM　128克双铜纸　双面单黑印刷　折叠（手风琴式）