
尺寸100*150,mm

Jteman

User Manual

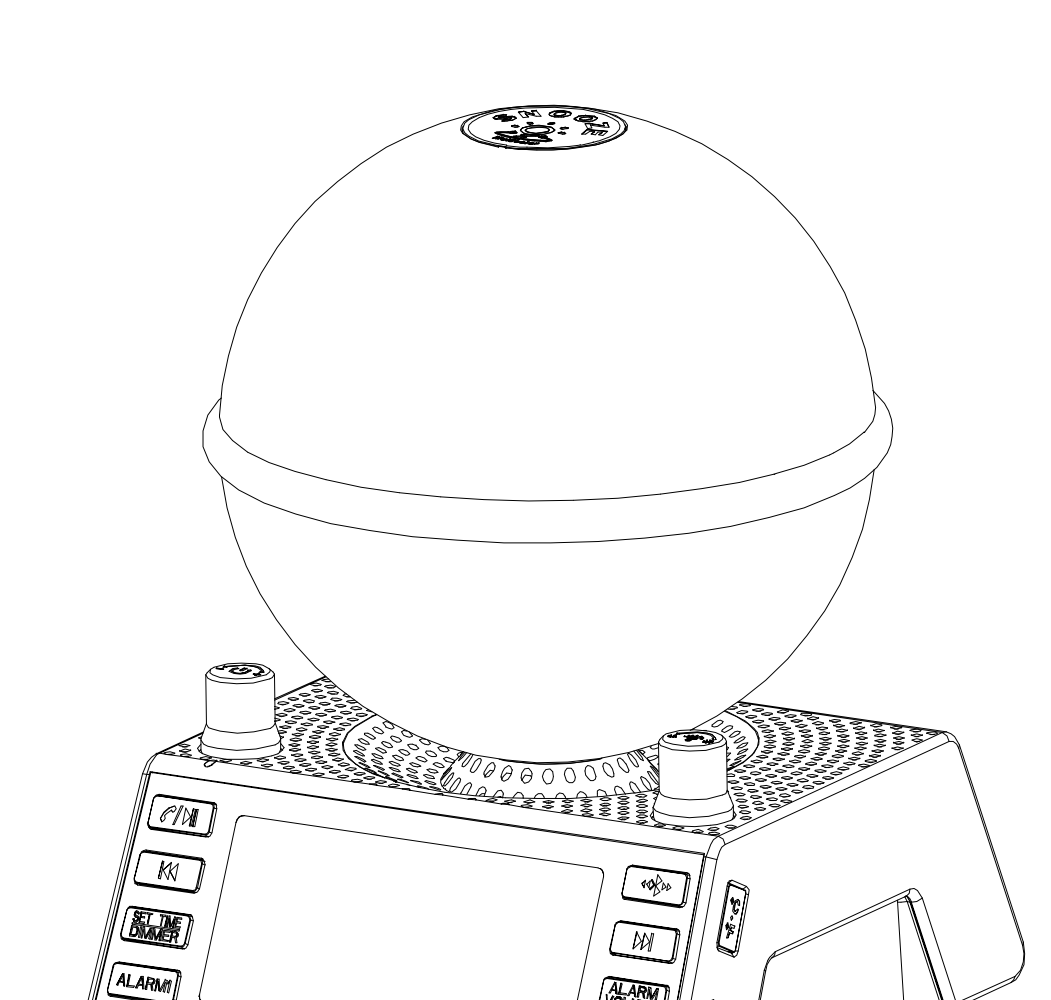

Night Light Bluetooth Speaker
with Alarm Clock

Model No. ：ML100

Thank you for purchasing our product.

In order to make full use of the new Night Light Bluetooth Speaker with Alarm Clock,we kindly invite you to read these instructions prior to use.

Note:

Before using this product,please use the original charging cable start by charging the unit for 4 hours.

Contents

Product Parameters,Features,Accessories 03
Button Function 04
Bluetooth Mode 06
SD Card Mode 07
Light Mode 08
Time Setting 08
Alarm Clock Mode 09
Charging Interface 10
Important Safety Instructions 11
FCC warning 13

Product Specification

Product Model: ML100	Product Material: PC+ABS
Bluetooth Name: Jteman ML100	Product N.W.: 545g
Bluetooth version : Bluetooth 5.0	Charging Time: 3hours
Speaker Power: 4Ω5W	Product Output: 2A
Product Size: 130*125*169mm	Prodcut Input: Type-C 5V 1A

Product Features

·Portable mini speaker.

·7 colors,3 light modes.

·Built-in microphone.

·Screen display:Date,time,week,temperature and alarm clock.

·Two sets of alarm clock with flexible settings can help you manage your time effectively and avoid missing important events.

Product Accessories




Night Light Bluetooth Speaker with Alarm Clock
*1

User Manual
*1

USB-A to Type-C Charger cable
*1

Button Function

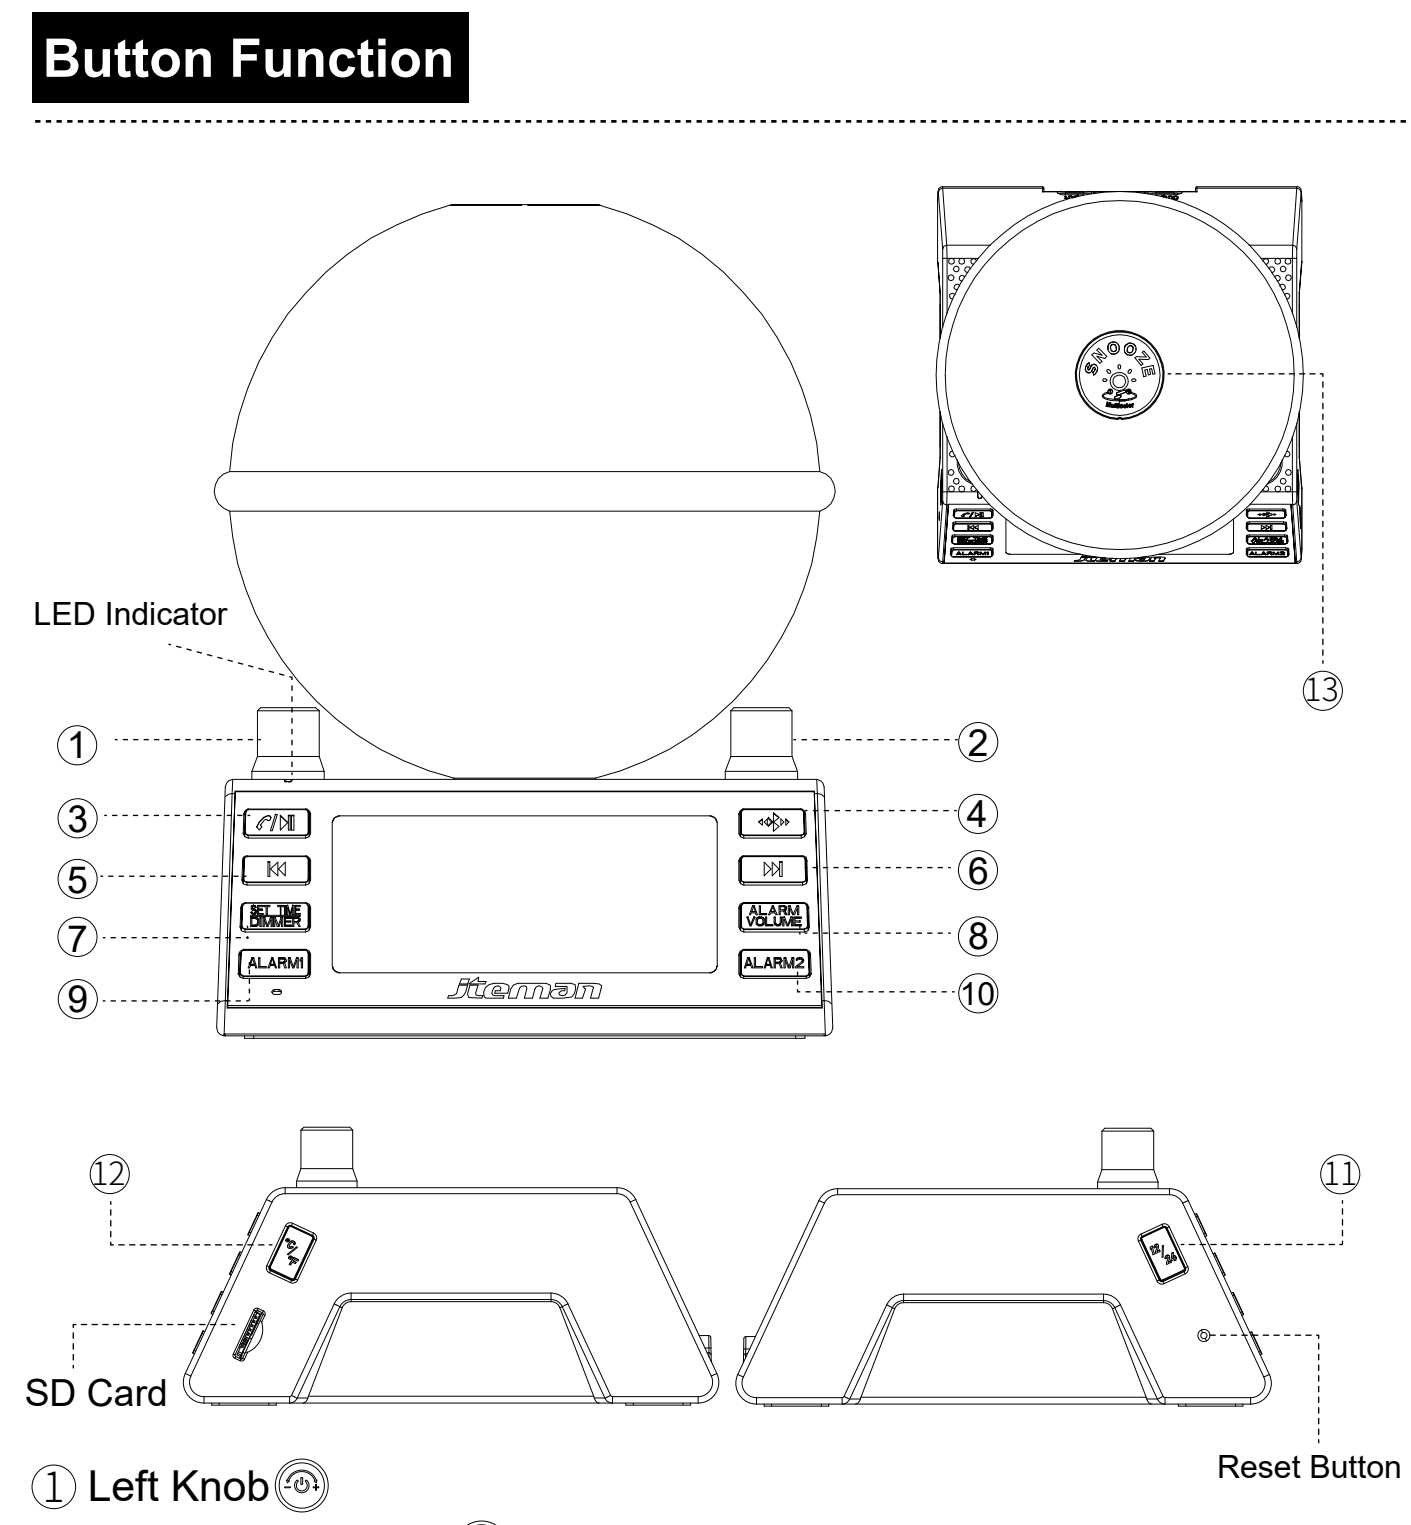

① Left Knob
a.Press and hold down 1.5 seconds to power the Bluetooth speaker on.
b.Press to switch between Bluetooth/SD card mode.(No SD card can not switch)
c.Rotating knob to adjust the volume.

② Right Knob
a.Press to turn of/off the light.
b.Rotating knob to adjust the light brightness.

③ Play/Pause/Answe
a.Press to answer and hang up phone calls with handsfree speakerphone.
b.Bluetooth/SD Card mode,press Pause or resume playback.

④ Bluetooth Pair
Press to disconnect and connect Bluetooth.

⑤ Previous
Bluetooth/SD Card Mode,press to return to the previous track.

⑥ Next
Bluetooth/SD Card Mode,press to to skip to the next track.

⑦ Time Set SET TIME DIMMER
a.Press SET TIME DIMMER to adjust the sreen brightness
(0% / 10% / 50% and 100% brightness）.
b.Press and hold dowm SET TIME DIMMER 1.5 seconds to enter Time Setting Mode.

⑧ Alarm Volume ALARM VOLUME
Press ALARM VOLUME to adjust the Alarm Volume(20% / 40% / 60% / 80% and 100%).

⑨ Alarm Clock 1 ALARM1
a.Press ALARM1 turn on/off Alarm Clock 1.
b.Press and hold dowm ALARM1 1.5 seconds to enter the Alarm Clock 1 Setting Mode.

⑩ Alarm Clock 2 ALARM2
a.Press ALARM2 turn on/off Alarm Clock 2.
b.Press and hold dowm ALARM2 1.5 seconds to enter the Alarm Clock 2 Setting Mode.

⑪ 12/24-Hour Time
Press and hold down to switch 12/24-Hour Time Mode.

⑫ Temperature Mode
Press and hold down to switch Temperature mode°C/°F.


⑬ SNOOZE
a.When the alarm goes off, press will activate Snooze Mode,and the alarm will sound again in 5 minutes.Press and hold down for 3 Seconds,the alarm will be tuned off.
b.Light Mode,Press to adjust the mode of light.

Reset Button

If your device freezes or stops responding.you can try pressing the reset button to restart the device.The reset button is a small hole that requires a small needlesuch as a pin to push into. Press the reset button will turn off the device.Press the power

button again the device will enter a full-screen display mode and after 3 seconds the device will restarts.Please note that the device's time and alarm clock needs to berecalibrated after the restart.

Bluetooth Mode

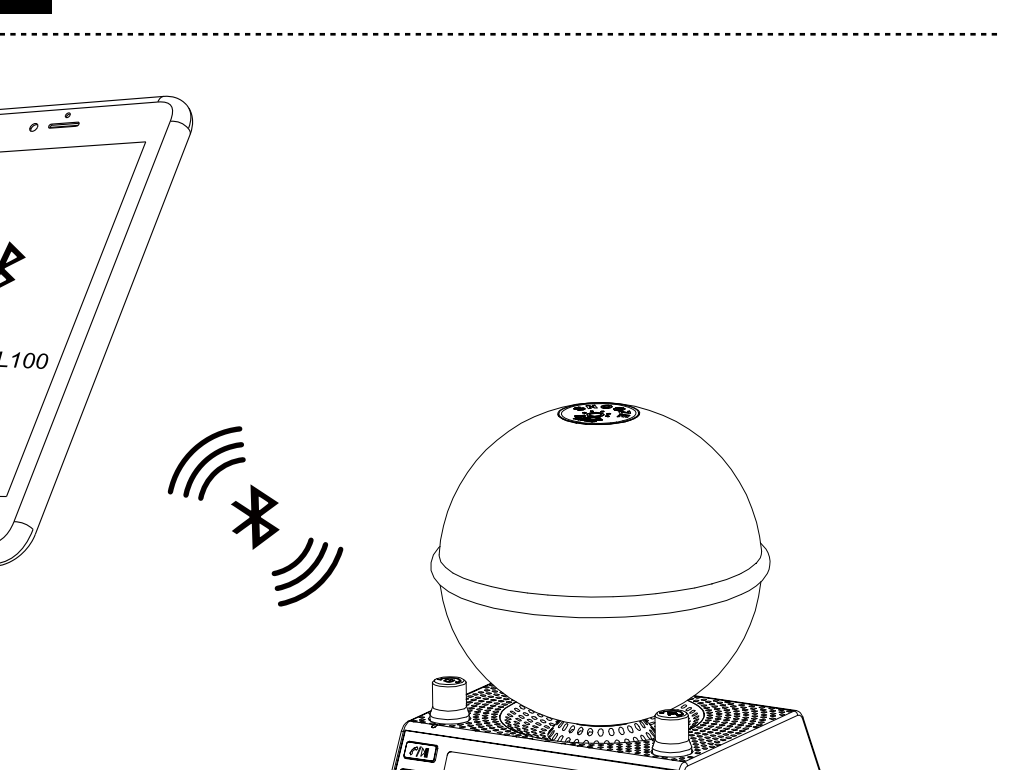

1.Press and hold down 1.5 seconds to power on and the device will enter the Time Mode automatically,press again to switch Bluetooth Pair Mode,the LED Indicator will start flashing blue and the Bluetooth icon will flashing on the screen.

2.Using the Bluetooth setting on your device search for new devices and select 'Jteman ML100'.When successfully paired,a voice prompt will announce the connection, the LED Indicator will display a solid blue light and Bluetooth icon will display on the screen.


3.Rotating knob to adjust the volume(0-31 level).[U00-U31]will display on the screen.

4.Press to return to the previous track,Press to skip to the next track.

5.Press to pause or resume playback.Press to answer and hang up phone calls with handsfree speakerphone.

6.Press and hold down to disconnect Bluetooth,Press again will pair the last device automatically.

SD Card mode

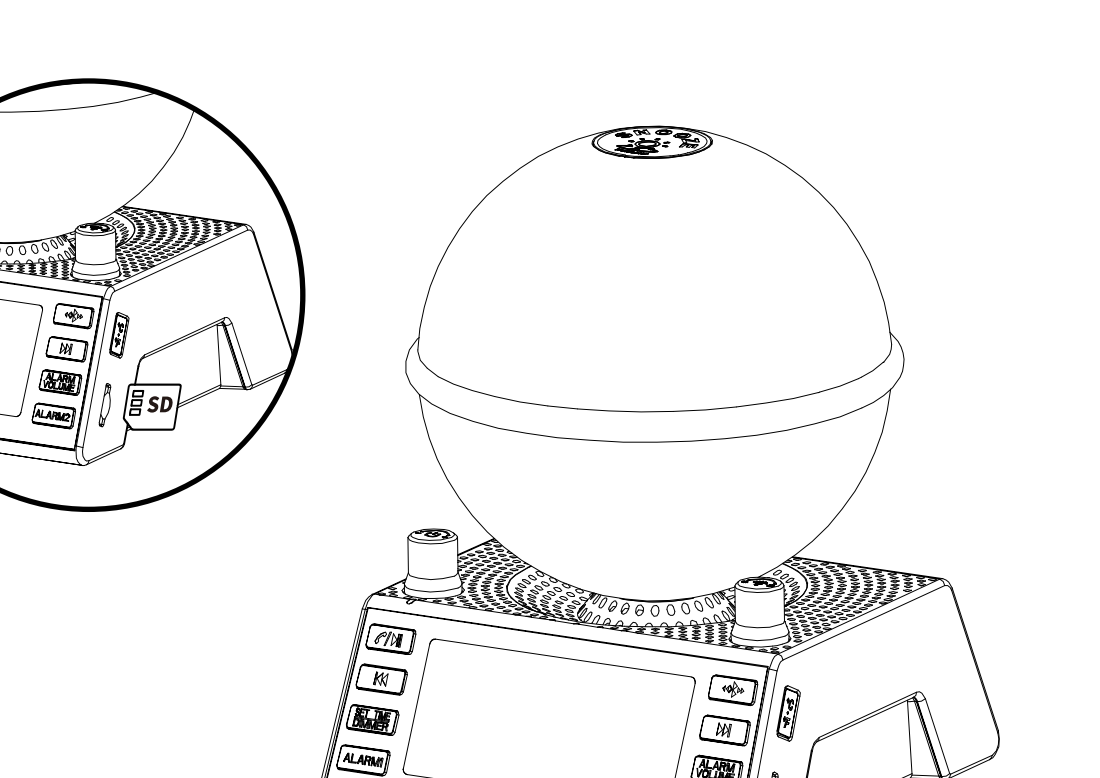

1.In the Bluetooth Mode,Press to switch SD Card Mode.
[No SD card can not switch].

2.Insert SD card and start playing music.

3.Rotating knob to adjust the volume(0-31 level).[U00-U31] digital will display on the screen.

4.Press to return to the previous track,Press to skip to the next track.

5.Press to pause or resume playback.

Light mode

1.When the device is turned on,press to turn on/off the light.

2.Rotating knob to adjust the light brightness.

3.Press to switch the color of lamp.(7colors,3 light modes)
[001-009] digital will display on the screen.
a.Single Mode:[001-007] --Warm White / Red / Green / Blue / Yellow / Cyan / Purple.
b.7 Color racehorse:[008]
c.63 Color cycle gradient color:[009]

Time setting


1.When power on and the Bluetooth successfully paired,the date will be automatically calibrated (some Android phones may require confirmation of device trust authorization).

2.Press 12/24 to switch 12/24-Hour Time Mode.


3.The time setting steps are as follows(when in setting mode,a voice prompt will announce and the Black digital will display flashing).




a.Year Setting
Press and hold down SET TIME DIMMER to enter the Time Setting Mode. Year setting[Black digital will start flashing when in setting mode],Rotating knob to adjust year,press SET TIME DIMMER to next step.



b.Month Setting
When Year Setting finished,press SET TIME DIMMER to enter Month Setting. Month Setting [Black digital will start flashing when in setting mode],Rotating knob to adjust month, press SET TIME DIMMER to next step.



c.Date Setting
When Month Setting finished,press SET TIME DIMMER to enter Date Setting. Date Setting [Black digital will start flashing when in setting mode],Rotating knob to adjust date,press SET TIME DIMMER to next step.



d.Hour Setting
When Date Setting finished,press SET TIME DIMMER to enter Hour Setting. Hour Setting [Black digital will start flashing when in setting mode],Rotating knob to adjust hour,press SET TIME DIMMER to next step



e.Minutes Setting
When Hour Setting finished,press SET TIME DIMMER to enter Minutes Setting. Minutes Setting [Black digital will start flashing when in setting mode],Rotating knob to adjust minutes, Time setting are done.


Alarm Clock Setting

1.Press ALARM1 to turn on/off Alarm Clock 1.Once Alarm Clock 1 setting successfully, the Alarm Clock 1 icon will display on the screen.
When the alarm goes off, press will activate Snooze Mode,and the alarm will sound again in 5 minutes.The Snooze icon will display on the screen.
Press and hold down for 3 Seconds,the alarm clock will be turned off.

Two set of Alarm Clock,3 Modes:All 7 days / Weekday / Weekend



a.Hour Setting
Press and hold down ALARM1 to enter the Alarm Clock Setting Mode. Hour Setting [Black digital will start flashing when in setting mode],Rotating knob to adjust Hour, press ALARM1 to next step.



b.Minutes Setting
When Hour Setting finished,press ALARM1 to enter Minutes Setting. Minutes Setting [Black digital will start flashing when in setting mode],Rotating knob to adjust minutes, press ALARM1 to next step.



3 Modes:All 7 days / Weekday / Weekend
Rotating knob to choose.
Alarm clock setting are done.

Volume of Alarm Setting

Press ALARM VOLUME to choose the Volume of Alarm.[Default display volume of alarm is : 60]

12/24-Hour Time Mode

Press and hold down to switch 12/24-Hour Time Mode.

Temperature Mode


Press and hold down to switch Temperature Mode °C/°F.

SNOOZE Mode

a.When the alarm goes off, press will activate Snooze Mode, and the alarm will sound again in 5 minutes.The Snooze icon will display on the screen.
Press and hold down for 3 Seconds,the alarm will be turned off.

b.In the case of non-alarm press to adjust the screen brightness.

Power Port

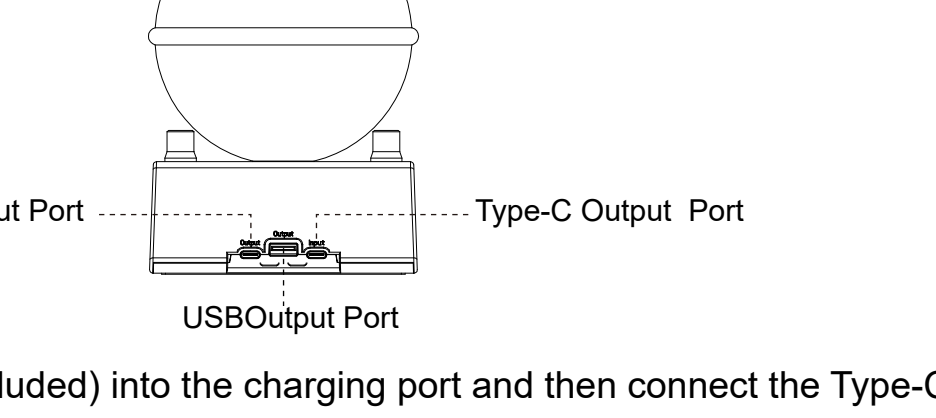

Plug the Type-C cable(included) into the charging port and then connect the Type-C end to an available power source to charge the device.
When the devices connected to the Type-C (included) for charging you can also use the Type-C or USB connection out put to charge the phone and other device.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry cloth.
6. Do not block any ventilation openings. Install in accordance with themanufacturer's instructions.
7. Do not install near any heat sources suchas radiators, heat registers, stoves, or other apparatus(including amplifiers) that produceheat.
8. Protect the power cord from being walked on or pinched particularlyat plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused forlong periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus, power-supply cord or plug has been damaged inany way or does not operate normally.
12. Use this phone stand speaker only with an agency approved power supply adapter which meets local regulatory requirements(eg,UL, CSAVDE,CCC)in accordance with the manufacturer'sspecifications.

Warning

1. This is not a toy. Keep this product and its accessories away from young children.
2. Do not drop the product.
3. Do not cover the product, as this may cause overheating.
4. Placing your ears too close to the speaker could damage your hearing.
5. Do not listen for an extended period of time at a high sound pressure level.
6. Do not install the product in an area that impedes access to the power Source.

7.The internal battery is not end-user replaceable Do not attempt to remove the battery from this product.

8.Do not expose the battery to excessive heat such as direct sunlight, naked flame or similar.

9.Make sure this product. including cables and power source are completely dry before charging the internal battery.

Installation & Connection

1.Use only standard USB-C cables connected to a USB power source to charge this product.

2.No naked flame sources, such as lighted candles, should be placed on or near the apparatus.

Disposal & Recycling information

Electrical products, cables, batteries, packaging,and the manual, should not be mixed with general household waste, For proper recycling, please take these products to a designated collection point where they will be accepted free of charge or return them to your local retailer. Correct product disposal saves resources and prevents negative effects on human health and the environment.

FCC warning

1.This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2.Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

3.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Disclaimer

Stated play time is calculated using a random selection of music,played at medium volume.

Email:support88vip@163.com

UK CA CE RoHS FCC

Version:ML100-2A