尺寸：105*150mm

正

反

Jteman

User Manual

Multi-function Bluetooth Speaker with Clock

Model No.:L36

Version: V01.04-03

Thank you for purchasing our product.

In order to make full use of the new Multi-function Bluetooth speaker with clock,we sincerely invite you to read these instructions prior to use.

Note:

Before using this product, please get this unit fully charged by using the original data charging cable.

Contents

Product Parameters,Features,Accessories----3

Button Function----4

Bluetooth Mode----6

TF Card----7

Time Setting----8

Alarm Clock Mode----10

Alarm Volume,12/24-Hour Time Mode,Temperature mode----11

Snooze Mode,Charging Interface----12

Stand Unfolding----14

Product Parameters

Product Model: L36	Product Material: ABS
Bluetooth Name: Jteman L36	Product N.W :510g
Bluetooth Version: 5.0	Product Output: DC5V 2A
Speaker Power: 4Ω10W	Charging Time: 3-4 hours
Product Size:6.1*4.3*2.1in	Product Input: DC5V 1A

Product Features

- Portable mini speaker
- Adjustable phone stand
- Built-in microphone
- Handsfree calling
- Screen display:Date,time,week,temperature and alarm clock
- Two sets of alarm clocks with flexible settings can help you manage your time effectively and avoid missing important events

Product Accessories

Multi-function Bluetooth Speaker with Clock *1

User Manual *1

Type-C Charging Cable *1

Button Function



①+
Press to increase the volume

③-
Press to decrease the volume

②Power on/Mode

a. Press and hold (D/M) to power on the Bluetooth speaker and enter Time Mode.

b. After the unit is powered on, Press (D/M) to switch it to Bluetooth mode or SD card mode. (If there is no TF card inserted, it will remain bluetooth mode.)

④SNOOZE/☀ DIMMER

a.When the alarm goes off, press (SNOOZE/☀DIMMER) to activate Snooze Mode, the alarm will ring again in 5 minutes. Press and hold (SNOOZE/☀DIMMER) for 3 Seconds, the alarm will be turned off.

b.Screen brightness could be adjusted by short press (SNOOZE/☀DIMMER)

⑤Play/Pause/Answer

Press (⏯) to Pause or play. Press (⏯) to answer with hands-free speaker phone or hang up phone calls.

⑥Bluetooth Pair

Long Press (✣) to disconnect bluetooth and short press (✣) to reconnect bluetooth.

⑦Previous

Press (⏮) to return to the previous track

⑧Next

Press (⏭) to go to the next track.

Reset Button

If the device stops responding, please try to restart it by triggering the reset button. The reset button is in a small hole on the screen bottom right. To trigger this button, it requires a small needle such as a pin to push it into and the device will be shut off. To restart this device, please press the power button, it will enter a full-screen display mode in 3 seconds.

Please recalibrate the time and alarm after restart.

⑨Clock

Press and hold (⏲) 3 seconds to enter Time Setting Mode.

Press and hold (⏲) 8 seconds to Power Off.

After shut off the device, short press (SNOOZE/☀DIMMER) or (D/M) to power on the speaker rapidly when it is connecting to power.

⑩Volume of Alarm Clock

Press (🔔) to enter Alarm Volume Setting Mode.

⑪Alarm Clock 1

a.Press (🔔) to turn on/off Alarm Clock 1.

b.Press and hold (🔔) to enter the Alarm Clock 1 Setting Mode.

⑫12/24-Hour Time

a.Press and hold (🔼) to enter 12/24-Hour Time Setting Mode.

b.In setting mode, press and hold (🔼) to switch it to 12H or 24H.

⑬Temperature Mode

a.Press and hold (🔽) to entering Temperature °C/F Setting mode.

b.In setting mode, press and hold (🔽) to switch it to °C Mode or F Mode.

⑭Alarm Clock 2

a.Press (🔔) to turn on/off Alarm Clock 2.

b.Press and hold (🔔) to enter Alarm Clock 2 Setting Mode.

Bluetooth Mode

1.Press and hold (D/M) for 3 seconds to power on the speaker, it enters Time Mode automatically, then press (D/M) again to enter Bluetooth Pair Mode, the LED Indicator will slowly flash blue.

2.Enter Bluetooth setting on your device, search for new devices and select " Jteman L36 " . When successfully paired, a voice prompt will announce the connection and the LED Indicator will display a solid blue light.

3.Press +/- to increase or decrease the volume.

4.Press (⏮) to return to the previous track. Press (⏭) to skip to the next track.

5.Press (⏯) to pause or play. Press (⏯) to answer phone calls with hands-free speaker phone or hang up.

6.Press and hold (✣) to disconnect Bluetooth, press (✣) again will pair the last device automatically.

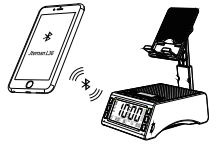

TF Card Mode

1.In Time Mode, press (D/M) switch to TF Card Mode.
(If there is no TF card inserted, it will not switch to TF Card Mode).

2. In Bluetooth Mode, by inserting a TF card the speaker will switch to the TF card Mode and play music automatically.

3.Press +/- to increase or decrease volume.

4.Press (⏮) to return to the previous track. Press (⏭) to skip to the next track.

5.Press (⏯) to pause or play. Press (⏯) to answer phone calls with hands-free speaker phone or hang up.

6.Press and hold (✣) to disconnect Bluetooth, press (✣) again will pair the last device automatically.

Time Setting

1.Time and Date will be automatically calibrated after successfully paired the smart phone and speaker. (If your Android phones require confirmation of device trust authorization, please accept it).

2.Press and hold (🔼) for 3 seconds to switch to 12H or 24H Time Mode.

3.The time setting steps are as below (Digital on the screen flashes when in setting mode).

NOTE:There is a 30S time-out for the display if the Bluetooth Connection has been shut down by long pressing (SNOOZE/☀DIMMER) for 3 seconds. (Press (SNOOZE/☀DIMMER) or (D/M), the digital clock screen will be re-displayed.)

a.Year Setting

Press and hold (⏲) to enter Time Setting Mode. Beginning with Year setting (Digital which indicates Year will start flashing when in setting mode), press (🔼) (🔽) to modify Year, press (⏲) to next step.

b.Month Setting

After Year Setting finished, it enters Month Setting automatically. Month Setting (Digital which indicates Month flashes in setting mode), press (🔼) (🔽) to modify Month, press (⏲) to next step.

c.Date Setting

After Month Setting finished, it enters Date Setting automatically. Date Setting (Digital which indicates Date flashes in setting mode),press (🔼) (🔽) to modify Date, press (⏲) to next step.

d.Hour Setting

After Date Setting finished, it enters Hour Setting automatically.Hour Setting (Digital which indicates Hour flashes in setting mode),press (🔼) (🔽) to Modify Hour,press (⏲) to next step.

e.Minutes setting

After Hour Setting finished, it enters Minutes Setting automatically.Minutes Setting (Digital which indicates Minutes flashes in setting mode),press (🔼) (🔽) to Modify Minutes,press (⏲) to next step.

Alarm Clock Setting

1.Press (🔔) to turn on/off Alarm Clock 1. Once Alarm Clock 1 setting is successful, the Alarm Clock 1 icon will display on the screen. When the alarm goes off, short pressing (SNOOZE/☀DIMMER) could activate Snooze Mode, the alarm will ring again in 5 minutes.The Snooze icon will display on the screen. Press and hold (SNOOZE/☀DIMMER) for 3 Seconds, the alarm will be turned off.

2.The volume of alarm default setting is 60.

3.Start from step one to set up Alarm Clock 2.

4.The Alarm Clock 1 Setting steps are as below(Digital flashes when in setting mode).

a.Hour Setting

Press and hold (🔔) for 3 seconds to enter Alarm Clock 1 Setting. Beginning with Hour Setting (Digital which indicates Hour flashes in setting mode),press (🔼) (🔽) to modify Hour, press (🔔) to next step.

b.Minutes Setting

After Hour Setting finished, it enters Minutes Setting automatically. Minutes Setting (Digital which indicates minutes flashes in setting mode), press (🔼) (🔽) to modify Minutes, press (🔔) to next step.

c.Week Mode Setting

After Minutes Setting finished, it enters Week Setting automatically. Week Setting (Digital which indicates Week flashes in setting mode), press (🔼) (🔽) to modify Week, press (🔔) to next step.

Alarm Clock Repeat Choices

Group 1: 1-5, repates from Monday to Friday.

Group 2: 1-7, repeats everyday.

Group 3: 6-7, repeats on Saturday and Sunday.

press (🔔) to next step.

d.Alarm Ring Setting

After Week Setting finished, it enters Alarm ring setting automatically. Alarm Ring Setting (Black digital will start flashing when in setting mode),press (🔼) (🔽) to modify alarm ring,press (🔔) to next step.

All setting are done.

Volume of Alarm Setting

Press (🔔) to modify the Volume of Alarm, after 3 seconds it will exit settings automatically. (Alarm volume default setting is 60)

12/24-Hour Time Mode

Press and hold (🔼) for 3 seconds to switch Time Mode to 12H/24H.

Temperature Mode

Press and hold (🔽) to switch Temperature Mode to °C/°F.

SNOOZE Mode/ ☀ DIMMER

a.When the alarm goes off, press (SNOOZE/☀DIMMER) to activate Snooze Mode, the alarm will ring again in 5 minutes. Press and hold (SNOOZE/☀DIMMER) for 3 Seconds, the alarm will be turned off.

b.Screen brightness could be adjusted by short press (SNOOZE/☀DIMMER) .

Power Port

Plug the Type-C Cable into the speaker Input charging interface and then connect the other end to an available power source to charge the device.

NOTE:The device is NOT a power bank.

After the device is connected to power, you can charge the phone or other devices through the speaker Output interface.



How to charge the other devices?(as a charging station)

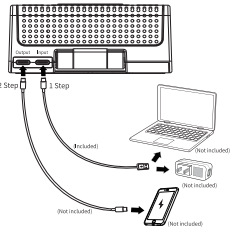

1 step 1: Connect the speaker to power supply through the Type-C Input Port .

2 step 2: Charge the other devices through the Type-C Output Port.

Stand Unfolding

Place the Multi-function Bluetooth speaker with clock on a flat surface, pull out the phone holder and turn it over as referenced.



Adjust the height and angle of the phone holder.



Email:support88vip@163.com

FCC ID: 2ADJI-L36 MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.

– Increase the separation between the equipment and receiver.

– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

– Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction