KS-0010-STITCH IM

Size: H: 200mm x W: 193mm

16 JUN 26

Bluetooth®

Disney Stitch

Karaoke Machine

With 2 Mini Wireless Microphones


Instruction Manual

Thank you for purchasing the Karaoke Machine.
This manual provides more information about this product, please read the instructions before using.



©Disney
www.disney.com

Product Overview

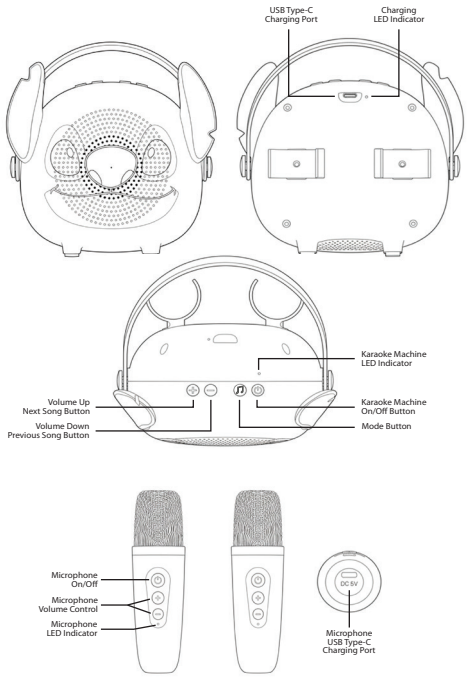

Package Contents

1(One) Karaoke Machine
1(One) USB Type-C Charging Cable
1(One) Instruction Manual
2(Two) Wireless Microphones

Technical Specification

Driver Diameter: 52 mm
Impedance: 4 Ohms
Power Supply: Li-ion Battery 3.7V 600 mAh (Karaoke Machine)
Li-ion Battery 3.7V 100 mAh (Microphone)
Playtime: 2.5-3 Hours
Charging Time: 2-2.5 Hours
Bluetooth Range: 32 Feet
Bluetooth Version: 6.0
Karaoke Mode / Speaker Mode / FM Radio Mode
USB Type-C Charging Cable Length: 11.8in. (30cm)
USB Type-C Charging Cable Rating Max. 5VDC, 5W

Power On/Off

Power on

Karaoke Machine: Press and hold the On/Off button for 3 seconds.
Microphone: Press and hold the On/Off button for 3 seconds.

Power off

Karaoke Machine: Press and hold the On/Off button for 3 seconds.
Microphone: Press and hold the On/Off button for 3 seconds.

Pair Karaoke Machine with your mobile device

1. Keep the distance between your Karaoke Machine and mobile phone (or other devices) within 32.8 Feet.
2. Power on the Karaoke Machine.
3. Activate the Bluetooth function on your phone within range and select "**KS-0010-STITCH**" from the list shown.
4. You will hear a prompt sound when pairing is successful.

Reconnect Karaoke Machine to your mobile device

When powered on, the Karaoke Machine will automatically connect with the last successfully paired device.

How To Use The Microphones

1. Turn on the Microphone with the on/off button, it will automatically connect to the Karaoke Machine.
2. Use the microphone volume control (+/-) to adjust the volume.
3. Double press (+) to increase microphone reverb volume.
4. Double press (–) to decrease microphone reverb volume.

Caution: Please turn off the microphone before put into the microphone holder. Otherwise may cause loud squealing or damage the product.

Function

Karaoke/ Speaker Mode
Play/Pause: Press the ON/OFF Button Once.
Next Track: Press and Hold the Next Song Button Once.
Previous Track: Press and Hold the Previous Song Button Once.

FM Radio Mode
Switch to FM Mode:
Press and hold the Mode Button once
Auto Scan:
Double press the ON/OFF Button will start scan all available channels.
Next Channel: Press and Hold the Next Song Button.
Previous Channel: Press and Hold the Previous Song Button.
Mute/Unmute: Press the Mode Button once.

Charging your Karaoke Machine and Microphones

1. Use the USB Type-C charging cable provided with this Karaoke Machine.
2. Connect the USB plug to a USB port on a computer or wall adapter, then connect the USB Type-C plug to USB Type-C charging port on the Karaoke Machine or microphones to begin charging.
3. The LED Indicator will turn red while charging and will turn green once fully charged.

NOTE:
- Please fully charge the Karaoke Machine and the microphones before use.
- You must select a qualified charger from a regular manufacturer.
- You must charge the Karaoke Machine if it has been not used for more than 6 months.



⚠ **CAUTION:** FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.

FAQ

- **If the Karaoke Machine cannot be paired with your device, please try the following:**
 Ensure that your Karaoke Machine is in pairing mode or reconnection mode.
 Ensure that Bluetooth search function of your mobile device is activated.
- **If the Karaoke Machine cannot be recharged:**
 If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

⚠ Safety instructions for the lithium battery and charging the product

-The input voltage to the product is DC 5V 1A.
-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
-Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F.
- Do not heat above 70°C/ 158°F, eg. Do not expose to sunlight or throw into fire.
-Switch off the product after use.
-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
-In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC STATEMENT
1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

ITEM# KS-0010-STITCH

FCC ID: 2ADM5-KS-0010-SPK
FCC ID: 2ADM5-KS-0010-MIC

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106

Keep All Relevant Information for Future Reference

Made in China