Date: JAN 20 2026
Product: SP-1006-FUR IM

Size: 387(w) x 100(h) mm

Bluetooth®


KARAOKE MICROPHONE

Instruction Manual

Thank you for purchasing the KARAOKE MICROPHONE.
This manual provides more information about this wireless microphone speaker, please read the instructions before using.



Product Overview

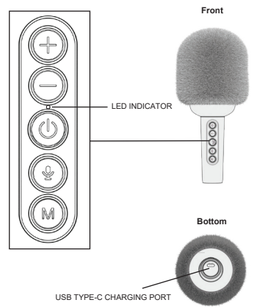

Package Contents

1(One) Karaoke Microphone
1(One) USB Type-C Charging Cable
1(One) Instruction Manual

Power On/Off

Power on
Press and hold the ON/OFF and PLAY/PAUSE Button.

Power off
Press and hold the ON/OFF and PLAY/PAUSE Button.

Note: Always power off the karaoke microphone when not in use.

Pair Wireless Microphone Speaker with your mobile device

1. Keep the distance between your wireless microphone speaker and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless microphone speaker.
3. Activate the Bluetooth function on your phone within range and select "**SP-1006-FUR**" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Wireless Microphone Speaker to your mobile device

When powered on, the wireless karaoke microphone will automatically connect with the last successfully paired device.

Charging Your Wireless Microphone Speaker

⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with this Wireless Microphone Speaker.
2. Connect the USB Type-C plug to USB Type-C charging port on the microphone, then connect the USB plug to a wall adapter to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE:
• You must select a qualified charger from a regular manufacturer.
• You must charge the Wireless Microphone Speaker if it has been not used for more than 6 months.



⚠ **CAUTION:** FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.

Technical Specification

Driver Diameter : 52 mm
Impedance : 4 Ohms
Playing Time : 2.5 - 3 Hours
Charging Time : 1.5 - 2 Hours

Power Supply : Li-Ion Battery 3.7V 600 mAh
Bluetooth Range : 32.8 feet
Bluetooth Version : 5.3
USB Type-C Charging Cable Length: 11.8 in. (30cm)
USB Type-C Charging Cable Rating Max. 5VDC, 5W

How to use

Play/Pause Music: Short press on On/Off Button.
Previous Track: Long press on Vocal Effect Button.
Next Track: Long press on Mode Button.
Music's Volume Up: Long press on Vol+ Button.
Music's Volume Down: Long press on Vol- Button.

Microphone's Volume Up: Short press on Vol+ Button.
Microphone's Volume Down: Short press on Vol- Button.
Echo Increase: Double press on Vol+ Button.
Echo Decrease: Double press on Vol- Button.

Vocal Effect Change: Short press the Vocal Effect Button.
Accompaniment Mode On/Off: Double press the Vocal Effect Button.
NOTE: Accompaniment Mode is not supported in TWS Mode.

True Wireless Stereo (TWS) Mode
NOTE: Please purchase two pieces of Karaoke Microphones to perform TWS Mode.
1. Turn On both Karaoke Microphones.
2. Disconnect both Karaoke Microphones from any Bluetooth device.
3. Keep both Karaoke Microphones side by side.
4. Double press the On/Off Button on both Karaoke Microphones. And then they will have an alert sound.
5. The Karaoke Microphones will connect each other in few seconds. When successfully connected, both Karaoke Microphones will have another alert sound.
6. Now you can follow the "Pair Wireless Microphone Speaker with your mobile device" to pair with the mobile device.
7. To disable the TWS mode, power off and on both Karaoke Microphones. Or, double press the On/Off Button on ONE of the Karaoke Microphones. They will have an alert sound and then disconnected.

Light Effect Change: Short press the Mode Button.

FAQ

- **If the wireless karaoke microphone cannot be paired with your device, please try the following:**
 Ensure that your microphone is in pairing mode or reconnection mode.
 Ensure that Bluetooth search function of your mobile device is activated.

- **If the wireless karaoke microphone cannot be recharged:**
 If you use a power outlet, ensure that the power supply is connected securely and the outlet works.

⚠ Safety instructions for the lithium battery and charging the product

-The input voltage to the product is DC 5V 1A.
-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
-Only charge the product at ambient temperatures between 10 °C/ 50°F and 40°C/104°F.
- Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire.
-Switch off the product after use.
-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
-In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

FCC ID: 2ADM5-SP-1006

ITEM# SP-1006-FUR

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106

Keep All Relevant Information For Future Reference

Made in China

Approval: Date: