Hybrid Security Control Panel

HIKVISION

ENGLISH

Diagram References

1 Appearance

Indicators			Components			
1 AC Power	Power On	Power Off	6 Lock Nut	10	Reset Button	
2 Fault	System Fault	No Fault	7 Power Interface	11	Battery Connector	
3 Link	Panel is added to Hik-connect account		8 Wiring Terminal	12	TAMPER Switch	
	Panel is not added to Hik-connect account		9 Network Interface	13	AP&STA Switch	
4 Arm/Disarm	Armed	Disarmed				
5 Alarm	Alarm Occurred	Device Tampered				
	No Alarm					

Note: Remove the rear cover, and some of the components and interfaces are on the rear panel.

2 Wiring and Installation

1. Loosen the screw on the top, press the lock nut, and open the case of the control panel.
2. Route the cables, and secure the rear cover in the installation position with the supplied screws.
3. Fix the SIM card module (should be purchased separately) with four plastic bolts.
4. Fix the telephone module (should be purchased separately) with two plastic bolts.
5. Wire the cables .

1 Telephone Module Wiring

2 Alarm Input/Alarm Output/RS-485 Wiring
- 1 Alarm Input Wiring
 - a. NC Detector
 - b. NO Detector
 - c. Unoccupied Zone
 - d. Tamper-proof
- 2 Alarm Output Wiring
- 3 RS-485 Wiring: Wireless Receiver, keypad, etc.

3 Network

4 Power Supply

6. Connect the battery to the control panel.

Note: The condition of no SIM card, no battery, AC power off, or network disconnected, will cause Control Panel Fault.

7. Fix the power cables with the cable clip.
8. Close the control panel, and tighten the top screws to complete the installation.

★ TAMPER Screw
It is compulsory to secure the TAMPER screw.

3 Set Up

Set up via Web Client

Log Into the Web Client

● Default IP Address when using mobile broswer in the AP mode:192.168.8.1. The device must be in the AP mode.

● Default IP Address when connecting the network cable with computer directly :192.0.0.64

Input the device IP address in the address bar of the web browser. Create a password to activate the device and log into the web client.

Add a Camera for the Zone

The function varies depends on the model of device.

1. Click System-Network Camera, and you can add cameras for the control panel.
2. Enter the "Device Management" page, select a zone, and select a camera to link with the zone.

You can also link a camera with the zone via APP, refer to the Security Control Panel User Manual for details.

Configure Video-Push

You can view the alarm video via APP and email. For detailed settings, refer to Security Control Panel User Manual.

Set up via APP

1. Log into the App Store or Google Play and input Hik-Connect to search and install the mobile client.
2. Log into the APP with Hik-Connect account.
3. Tap Add Device. Scan the device QR code on the rear panel(on the lable).
4. Tap Connect to a Network. Select Wireless Connection (AP) as the connection mode.
5. Push the AP/STA mode switch to the AP position, tab Confirm.
6. Tap Connect to Wi-Fi on the promt-up window. Select and connect to a stable Wi-Fi , and click Next.
7. Create a password to activate the device.
8. Push the AP/STA mode switch to the STA position.

Note: You need to enter the Verification Code (on the device lable which is pasted on the rear panel) before activation if you add the device by entering the device serial No.(SN).

Set up via 4200 Client

1. Download and install the iVMS-4200 client.

Note: Get the client software from the official website:www.hikvision.com.

2. Enter Device Management page, select the device in the Online Device List, click Edit Network Settings, change the port as 80, and click Add to Client.

Note: You should activate the device for the first usage.


Restore Default Settings


Reboot the device. Boot the device, and hold the reset button for 5s after the Fault indictaor flashes 3 times. The device will prompt a message to indicates the operation status.


Specification


Model		DS-PHA64-W4P
Hybrid Security Control Panel with Plastic Case		
Device connection	Wireless Detector	Up to 56
	Wireless Output expander	Up to 8
	Siren	1 wired siren (on-board connection) 2 wireless sirens
	Keyfob	8, valid operation interval: 3 s
Alarm input	Partition	8
	Zone	8 on-board zones, and 56 wired/wireless zones expadable
Alarm output	Alarm output	4 on-board outputs, and 60 wired/wireless outputs expadable
	Scheduled arming/disarming	Supported
	SMS notification (with 3G/4G/GPRS module)	Supports up to 8 mobile phone numbers
	Network camera accessing	4
Application & Protocol	Application	iVMS-4200 (client software) Hik-Connect (mobile client)
	Protocol	ISAPI: Supports client software and web client Cloud P2P: Supports cloud P2P privacy protocol DC09: ARC accessible (CID/SIA)
Network	Wired network	10M/100M Ethernet
	Cellular Network (with 3G/4G/GPRS module)	Supports report push- notification to ARC & Cloud
Wi-Fi	Standard	802.11b/g/n
	Encryption	64/128-bit WEP,WPA/ WPA2,WPA-PSK/WPA2-PSK,WPS
	Configuration	AP Mode
	Distance	Indoor: ≤ 50 m Outdoor: ≤ 100 m
Interface & Component	TAMPER Switch	1, front cover tamper-proof
	Network Interface	1, RJ45 10M/100M Ethernet Interface
	Telephone Interface	1, PSTN expander interface
	RS-485 Terminal	1, extended up to 64 inputs/outputs (with RS-485 module), and 9 wired keypads extendable
	Siren Power Interface	1, 12V
	Battery Interface	Lithium battery (-P model)
User	User	Installer: 1 Administrator: 1 Manufactuer:1 Operator: 45
	Tag	12
Others	Operation Temperature	-10 °C to 55 °C (-4 °F to +122 °F)
	Operation Humidity	10% to 90% (No condensing)
	Dimension (W × H × D)	Plastic Case: 220 mm (8.6") × 152 mm (6.0") × 31.5 mm(1.2")

Note:
The 868 Mhz wireless siren can be enrolled to the hybrid control panel via the wireless receiver that is at the address of 9.
The products do not contain the PSTN, 2G, 3G, or 4G function, but support the extension module for PSTN, 2G, 3G and 4G.

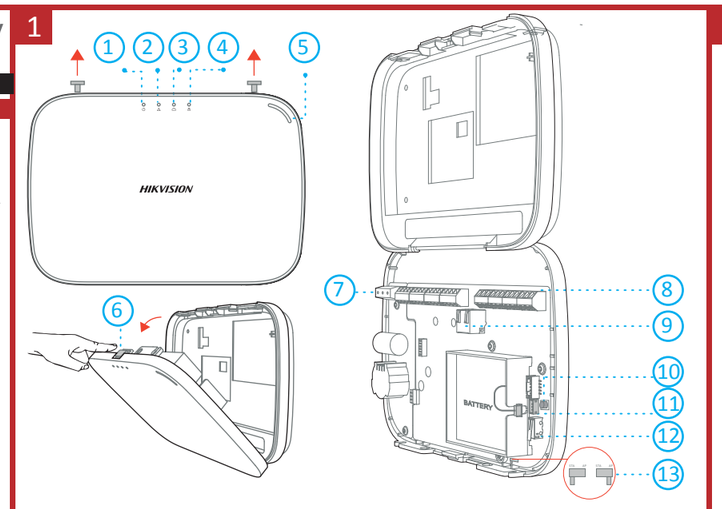

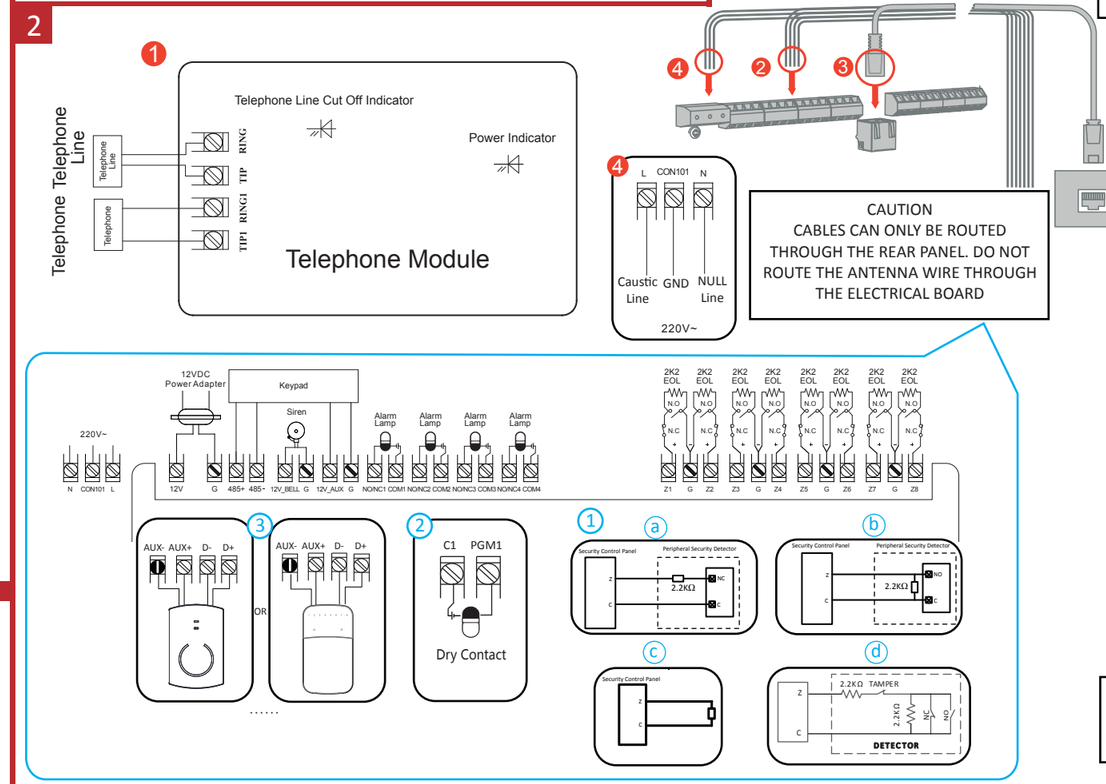

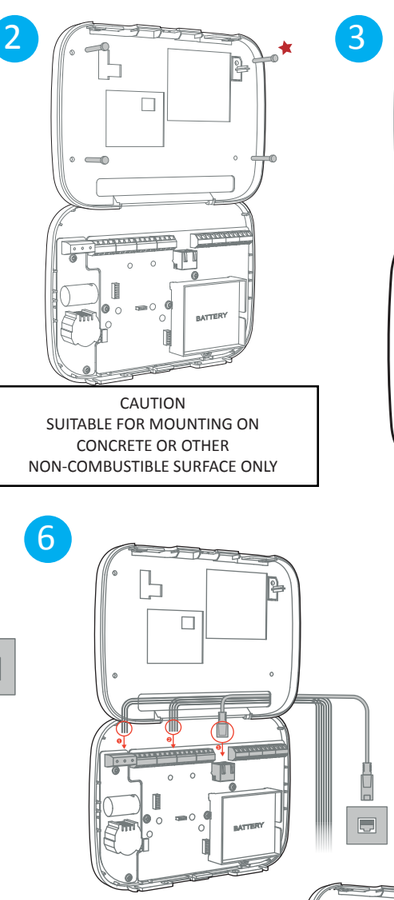

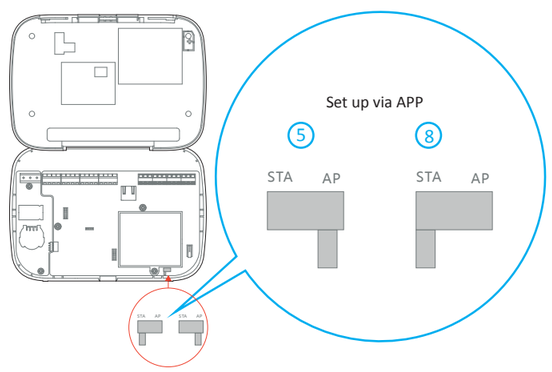

The AP mode is only Supported by device with Wi-Fi function.

Product Information

COPYRIGHT ©2019 Hangzhou Hikvision Digital Technology Co., Ltd.
ALL RIGHTS RESERVED.
Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This Manual is applicable to the Axiom Security Control Panel Kit.
The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (http://overseas.hikvision.com/en/).
Please use this user manual under the guidance of professionals.

HIKVISION Trademarks Acknowledgement and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info

2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see:www.recyclethis.info

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.
FCC Conditions
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation

UD15863B-A

CAUTION
CABLES CAN ONLY BE ROUTED THROUGH THE REAR PANEL. DO NOT ROUTE THE ANTENNA WIRE THROUGH THE ELECTRICAL BOARD

CAUTION
SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

CAUTION
COPER OR COPER WIRE CANNOT BE EXPOSED AT THE ELECTRICAL TERMINAL

CAUTION
A TWO-POLE DISCONNECTED DEVICE (BREAKER) SHALL BE PROVIDED WHEN INSTALLED