



EC Technology LLC
908 Avenida Rd #200-106 Richardson TX 75081
t:480-203-4348
e:info@ectechology.com
Via www.ectechology.com for more information about our latest products.

www.ectechology.com

Instruction Manual



Package includes

- 1. Bluetooth Speaker.....1
- 2. Introduction manual.....1
- 3. Micro USB cable.....1
- 4. 3.5mm Audio cable.....1

Product features


- 1. Supports wireless broadcast
- 2. Supports one key reconnect
- 3. Built-in microphone, supports Hands-free calls
- 4. Supports Audio input
- 5. Built-in high performance lithium battery, compatible with USB charging source
- 6. Supports power indicator

Specification

Product	Bluetooth Speaker
Battery battery	3.7V1000mAh
Charging time	about 2.5h
Play time	about 8h
Rated power	5W
Dimension	64*56*105.6mm
Weight	272g

www.ectechology.com

Product component introduction

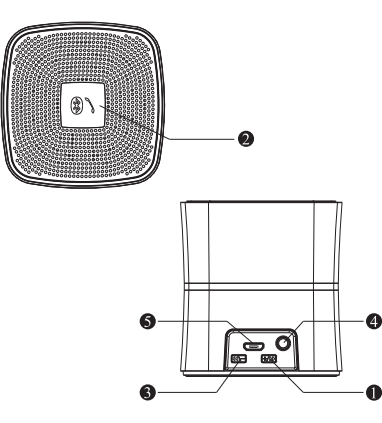

1. Next Song Volume+
2. Function button (Power/Switch/Hands-free calls)
3. Previous Song/Volume-
4. 3.5mm Audio input port
5. Micro input port

www.ectechology.com

Operating instruction

- 1. Power on: long press the function button for about 3 seconds
- 2. Power off: long press the function button for about 3 seconds
- 3. Reconnecting: long press the button for about 3 seconds while connecting the phone
- 4. Answering/hold call: press the function button
- 5. Repeat a call: long press the function for about 2 seconds
- 6. Last number redialling: double press the function button
- 7. Previous song/next song: press
- 8. Play/Pause: press the function button
- 9. Turn up/down volume: long press the "+" / "-" button
- 10. Auto switch: press the function button to switch between Bluetooth mode and LINE IN audio mode.
- 11. Power indicator: Double press the button "+" / "-" if the red light flickers once, it indicates full power; if it flickers twice, it indicates 75% power left; 50% for three times and 25% for four times (note: please check the power status without playing music; the device with iOS system can display the power on screen)
- 12. Reconnect the matching phone: At the time there is a voice prompt after long press the function button, press and hold volume "+" and "-" at the same time for about 5 seconds while the speaker is connected.

www.ectechology.com

Bluetooth connecting operation

- 1. Please keep the distance between the speaker and devices within one meter
- 2. When it is power off, long press the function button for 3 seconds to turn on, when it is power on, the blue LED indicator light will flicker brightly, then it will accept to match status, please wait to be matched
- 3. Turn on your device's Bluetooth function and search or scan, choose the speaker name "ECOT" (When it matches successfully, the speaker indicator light will flicker in blue)

Note: If the version of phone's Bluetooth is too old, you may need to enter password "0000"

www.ectechology.com

FAQ

- 1. How long is the transmission distance of this Bluetooth Speaker?
The effective transmission distance is 10m.
- 2. I can't play the music when matching device successfully, how to solve this problem?
Check your phone volume to see if it has been turned down to the lowest.
- 3. Please have a try with other phones, if the problem still exists, perhaps there are some faults with hardware.

Notes

- 1. Please prevent USB port from being water or flowed in case of short circuit.
- 2. For any damage of the product, turn to professional assist from your nearest service center, be sure not to detach the device yourself.
- 3. Do not expose the product under sunshine, also avoid dropping, hitting or throwing the product.
- 4. Do not use chemical reagents on the product, and put it away from sharp object.
- 5. Please do not put the product in a extreme high temperature place or into fire.

www.ectechology.com

Contact Us

Email us:
info@ectechology.com

Call us:
United States 1-488-203-4348 Mon-Fri 9:00AM-6:00PM PST

More products information : please visit our website:
www.ectechology.com

Statement

We are able to provide after-sales service for purchases directly from EC Technology only. If you have purchased from a different retailer, please contact them for any exchange or refund requests.

Please note that the unauthorized reselling of EC Technology product is prohibited.

www.ectechology.com

Lieferumfang

- 1. ECOT Bluetooth Lautsprecher.....1
- 2. Benutzerhandbuch.....1
- 3. Micro USB Kabel.....1
- 4. 3.5mm Audio-Kabel.....1

Produktbeschreibung


- 1. Unterstützung der Bluetooth-Player
- 2. Unterstützung der automatischen Verbindung der neuen angeschlossenen Bluetooth
- 3. Eingebaute Mikrophon, Unterstützung der handsfreien Anrufe
- 4. Unterstützung der Audio-Input
- 5. Eingebaute Lithium-Ionen-Akku-Ladung, Unterstützung der Beladung über USB
- 6. Bluetooth Lautsprecher unterstützt die Akkuanzeige

Technische Daten

Produkt	Bluetooth Lautsprecher
Eingebaute Batterie	3.7V1000mAh
Aufladungszeit	Ung. 2.5 Stunden
Nutzungszeit	Ung. 8 Stunden
Leistungsverl.	5W
Dimension	64*56*105.6mm
Gewicht	272g

www.ectechology.com

Produktkomponenten Vorstellung

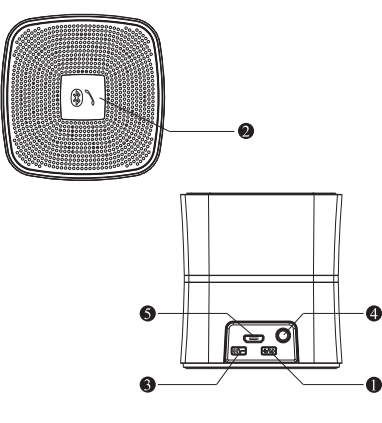

1. Nächste Musik / Lautstärke +
2. Funktionstaste (Beenden/Aussetzen/An- und Ausstellen/Handfrei)
3. Letzte Musik / Lautstärke -
4. 3.5mm Audio-Input
5. Power Micro Input

www.ectechology.com

Anleitung

- 1. Schalter: Mit 3 Sekunden "Funktionstaste"bedienen machen Sie das Gerät an
- 2. Ausmacher: Mit 3 Sekunden "Funktionstaste"bedienen machen Sie das Gerät aus
- 3. Wieder: Pausing, Verbindung mit Headset, gleichzeitig bedienen mit Lautstärke + oder - 3 Sekunden
- 4. Telefonanruf: Einhalten/Auflegen: Bedienen einmal mit "Funktionstaste" und Bedienen mit 2 Sekunden "Funktionstaste".
- 5. Anruf abbrechen: Langes Bedienen mit "Funktionstaste" macht die Musik wieder auf die Schirm anzeigen!
- 6. Letzte Telefonanrufer Wiederanruf: Bedienen zwei mal mit "Funktionstaste"
- 7. Letzte Nächste Musik: Bedienen einmal mit "+" / "-"
- 8. Beenden/Aussetzen: Bedienen einmal mit "Funktionstaste"
- 9. Lautstärke: lange Bedienen einmal mit "+" / "-"
- 10. Auto-Wechsel: Klicken Sie auf die Funktionstaste um Auto-Wechsel zw. der Bluetooth und LINE IN zu erreichen
- 11. Anzeige der Lautstärkenanzeige: Klicken Sie auf "+" / "-" zwei mal. Die rote Ampel flackert ein mal auf d.h. 100% Akku. Die rote Ampel flackert zwei mal auf d.h. 75% Akku. Die rote Ampel flackert drei mal auf d.h. 50% Akku. Die rote Ampel flackert vier mal auf d.h. 25% Akku
- Anmerkung: Funktion nur mit einem Musik-Spielplan. iOS System kann die Musik wieder auf den Schirm anzeigen!
- 12. Restlaufzeit (Löschen der Paaringstaste): Die Lautsprecher ist in der Verbindungslage, klicken Sie gleichzeitig auf Funktionstaste, Lautstärke "+" und Lautstärke "-" um 3 Sekunden, Kopfhebel erlösch ein Signal.

www.ectechology.com

Bluetooth Verbindung

- 1. Bitte bleiben Sie die Bluetooth-Geräteabstand des Verbindungsgerätes innerhalb einer Entfernung von 10 Meter
- 2. Es ist sicher, dass der Bluetooth-Lautsprecher in den Ausschalterschlüssel ist dann klicken Sie auf Funktionstaste um 3 Sekunden, Schalten Sie Bluetooth-Lautsprecher an, blauer LED blinkt, zuerst ist Paaring-Status, Warten auf Verbindung
- 3. Öffnen Sie die Handy Bluetooth-Funktion des Benutzers/oder anderen Bluetooth-Geräten/machen Sie Suche oder Scan dann klicken Sie auf dem angesch. Lautsprechername "ECOT", wählen Sie die Verbindung mit ECOT nach einer erfolgreiche Verbindung, blinkt die Ampel blaues Licht d.h. die erfolgreiche Paaring-Verbindung

Anmerkung: Wenn das Bluetooth-Version des Handy zu niedrig ist, versuchen Sie während Paaring eventuell ein Passwort einzugeben, zuerst ist das Passwort 0000

www.ectechology.com

F&A

- 1. Wie viele weit ist die Bluetooth-Geräteabstand des Bluetooth-Lautsprecher?
Die Bluetooth-Lautsprecher ist für effektive Bluetooth eine Übertragung von 10 Meter
- 2. Paaring ist Erfolgrich die Musik kann nicht spielen wie kann gelöst werden?
Überprüfen Sie, ob die Telefonstatusleuchte heruntergeladet ist;
- 3. Wenn Paaring nicht Erfolgr. ist, versuchen Sie mit anderen Handy. Wenn noch nicht gelöst wird, . Schließen Sie sich an, dass der Fehler der Hardware dazu führt. Wir schlagen vor, bitte machen Sie After-Sales-Phonen.

Achtungen

- 1. Machen Sie den USB-Port des Produkts nicht Wasser dem.
- 2. Wenn das Produkt beschädigt ist, schalten Sie es aus und senden es unsern technischen Personal Bitte nicht selbst demontieren
- 3. Wenn das Wasser in das Produkt ist, können Sie durch die Luft trocken, bitte machen Sie das Produkt nicht unter der Sonne.
- 4. Waschen Sie das Produkt nicht mit Chemikalien keine schärfen Gegenstände kratzen an das Produkt. Bitte pressen Sie nicht mit dem Produkt oder legen Sie es nicht auf
- 5. Stellen Sie das Gerät nicht in der Nähe einer offenen Feuerquelle.

www.ectechology.com

Kontaktieren Sie uns

Mullen Sie uns:
info@ectechology.com

Rufen Sie uns an:
USA 1-488-203-4318 Mo-Fr 9.00 bis 06.00 Uhr PST

Wenn Sie mehr erfahren möchten, besuchen Sie uns auf unserer Internetseite: www.ectechology.com

Erklärung

Wir bieten einen After-Sales-Service für alle direkt bei EC Technology gekauften Produkten an. Stöfen Sie dieses Produkt bei einem anderen Händler gekauft haben, setzen Sie sich für Umtausch oder Erstattung bitte mit Diesem in Verbindung.

Bitte beachten Sie, dass der unautorisierte Weiterverkauf von EC Technology Produkten untersagt ist.

www.ectechology.com

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

www.ectechology.com

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between there equiptment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

www.ectechology.com

Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

www.ectechology.com