英文(面)

300mm

86mm

Diet Coke

Bluetooth Bottle Speaker



DC-ABS-DCC

Operation Manual

Please read the manual before operating this product

M&S Accessory Network declares that radio equipment DC-ABS-DCC is in compliance with Directive 2014/53/EU.
The EU Declaration of conformity is available at https://gabbagoods.com/pages/compliance-documents

Contents

1 Introduction 1
2 Package Contents 2
3 Product Diagram 2
4 How To Use 3
4.1 General functions 3
4.2 Pairing to mobile phone 4
4.3 Charging your speaker 5
4.4 Radio mode 5
5 Product Specifications 6
6 FAQ 7

Compatible with all devices, Bluetooth® & Non-Bluetooth with included AUX cable

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

1.Introduction

Thank you for purchasing the Diet Coke Bluetooth Bottle Speaker! In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speakers features and functions!

Safety Rules

1. Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.
2. Be wary of any edges, uneven surfaces, metal parts, accessories, and its packaging to prevent any possible injury or damage.
3. Do not modify, repair, or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.
4. Do not use any diluent or volatile liquid to clean the product.
5. Do not use the product in a hazardous location.

1

2. Package Contents



Wireless Speaker




1X USB-C Cable



1X Instruction Manual

3.Product Diagram

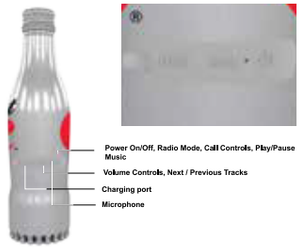

2

4.How To Use

4.1.General Functions

Desired Result	Required Action
Turn on & Enter the pairing mode / Turn off	Press and hold the power button for 2-3 seconds to on / off the product.
Pairing	Use a Bluetooth® enabled mobile phone or other Bluetooth® enabled device to perform necessary pairing actions.
Call Control	When there is an incoming call, press the Call button to accept the call, and press it again to hang up. If you press and hold the button, it will reject the call instead of picking it up.
Music Control (Play/Pause)	When playing music, press the Play/Pause button to pause the music, press again to resume playing.
(Volume / Track)	Press the Volume / Track button to increase sound volume, press and hold the button to reduce volume, Press the button twice to advance to the next music track. Quickly tap 3 times to return to the previous track.
Radio Mode	Press the Mode button 3 times quickly to switch to radio mode. Then, double-press the same button to automatically search for stations. To navigate through channels, double-press the Track button to advance to the next channel, and triple-press the same button to return to the previous channel.

3

FCC Compliance Statements

FCC ID: 2AFXXGG-ABS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

4.2.Pairing to a mobile phone

• To use your Wireless Speaker, you must first pair your Speaker to a Bluetooth®enabled device. Once your Wireless Speaker is paired to a smart device, they will remain paired and automatically recognize each other whenever they are in range.

• Pairing to a Bluetooth Enabled Smart Device: Turn on your smart device/Phone and ensure the Bluetooth® function is turned on / activated.

• Long Press the on/off button for 2-3 seconds and the LED lights will start to blink Blue , you are now in pairing mode.

• In your Bluetooth® settings under search devices the smart device will list the " Coca-cola Speaker "as discovered device, tap or select "Coca-Cola Speaker" and your wireless speaker should now be connected.

• The LED light will start to flash solid Blue once you are paired successfully.

4

4.3 Charging your Speaker

• Use the USB-C cable provided with your Wireless Speaker. Connect the USB-C plug to the USB-C charging port on the speaker.

• Connect the USB end to a USB port on a PC/Laptop or wall adapter in order to start charging the speaker.

* Make Sure to Charge the Speaker for 3-4 hours before initial use.

4.4 Radio mode

This speaker includes a radio feature. For detailed operation instructions, please refer to **4.1: General Functions - Radio Mode.**

If you experience poor signal reception while in radio mode, connecting the speaker to a charging cable can help improve the signal.



USB Plug — USB-C Plug

5

5.Product Specifications

Driver Diameter	50mm
Speaker output	3w
Impedance	4Ω
Bluetooth® Version	5.3
Battery Capacity	400 mAh
Receiver Distance	10m
Playing Time	3hours at 50% volume
Charging Time	2 hours
Charge Type	USB-C



6

6.FAQ

1. Why is there no power when I try to power on the speaker?

Ans: Ensure the battery has been charged up to 3 hours for initial use.

2. There is no sound during playback?

Ans: Check the connection between the speaker and the phone or smart device, if the connection is not established, please try the pairing mode again. Make sure the Speaker is paired with your Bluetooth® enabled device.



7

Support

If you have problems with your device, please consult the instructions in this manual.

Manufacturer Warranty

We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com

COCA-COLA, COKE, DIET COKE, FANTA, SPRITE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved.
Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.

DC-ABS-DCC

Designed in the U.S.A. | Made In China

Manufactured, marketed, and distributed under license by M&S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001
Designed in the U.S.A | Made in China.
For support call: (877) 995-8505 or
Email: info@mnsbrands.com

www.mnsbrands.com

8