
17in
4C
17in
11in

STEP 5



STEP 6

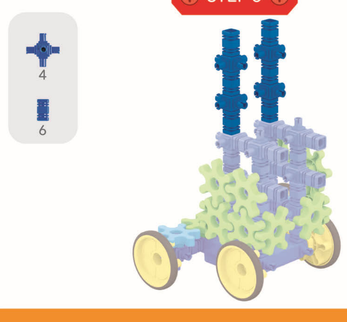



©Lakeshore

Lakeshore

GG127

REMOTE-CONTROL GEAR-BOT

BUILDING GUIDE



Battery-operated toy.
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

⚠ WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 yrs.

149 pcs

BEFORE YOU BEGIN

Use a Phillips-head screwdriver to remove the battery covers from the remote control and the motorized base. Install two "AA" batteries in the remote control and four "AA" batteries in the motorized base. Then replace the covers. Now the remote control and motorized base are ready for your child to use.

WHAT'S INCLUDED



Wireless remote control | 2 heads | Motorized base



Chest plate | 4 wheels | 2 claws | 40 gears | 2 shoulders | 36 connectors | 60 risers


IMPORTANT BUILDING TIPS

1. Add a gear to the center connector on each side of the motorized base before attaching the four wheels. This will ensure that the wheels spin at the same time.




2. Before building, make sure the yellow pegs on the base are facing forward. This will ensure the gear-bot moves in the correct direction.

STEP 3






STEP 4





STEP 1

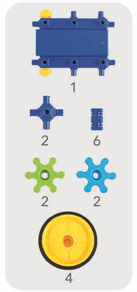



Make sure the yellow pegs on the base face forward. These will help the gear-bot move correctly.

STEP 2






TURNING ON THE REMOTE & BASE

1. Start by sliding the power switch on the motorized base from "off" to "on." A red light will blink on top of the base.
2. Then slide the power switch on the wireless remote control to "on." The light on the remote control will blink as it syncs up with the base.
3. Once the base and remote control are synced, the lights on both will stop blinking and stay red, and the remote control is ready to use.


USING THE REMOTE CONTROL

Move Forward

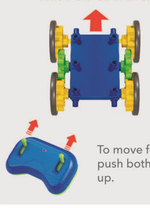


To move forward, push both knobs up.

Move Backward

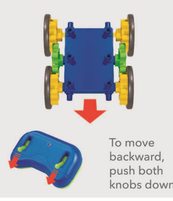


To move backward, push both knobs down.

Move to the Right

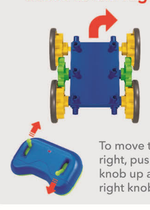

To move to the right, push the left knob up and the right knob down.

Move to the Left

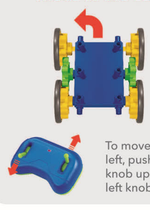


To move to the left, push the right knob up and the left knob down.

BUILDING YOUR GEAR-BOT




To build on the motorized base, add a riser to a connection point.

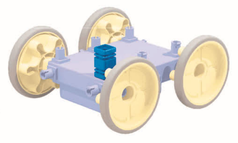



Next, add a connector to a riser. To build even higher, keep adding risers and connectors.

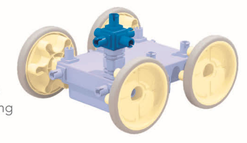



To add a gear, attach it to a connector.





To make the gears spin, attach them to the connectors so that the gears interlock with each other.




GEAR-BOT

BUILD #4



You Will Need:

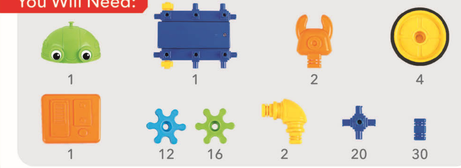

STEP 5





STEP 6






GEAR-BOT


BUILD #1




You Will Need:

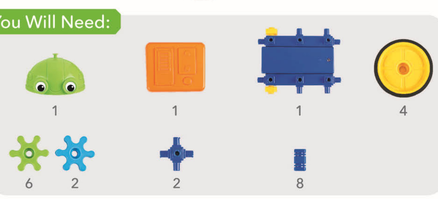

STEP 1




These gears will help the wheels move at the same time.

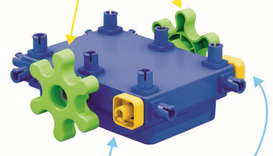

Make sure the yellow pegs on the base face forward. These will help the gear-bot move in the correct direction.

STEP 2



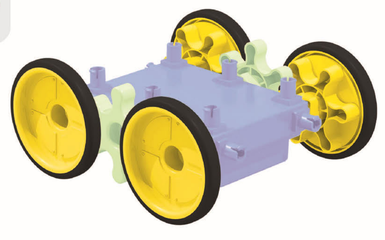

STEP 3

STEP 4

STEP 1

These gears will help the wheels move at the same time.

Make sure the yellow pegs on the base face forward. These will help the gear-bot move in the correct direction.

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

GEAR-BOT

BUILD #3

You Will Need:

STEP 5

STEP 6

GEAR-BOT

BUILD #2

You Will Need:

STEP 1

These gears will help the wheels move at the same time.

Make sure the yellow pegs on the base face forward. These will help the gear-bot move in the correct direction.

STEP 2

STEP 3

STEP 4