折叠后尺寸160*122mm

INSTRUCTION MANUAL

LAX-MAX®

NEW GENERATION

To Customers:

Thanks for buying 2.1 ch hi-fi music system from us!
Please take some time to read the manual before using the unit
Obey the Operational guidance;
It will help you have a better understanding of this product
Feature & functions enable you to get the best performance!

VERY IMPORTANT NOTICE:

Press the "**MENU**" Button for 3 seconds to reset factory settings if unit has function problems!

2 Models As Below



LI-S252(ABC)



LI-S251(ABC)

Accessories

1xRemote control
1xAV Line in cable with 3.5mm PIN
1xUser manual

Front panel




1-USB Input
2-SD/MMC Input
3-Bass/Trebel/MIC Volume/Echo adjust
4-Flash Light Lens **(REPEATED with #11)**
5:Previous
The first time you use this speaker, press and hold ►II button for 2-3 seconds to search FM channels automatically. Then single press "Previous" button to skip to previous Channel.
6-Menu Button (adjust Bass/Treble/MIC Vol/Echo) Press "Menu" button for 3 seconds to restore factory settings
7-Handle
8-Treble Speaker
9-Pause/Play - Press shortly for auto searching / Stop auto searching, Under Bluetooth mode, Press shortly for Pause/Play. Under LINE IN mode, this button is no function
10-Volume button
11-Flash Light Lens **(REPEATED with # 4)**
12-Next
Under USB/SD/Bluetooth mode, press shortly for next song. Press and hold for 3 seconds to fast backward. The first time you use this speaker, press and hold ►IIbutton for 2-3 seconds to search FM channels automatically. Then single press "Next" button to skip to the next channel. Under LINE IN, this button is not working
13- Mode (Shortly press to skip between FM/Bluetooth/LINE IN/USB/SD Mode, press for 3 seconds to turn on/off Voice prompt)
14-Recording (Press and hold for 3 seconds to record and press shortly to play recording. Recor from microphone, then save the recording into a USB. To record, first plug in the USB then plug in the microphone.
15-LED Display Screen
16-Full Frequency Speaker

Back Plate/Rating Label



Power Switch(ON-Power on,OFF-Power off)
Power Cable(Plug in 120V)
Line-in(can connect DVD/MP3/Mp4/mp5/PC..etc audio device)
Mic-in(Wired Mic Jack)
FM Ant(Strech The FM Line,if You want better FM Signal)

Remote control

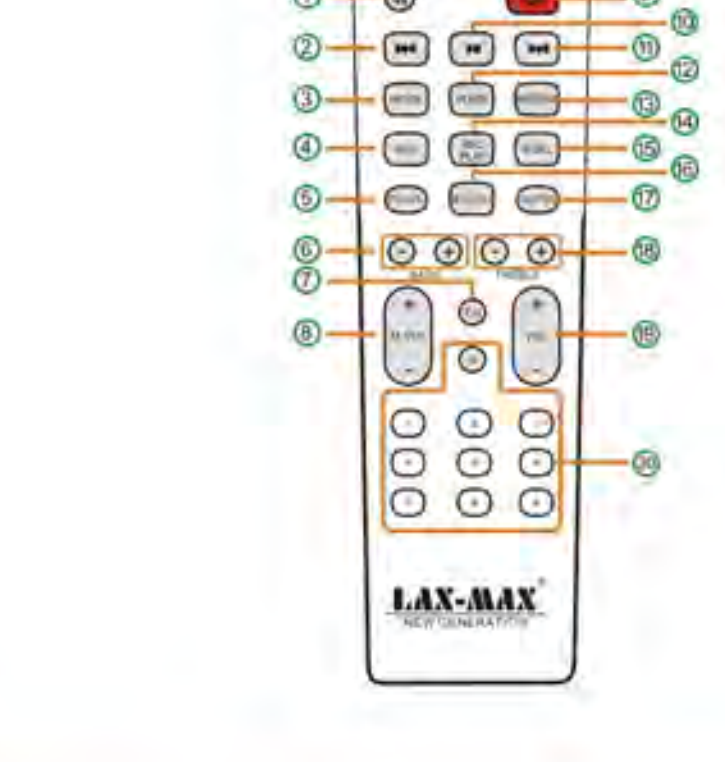

1. MUTE: Stops the sound, press again to switch the sound on.
2. Previous
-In USB/SD/Bluetooth mode:
shortly press → for previous song
press for 3 seconds → to fast forward.
-In FM mode: Shortly press to go to the previous frequency, long press to go directly to previous channel.
-In LINE mode: no function
3. Mode: Short press to cycle through FM/Bluetooth/LINE IN/USB/SD Mode
4. Record function
5. Reduce echo effect
6. Adjustment of low frequencies
7. EQ: Sound effects: Rock, Jazz, classic, etc.
8. Microphone volume adjustment
9. Standby button, LED ON/OFF (Press and hold for 3 seconds to turn ON/OFF LED Light)
10. Pause/Play
-In USB/SD/Bluetooth mode this button has the Play/Pause function
-In FM mode: press 3-4 seconds to scan automatically the FM radio channels. Press again to stop auto-searching
-In LINE mode, this button has no function
11. Next
In USB/SD/Bluetooth mode: press shortly → Next song;
Press above 3 seconds → fast forward.
In FM mode: Short press to go to the next frequency, long press to go directly to next channel.
In LINE mode: no function
12. Voice Prompt ON/OFF
13. Repeat: single-all-cancel repeat
14. Play recorded files on the USB/SD media
15. Delete recorded files on the SD/USB storage device
16. Increase echo effect
17. MIC priority: If you use the Karaoke function and the song is playing at the same time, press this button and the MIC sound will override the sound from USB/SD.
18. Adjustment of high frequencies
19. Volume adjustment
20. Number buttons
In USB/SD mode: press to access directly the track
In FM mode: press to select directly a stored radio station
In all other modes, these buttons have no function.

Technical Specifications
RMS Power: 41W,Output Power 60W,MAX 150W
Speaker Unit:Bass:5.5"+4"x2+1.5"
Impedance:4Ω+4Ω
Voltage:AC120V-60HZ
Optional,Signal-to-noise: ≥60dB
Frequency response: 40Hz-18KHz

Functions' Introduction

1:Support USB&SD card
2:Line-in
3:FM Radio
4:Blue-connect&NFC
5:Recording
6:Mic-in(wired microphone input)
7:Remote control
8:With "Menu"Button
(adjust bass/treble/MIC ECHO)

Matters That Need Attentions


1: After using this product, pull the plug and in time be careful with the dust and dirt.
2: Every time when using this product, remember to rotate volume button before turning on speaker. Lower the volume in case it's too loud to avoid output power damage to the speaker.
3: If the volume is too loud, adjust volume from main volume button
4: Keep the speaker far away from flames, ignition source, water splash, objects filled with liquids such a flower vase etc.
5: Serious warning: It is strictly prohibited to open the speaker box if you are a nonprofessional maintenance personnel to avoid an electric shock

Service Manual

Trouble	May caused by	Solution
No sound comes when power on	1: No input sound source 2: Volume knob in the lowest position 3: Voice switch off 4:USB/SD no plug	1:Input line has signal 2: Adjust volume 3: Turn on voice switch 4: Plug USB/SD Card
Distortion of sound	1:Volume too loud 2: Audio file error	1:Turn volume lower 2:Check and change the audio file

Microphone has no sound	1:Microphone socket not full plug 2: Microphone switch is not on 3: Microphone volume in lowest	1:Completely plug microphone socket 2:Power on microphone 3:Adjust microphone volume
USB/SD card no sound comes	1:songs format error 2: Illegal operation causes function mess 3:USB/SD Card doesn't plug properly	1:songs format should be MP3/WMA 2: Power off,then power on 3:Plug USB/SD card properly
FM Radio problems	1:Cant search radio channels 2:FM radios has no sound 3:Not enough FM channels 4:FM sound not clear	1: The FM antenna does not expand 2: Switch to next Channel and try 3: Try and position the FM antenna at a different angle 4: Twist FM antenna to the other side or try "Auto scan"
Speaker has big noise problems	1:The wired Microphone is too close to the speaker 2: The microphone switch is on but doesn't work 3: MicroPhone volume too loud 4:Making mobile calls too close to the speaker 5:Too close to the equipment which interfere the speaker	1:Do not let wired Microphones head point at the speaker 2:Turn off wired microphone if not use it 3:Adjust microphone volume lower 4: Keep mobile away from the speaker when calling 5:Keep the speaker away from other interfere source
Bluetooth Failure	1:Bluetooth Disconnected 2:Bluetooth Connected but no voice 3:Bluetooth effective distance too short	1: Find the right device Name "LI-S251/LI-S252" Or Long press "MENU" Button to Restore Factory Settings. 2: Confirm if you connected the right device Name "LI-S251/LI-S252",or check 3: Try to keep away from barriers such as walls, glasses...etc

The principle diagram of the circuit

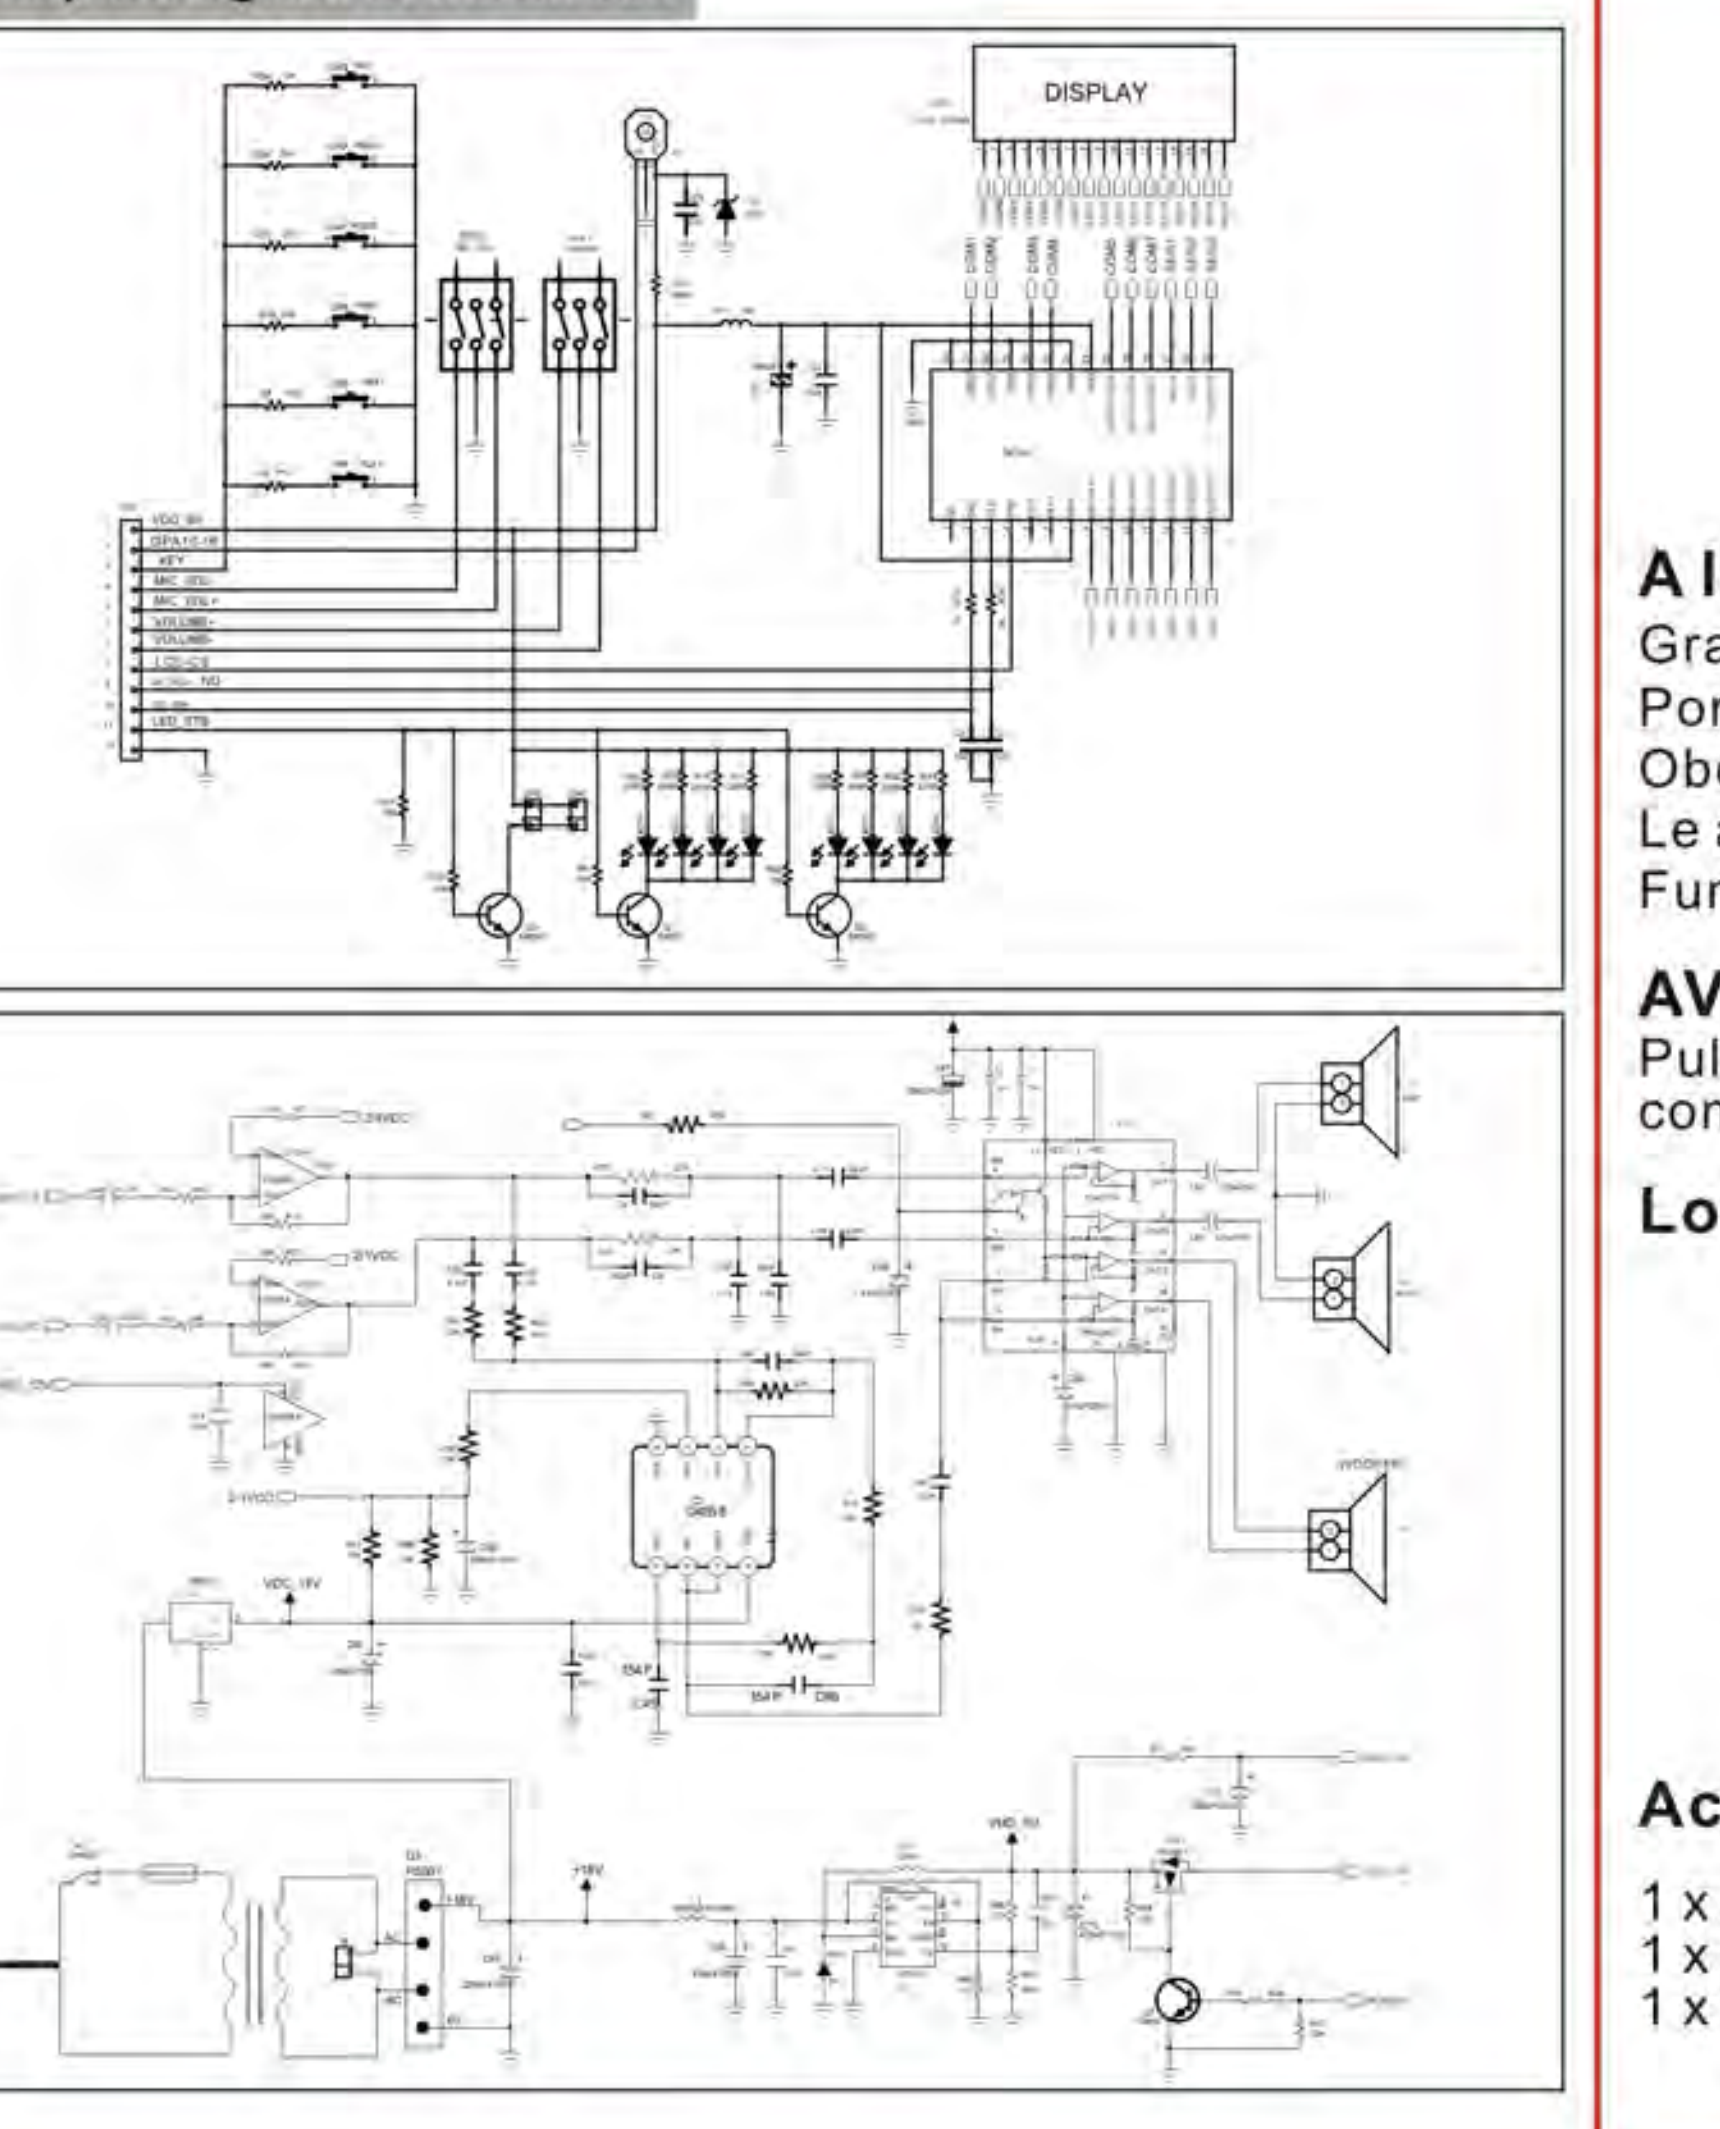

MANUAL DE INSTRUCCIONES

LAX-MAX®

NEW GENERATION

A los consumidores:

Gracias por comprar el sistema 2.1 ch hi-fi!
Por favor tome tiempo para leer el manual antes de utilizar
Obedezca la guía operativa;
Le ayudará a tener una mejor comprensión del producto
Funciones y características le permiten obtener el mejor rendimiento!

AVISO MUY IMPORTANTE:

Pulse el botón de **"MENU"** por 3 segundos para reestablecer las configuraciones de fábrica si la unidad tiene problemas de función!

Los 2 Modelos Abajo



LI-S252(ABC)



LI-S251(ABC)

Accesorios


1 x Control Remoto
1 x Cable AV Line con conector de 3.5mm PIN
1 x Manual de instrucciones

Panel Frontal




1. Entrada de disco USB
2. Entrada de SD / MMC
3. Bajo / Agudos / Volumen de Micrófono / Ajustador de Eco
4. Lente de luz parpadeante **(REPEATED with # 4)**
5. Anterior - Detrás de los lotes USB/SD/Bluetooth, pulse en breve para la canción anterior y pulse durante 3 segundos para velocidad rápida. En el modo FM, (la primera vez que use esta unidad, pulse el botón ▶❘❘ durante 2-3 segundos para buscar los canales de FM automáticamente); Después pulse el botón "Previous" para saltará al canal anterior.
6. Botón de Menú (Ajustar bajo / Agudos / Volumen de Micrófono / Eco) Pulse el botón "Menú" por 3 segundos para restaurar la configuración.
7. Manilla
8. Altavoz de agudos
9. La función Play/Pause se encuentra en la parte trasera de los lotes de USB/SD Pulse brevemente el botón Play/Pause para la escanear automáticamente y para parar el escaneo automático. El modo LINE IN, este botón no tiene ninguna función.
10. Botón de Volumen
11. Lente de luz parpadeante **(REPEATED with # 4)**
12. Siguiente - Detrás de los lotes USB/SD/Bluetooth, pulse en breve para la siguiente canción y pulse durante 3 segundos para velocidad rápida. En el modo FM, (la primera vez que use esta unidad, pulse el botón ▶❘❘ durante 2-3 segundos para buscar los canales de FM automáticamente); Después pulse el botón "Next" para saltará a la siguiente canal. Bajo "LINE IN", este botón no tiene función.
13. Modo
(Pulse brevemente para saltar entre (FM/Bluetooth/LINE IN/USB/ SD). Pulse el botón por 3 segundos para encender / apagar el sistema de voz.
14. Grabación - (Para grabar, pulse el botón durante 3 segundos y después vuelva a pulsar el botón para reproducir. Graba con el micrófono y guarda la grabación en un USB. Para grabar, primero conecta el USB y luego conecta el micrófono.
15. Pantalla LED
16. Altavoz de frecuencia completa

Placa Trasera / Clasificación Label

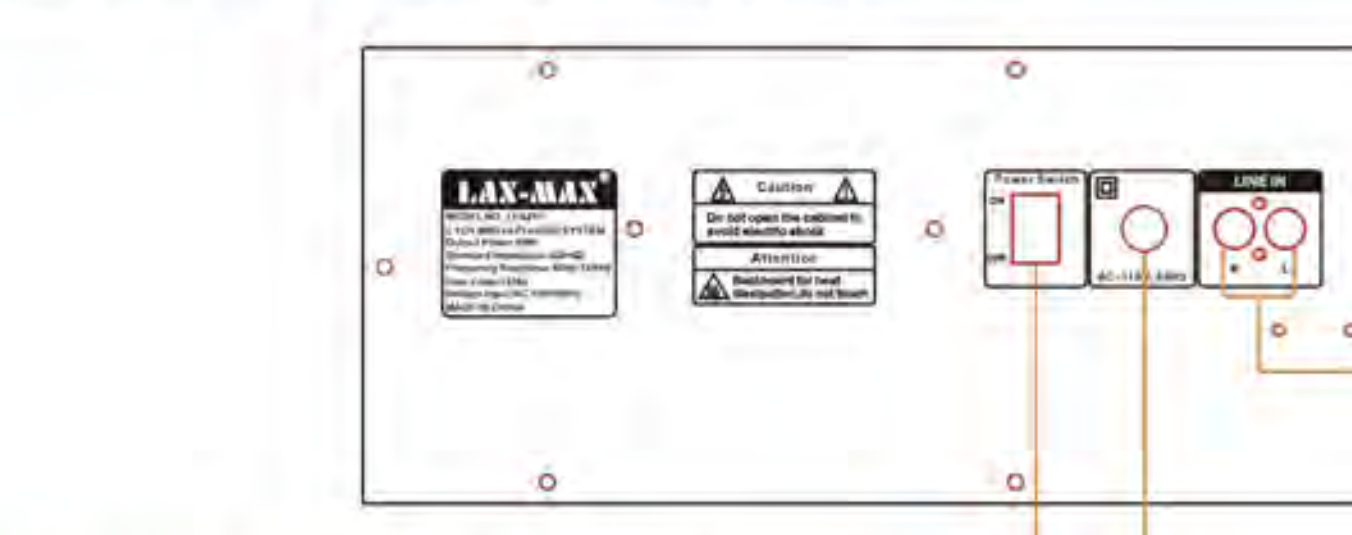

Boton de poder (ON - Encender, Off - Apagar)
Cable de poder (Enchufe de 120V)
Line-in (se puede conectar a DVD / MP3 / MP4 / MP5 / PC y otro dispositivos de audio)
Micrófono (con toma de cable)
Antena FM (Estire la línea FM si desea una mejor señal)

Remote control

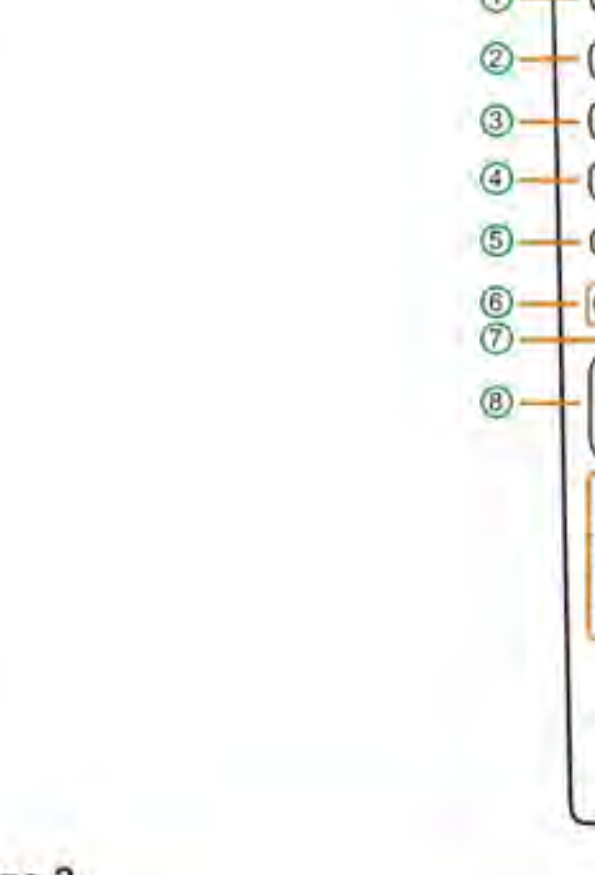

1. Mudo: Para el sonido, pulse de nuevo para encender el sonido.
2. Anterior
-En modo USB/SD/Bluetooth: pulse brevemente → para la canción anterior, pulse durante 3 segundos → para avanzar rápidamente.
-En Modo FM: Pulse brevemente para ir a la frecuencia anterior, pulse larga mente para ir directamente a la frecuencia anterior.
-El modo LINE IN: no tiene función.
3. Modo: Pulse para cambiar entre FM/Bluetooth/LINE IN/USB/Modo SD
4. Función de grabación
5. Reducir el efecto de eco
6. Ajuste de frecuencias bajas
7. EQ: Efectos de sonido: Rock, Jazz, Clásica, etc.
8. Ajuste del volumen de micrófono
9. Botón Standby, LED ON/OFF (Pulse por 3 segundos para encender y apagar la luz LED)
10. Pausa / Reproducción
-En modo USB/SD/Bluetooth: Este botón tiene la función de reproducción / pausar.
-En modo de FM: presione 3-4 segundos para escanear automáticamente los canales de radio FM. Presione nuevamente para detener la búsqueda automática
-Modo Line In no tiene ninguna función
11. Próxima
-En modo USB/SD/Bluetooth: presione → para la siguiente canción, presione por 3 segundos → para adelantar.
-En modo FM: Pulse brevemente para ir a la siguiente frecuencia, pulsación larga mente para ir directamente a la siguiente canción.
-En modo LINE IN: no tiene función.
12. Función de voz ON / OFF
13. Repetir: una - todo- cancelar la repetición
14. Reproducir archivos grabados en el soporte de USB / SD
15. Eliminar archivos grabados en el dispositivo de almacenamiento SD / USB
16. Aumentar el efecto de eco
17. Prioridad de micrófono: Si utiliza la función de Karaoke y la canción se está reproduciendo al mismo tiempo, pulse este botón y el sonido del micrófono anulara el sonido del USB / SD.
18. Ajuste de frecuencias altas
19. Ajustes de volumen
20. Botones de numéricos
-En modo de USB/SD: pulse para acceder directamente a la pista
-En modo FM: Presione para seleccionar directamente una estación de radio almacenada.
-En todos los demás modos: estos botones no tienen ninguna función.

Especificaciones técnicas
-Potencia RMS : 43.5W, potencia de salida de 60W, 150W MAX
-Unidad de altavoz: Bajo: 5.5"+4"x2+1.5
-Impedancia: 4Ω + 4Ω
-Voltaje: AC120V 60HZ
-Opcional: Señal - ruido : ≥70dB
-Respuesta de frecuencia: 40Hz - 18KHz

Introducción De Funciones

1: Soporte USB y tarjetas SD
2: Line-in / Aux-in
3: Radio FM
4: Bluetooth y NFC
5: Grabación
6: Micrófono (entrada de micrófono con cable)
7: Control remoto
8: Con botón "Menú"
(Ajuste de b bajo / agudos / eco de micrófono)

Asuntos Que Necesitan Atencion

1: Después de usar este producto, jale el enchufe, Con el tiempo tenga cuidado con el polvo y la suciedad.
2: Cada vez que use este producto, recuerde que debe girar el botón de volumen antes de encender los altavoces. Baje el volumen en caso de que sea demasiado alto para evitar daños al altavoz.
3: Si el volumen es demasiado alto, ajuste el volumen con el botón del volumen principal
4: Mantenga el altavoz lejos de llamas, fuentes de ignición, salpicaduras de agua, objetos llenos de líquido o un florero.
5: Grave advertencia: Está prohibido abrir la caja del altavoz si usted no es un profesional para evitar una descarga eléctrica.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Manual de servicio

Problema	Puede Causar	Solución
Cuando está encendida la unidad y no hay sonido	1 :No hay entrada de fuente de sonid 2: Mando de volumen esta en la posición más baja 3: Botón de voz está apagado. 4 :No hay ningún enchufe de USB/ SD	1: Entrada de línea tiene señal 2: Ajustar el volumen 3: Encienda el conmuta-dor de voz 4: Enchufe el USB / SD
Distorsión del sonido	1 : Volumen demasiado alto 2 : Error del archivo del audio	1: Baje el volumen 2: Revisar y cambiar el archivo de audio
El micrófono no hace ni un sonido	1: No está conectado el micrófono completa mente. 2: Interruptor de micrófono no está encendido 3: Volumen de micrófono está bajo	1: Conecte completame-nte el enchufe del micrófono 2: Encienda el micrófono 3: Ajuste el volumen del micrófono
No emite sonido el USB / tarjeta SD	1: Ay un error con el formato de la canciones. 2: La operación ilegal provoca problemas con la función 3: La tarjeta USB / SD no se conecta adecuadamente	1: El formato de las canciones debe ser MP3/WMA 2: Apague y vuelva a encender 3: Conecte el USB / la tarjeta SD correctamente
Problemas de radio FM	1: No puede buscar canales de radio 2: El radio FM no tiene sonido 3: Demasiado pocos canales de radio FM 4: FM no suena clara	1: La antena FM no se expande 2: Cambie al siguiente canal y tratar 3: Trate de colocar la antena FM en un ángulo diferente 4: Gire la antena FM hacia el otro lado o tratar de usar el "Auto Scan"

Altavoz tiene grandes problemas de ruido	1: El micrófono alámbrico está demasiado cerca del altavoz 2: Interruptor de micrófono con cable encendido pero sin uso 3: Volumen del micrófono demasiado alto 4: Llamadas móvil demasiado cerca al altavoz 5: Muy cerca del equipo que interfieren el altavoz	1: No deje que los micrófonos alámbricos apunten hacia el altavoz principal 2: Desactivar micrófono con cable si no lo utiliza 3: Ajuste el volumen del micrófono 4: Mantenga móvil lejos del altavoz al llamar 5: Mantenga el altavoz lejos de otras interferencias
Bluetooth Fracaso	1: El Bluetooth se desconecto 2: El Bluetooth está conectado pero sin voz 3: distancia efectiva del Bluetooth es muy corta	1: Encuentre el nombre adecuado en su dispositivo **"LI-S251/LI-S252"**. O pulse el botón "MENU" para restaurar las configuraciones. 2 : Confirme si ha conectado el dispositivo adecuado **"LI-S251/LI-S252"**; o cheque 3 : Trate de mantenerse alejado de los obstáculos como paredes y vidrios , etc ...

El diagrama principal del circuito

