


Notes:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MOONSTAR
The moonstar special casting good voice

Model: Z11

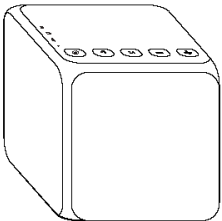

产品保修卡 Product Warranty card			
品名型号 Model		机身号码 PS Identity	
用户单位 Customer		发票编号 Invoice Number	
售机单位 sales company	(盖章) Stamp	购买日期 Purchase Date	年 月 日 year month date
摘要 Summary			
日期 date	故障及检修情况记录 breakdown and repair record	检修人 Maintenance man	备注 note

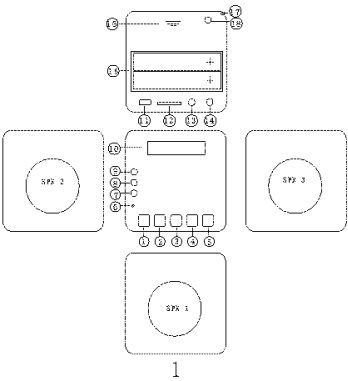

Function introduce

- ① ON & OFF/ Pause & Play

② Push-To-Talk button

③ Function button

④ Previous/VOL down

⑤ Next/ VOL up

⑥ MIC

⑦ AUX indicator

⑧ TF card indicator

⑨ Bluetooth connect indicator

⑩ LOGO

⑪ Power/ data cable in
- ⑫ TF card slot

⑬ Audio output

⑭ Audio input

⑮ Battery holder

⑯ Rear cover open indicate

⑰ Strap hold

⑱ Strap column

SPK-1 Active Speaker

SPK-2 Passive radiation Speaker

SPK-3 Passive radiation Speaker

- 以下几种情况不属于保修范围,将收取维修配件费:
Situations below are not cover by Warranty, there will be additional costs if repair or change.
1. 产品的包装和外观;
Product's packaging and appearance

2. 用户操作不当,或运输不当引起的机器损坏;
Damage by improper operation or improper transport

3. 自行更换、拆修机器或到非指定维修店维修过;
Changing parts, overhaul individual or by unspecified repair shop.

4. 因雷电、水害、火灾等自然灾害造成的机器损坏;
Damage by thunder, flood, fire etc. natural disaster.

5. 因使用产品连接不符合标准的电源终端设备及电压异常造成的损坏;
Damage by connecting with higher voltage than standard device or by abnormal voltage.

6. 配件(如 USB 线,音频线,电池等);
accessories (like USB cable, audio cable, battery)

7. 过保修期。
Warranty expired

产品质量保证说明
Product Warranty

衷心地感谢您选用本公司研制生产的 MOONSTAR 蓝牙音箱
Thank you for selecting MOONSTAR bluetooth speaker developed and manufacture by our company.

保修说明


Warranty details

1. 保修年限:本产品在日常操作使用下出现故障,未私自拆修,自购买之日起一年之内享有保修服务;
Warranty period: we offer one year warranty since the day you buy if this speaker malfunctioning under normal operation, and never be overhaul

2. 保修卡自购机后即予填写,并经售机单位盖章后生效;
Warranty card should be fill in after purchasing finish, and become effective after stamp by marketing company

3. 售机单位承担产品保修与维护义务,本公司产品在使用过程中出现质量问题,用户请及时与售机单位联系解决;
Marketing company take the responsibility of product's warranty and maintain, if any quality problem occur during using, please connect with the marketing company.

Function operation

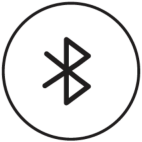

Bluetooth

1. Default bluetooth mode⑨when power on, bluetooth receive distance 1-50m

2. Indicator⑨quick flashing when searching for bluetooth, connection done⑨slow flashing

3. Under other mode, press③switch to bluetooth status



AUX

1. Audio in④, speaker automatic detection and identification audio signal, audio signal got a priority, indicator⑦on.
2. Under other mode, press③switch to AUX audio in mode.
3. Connect to CD, DVD, MP3, MP5, IPAD, Cellphone, PC via 3.5mm audio cable to AUX IN jack ⑭ to play

4

三、性能参数

- 1、SPK-1有源喇叭，尺寸52MM, 4欧内磁
- 2、SPK-2、SPK-3无源辐射喇叭，尺寸52MM
- 3、1200MAH 18650#电池2节，3.7V供电，DC5V充电
- 4、尺寸82MM*82MM*82MM


8



四、注意事项

- 1、每次安装电池 ⑮ 后接入DC ⑪ 通电激活
- 2、安装电池 ⑮ 要分清正负极方向，以免短路烧坏电路
- 3、音响的保养和使用都是十分重要的，一但使用不当就有可能损坏音响
- 4、音响不要让阳光直晒，避免接近热源
- 5、音响使用完后，各接孔要复位，避免弹片长期处在受力状态造成功能异常

9

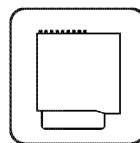


TF

TF card in

1. TF card in ⑫ speaker automatic detection and identification TF card audio signal, indicator⑧on.
2. Under other mode, press③switch to TF card play mode.


5

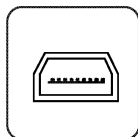

DC one-for-all cable

1. DC ⑪ 5V power cable
2. DC ⑪ connect to PC via DC cable can read TF card inside ⑫
3. DC ⑪ connect to PC via DC cable can be PC' s sound card


6

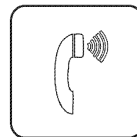

蓝牙通话

- 1、在蓝牙连接状态来电接听/挂断按②键
- 2、接听通话请对准⑥MIC通话孔
- 3、短按②键两下回拨手机最后一组拨出号码


7

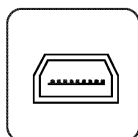

DC 一线通

- 1、DC ⑪ 5V充电
- 2、DC ⑪ 接入充电数据线连接PC电脑可读写⑫内TF卡内容
- 3、DC ⑪ 接入充电数据线连接PC电脑可做USB声卡

6

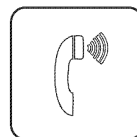

Bluetooth call

1. Under Bluetooth connection mode press②to get in/ hang up a call.
2. Please talk to⑥MIC while getting a call
3. press②twice to call last dial back.

7

Specifications

1. SPK-1 is a 52mm 4Ω?
2. SPK-2, SPK-3 are 52mm Passive radiation Speakers.
3. 2pcs 1200Mah 18650 batteries, 3.7Voutput, DC5V inout.
4. Size: 82*82*82mm

8




AUX
AUX外接音源

- 1、音频线接入④自动检测识别音频信号后接优先音频指示⑦常亮
- 2、在其它模式下，功能按键③转换到AUX外接音源模式
- 3、将CD、DVD、MP3、MP5、IPAD、手机、电脑等音源通过3.5音频线接入，AUX IN 输入孔④播放音乐

4


MOONSTAR
Создавая насыщенный звук

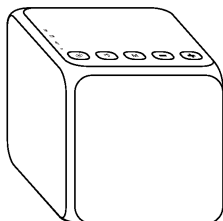

一、功能介绍

- | | |
|------------|---------------|
| ① 开关机/暂停播放 | ⑪ 充电数据连接口 |
| ② 通话按键 | ⑫ TF卡口 |
| ③ 功能按键 | ⑬ 音频输出 |
| ④ 上一曲/音量减小 | ⑭ 音频输入 |
| ⑤ 下一曲/音量增大 | ⑮ 电池盒 |
| ⑥ MIC | ⑯ 后盖开启指示 |
| ⑦ AUX指示灯 | ⑰ 挂绳孔 |
| ⑧ TF卡指示灯 | ⑱ 挂绳柱 |
| ⑨ 蓝牙连接指示灯 | SPK-1 有源喇叭 |
| ⑩ LOGO | SPK-2 L无源辐射喇叭 |
| | SPK-3 R无源辐射喇叭 |

2

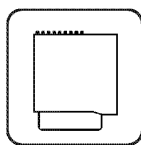

TF卡
TF卡输入

- 1、TF卡接入⑫自动检测识别音频信号后接优先TF卡指示灯⑧常亮
- 2、在其它模式下，功能按键③转换到TF卡播放模式

5



Attention

1. When put batteries in⑮, please connect to DC11 power to activate.
2. Please pay attention to the batteries' positive/negative while putting batteries in, to avoid to burn the power line down.
3. It is very important that to use and maintain the speaker in a right way, it may burn down when misusing.
4. Please keep the speaker away from direct sunlight and heat source.
5. Please reset the buttons when you don't use it, please avoid to put the buttons under for a long time when you don't use it, the functions may get wrong if do so.

9


二、功能操作



Bluetooth
蓝牙

- 1、开机默认蓝牙模式⑨，蓝牙接收距离（1-50）米
- 2、蓝牙搜索状态指示灯⑨快闪，连接成功指示灯⑨慢闪
- 3、在其它模式下，功能按键③转换到蓝牙状态

3

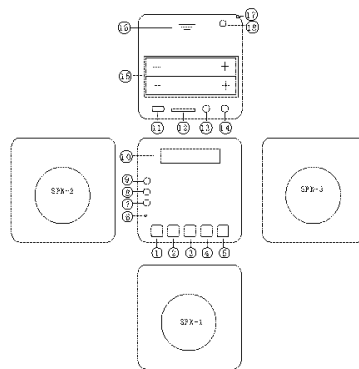


1

一、功能介绍

- | | |
|------------|---------------|
| ① 开关机/暂停播放 | ⑪ 充电数据连接口 |
| ② 通话按键 | ⑫ TF卡口 |
| ③ 功能按键 | ⑬ 音频输出 |
| ④ 上一曲/音量减小 | ⑭ 音频输入 |
| ⑤ 下一曲/音量增大 | ⑮ 电池盒 |
| ⑥ MIC | ⑯ 后盖开启指示 |
| ⑦ AUX指示灯 | ⑰ 挂绳孔 |
| ⑧ TF卡指示灯 | ⑱ 挂绳柱 |
| ⑨ 蓝牙连接指示灯 | SPK-1 有源喇叭 |
| ⑩ LOGO | SPK-2 L无源辐射喇叭 |
| | SPK-3 R无源辐射喇叭 |

2

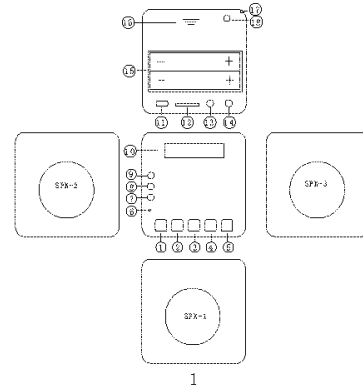


функциональные особенности

- ① вкл / выкл, пауза
- ② клавиша телефон
- ③ клавиша меню
- ④ перемотка назад / уменьшение громкости
- ⑤ перемотка вперед / увеличение громкости
- ⑥ микрофон
- ⑦ индикатор AUX
- ⑧ индикатор TF-карта
- ⑨ индикатор Bluetooth
- ⑩ LOGO
- ⑪ интерфейс для зарядного устройства
- ⑫ разъем TF-карта
- ⑬ аудиовыход
- ⑭ аудиовход
- ⑮ аккумулятор
- ⑯ указатель для открытия
- ⑰ установка для удобства ношения
- SPK-1 динамик
- SPK-2 L пассивный излучатель
- SPK-3 R пассивный излучатель


2

示意图

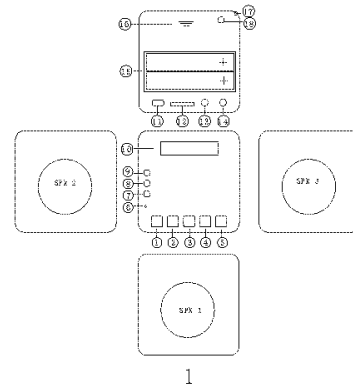

MOONSTAR

月亮星 专铸好声音

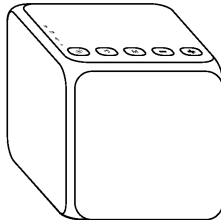


AUX

- 1、вставить кабель AUX ④ автоматическая идентификация звукового сигнала и индикатор ⑦ затарится
- 2、нажмите клавиша меню ③ для переключения режим AUX
- 3、для воспроизведения подключите внешние носители CD、DVD、MP3、MP5、или компьютер к аудиовходу ⑭ с помощью звукового кабеля 3.5mm

4

инструкция

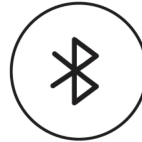

Bluetooth

- 1、по умолчанию режим Bluetooth включается. диапазон приема (1-50) метров
- 2、индикатор Bluetooth быстрое мигание в режиме поиска, после соединения Bluetooth медленное мигает
- 3、нажмите на клавишу меню ③ для включения режима Bluetooth, если он не включен

3



рекомендации


- 1、подключите зарядное устройство для зарядки аккумулятора, если устройство не включается после вставки аккумулятора ⑮, поскольку цепь предохранителя отключает аккумулятор автоматически при отсутствии питания.
- 2、При установке аккумулятора ⑮ различают положительный и отрицательный батарей. избегайте короткого замыкания.
- 3、Обратите внимание, что надлежащее техническое обслуживание и использование.
- 4、Не подвергайте стереосистему воздействию прямых солнечных лучей, держите ее вдали от источников тепла.
- 5、Внимательно всеразъем после использования системы, в противном случае это может привести к повреждению оборудования при длительном неиспользовании клемм.

9

рабочие характеристики

1. SPK-1 активная динамик, размеры 52 мм, импеданс: 4Ω
2. SPK-2, SPK-3 пассивный излучение динамик, размер 52 мм
3. Емкость батарей 1200мА 2 шт. ; 3. 7вт ; DC 5V
4. Размер (ш х в х г) 82мм*82мм*82мм


8

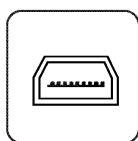

DC

1. DC ① 5V
2. DC ① подключать кабель к компьютер, можно читать и писать содержимое TF карты


6

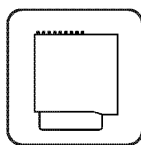

TF- карта

1. вставить TF карта ② автоматическая идентификация звукового сигнала,
2. нажмите клавишу ③ для переключение в режим TF

5

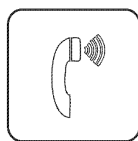

Bluetooth телефон

1. Нажмите клавиш ② в состоянии соединения Bluetooth ответить на звонок или повест на входящие вызовы.
2. MIC ⑥
3. нажмите клавишу ② два, последнюю группу исходящих вызовов обратно

7