12.75"L x 9"H x 8.5"D

COMPETITIVE
PUSH AND SHOVE YOUR WAY TO VICTORY BY KNOCKING YOUR OPPONENT OVER

WIRELESS
OPERATE YOUR SUMO WARRIOR VIA WIRELESS REMOTE CONTROL FOR FULL-FUNCTION WRESTLING

VERSATILE
BUILT-IN SPEAKER WITH INTERACTIVE SOUND EFFECTS

2 PLAYER ACTION!

Each sumo wrestler requires 3 "AAA" 1.5V alkaline batteries (not included). Each remote control requires one 9V alkaline battery (not included). See bottom panel for important battery information. Colors and styles may vary.



THE BLACK SERIES™

THE BLACK SERIES™



sumo king wrestling
wireless head-2-head RC fighters

BUILT-IN DIGITAL SOUND EFFECTS
FOR THRILLING BATTLES

BATTERY OPERATED
PLAY WRESTLERS
AGES 6 AND UP

⚠ WARNING!
CHOKING HAZARD • Small parts.
Not suitable for children under 3 years.

2 PLAYER ACTION!

CHARGE YOUR OPPONENT KNOCK HIM OVER—MAKING YOU THE SUMO CHAMPION!

BUILT-IN SOUND EFFECTS









sumo king wrestling
wireless head-2-head RC fighters



THE BLACK SERIES™

sumo king wrestling
wireless head-2-head RC fighters



See below for important battery information. Colors and styles may vary.

BATTERY WARNING:
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

KEEP THIS INSTRUCTION SHEET FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

1003656 (2300963)

Made in China

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


©2016 MerchSource, LLC. The Black Series and all associated logos are trademarks of MerchSource, LLC. All rights reserved.
Distributed by MerchSource, LLC, Irvine, CA 92618.
PATENT PENDING
For technical support, please visit www.merchsource.com or call 1-800-374-2744.
The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

OPERATING INSTRUCTIONS

Each wrestler requires 3 "AAA" 1.5V batteries (not included). Each remote control requires one 9V battery (not included). When changing batteries, adult supervision is required. Use alkaline batteries for best performance.

1. Carefully remove items from the package.
2. Locate the battery compartment on the inside of each wrestler, as well as each remote. To remove wrestler battery chamber, twist base counter-clockwise until loose.
3. On wrestler, loosen the screws and remove battery doors. Slide doors open on rc units.
4. Insert "AAA" batteries inside wrestlers, while observing the correct polarity in each compartment (see diagrams). Insert one 9V battery into each remote control.
5. Replace the battery doors and tighten screws.
7. Switch wrestler and remote control power switches to the "ON" position. The power switch is located on the bottom of the sumo(s).

NOTE: For best results, operate wrestlers on hard surface.

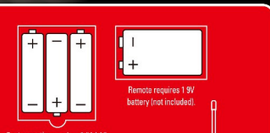

Each wrestler requires 3 "AAA" 1.5V batteries (not included).

Remote requires 1 9V battery (not included).



HOW TO PLAY

The object of the game is to knock the opposing wrestler out of the ring (or circle) by making contact with the player's body, thus thrusting the wrestler forward by sheer force.