



Mokacam
QUICK MANUAL

Hello

Congratulations on your new Mokacam camera. This Quick Start Guide will show you the basics of capturing life's most incredible moments with your Mokacam.

For more information and resources in other languages, please visit www.mokacam.com

Download the User Manual at www.mokacam.com



Mokacam
快速入門指南

歡迎使用

祝賀你獲得全新的Mokacam相機。這本快速入門指南將告訴你基本的操作，與你的Mokacam捕捉生命中最令人難以置信的時刻吧。

如需使用更多語言版本或了解更多功能，請到主頁下載電子版快速操作指導書及用戶手冊。
www.mokacam.com

下載用戶手冊請到：
www.mokacam.com



Mokacam
快速入門指南

欢迎使用

祝贺你获得全新的Mokacam相机。这本快速入门指南将告诉你基本的操作，与你的Mokacam捕捉生命中最令人难以置信的时刻吧。



如需使用更多语言版本或了解更多功能，请到主页下载电子版快速操作指导书及用户手册。
www.mokacam.com

下载用户手册请到：
www.mokacam.com

Getting Started

Step1
Remove the camera side door and insert a microSD card (included in the pack).


Step2
Charge the battery using the included USB cable.

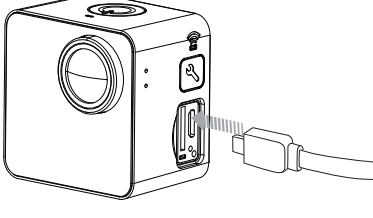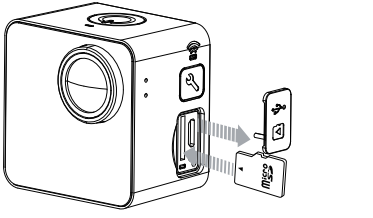

The Basics

Power/Shutter Button
Camera Status Light
Wireless Status Light
Setting Button
microSD card /USB interface



Powering Camera ON and OFF
To Power On:
Press the Power/Shutter button ().
To Power Off:
Hold the Power/Shutter button () for 3 seconds.

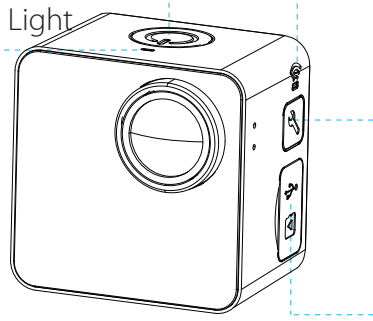

使用前準備

第一步
打開側面護蓋，把卡按圖示插入內存卡槽。


第二步
將micro USB充電線接入相機充電口。

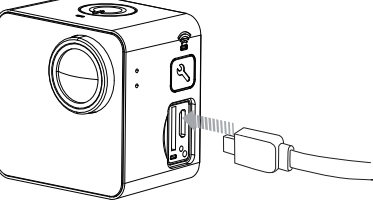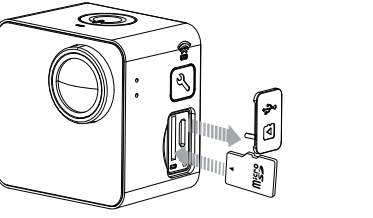

基本介紹

電源/拍攝鍵
工作指示燈
WiFi指示燈
功能設置鍵
microSD卡槽 /USB充電口



開關機
開機：
按下電源鍵()，頂部指示燈閃下藍色，然後藍燈常亮，表示開機成功。
關機：
按住電源鍵()，持續3秒鐘後，指示燈滅，表示已關機。

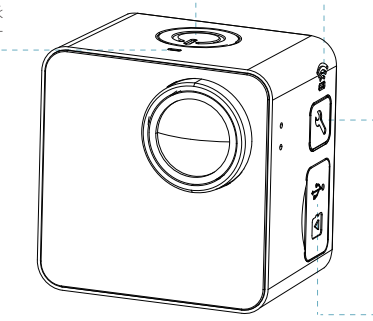

使用前准备

第一步
打开侧面护盖，把卡按图示插入内存卡槽。


第二步
将micro USB充电线接入相机充电口。

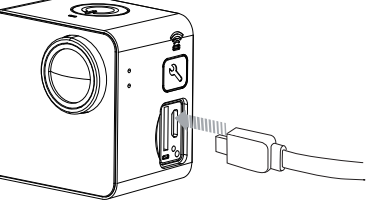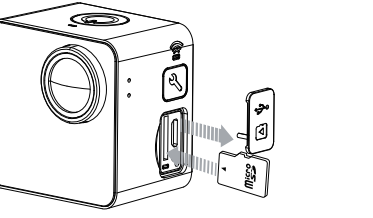

基本介绍

电源/拍摄键
工作指示灯
WiFi指示灯
功能设置键
microSD卡槽 /USB充电口


开关机
开机：
按下电源键()，顶部指示灯闪下蓝色，然后蓝灯常亮，表示开机成功。
关机：
按住电源键()，持续3秒钟后，指示灯灭，表示已关机。

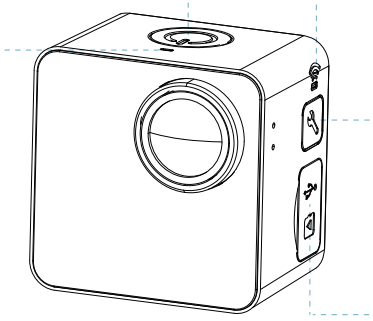

Select Photo /Video Mode

Press Setting Button () to switch between Photo/Video.

Enable Camera Wi-Fi
To WiFi On:
Hold the Setting Button () for 3 seconds.
To WiFi Off:
Hold the Setting Button () for 3 seconds.

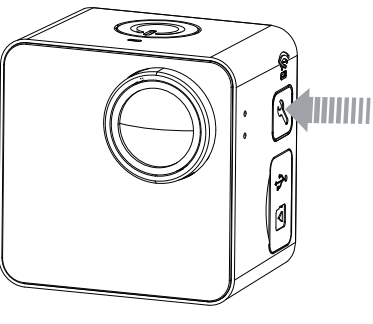

Mokacam App

The Mokacam App lets you control your camera remotely using a smartphone or tablet. See what your camera sees with live preview. View photos and play back videos, then share your favourites via Email, text, Facebook, Twitter and more.

Step1
Download the app "mokacam" from Apple App Store or Google Play.

Step2
Open the camera Wi-Fi. Press side button () to enable camera Wi-Fi.


Step3
Connect to Mokacam camera Wi-Fi (need to know the SSID). Default name is: mokacam***** Default password: 1234567890



選擇照相/錄像模式

按功能設置鍵()選擇照相/錄像模式。

使用相機WiFi
打開WiFi：
長按相機左側功能設置鍵()2秒，WiFi指示燈閃爍，如相機連接有屏幕模塊，顯示屏上將會顯示“WiFi ON”的字樣。
關閉WiFi：
長按相機左側功能設置鍵()2秒，關閉WiFi。

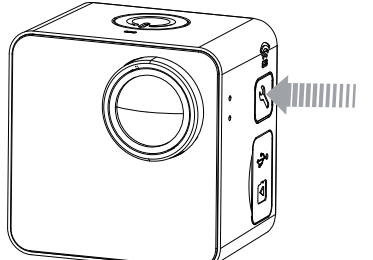

連接相機APP

Mokacam應用程序允許您使用智能手機或平板電腦遠程控制你的相機，實時觀看相機拍攝畫面。查看照片和播放視頻，然後通過電子郵件分享到你的Facebook、Twitter或者更多。

第一步
從 Apple AppStore 或 Google Play 搜索并下載安裝“Mokacam”。

第二步
長按相機功能設置鍵()2秒，打開相機WiFi。


第三步
在手機或者平板電腦上開啟WiFi搜索，搜索到相機的WiFi熱點名稱“mokacam*****”，然後點擊名稱開始連接。輸入初始密碼“1234567890”。



選擇照相/錄像模式

按功能設置鍵()選擇照相/錄像模式。

使用相機WiFi
打開WiFi：
長按相機左側功能設置鍵()2秒，WiFi指示燈閃爍，如相機連接有屏幕模塊，顯示屏上將會顯示“WiFi ON”的字樣。
關閉WiFi：
長按相機左側功能設置鍵()2秒，關閉WiFi。

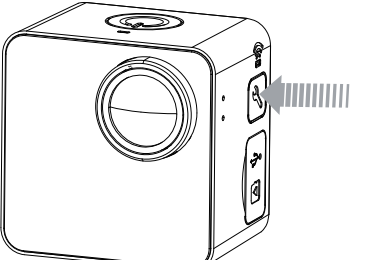

連接相機APP

Mokacam應用程序允許您使用智能手機或平板電腦遠程控制你的相機，實時觀看相機拍攝畫面。查看照片和播放視頻，然後通過電子郵件分享到你的Facebook、Twitter或者更多。

第一步
从 Apple App Store 或 Google Play 搜索并下载安装“Mokacam”。

第二步
长按相机功能设置键()2秒，打开相机WiFi。


第三步
在手机或者平板电脑上开启WiFi搜索，搜索到相机的WiFi热点名称“mokacam*****”，然后点击名称开始连接。输入初始密码“1234567890”。



Sharing Videos and Photos

Please follow the instructions on the App.

Rotatable Screen
Use a coin and open the side door, plug in the rotatable screen.

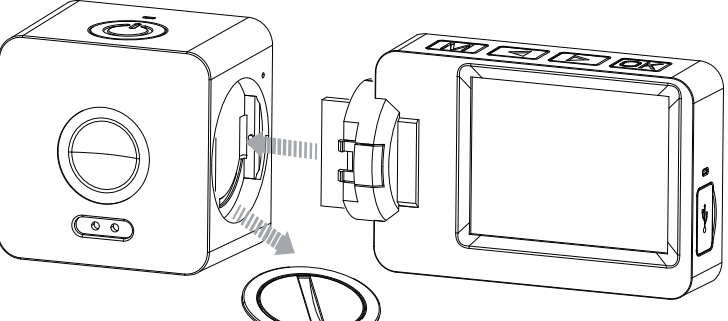


When there is a rotatable screen attached, press "M" button to change settings.

1) Time-Lapse Video
Set the camera into Video () or Photo () mode, press "M", select "Time-Lapse" using Right/Left button. Press OK to select the time interval. If the camera is in Video mode, the icon () shows on the top left. If the camera is in Photo mode, the icon () shows on the top left.

2) Slow Motion Video
Set the camera in Video () mode, press "M", select "Slow Motion" using Right/Left button. Press OK to enable/disable slow motion mode. If the camera is in Slow Motion mode, the icon () shows on the top left.


3) A-B Loop Video
Set the camera in Video () mode, press "M", select "A-B Loop" using Right/Left button. Press OK to enable/disable A-B Loop mode.

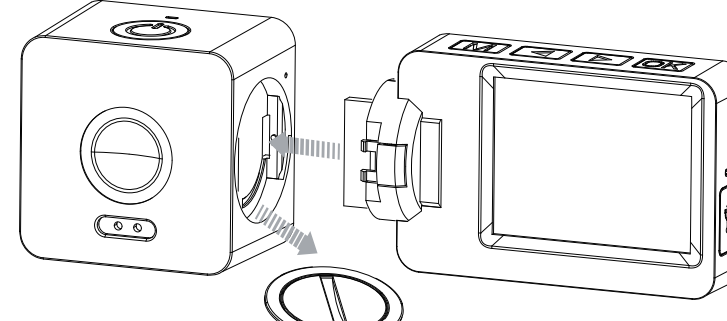

分享照片和視頻

請按APP上的提示操作。

相機外接屏幕
用一枚硬幣旋轉打開側蓋，插入可旋轉屏幕。

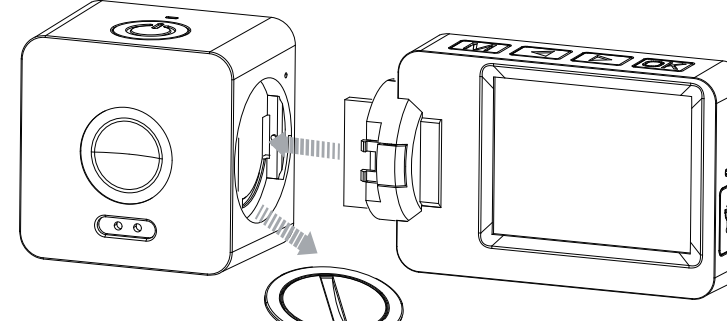


在連接外接屏幕時，可通過M鍵設置更多模式

1)縮時攝影模式
在正常錄像()或者照相模式()下，按一下M，使用上下按鍵選擇到縮時攝影。按一下OK鍵選擇關閉/1秒/3秒/5秒/10秒/30秒/1分鐘，來設定多長時間拍一段視頻或者一張照片。在錄像模式下選擇縮時錄影模式，顯示屏左上角出現()。在拍照模式下選擇縮時攝影模式，顯示屏左上角出現()。

2) 慢動作視頻模式
選擇在錄影模式()下，按一下M鍵，使用上下按鍵選擇到慢動作，按OK鍵進入選擇打開/關閉慢動作視頻拍攝模式。開啟慢動作視頻模式後，顯示屏左上角出現()。


3) 循環錄像模式
選擇在錄影模式()下，按一下M鍵，使用上下按鍵選擇到循環錄像。按OK鍵進入選擇關閉/1分鐘/3分鐘/5分鐘。視頻文件將按選定的時間段進行保存。存儲卡滿後，相機自動按選定的時間段循環覆蓋最早保存的視頻文件。

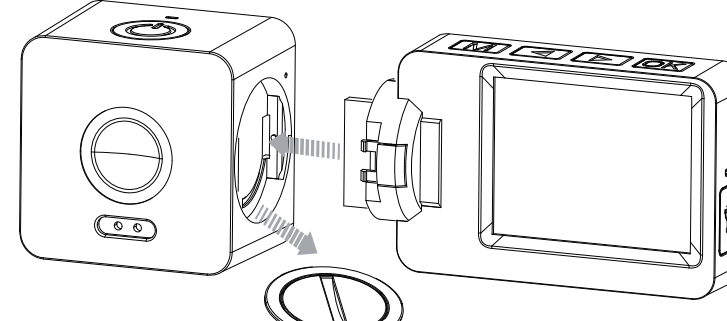

分享照片和视频

请按APP上的提示操作。

相机外接屏幕
用一枚硬币旋转打开侧盖，插入可旋转屏幕。

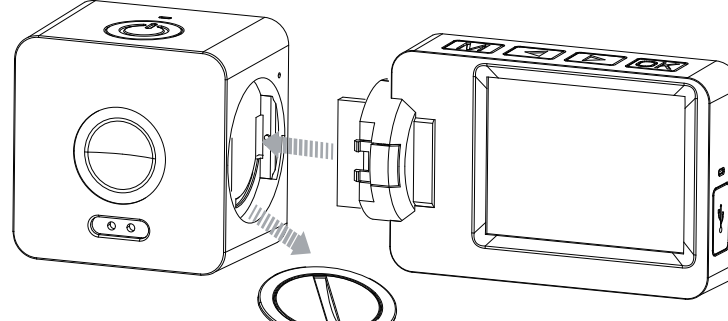


在连接外接屏幕时，可通过M键设置更多模式

1)缩时摄影模式
在正常录像()或者照相模式()下，按一下M，使用上下按鍵選擇到縮時攝影。按一下OK鍵選擇關閉/1秒/3秒/5秒/10秒/30秒/1分鐘，來設定多長時間拍一段視頻或者一張照片。在錄像模式下選擇縮時錄影模式，顯示屏左上角出現()。在照相模式下選擇縮時攝影模式，顯示屏左上角出現()。

2) 慢動作視頻模式
選擇在錄像模式()下，按一下M鍵，使用上下按鍵選擇到慢動作，按OK鍵進入選擇打開/關閉慢動作視頻拍攝模式。開啟慢動作視頻模式後，顯示屏左上角出現()。


3) 循環錄像模式
選擇在錄像模式()下，按一下M鍵，使用上下按鍵選擇到循環錄像。按OK鍵進入選擇關閉/1分鐘/3分鐘/5分鐘。視頻文件將按選定的時間段進行保存。存儲卡滿後，相機自動按選定的時間段循環覆蓋最早保存的視頻文件。

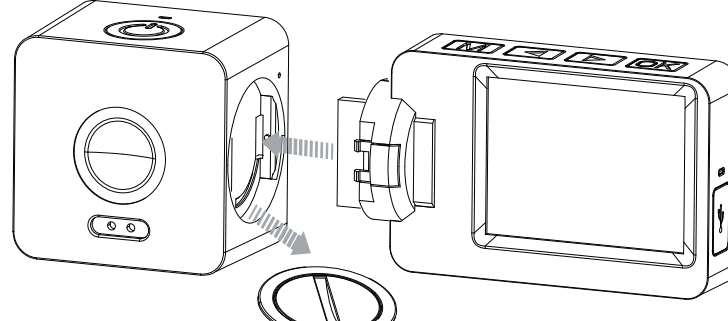

4) Photo Burst

Set the camera in Photo () mode, press "M", select "Photo Burst" using Right/Left button. Press OK to select from 3G photos/sec, 5G photos/sec, 10G photos/sec.

5) Selfie Timer
Set the camera in Photo () mode, press "M", select "Selfie Timer" using Right/Left button. Press OK to select from 2 seconds, 10 seconds. If the camera is in Selfie Timer mode, a timer will show on the screen when Power/Shutter button is pressed.

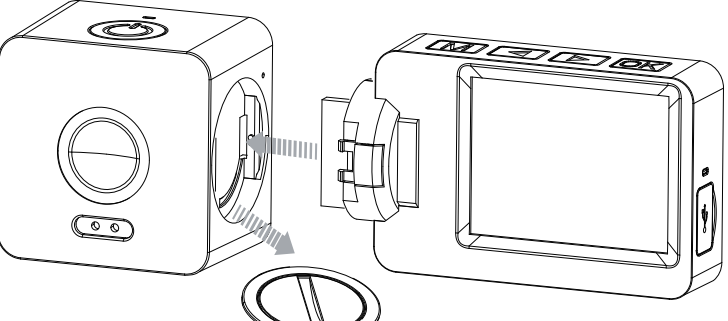


Caution

- It is normal to feel heat when using camera for a long time.
- Click RESET button to reset the camera when it's dead.
- Please only use USB charger labelled "5V/1A".
- There is a 1 year warranty for Mokacam.

Warning


- Please remove the screen module from Mokacam and put the camera into the protect case if there is any serious shock or impact. The connect port between Mokacam and screen module may be damaged under shock or impact.
- Please always secure the camera in it's waterproof case when using it in or around water. Do not get the camera or the battery wet.

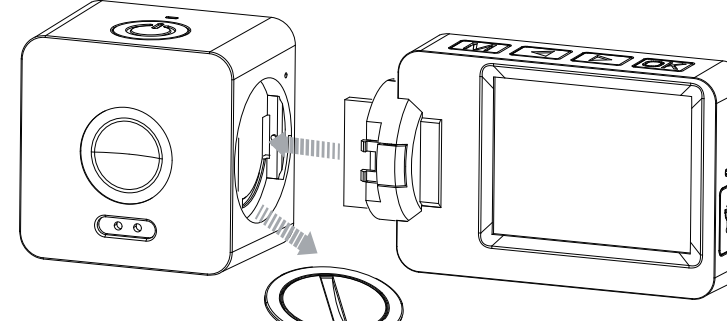

4) 連拍模式

選擇在照相模式()下，按一下M鍵，使用上下按鍵選擇到照片連拍。在連拍模式下，相機在短時間內連續拍攝多張照片，選擇包括3（3張/秒），5（5張/秒），10（10張/秒）。

5) 自拍模式
選擇在照相模式()下，按一下M鍵，使用上下按鍵選擇到自拍模式。在自拍模式下，相機將在選定自拍時間後，自動拍攝一張照片。選擇包括2秒後拍攝，10秒後拍攝。選擇自拍模式後，按下拍照鍵，屏幕會出現秒數倒計時提醒。

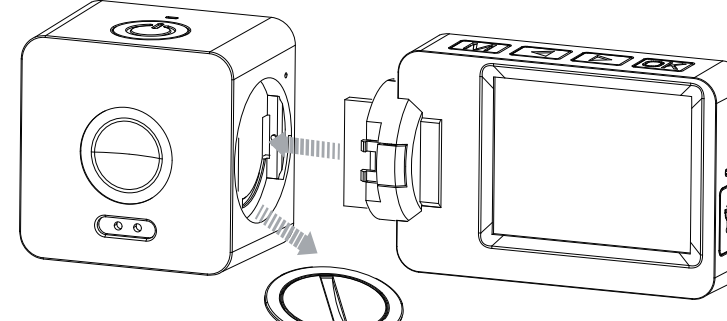


注意

- 長時間使用相機時，發熱屬於正常現象，使用過程中如發現相機過熱，請關閉相機。
- 使用過程中，如有發現死機現象，請使用尖銳的物體插入RESET孔進行復位。
- 建議使用充電器時，要使用5V/1A以上的充電器進行充電。
- 本產品保修服務一年。

警告


- 相機與屏幕模塊的連接處不可承受劇烈震動或外力衝擊，如需將相機固定在頭盔、胸前、自行車前方等處，在可能遇到劇烈震動或衝擊的場合使用時，請去除屏幕模塊，並盡量將相機裝入保護盒。否則可能會造成屏幕與相機接口的損壞。
- 在水下使用相機之前，請務必檢查確認防水盒的卡扣已扣好，因個人原因導致進水造成的相機損壞，不在保修範圍。

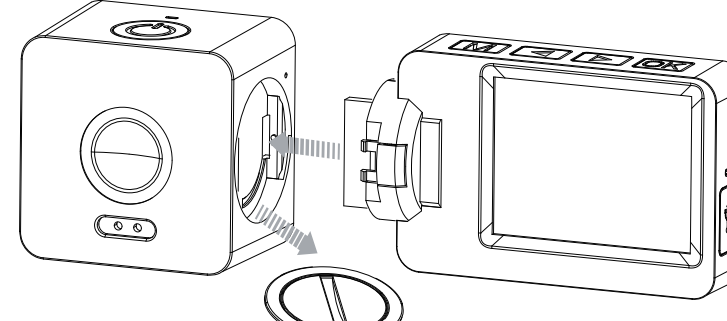

4) 連拍模式

選擇在照相模式()下，按一下M鍵，使用上下按鍵選擇到照片連拍。在連拍模式下，相機在短時間內連續拍攝多張照片，選擇包括3（3張/秒），5（5張/秒），10（10張/秒）。

5) 自拍模式
選擇在照相模式()下，按一下M鍵，使用上下按鍵選擇到自拍模式。在自拍模式下，相機將在選定自拍時間後，自動拍攝一張照片。選擇包括2秒後拍攝，10秒後拍攝。選擇自拍模式後，按下拍照鍵，屏幕會出現秒數倒計時提醒。

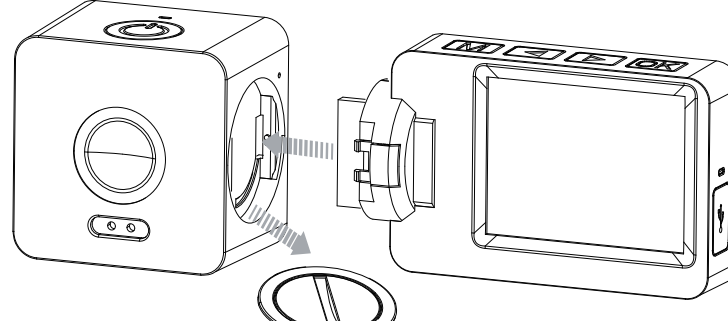


注意

- 長時間使用相機時，發熱屬於正常現象，使用過程中如發現相機過熱，請關閉相機。
- 使用過程中，如有發現死機現象，請使用尖銳的物體插入RESET孔進行復位。
- 建議使用充電器時，要使用5V/1A以上的充電器進行充電。
- 本產品保修服務一年。

警告

- 相機與屏幕模塊的連接處不可承受劇烈震動或外力衝擊，如需將相機固定在頭盔、胸前、自行車前方等處，在可能遇到劇烈震動或衝擊的場合使用時，請去除屏幕模塊，並盡量將相機裝入保護盒。否則可能會造成屏幕與相機接口的損壞。
- 在水下使用相機之前，請務必檢查確認防水盒的卡扣已扣好，因個人原因導致進水造成的相機損壞，不在保修範圍。

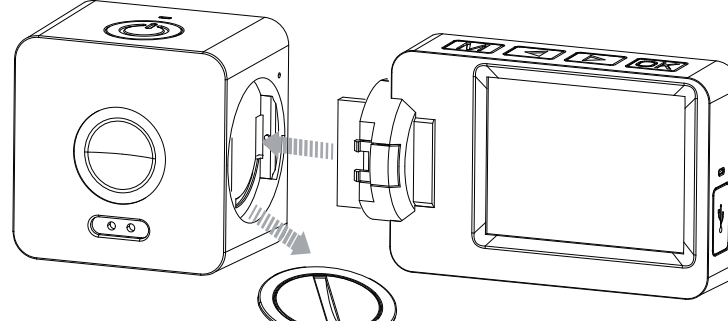

Q&A

Can not turn on Mokacam
Please make sure the camera is charged fully.

Mokacam not responding
Please click the RESET button, or you can wait the battery runs out.

Playback on PC is not smooth
If a certain video clip is ignored, might be the following reason:
1.Please change a compatible player software. Not all players support H.264 coding.
2.Please make sure your PC has the required specifications for using the "Playback mode".
3.Copy the video clips to your PC firstly and then open them.



常見問題解答

Mokacam無法開機
確保相機電池已充電。使用附帶的USB數據線和電腦為您的相機充電。
Mokacam按任意按鈕都無響應
請使用尖銳的物體插入RESET孔進行復位，也可將相機斷電或等候相機電量消耗完後重新充電、開機。
電腦回放不順暢
回放不順暢通常不是文件的原因。如果視頻片段被跳過，可能有以下原因：
• 正在使用不兼容的視頻播放器。并非所有的視頻播放器都支持H.264編解碼器，請嘗試更換視頻播放器。
• 電腦不符合高碼率回放的最低要求。視頻的分辨率和幀速率越高，對回放視頻的電腦要求就越高。請確保電腦符合“回放模式部分”的最低系統要求。
• 正在以低帶寬的USB連接播放高碼率的高清視頻文件。請先將文件傳輸至電腦，然後在電腦上回放。



常见问题解答

Mokacam无法开机
确保相机电池已充电。使用附带的USB数据线 and 电脑为您的相机充电。
Mokacam按任意按钮都无响应
请使用尖銳的物體插入RESET孔進行復位，也可將相機斷電或等候相機電量消耗完後重新充電、开机。
電腦回放不順暢
回放不順暢通常不是文件的原因。如果視頻片段被跳過，可能有以下原因：
• 正在使用不兼容的視頻播放器。并非所有的視頻播放器都支持H.264編解碼器，請嘗試更換視頻播放器。
• 電腦不符合高碼率回放的最低要求。視頻的分辨率和幀速率越高，對回放該視頻的電腦要求就越高。請確保電腦符合“回放模式部分”的最低系統要求。
• 正在以低帶寬的USB連接播放高碼率的高清視頻文件。請先將文件傳輸至電腦，然後在電腦上回放。



英文

繁中

简中

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.