
User Manual
PBT9518

(Fold Inward) – – – – ▶ **(Back Cover)** **(Front Cover)**

Using a Microphone
Note: Microphone feature may be used during any mode.

Plug the 1/4" connector of a wired microphone *(not included)* into the microphone input port on the front of the speaker. Switch the mic ON.
- Press and hold the **[⏮/ ECHO -]** and **[⏭/ ECHO +]** buttons on the front of the speaker to adjust microphone echo.
- Adjust microphone volume using the **[MIC VOL]** dial on the front of the speaker.
- Overall volume is still controlled by the **[MAIN VOL/ POWER]** dial on the speaker.

Note: In order to avoid loud feedback, keep the microphone behind the speaker and pointed away from the speaker, and switch it off when not in use.

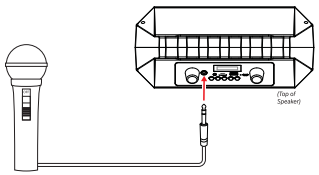

Compliance Information
FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING: Li-ion Battery Inside
This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label Definitions
⎓ Direct current symbol.

This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

FC This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information
90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:
- Visit our website at **www.southerntelecom.com**
- Click on ***Product Support***
- Select the ***Brand*** of your device
- Select ***Service Request*** and fill out the form to begin your inquiry.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license.

PLR IP Holdings, LLC does not manufacture this product or provide any manufacturer's warranty or support.

www.polaroid.com ©2020 All rights reserved

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc, used under license.

All product names, trademarks, and registered trademarks are property of their respective owners. All company, product, and service names used in this document are for identification purposes only. Use of these names, trademarks, and brands does not imply endorsement.

RECYCLE 1.800.822.8837

Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.

Designed in US
Printed in China
v1. 03-2020


Polaroid
Instruction Manual
Wireless LED Speaker
PBT9518



Before You Begin...
Customer Support
For any questions or problems with your product, please visit our website at **SouthernTelecom.com** and click on **Product Support**.

⚠Caution
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- **THIS DEVICE IS NOT A TOY**, do NOT allow children or pets to use or play with this device.
- Do not disassemble, modify, or repair the device.
- Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
- Do not submerge in water.
- Low power may cause poor Bluetooth connection or sound distortion.
- Do not overcharge battery.
- If using with a USB adapter, make sure the adapter is not damaged.
- Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.


In the Box
- PBT9518 - **Wireless Speaker** (x1)
- USB Charging Cable (x1)
- User Manual (x1)

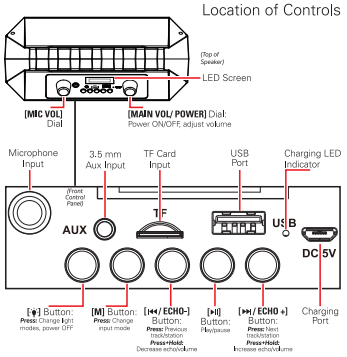Location of Controls


Getting Started
Charging the Speaker
Plug the small connector of the supplied USB charging cable into the charging port on the front of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** *(not included)* and plug into an electrical outlet.

The charging LED indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF
- Turn the **[MAIN VOL/ POWER]** dial clockwise until it clicks to power ON. A voice will be heard, and the speaker will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.
- Turn the **[MAIN VOL/ POWER]** dial counter-clockwise until it clicks to power OFF.



Adjusting Volume
In all modes, overall volume can be adjusted with the **[MAIN VOL/ POWER]** dial on the front of the speaker.

In AUX and Bluetooth modes, volume can also be controlled by your connected device.

Changing Input Modes
Press the **[M]** button on the front of the speaker to switch input modes.

Using the Lights
Press the **[⏯]** button on the speaker to change light modes and power OFF.

Bluetooth Pairing
1. Power the speaker ON. A voice will be heard and the speaker will enter Bluetooth pairing mode. The LED screen will **flash "bLUE."**
2. Set your mobile device to search for Bluetooth devices. When the list appears, select **PBT9518** from the found devices.
3. After a successful pairing, a voice will be heard and the LED screen will **solidly display "bLUE."**

In Bluetooth mode, playback and volume can be adjusted by the controls on the front of the speaker, or by the controls on your paired device.
- Press the **[⏯]** button to pause and resume playback.
- Press the **[⏮/ECHO -]** and **[⏭/ECHO +]** buttons to skip tracks.

Using the 3.5 mm AUX Input
Insert one connector of a 3.5 mm auxiliary cable *(not included)* into the 3.5 mm auxiliary input port on the front of the speaker. Insert the other connector into the headphone jack or 3.5 mm aux output port on your media-playing device.

Switch input modes until you reach AUX mode. The LED screen will display the word "AUX".

In AUX mode, all playback will be controlled by your connected device.

Note: For best power transfer, ensure cable is firmly connected to both devices.

TF Card Input
Insert a TF card into the TF card input port on the speaker with the metal contacts facing down. Push in until it clicks.

Note: You must have a TF card inserted to switch to TF input mode.

Change input modes until you enter TF card mode. The speaker will automatically begin playing music off the device.

In TF card mode, control playback with the controls on the speaker.
- Press the **[⏯]** button to pause and resume playback.
- Press the **[⏭/ ECHO +]** and **[⏮/ ECHO -]** buttons to skip tracks.

Using the FM Radio
Change input modes until you enter FM radio mode. The LED screen will display the current FM radio frequency.

In FM radio mode, playback will be controlled by the buttons on the front of the speaker.
- Press the **[⏯]** button to start or stop scanning and saving available radio stations. The LED screen will show the scanning progress. If it is not stopped, the radio will make a complete scan and save of all nearby radio stations.
- Press the **[⏭/ ECHO +]** and **[⏮/ ECHO -]** buttons to skip through saved stations.

Using the USB Port
To charge or power a device, insert the USB connector of your device's USB cable *(not included)* into the USB Port on the speaker's control panel.

To play audio, plug in a USB drive containing audio files. The speaker will begin playing the audio automatically.