


Power NVNT n20 5745MHz Ant2

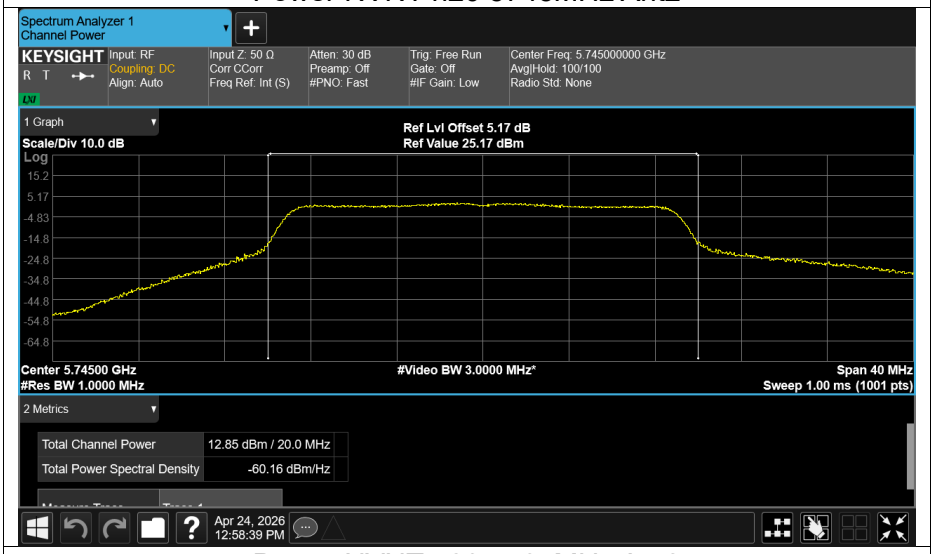


Power NVNT n20 5785MHz Ant2

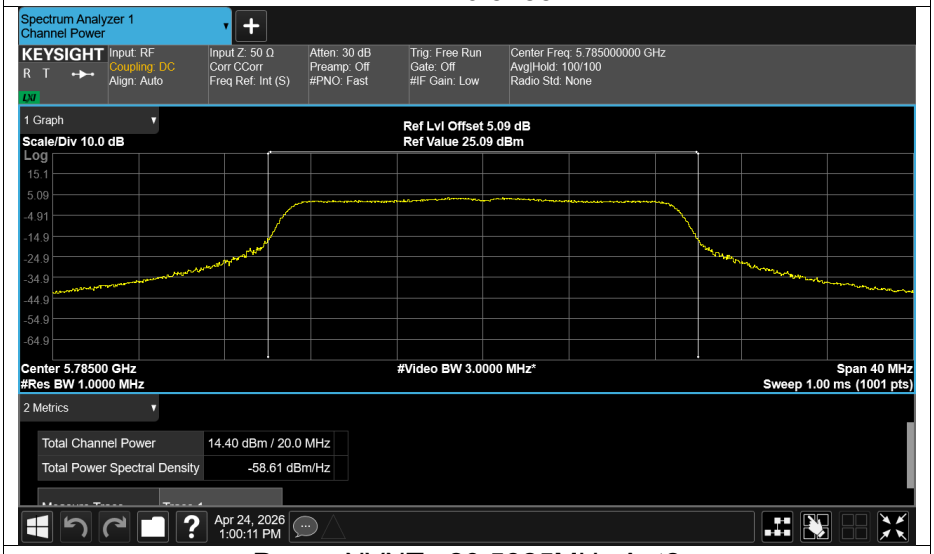


Power NVNT n20 5825MHz Ant2

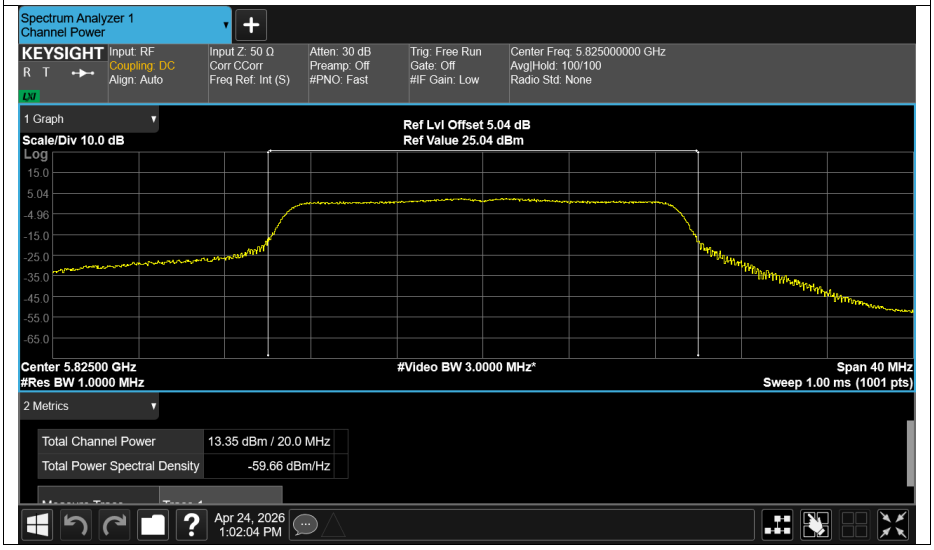


Power NVNT n20 5180MHz Ant1

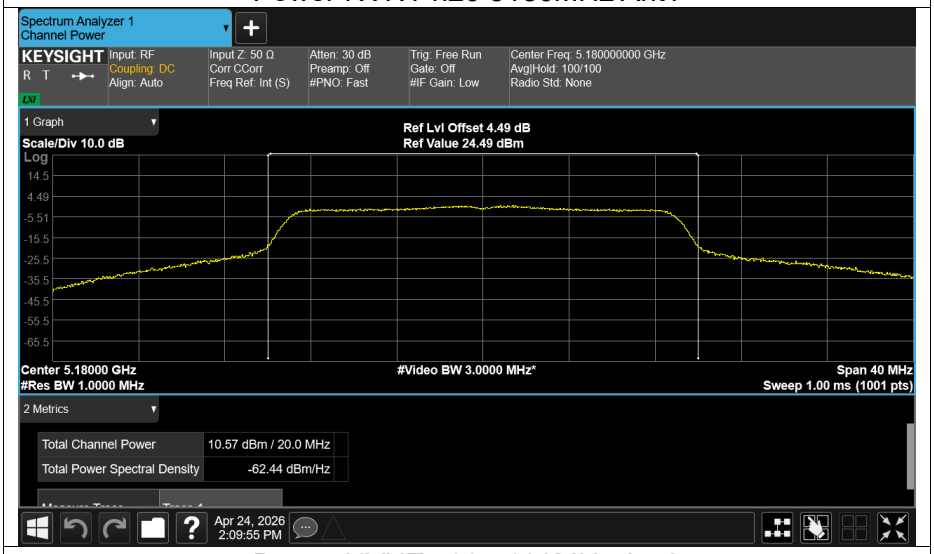


Power NVNT n20 5180MHz Ant2

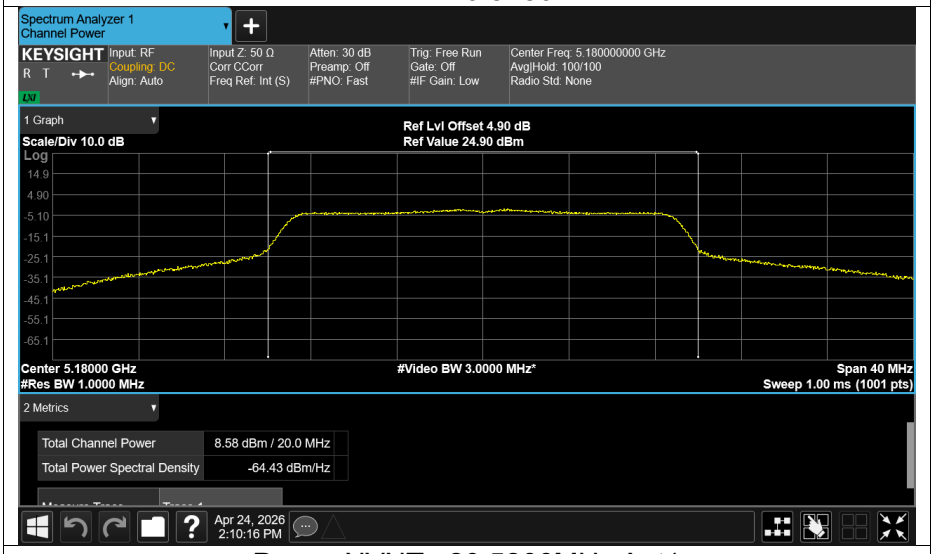


Power NVNT n20 5200MHz Ant1

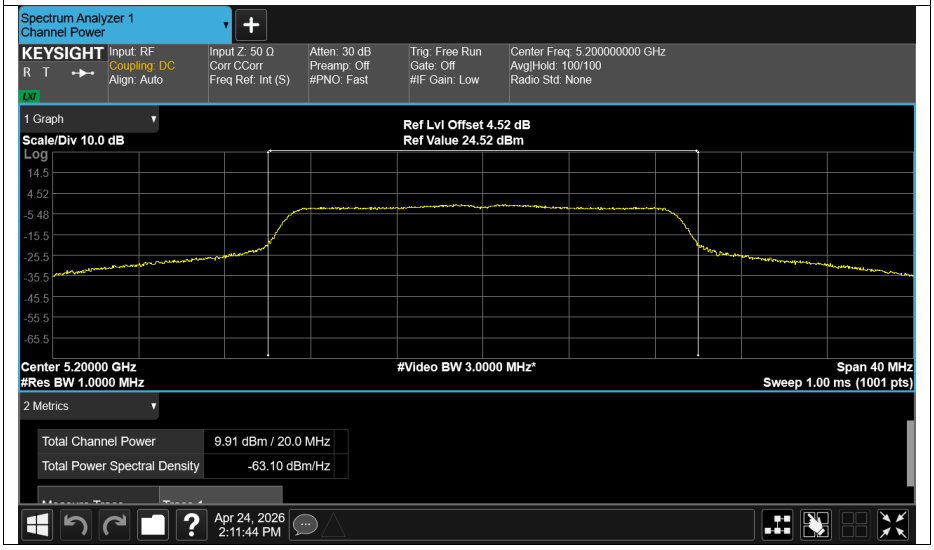


Power NVNT n20 5200MHz Ant2

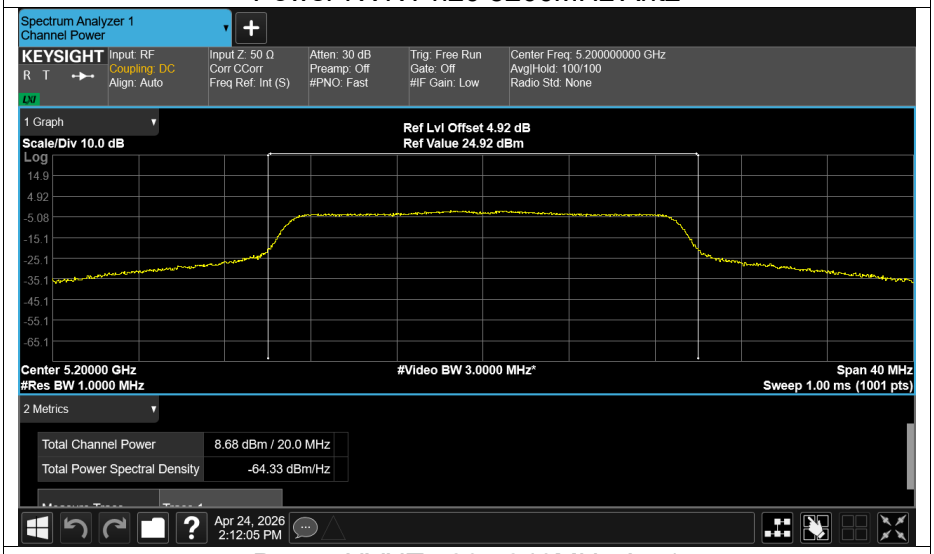


Power NVNT n20 5240MHz Ant1

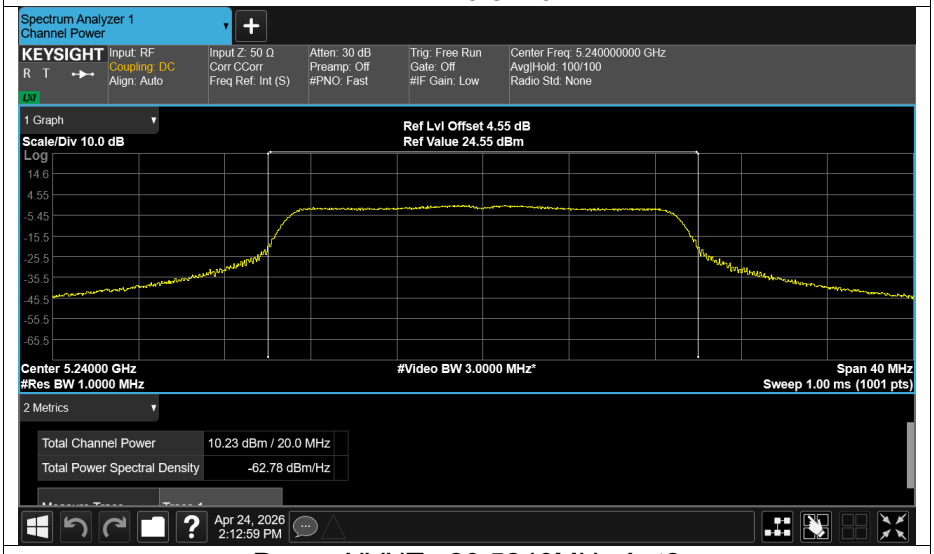


Power NVNT n20 5240MHz Ant2

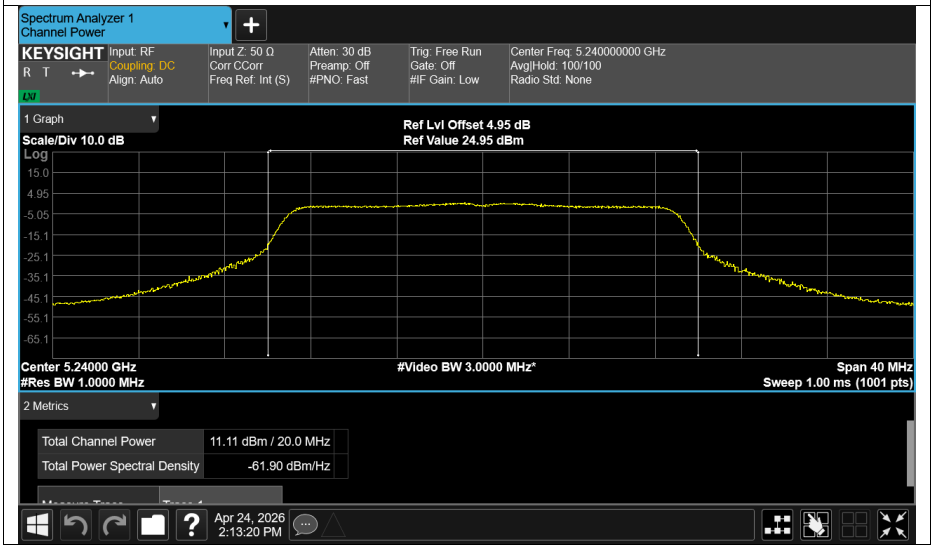


Power NVNT n20 5260MHz Ant1

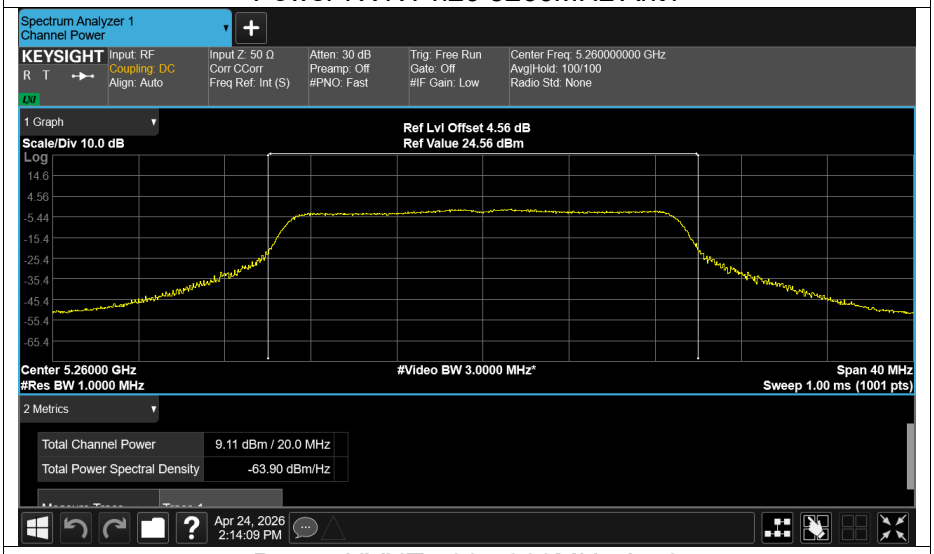


Power NVNT n20 5260MHz Ant2

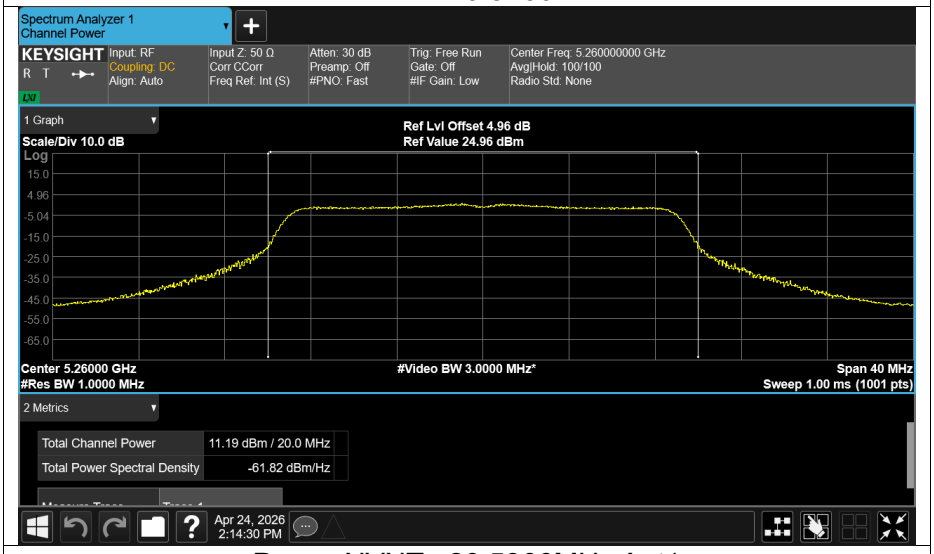


Power NVNT n20 5300MHz Ant1

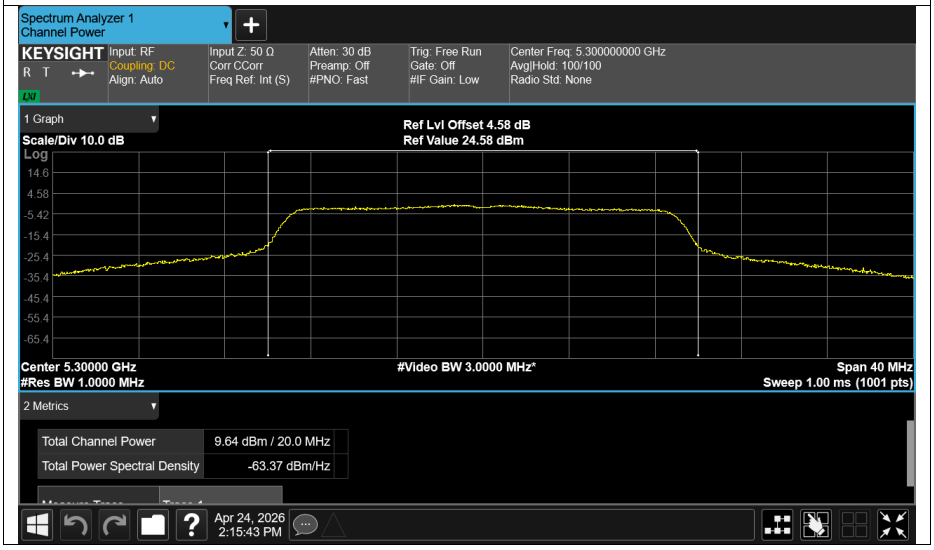


Power NVNT n20 5300MHz Ant2

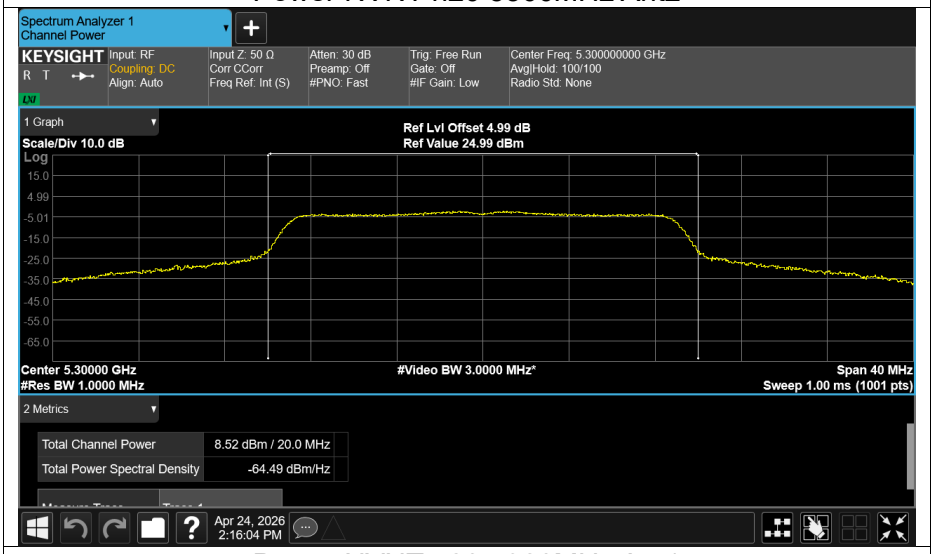


Power NVNT n20 5320MHz Ant1

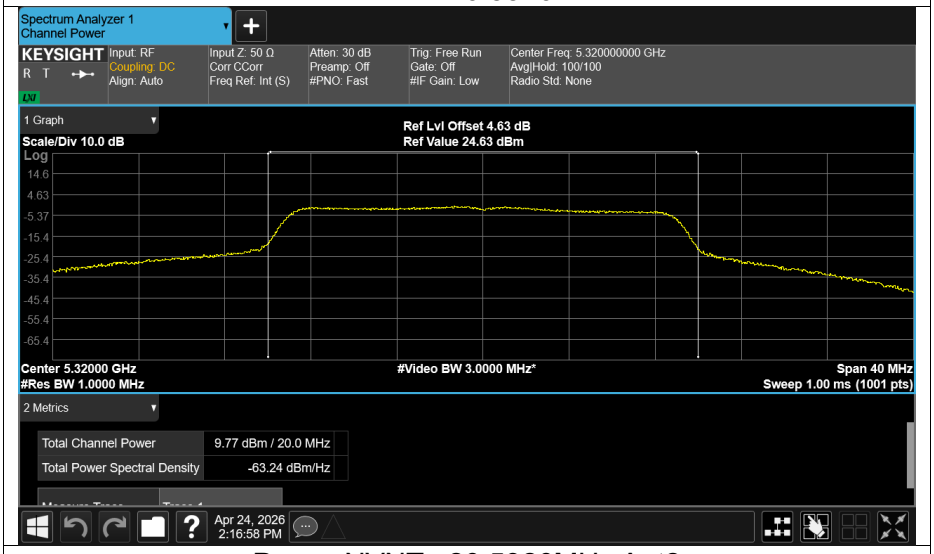


Power NVNT n20 5320MHz Ant2

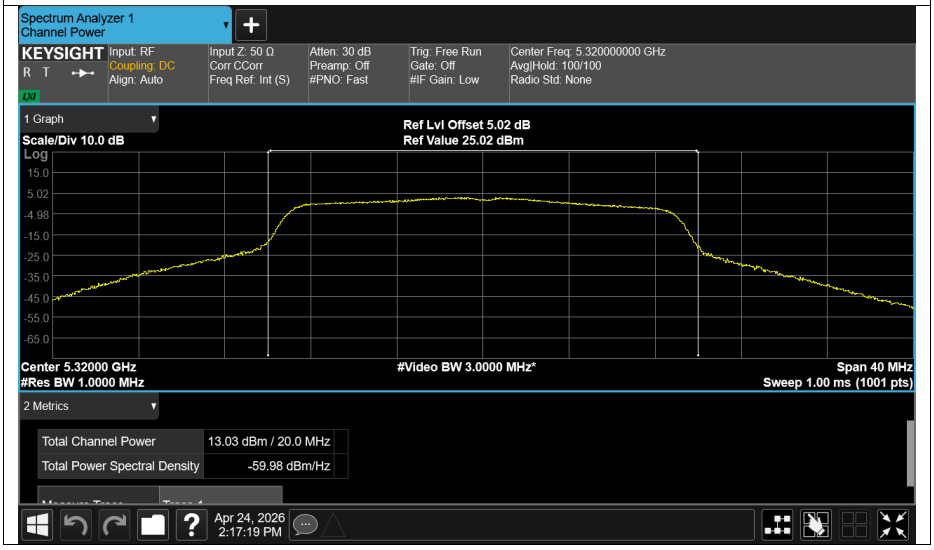


Power NVNT n20 5500MHz Ant1

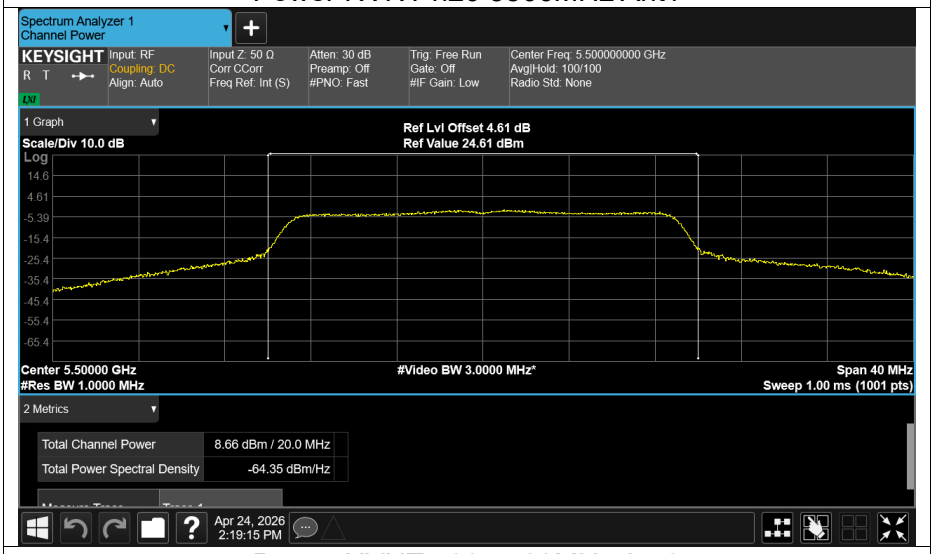


Power NVNT n20 5500MHz Ant2

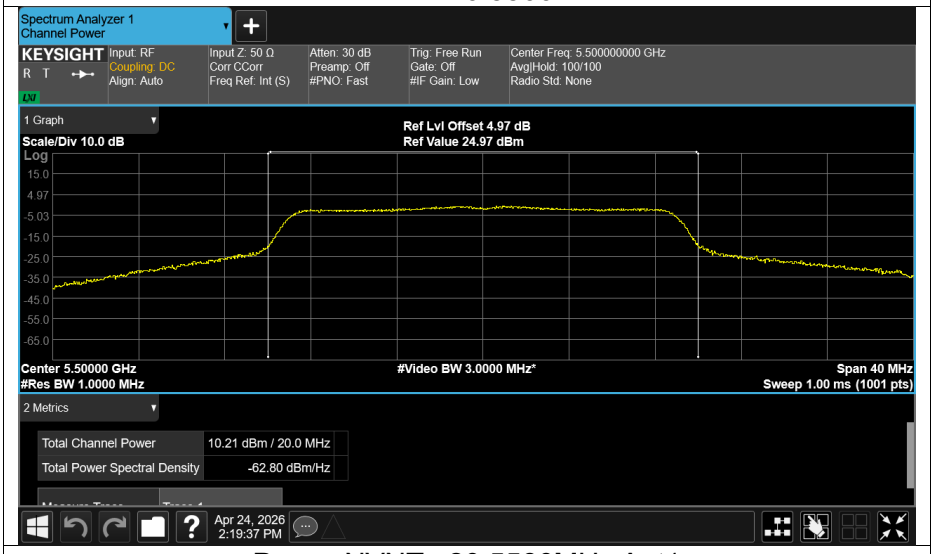


Power NVNT n20 5580MHz Ant1

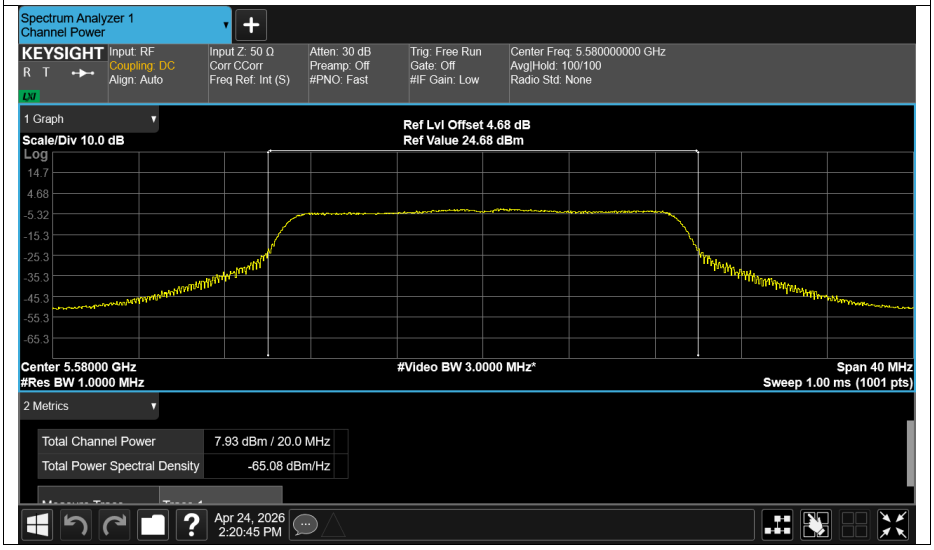


Power NVNT n20 5580MHz Ant2

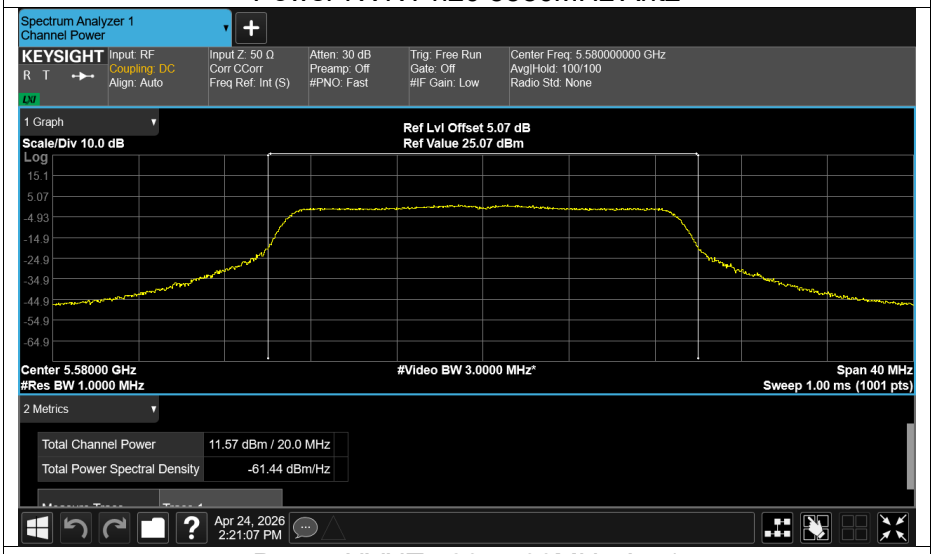


Power NVNT n20 5700MHz Ant1

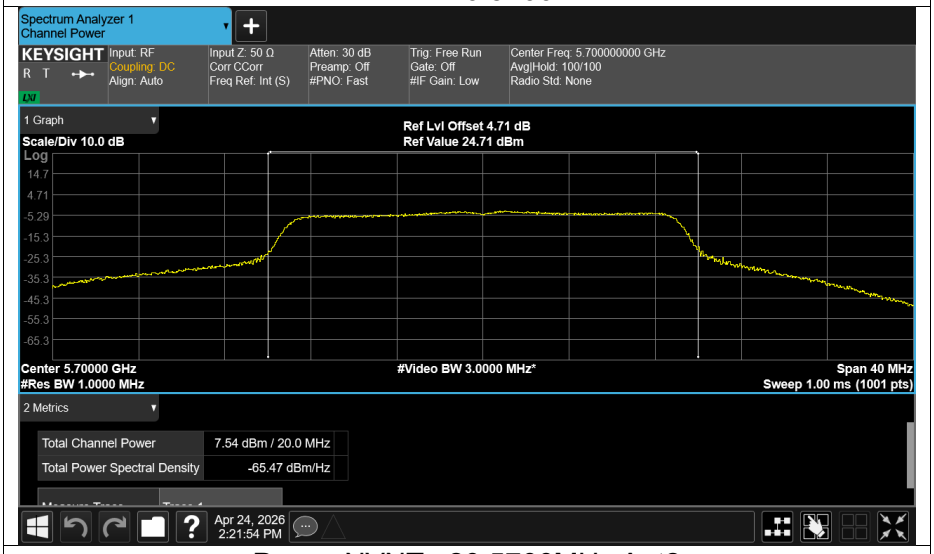


Power NVNT n20 5700MHz Ant2

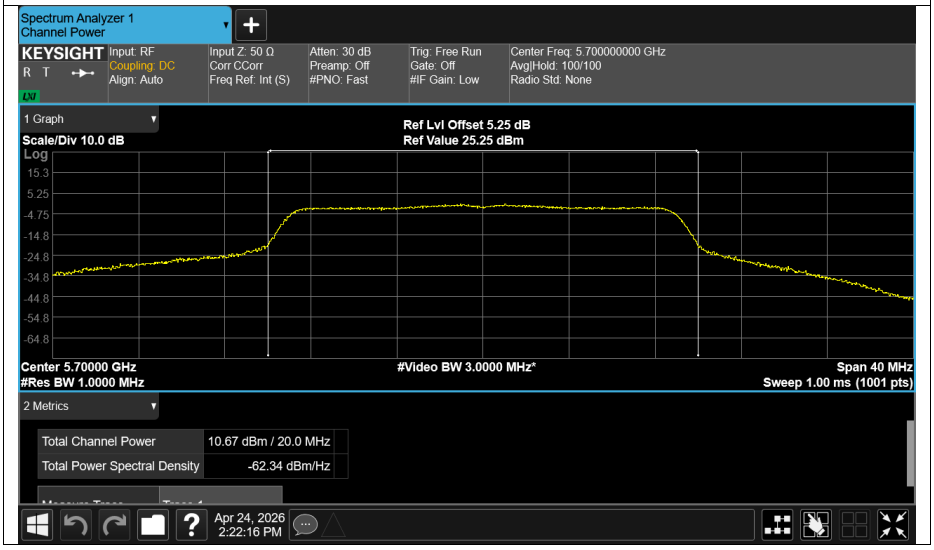


Power NVNT n20 5745MHz Ant1

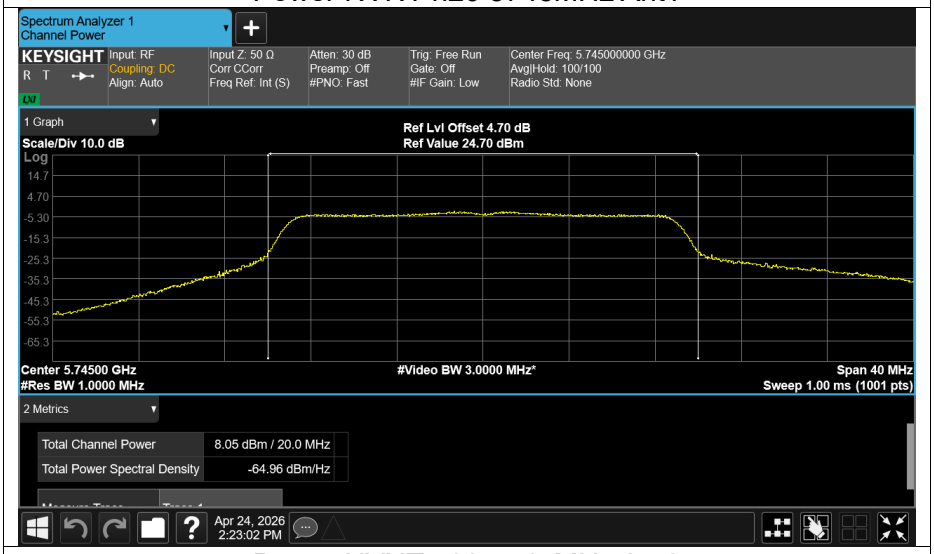


Power NVNT n20 5745MHz Ant2

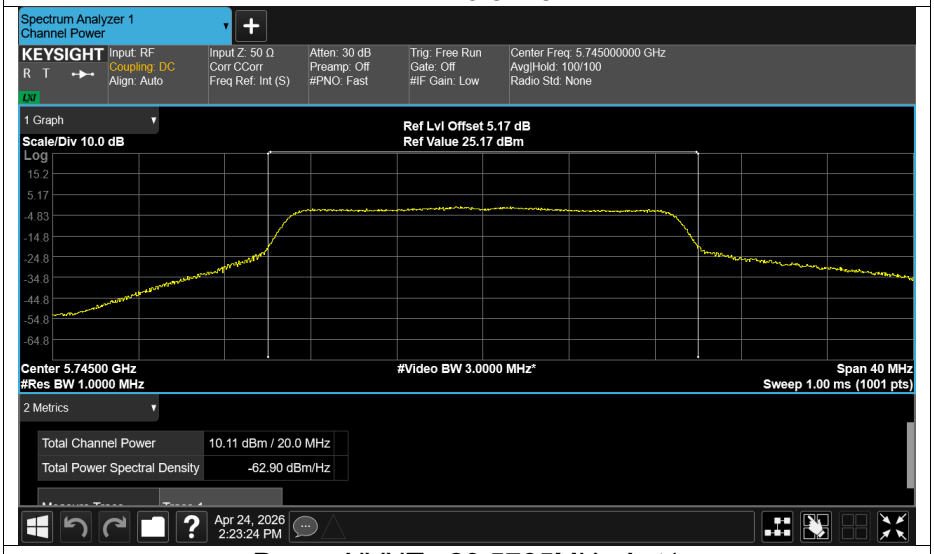


Power NVNT n20 5785MHz Ant1

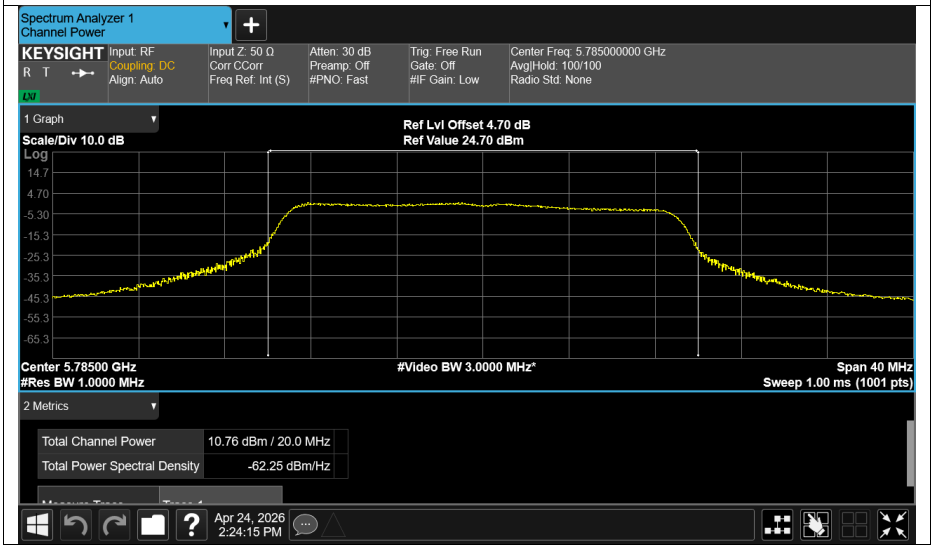


Power NVNT n20 5785MHz Ant2

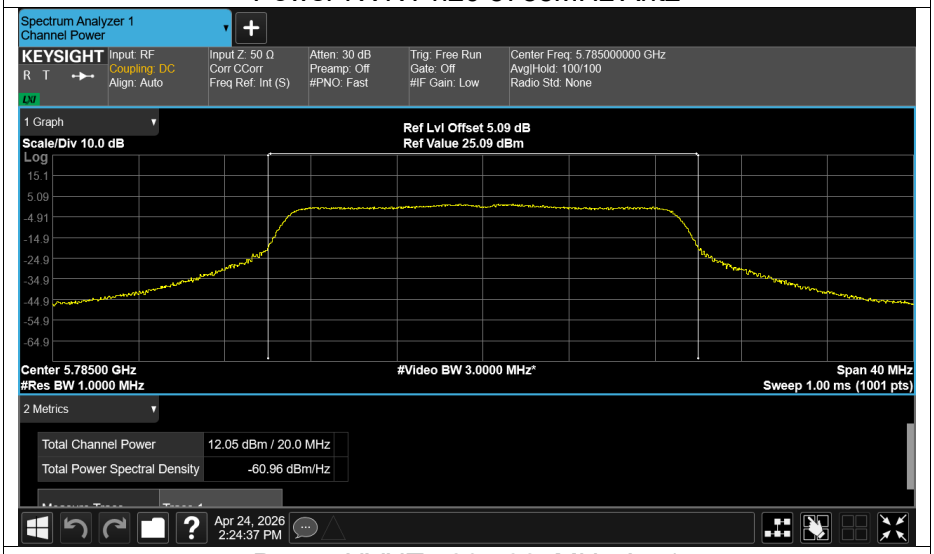


Power NVNT n20 5825MHz Ant1

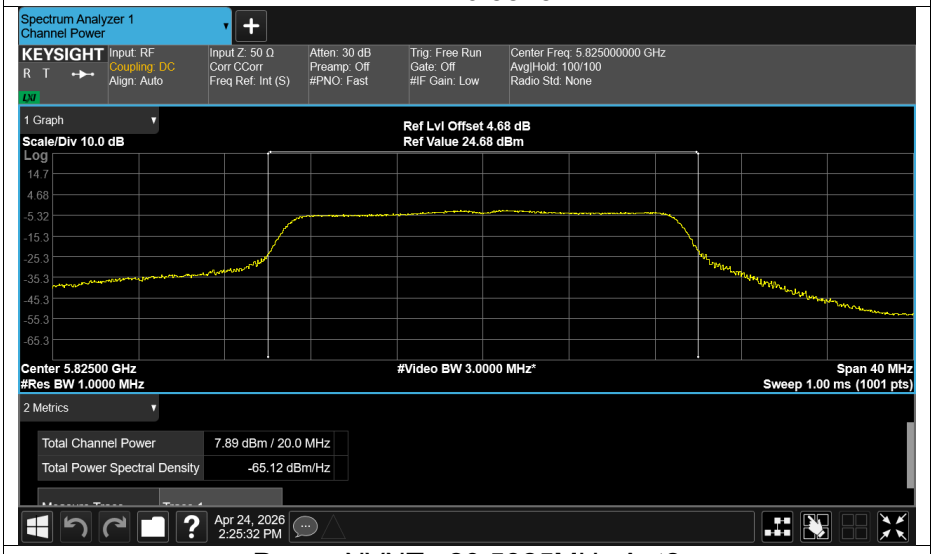


Power NVNT n20 5825MHz Ant2

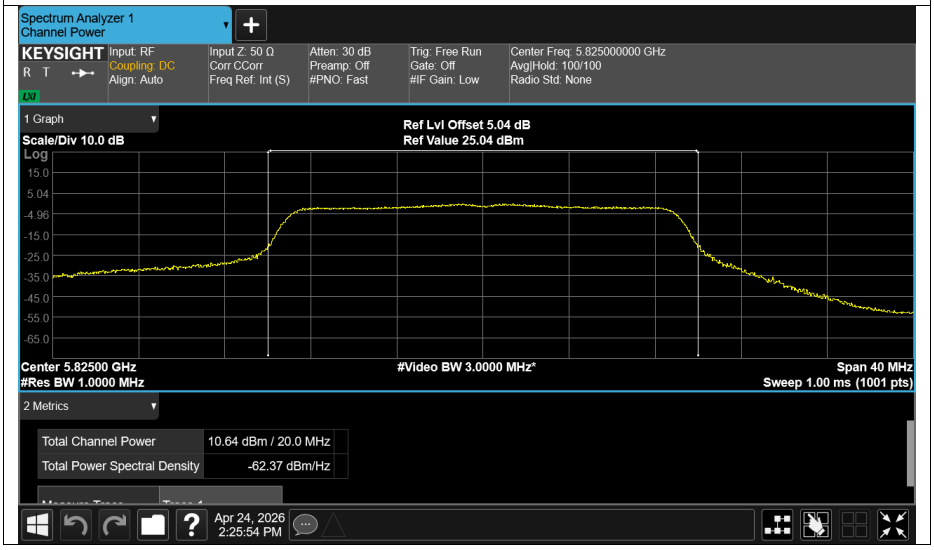


Power NVNT n40 5190MHz Ant1

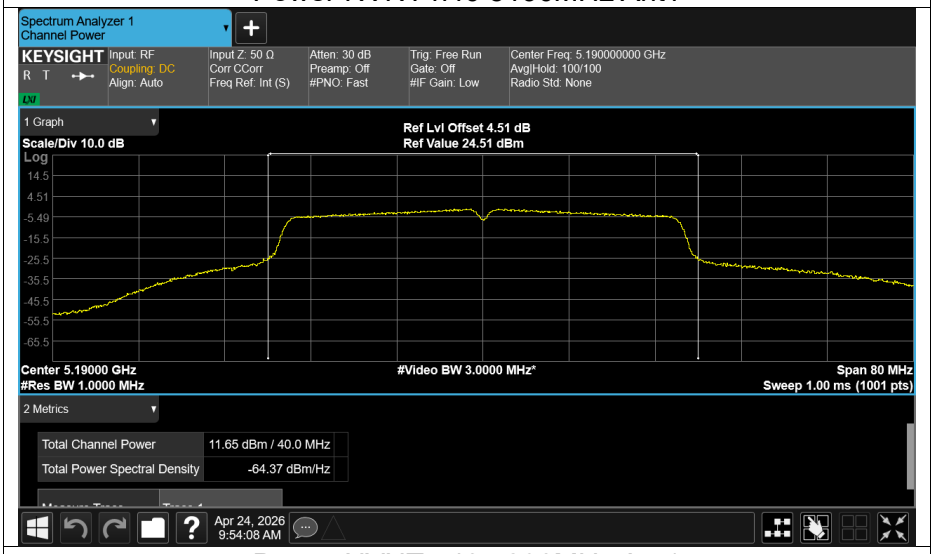


Power NVNT n40 5230MHz Ant1

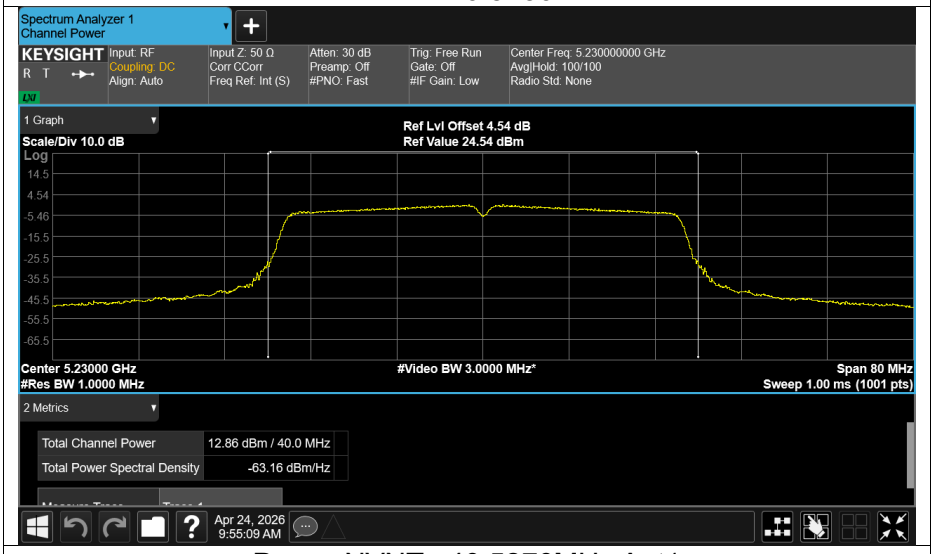


Power NVNT n40 5270MHz Ant1

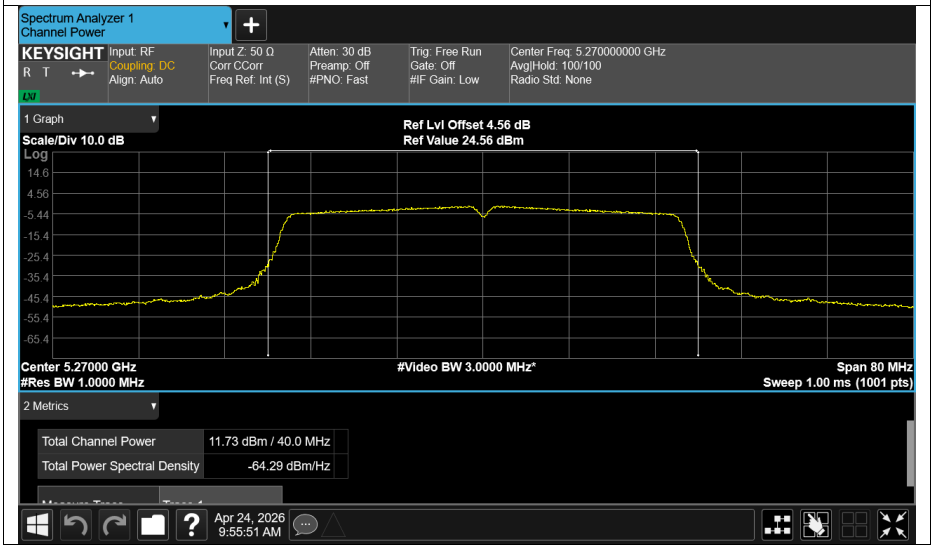


Power NVNT n40 5310MHz Ant1

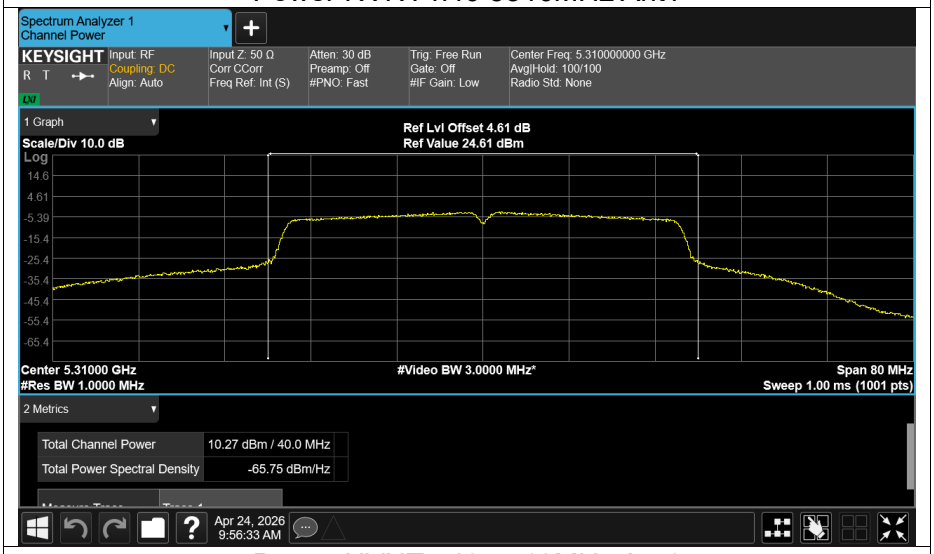


Power NVNT n40 5510MHz Ant1

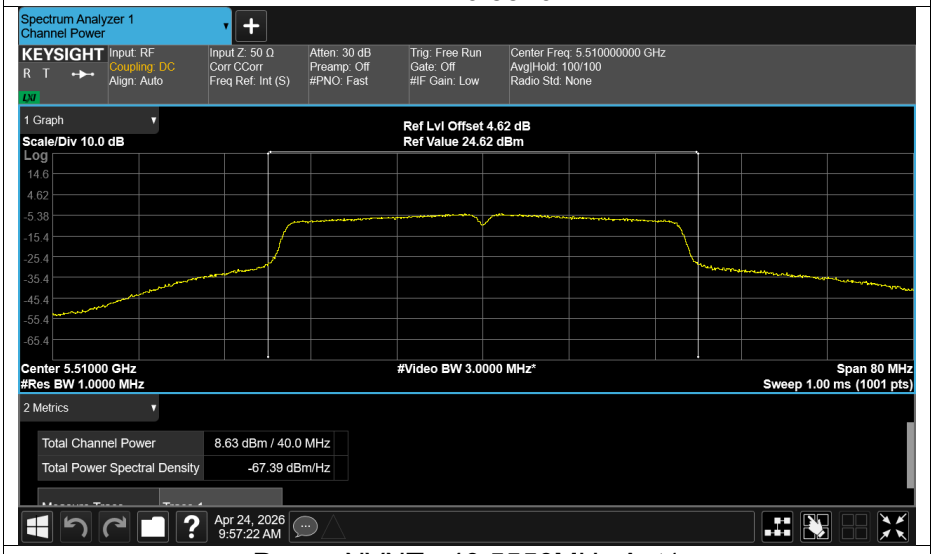


Power NVNT n40 5550MHz Ant1

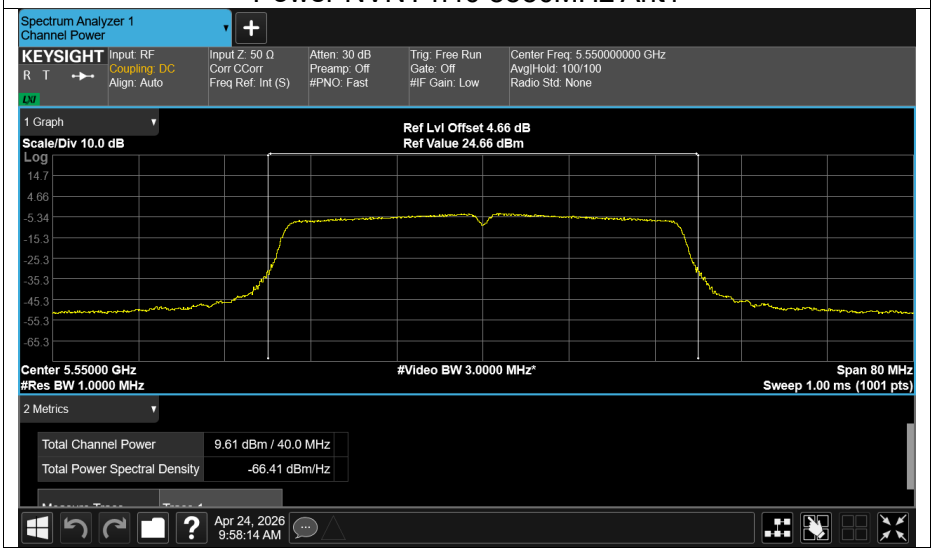


Power NVNT n40 5670MHz Ant1

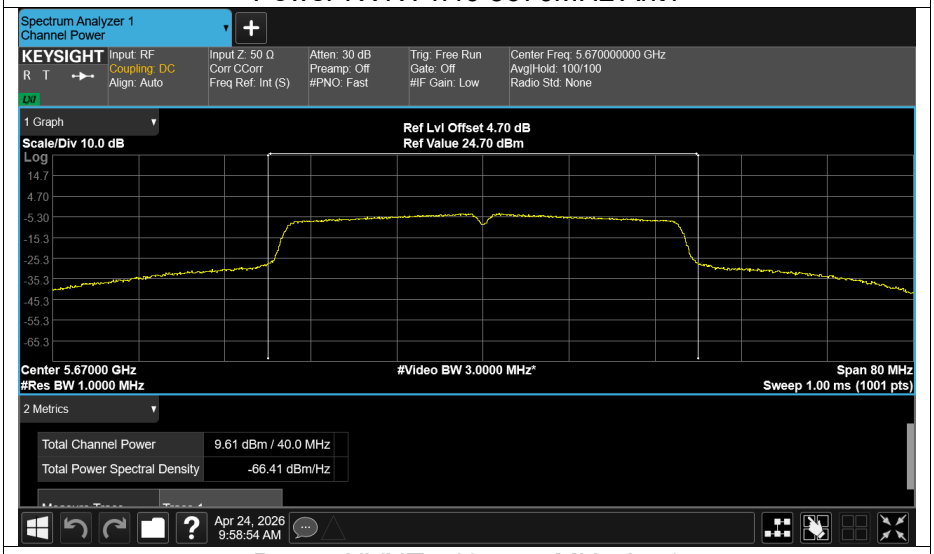


Power NVNT n40 5755MHz Ant1

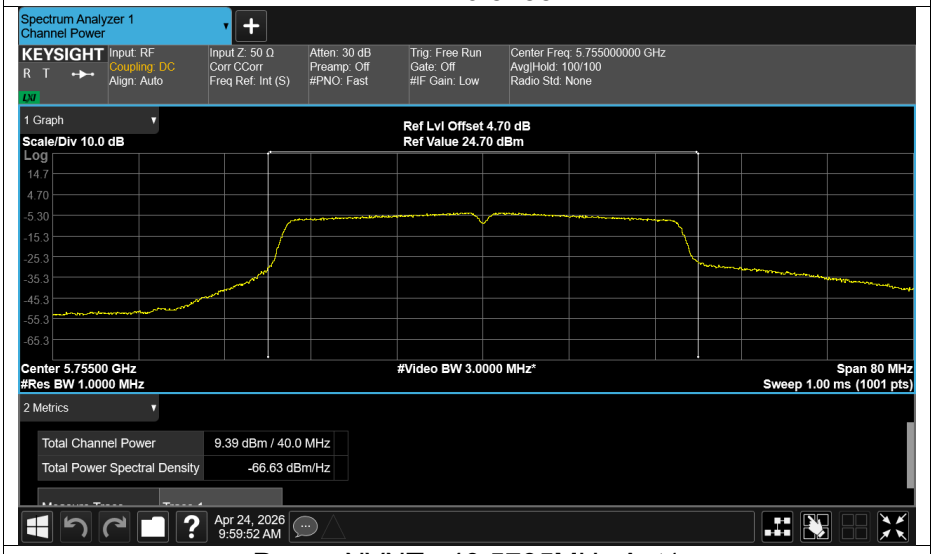


Power NVNT n40 5795MHz Ant1

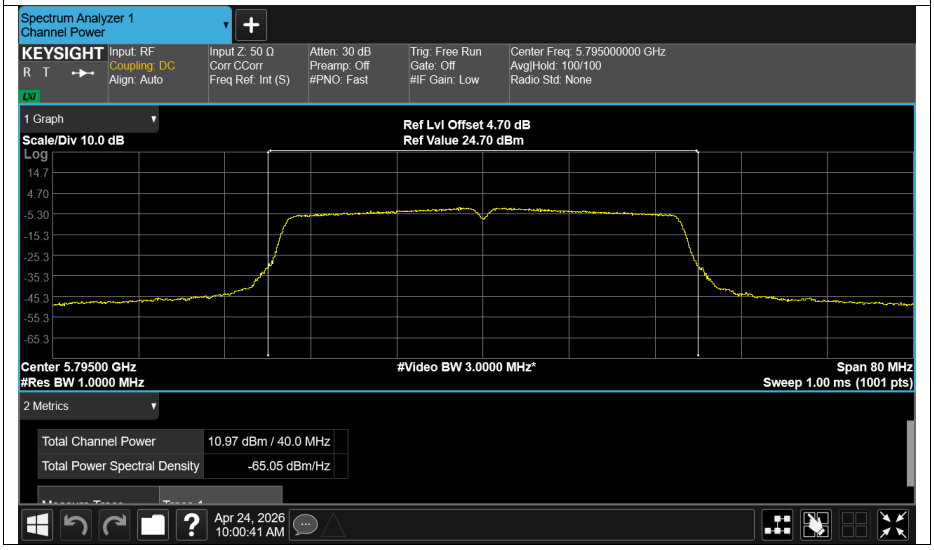


Power NVNT n40 5190MHz Ant2

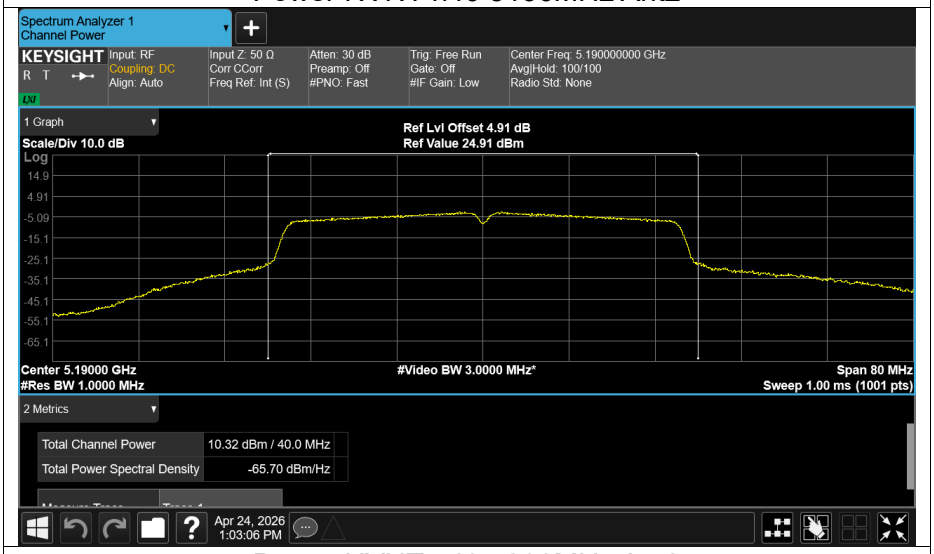


Power NVNT n40 5230MHz Ant2

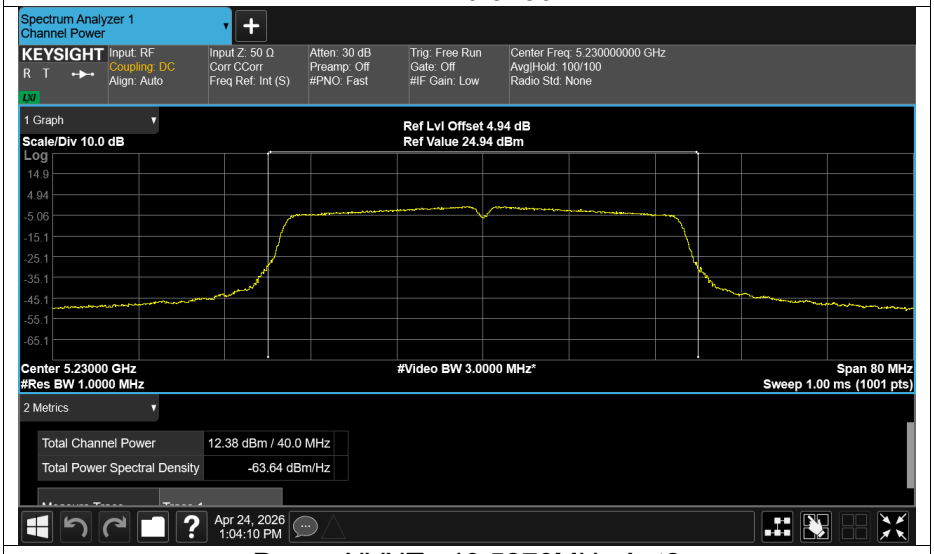


Power NVNT n40 5270MHz Ant2

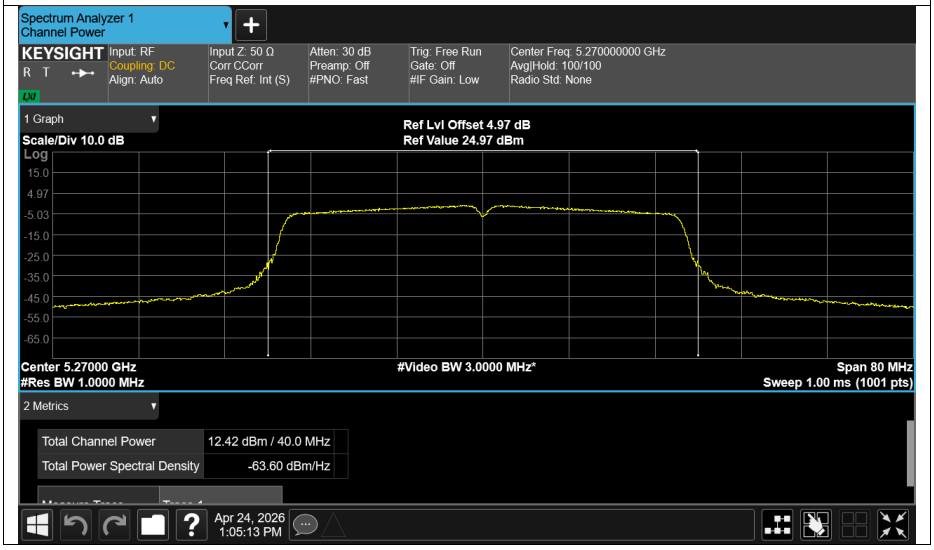


Power NVNT n40 5310MHz Ant2

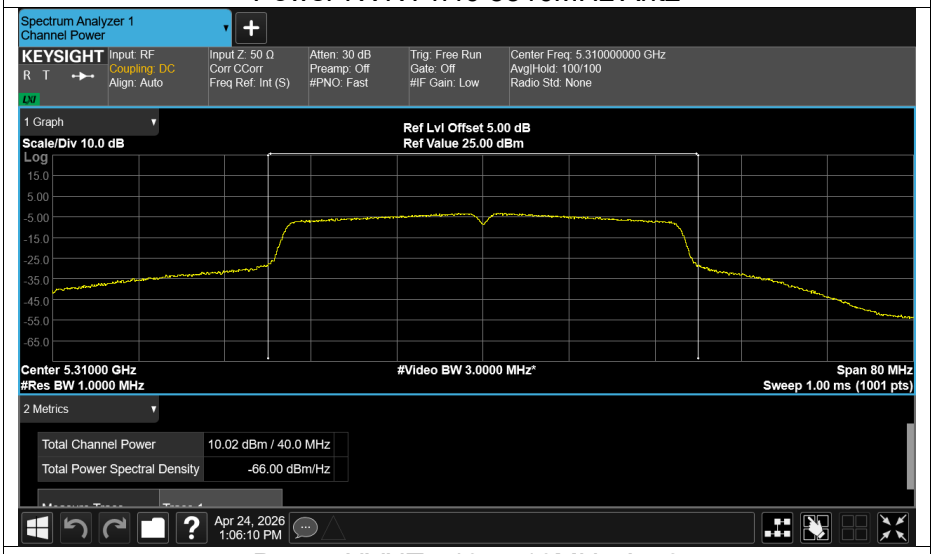


Power NVNT n40 5510MHz Ant2

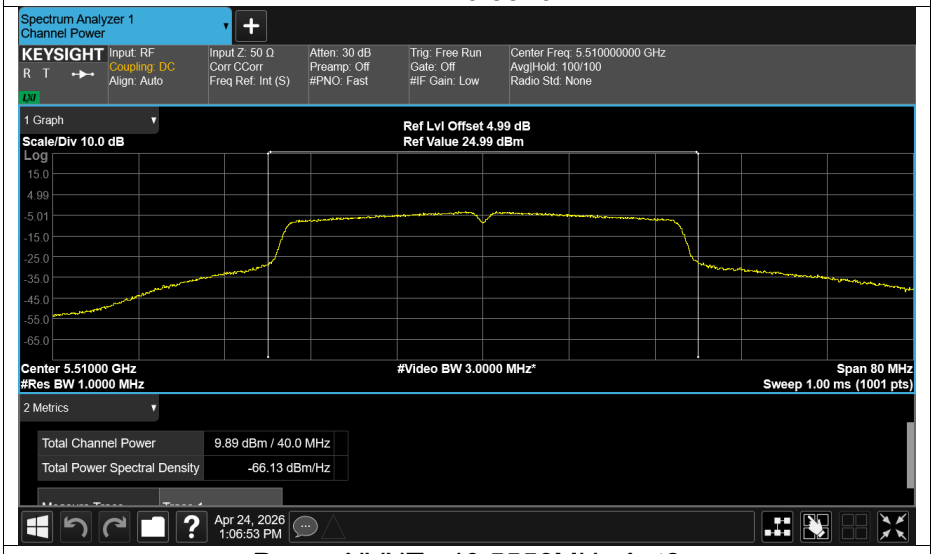


Power NVNT n40 5550MHz Ant2

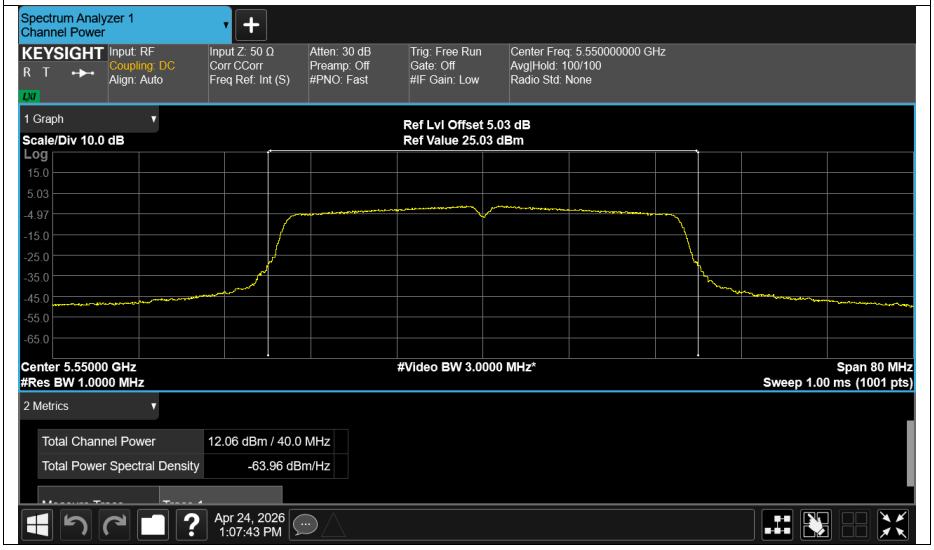


Power NVNT n40 5670MHz Ant2

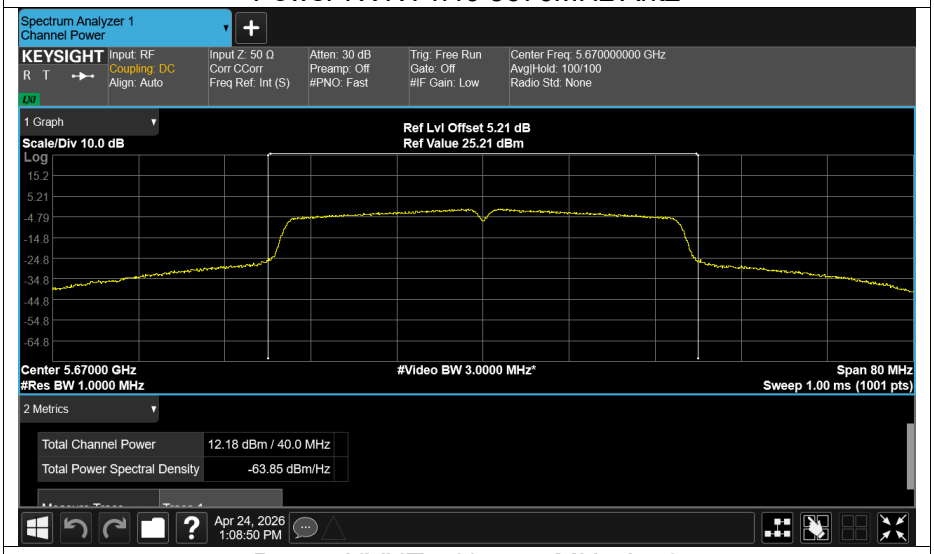


Power NVNT n40 5755MHz Ant2

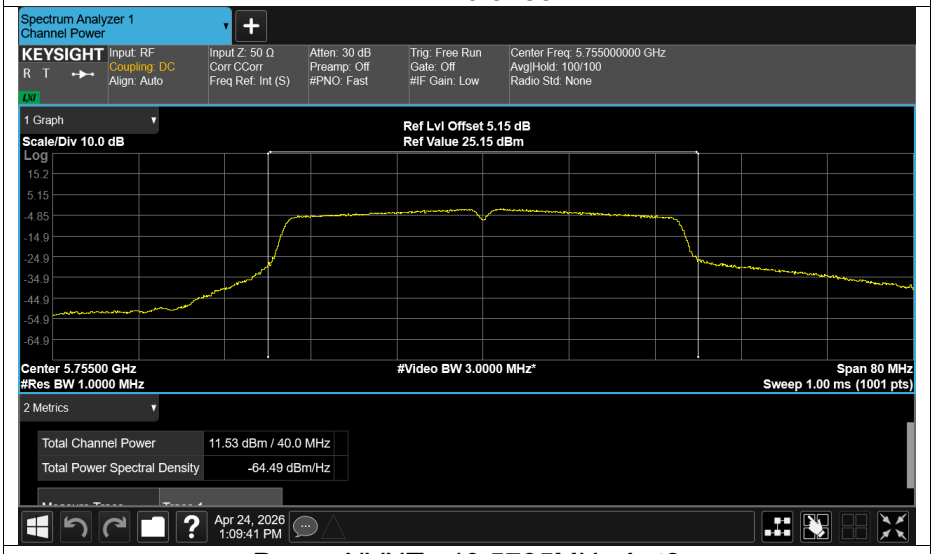


Power NVNT n40 5795MHz Ant2

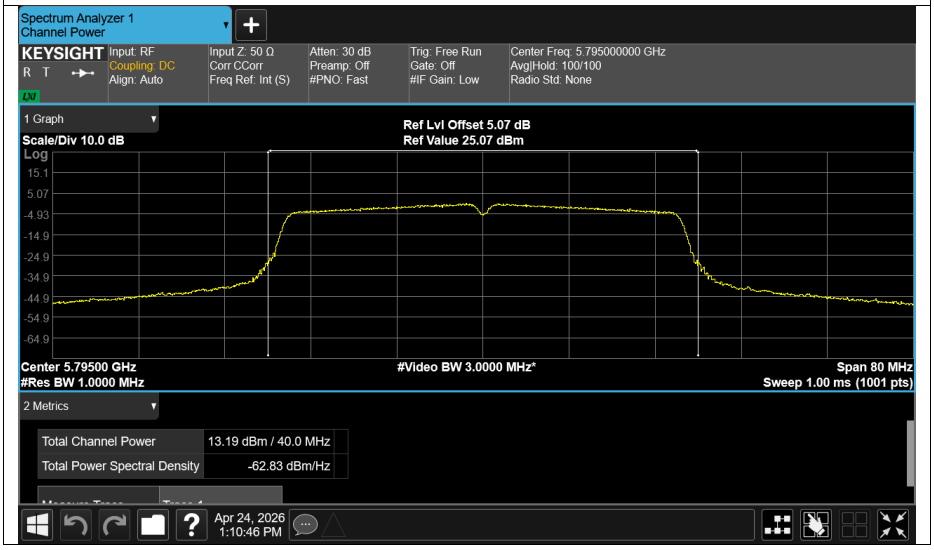


Power NVNT n40 5190MHz Ant1

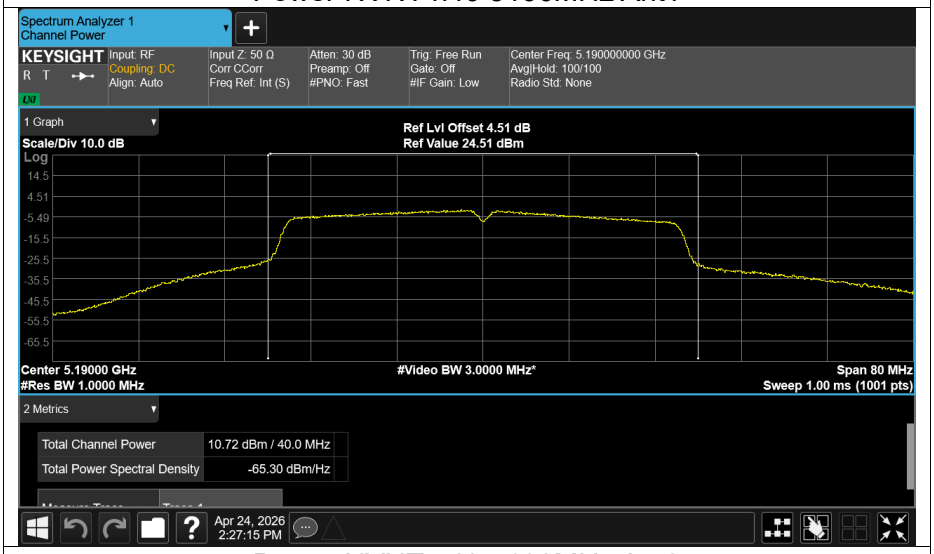


Power NVNT n40 5190MHz Ant2

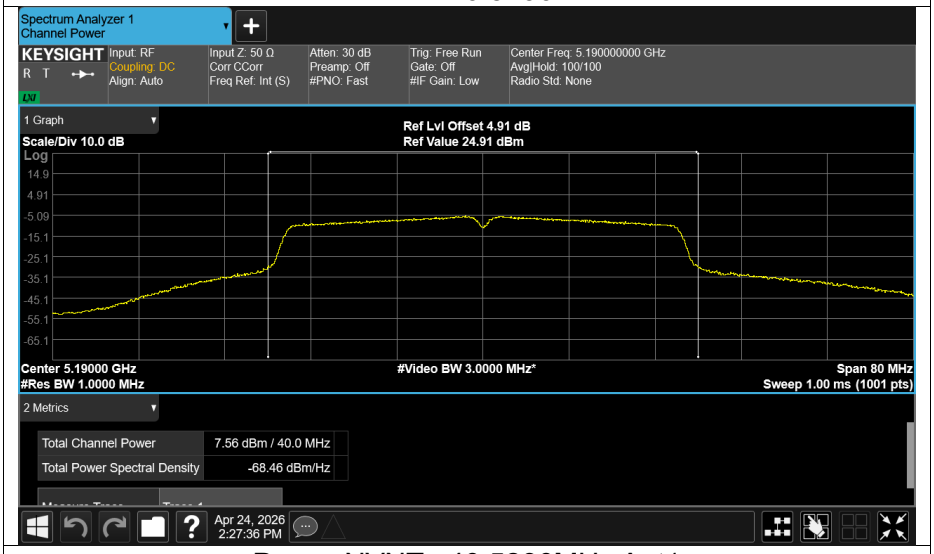


Power NVNT n40 5230MHz Ant1

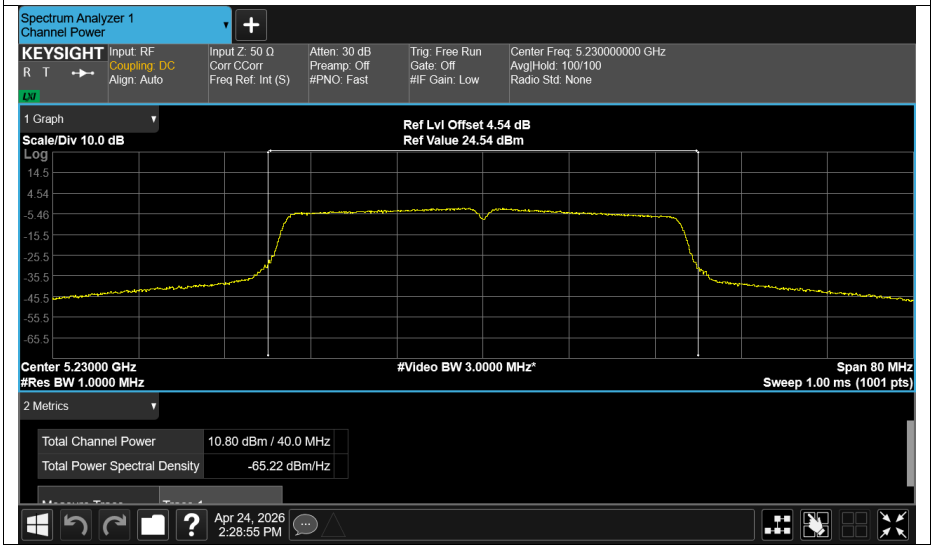


Power NVNT n40 5230MHz Ant2

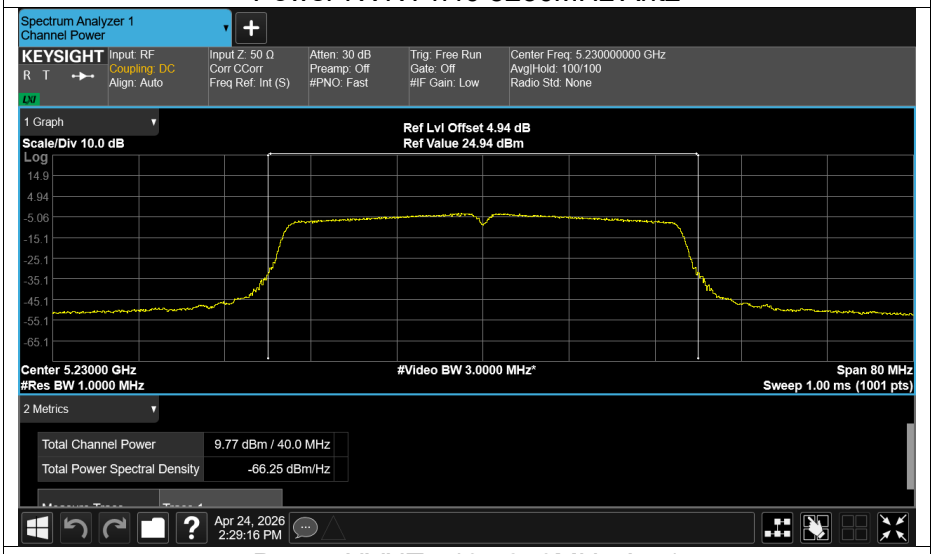


Power NVNT n40 5270MHz Ant1

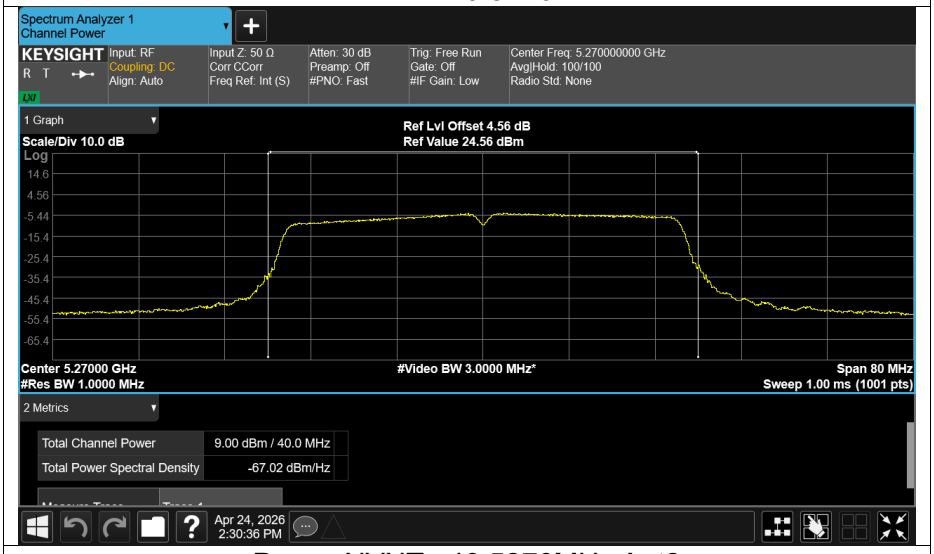


Power NVNT n40 5270MHz Ant2

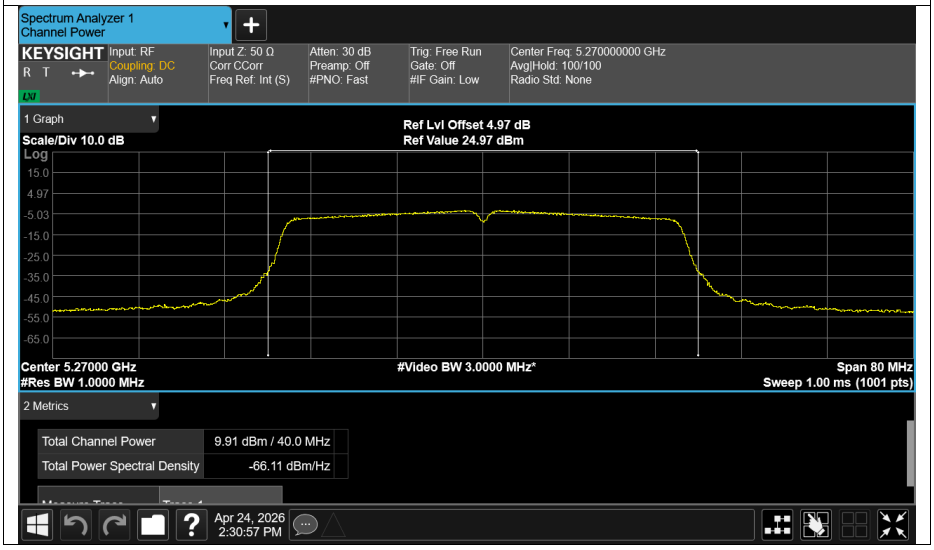


Power NVNT n40 5310MHz Ant1

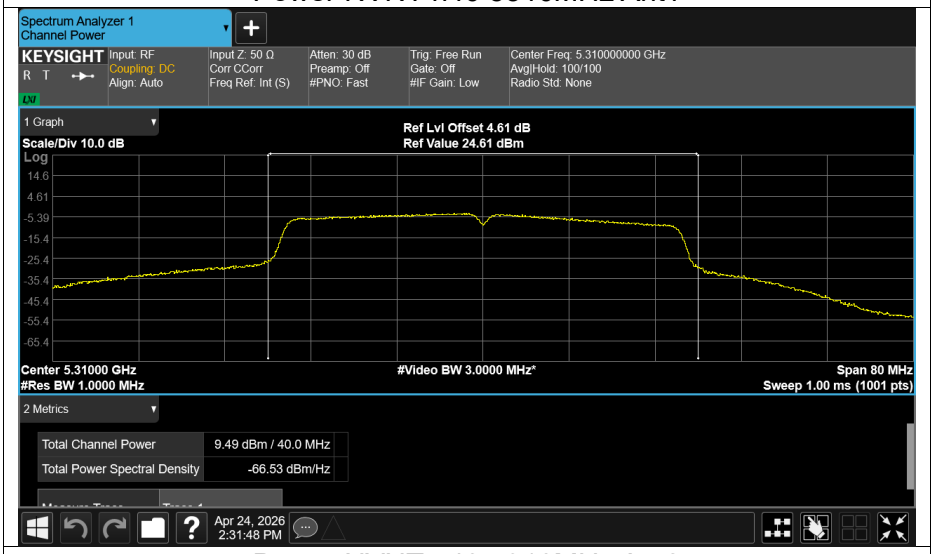


Power NVNT n40 5310MHz Ant2

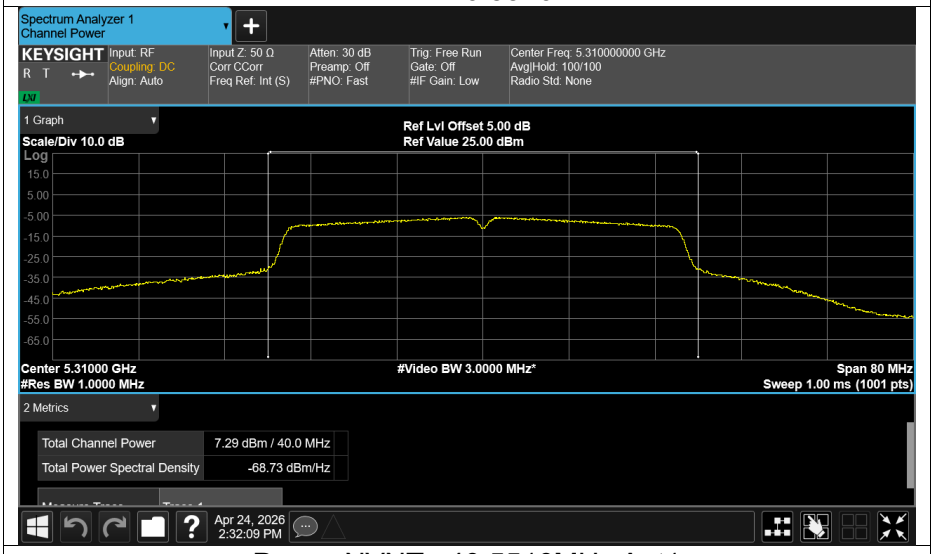


Power NVNT n40 5510MHz Ant1

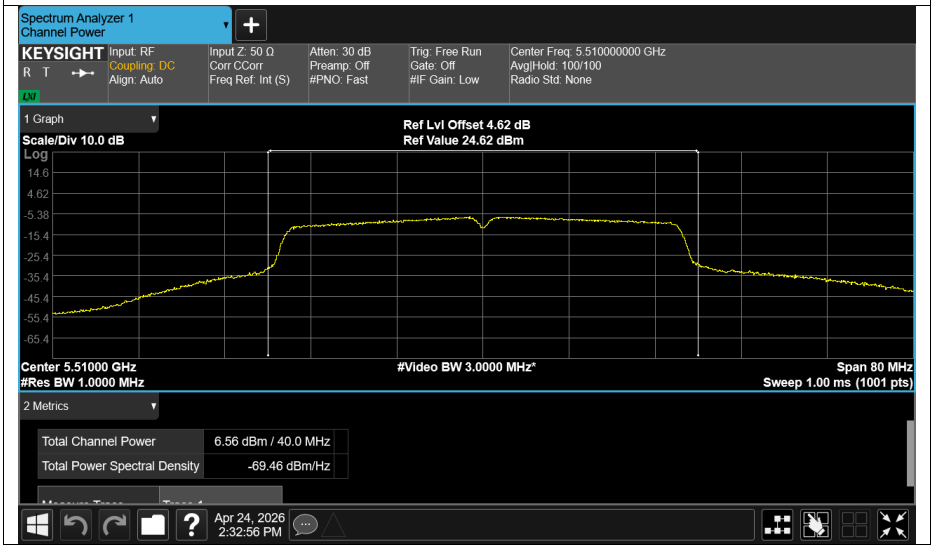


Power NVNT n40 5510MHz Ant2

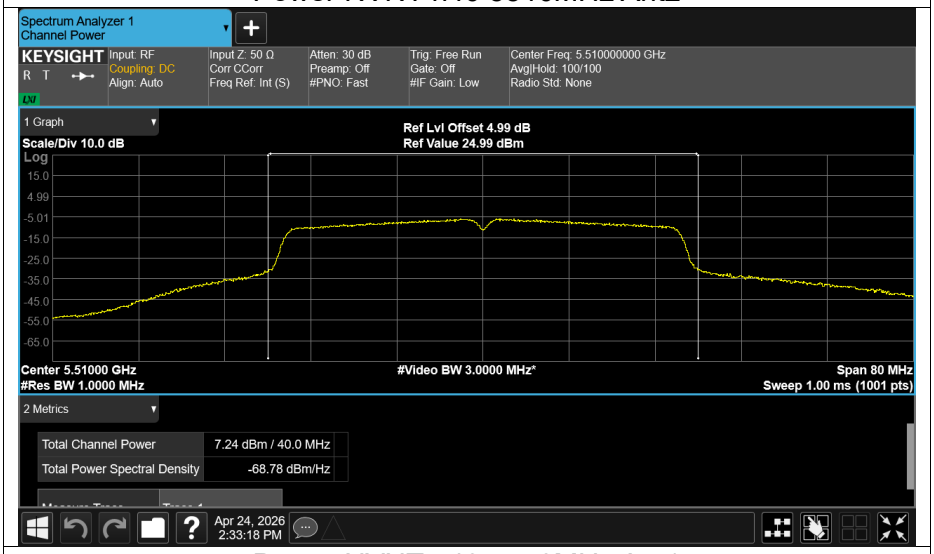


Power NVNT n40 5550MHz Ant1

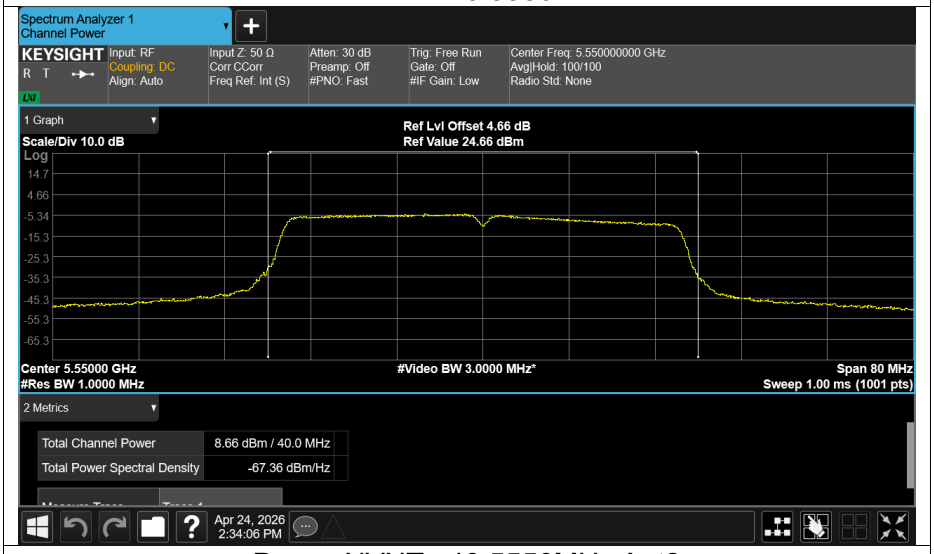


Power NVNT n40 5550MHz Ant2

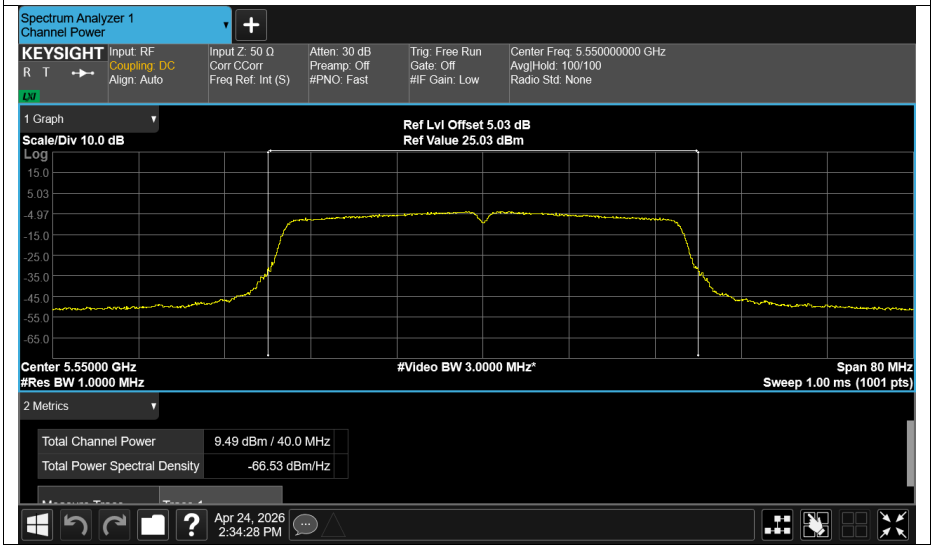


Power NVNT n40 5670MHz Ant1

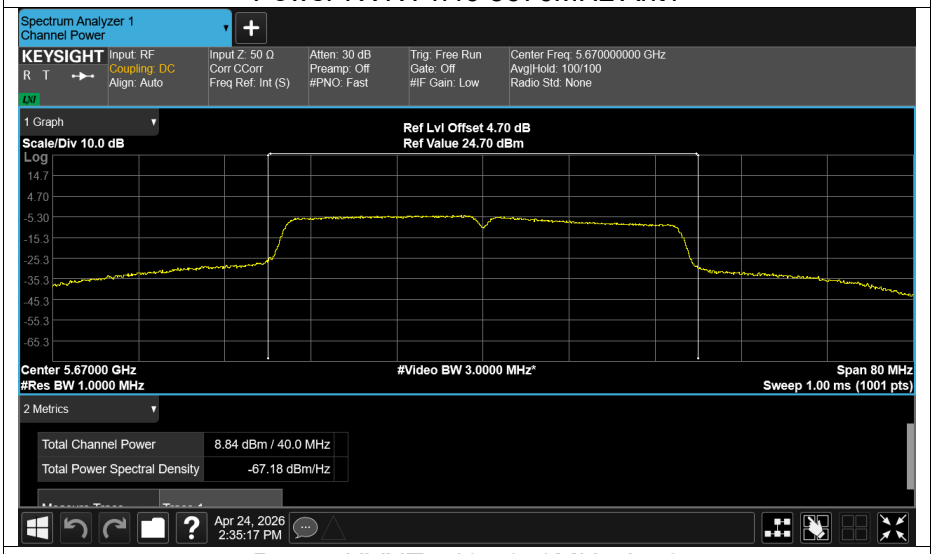


Power NVNT n40 5670MHz Ant2

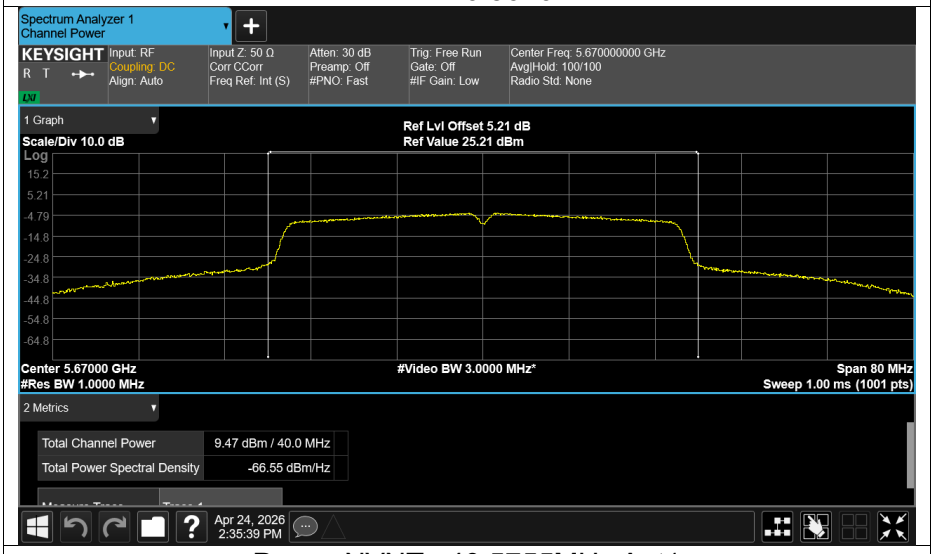


Power NVNT n40 5755MHz Ant1

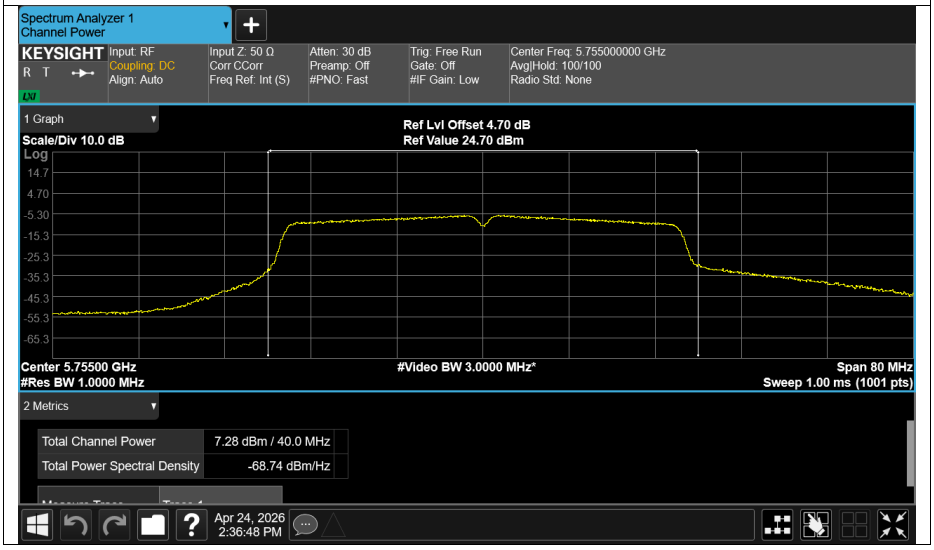

Power NVNT n40 5755MHz Ant2

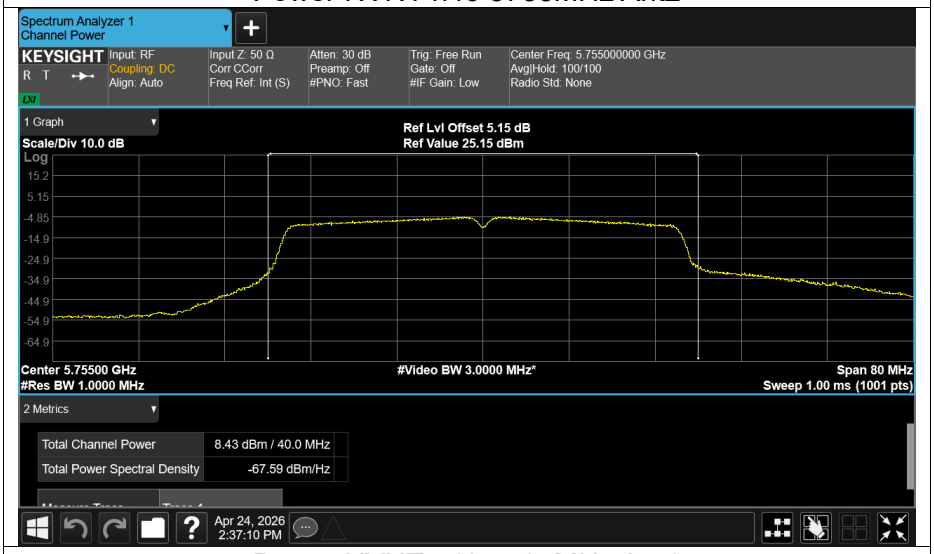


Power NVNT n40 5795MHz Ant1

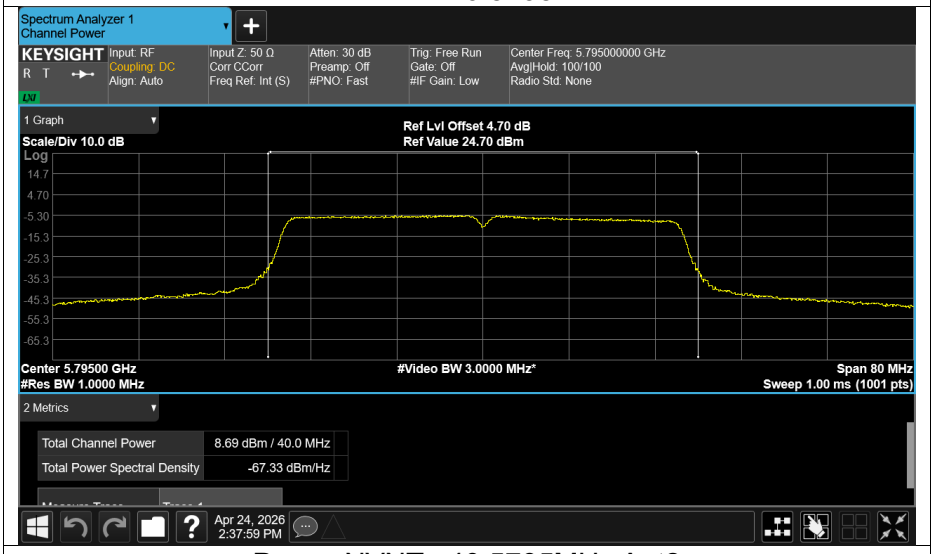


Power NVNT n40 5795MHz Ant2




Power NVNT ac20 5180MHz Ant1

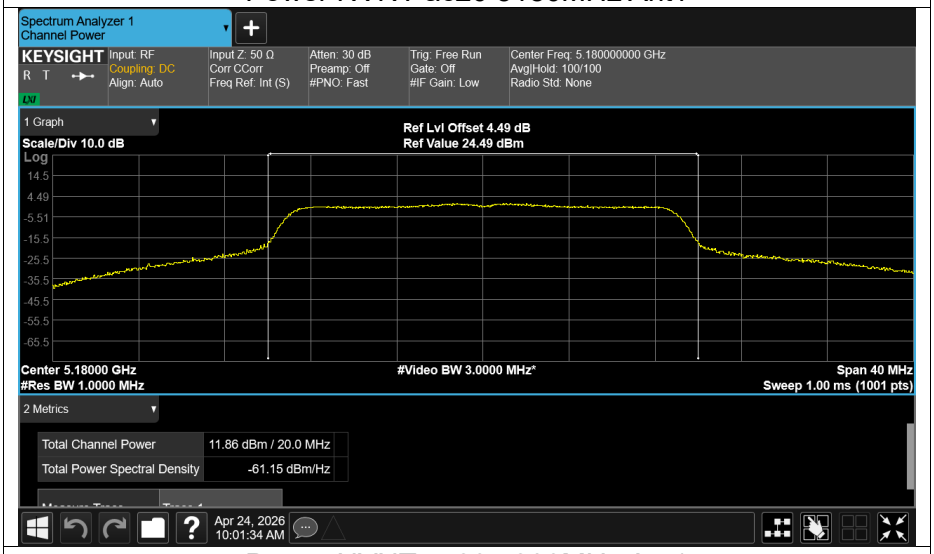


Power NVNT ac20 5200MHz Ant1

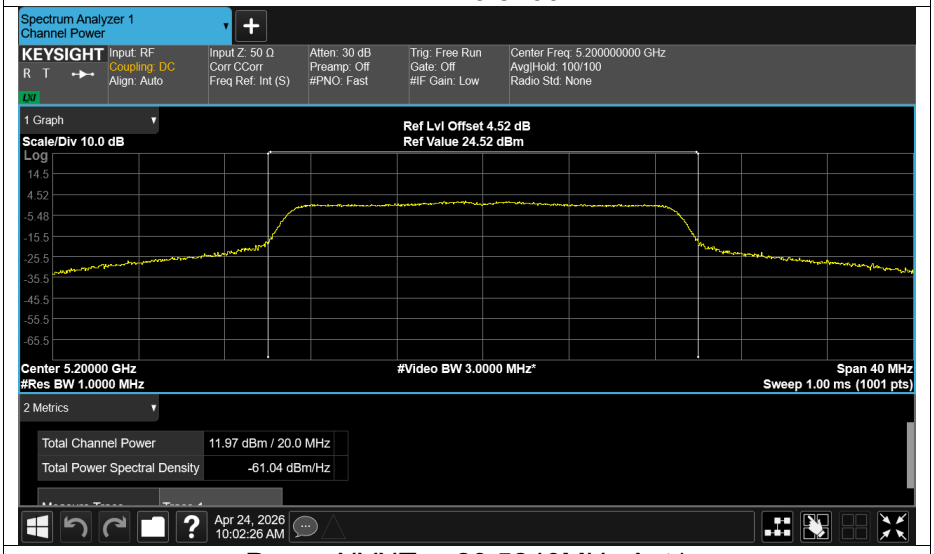


Power NVNT ac20 5240MHz Ant1

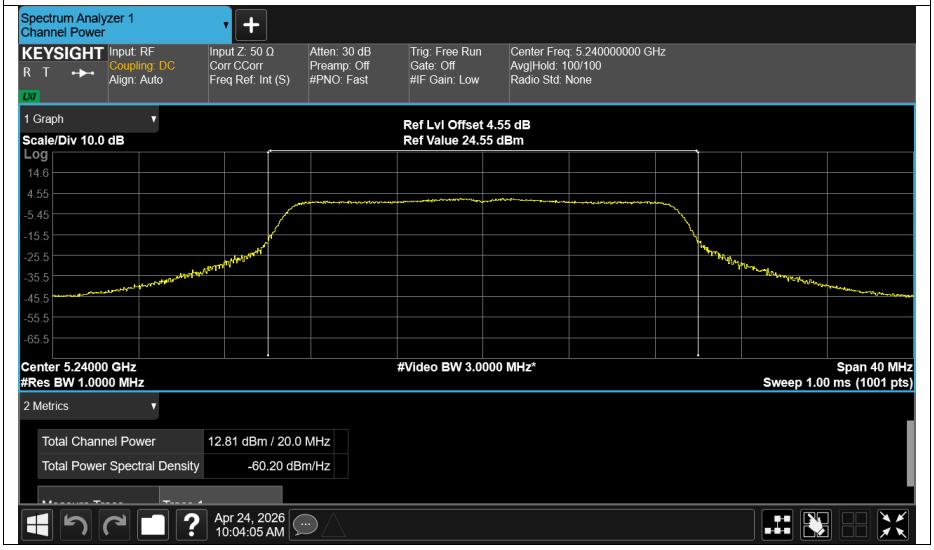


Power NVNT ac20 5260MHz Ant1

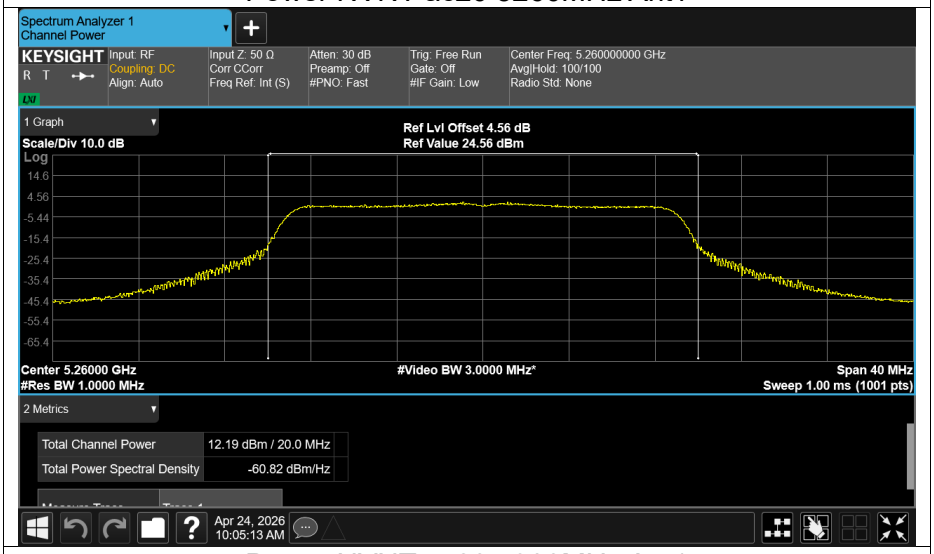


Power NVNT ac20 5300MHz Ant1

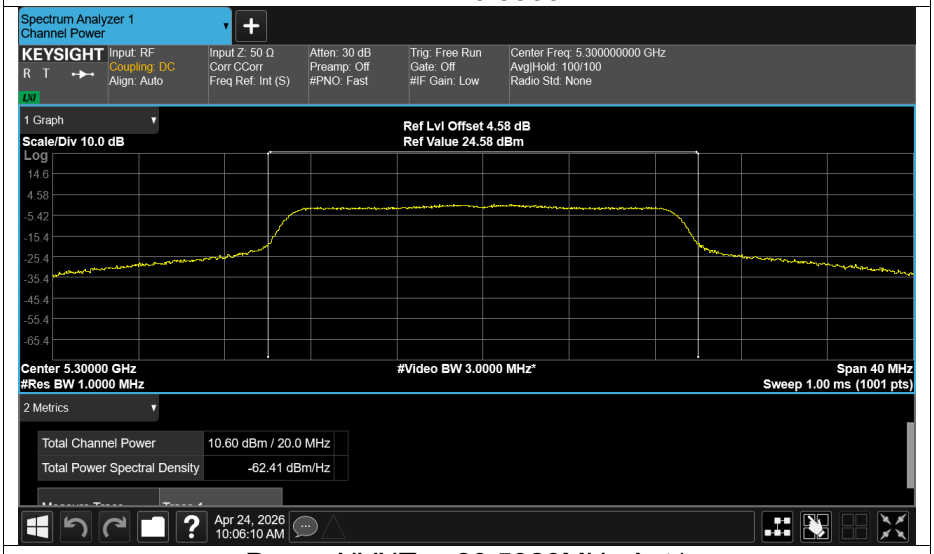


Power NVNT ac20 5320MHz Ant1

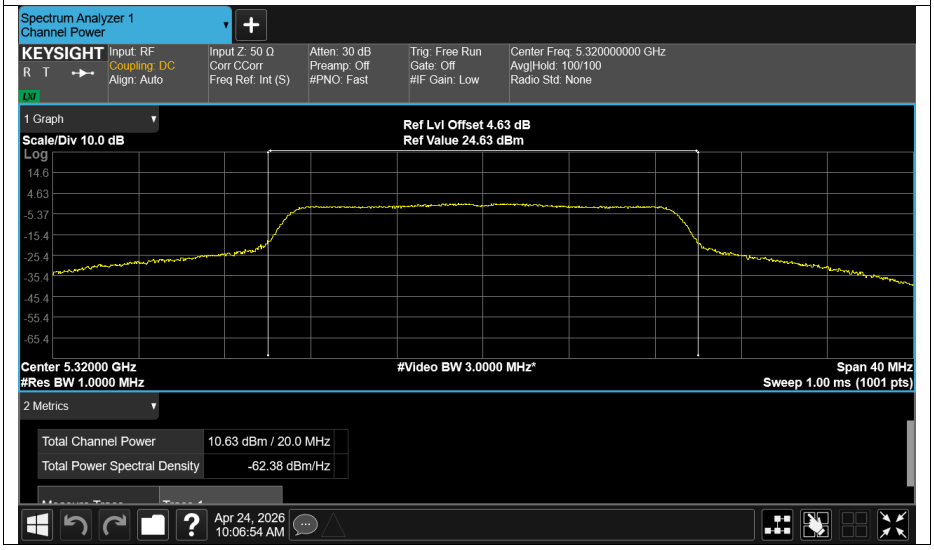


Power NVNT ac20 5500MHz Ant1

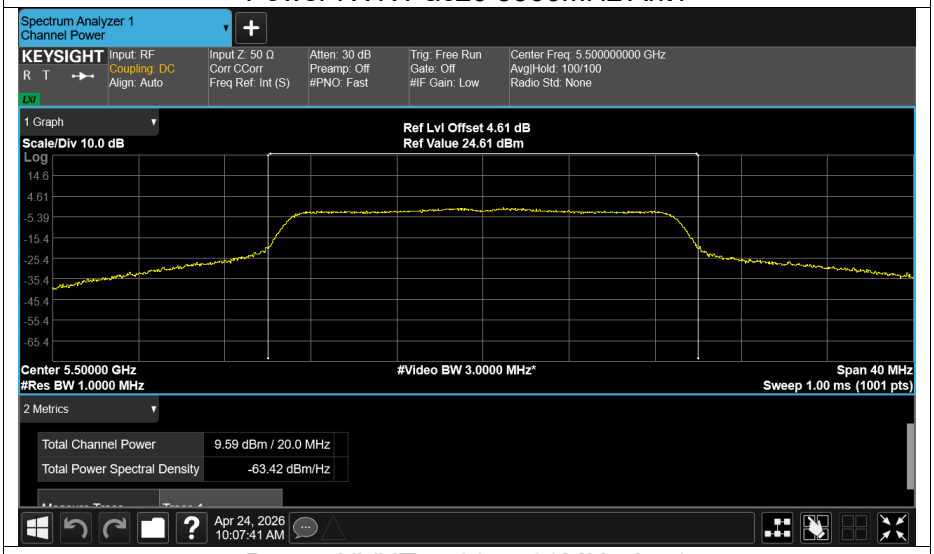


Power NVNT ac20 5580MHz Ant1

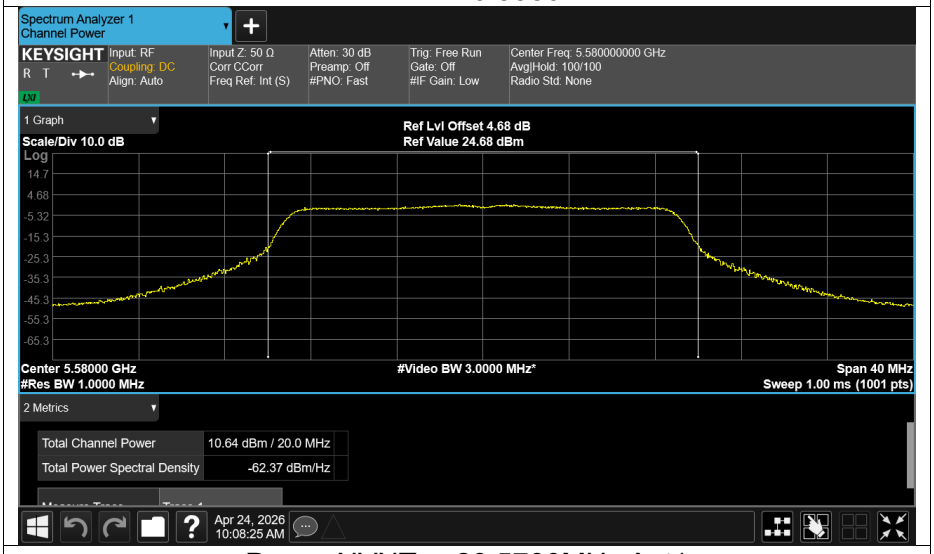


Power NVNT ac20 5700MHz Ant1

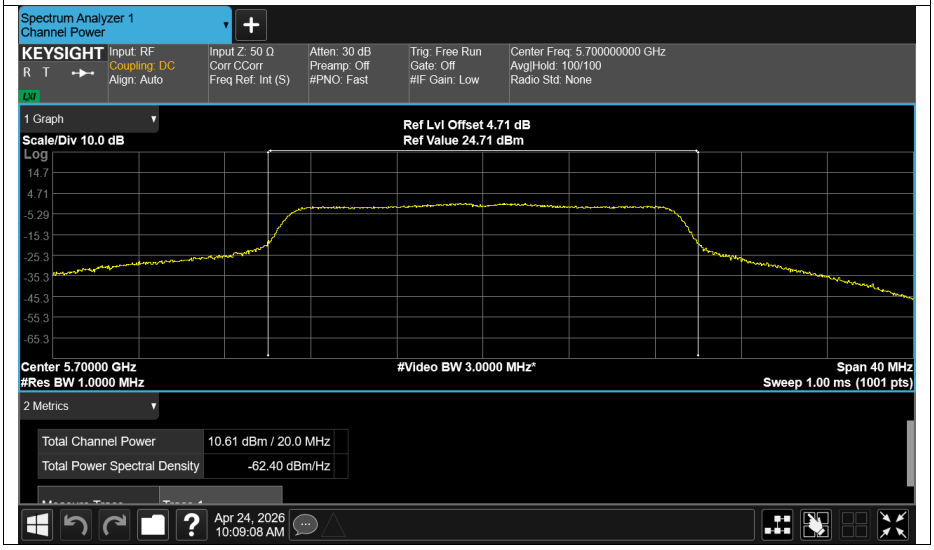


Power NVNT ac20 5745MHz Ant1

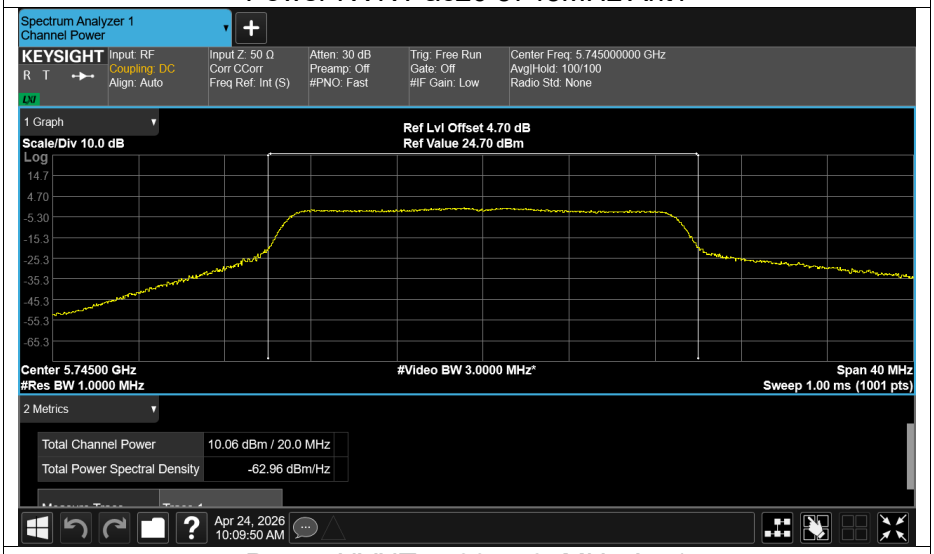


Power NVNT ac20 5785MHz Ant1

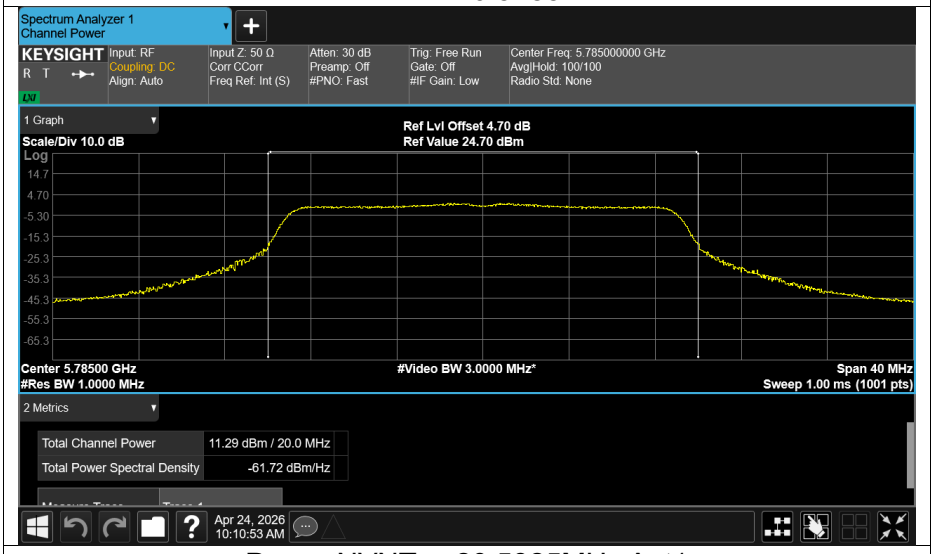


Power NVNT ac20 5825MHz Ant1

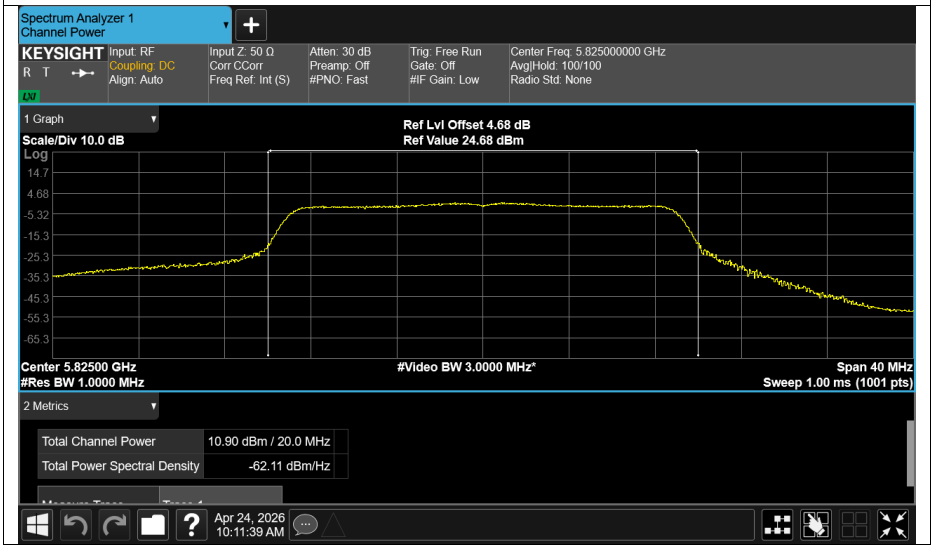


Power NVNT ac20 5180MHz Ant2

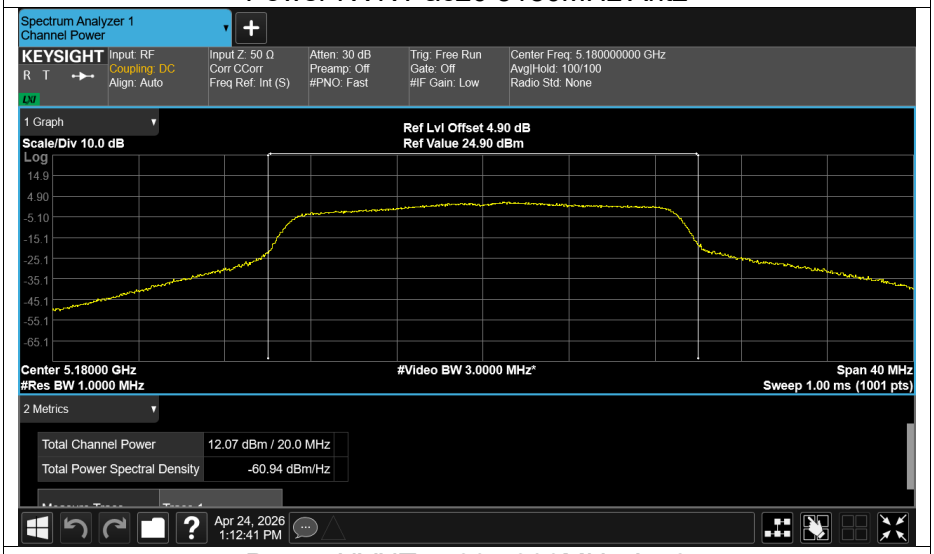


Power NVNT ac20 5200MHz Ant2

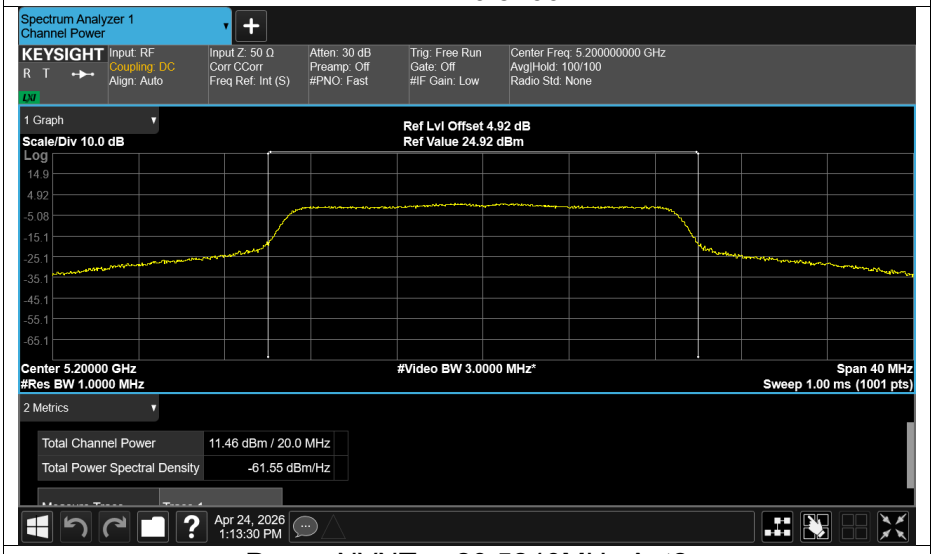


Power NVNT ac20 5240MHz Ant2

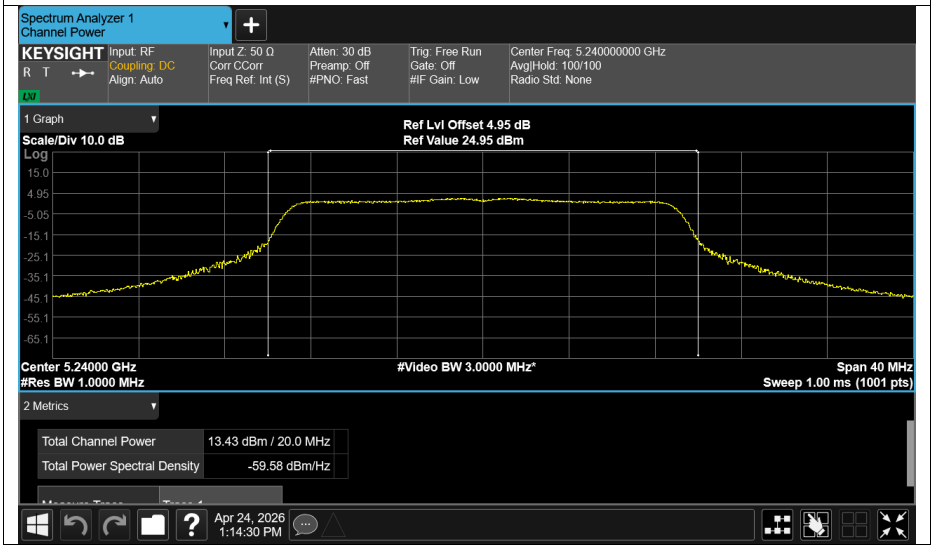


Power NVNT ac20 5260MHz Ant2

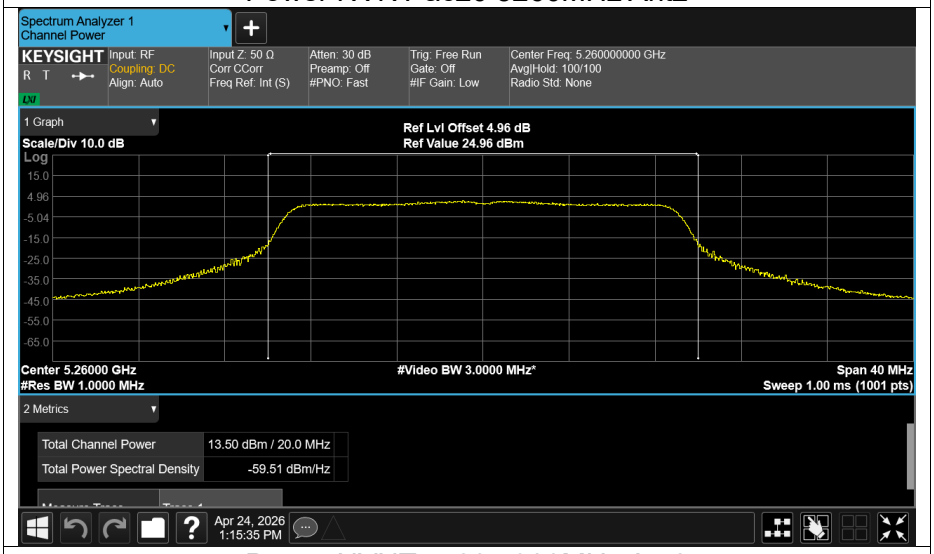


Power NVNT ac20 5300MHz Ant2

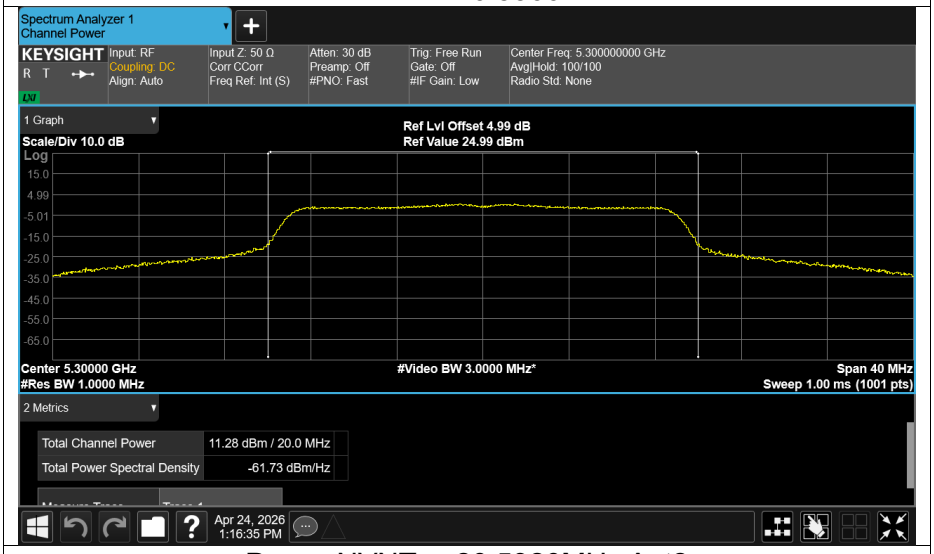


Power NVNT ac20 5320MHz Ant2

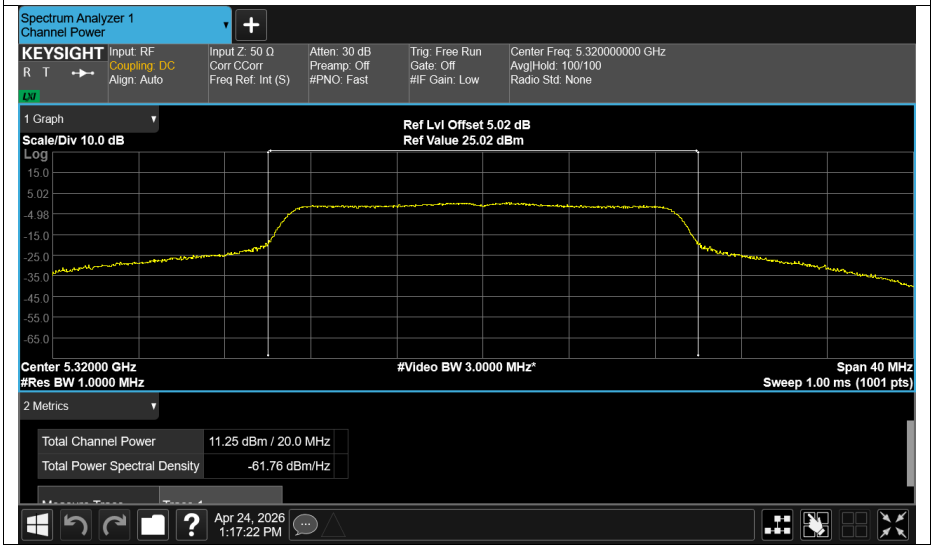


Power NVNT ac20 5500MHz Ant2

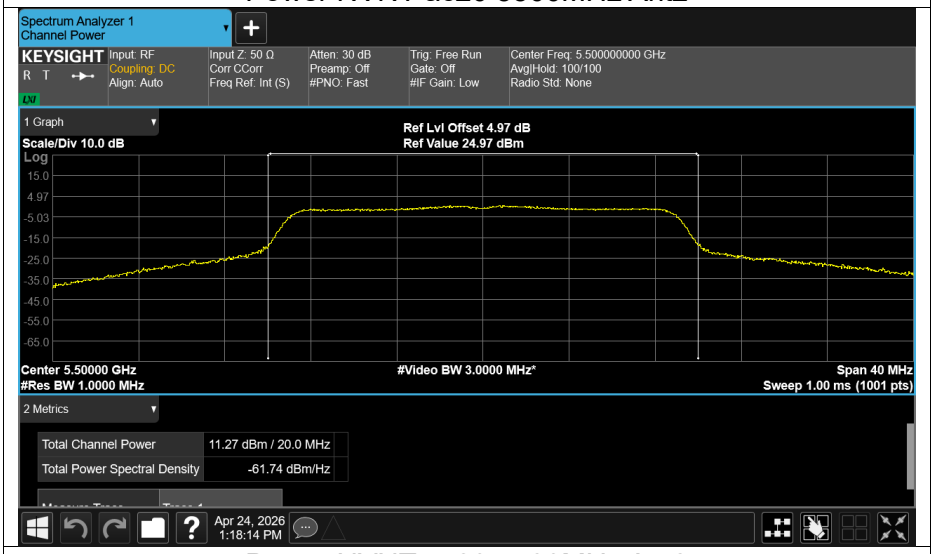


Power NVNT ac20 5580MHz Ant2

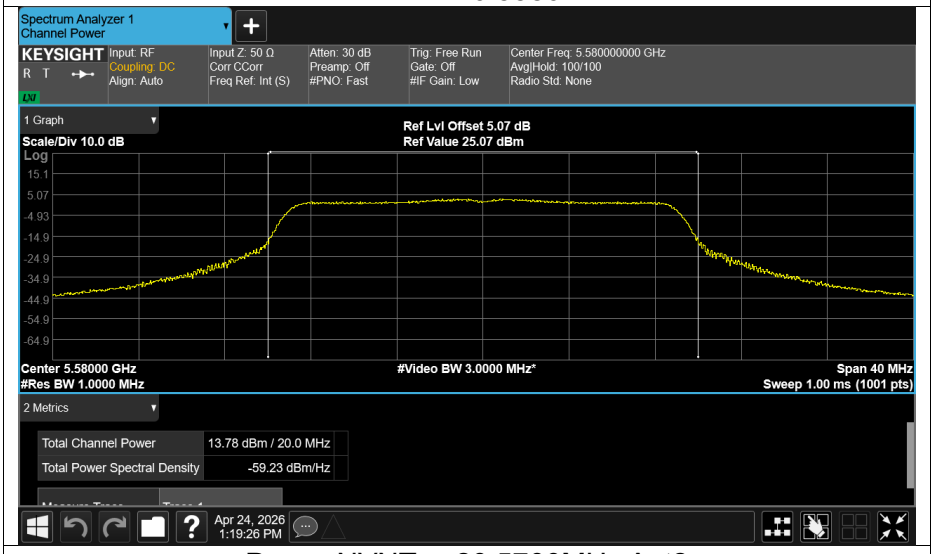


Power NVNT ac20 5700MHz Ant2

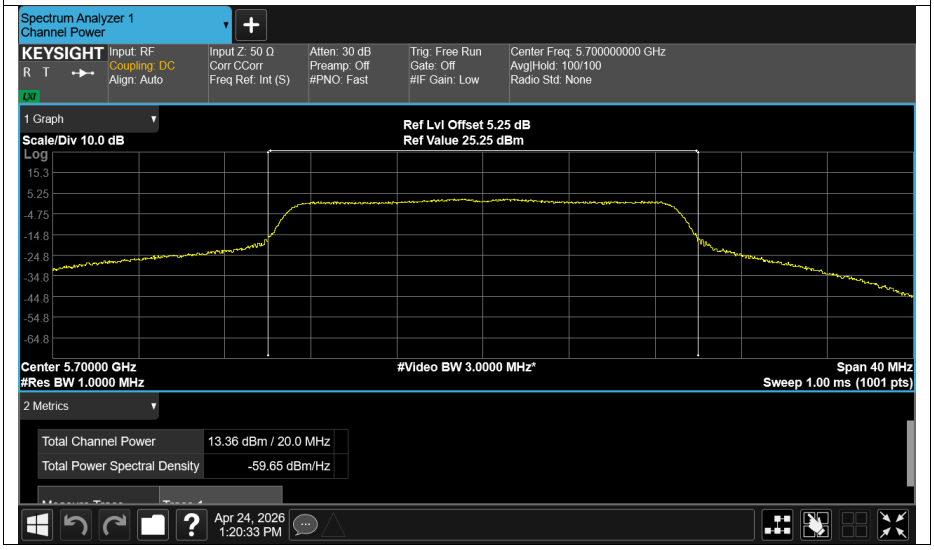


Power NVNT ac20 5745MHz Ant2

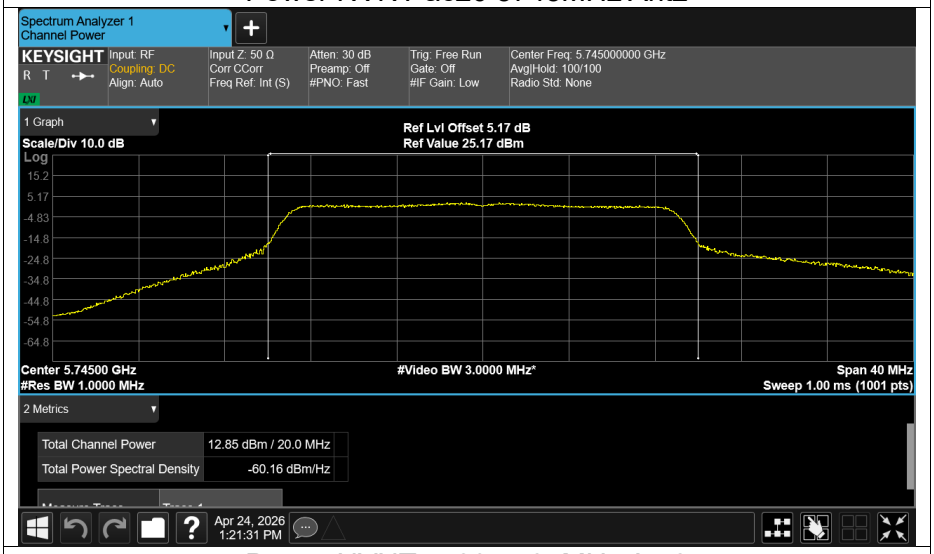


Power NVNT ac20 5785MHz Ant2

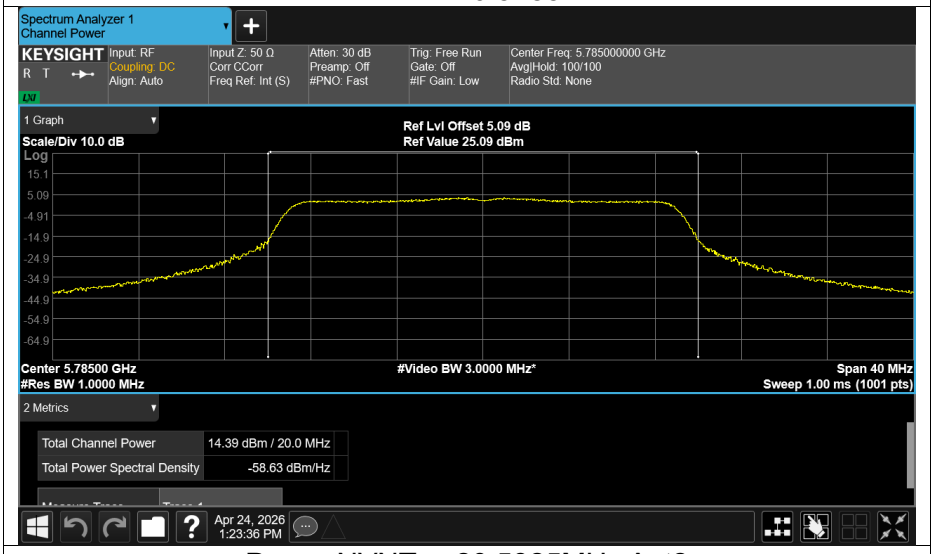


Power NVNT ac20 5825MHz Ant2

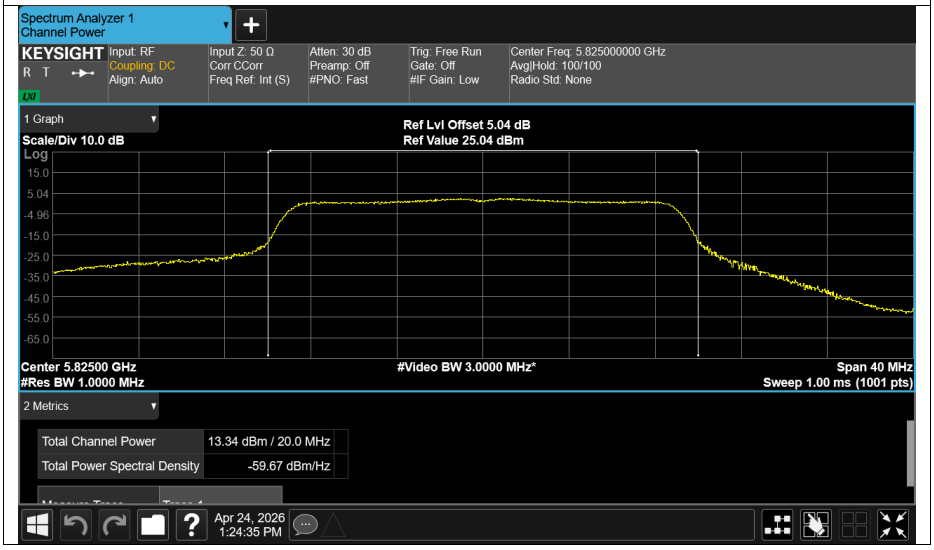


Power NVNT ac20 5180MHz Ant1

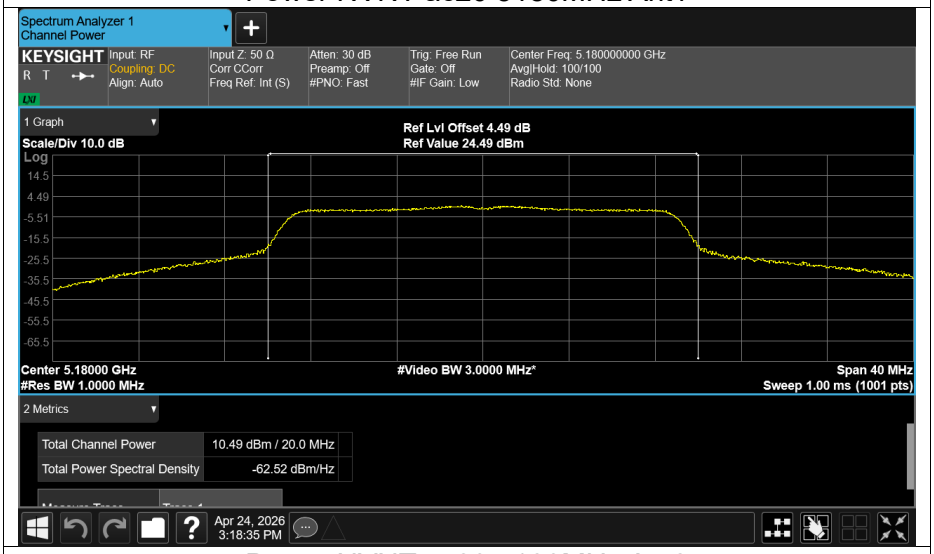


Power NVNT ac20 5180MHz Ant2

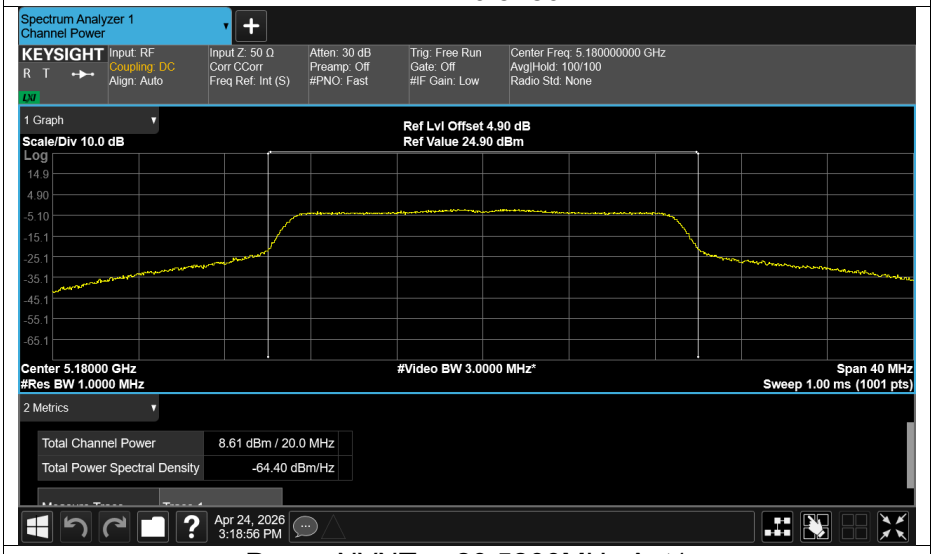


Power NVNT ac20 5200MHz Ant1

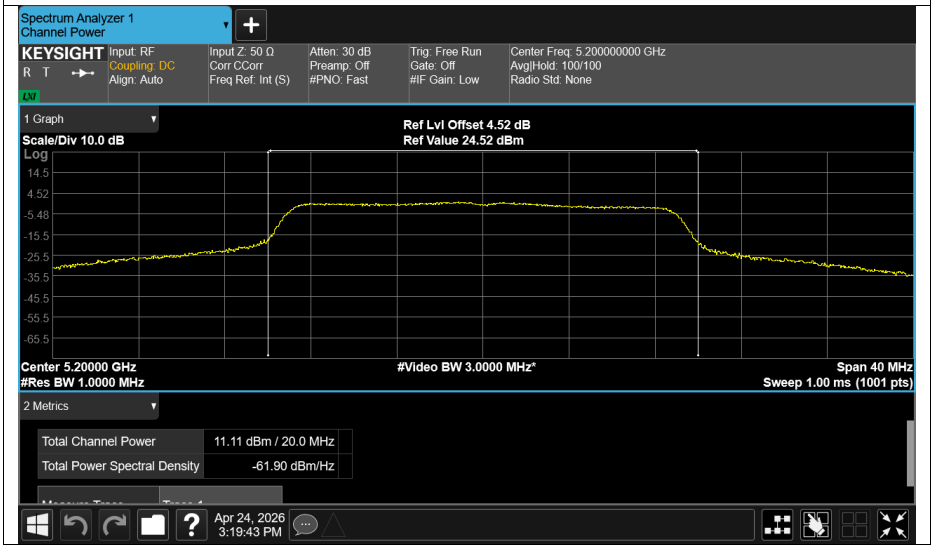


Power NVNT ac20 5200MHz Ant2

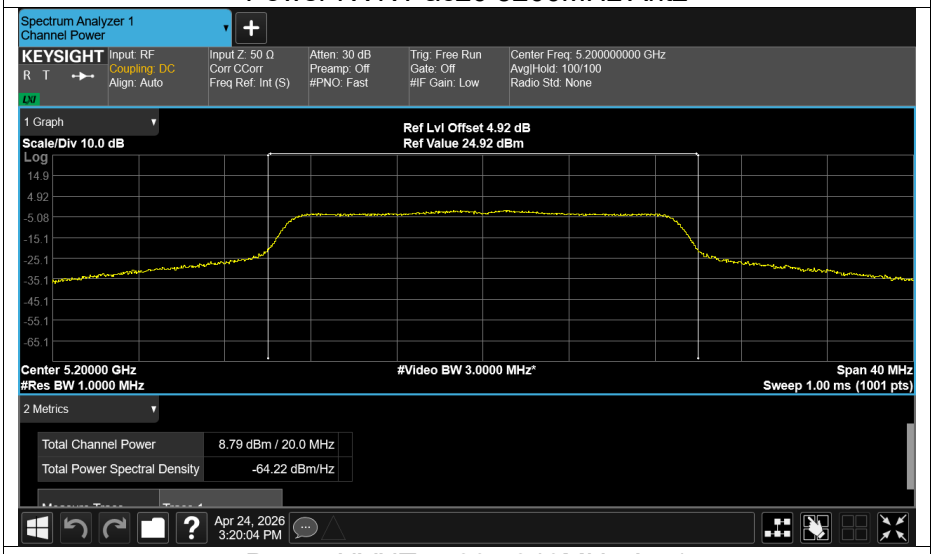


Power NVNT ac20 5240MHz Ant1

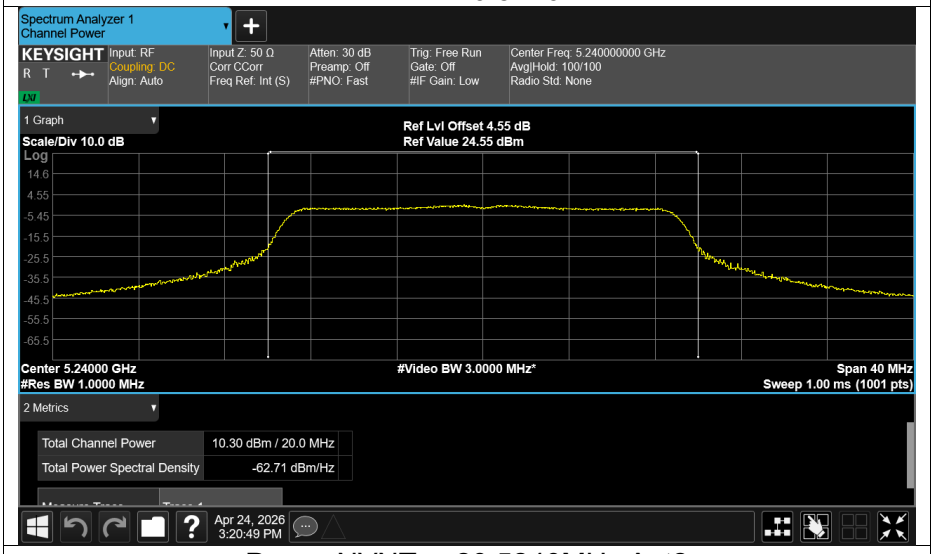


Power NVNT ac20 5240MHz Ant2

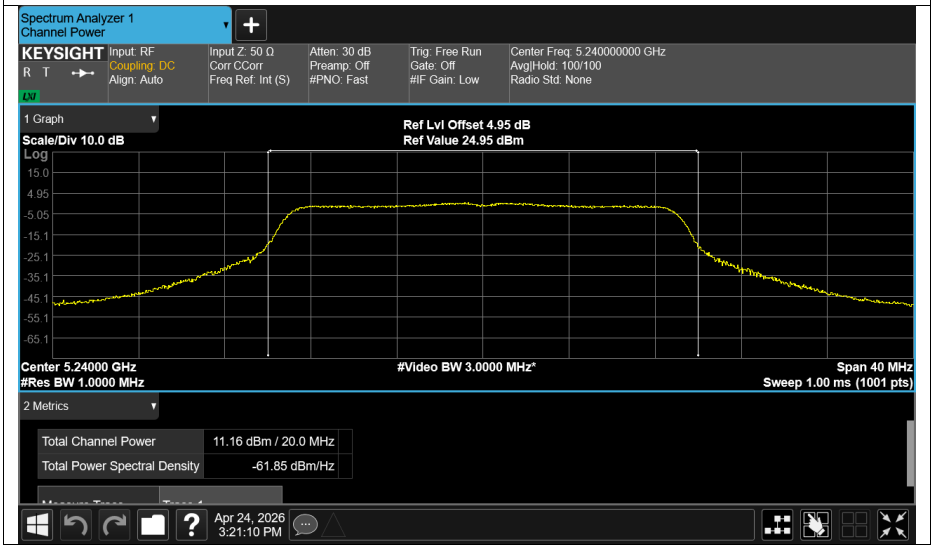


Power NVNT ac20 5260MHz Ant1

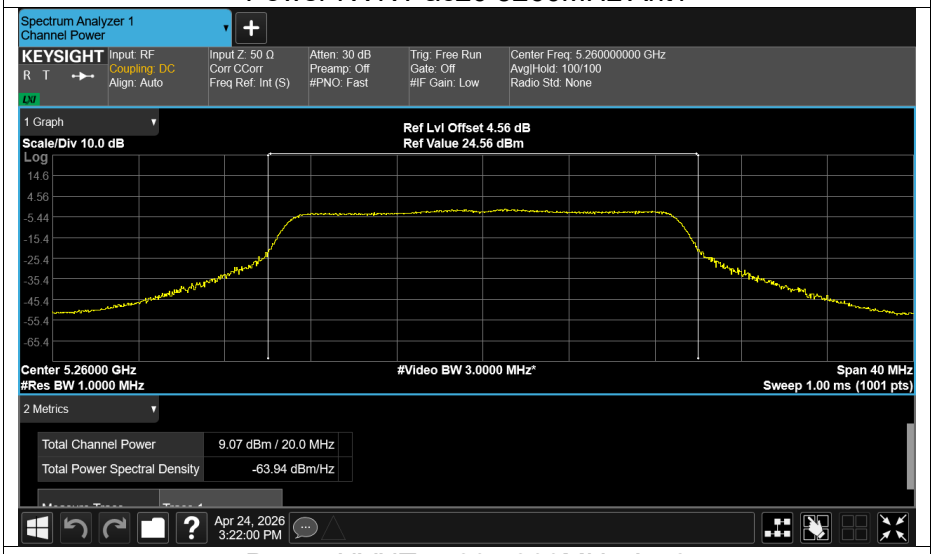


Power NVNT ac20 5260MHz Ant2

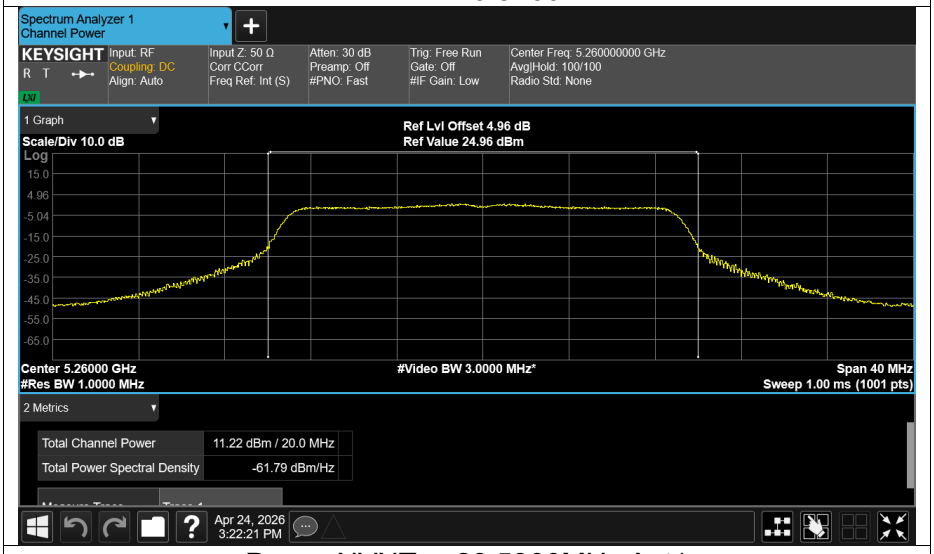


Power NVNT ac20 5300MHz Ant1

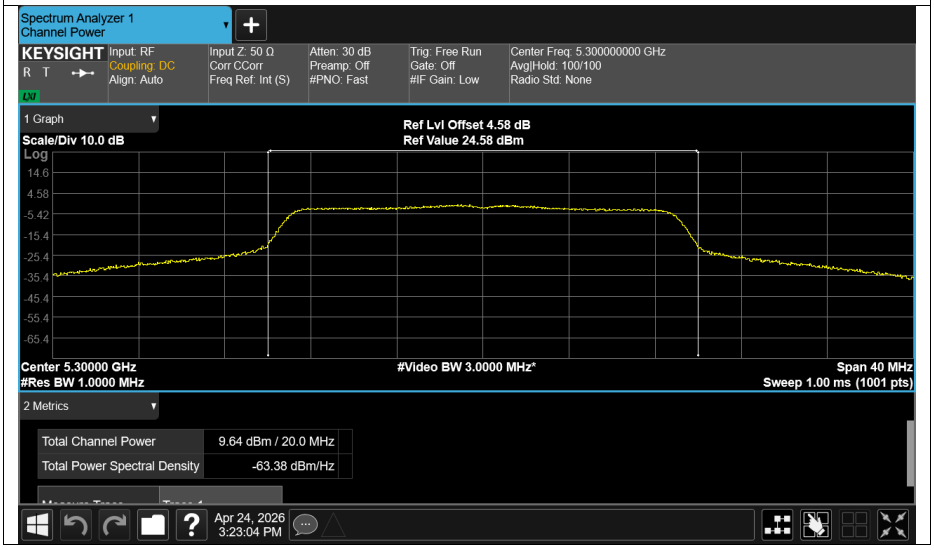

Power NVNT ac20 5300MHz Ant2

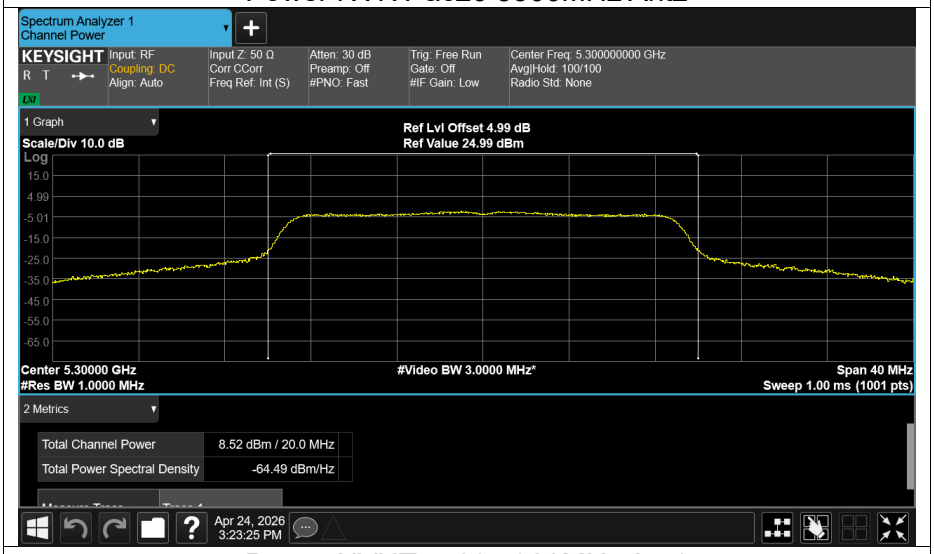

Power NVNT ac20 5320MHz Ant1

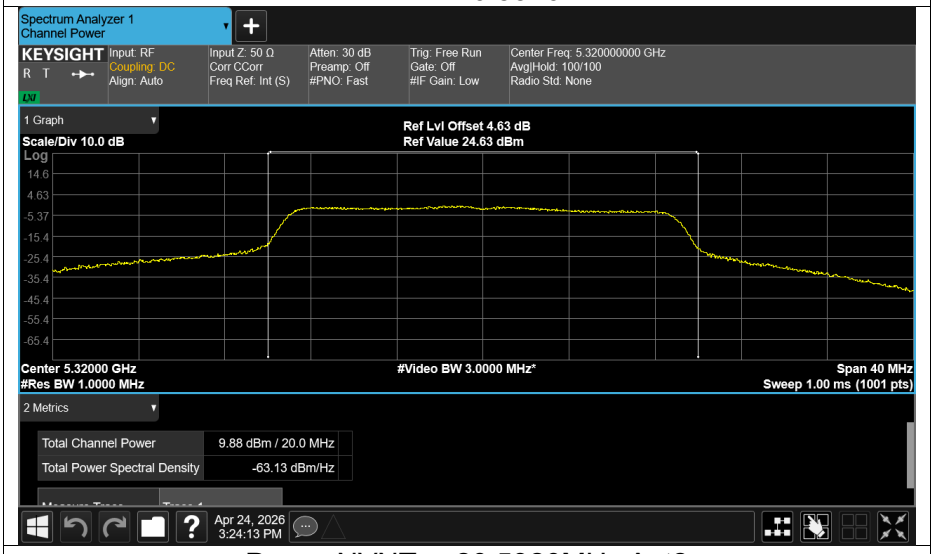

Power NVNT ac20 5320MHz Ant2

