User's Manual
Item: RBK9000
FCCID: 2AL9B-RBKHP
FCCID: 2AL9B-RBKSPK

Bluetooth

SAFETY PRECAUTIONS

When using your product, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT.
2. Never expose your product to high temperatures, extreme cold, or high humidity. Do not submerge in water.
3. To avoid the risk of electric shock, never attempt to open or repair your product without the assistance of certified professionals.
4. Your product is not to be used by children or the infirm without suitable adult supervision.
5. Always press all buttons carefully. Do not manhandle your product.
6. Do not use your product at temperatures under 32°F (0°C) or over 140°F (40°C).
7. Do not drop your product, throw it, or subject it to strong impacts or physical trauma.
8. Contact the manufacturer for support if you detect any abnormalities when using your product. In addition, do not continue to use your product if you detect any smoke or fire.
9. Unplug your product when not in use for extended periods of time.
10. When plugged in, do not place your product on flammable materials such as rugs, carpets, or bedding.
11. Please recycle or dispose of your product properly according to your municipality's laws and rules. Contact local recycling facilities and/or the manufacturer for further information.
12. Clean your product using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your product, and never submerge your product in water.

⚠ CAUTION	**BATTERY WARNING:** This device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device. -Do not dispose of in fire or expose to excessive heat. -Do not crush, puncture, incinerate, or short circuit external contacts. -Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

INTRODUCTION

Thank you for purchasing the Reebok Wireless Audio Kit, item RBK9000. Carry your product with you from the gym to the game. To get the most out of your device, please read this user's manual thoroughly before use.

PACKAGE CONTENTS

-Wireless Speaker
-Wireless Headphone
-USB-C Charging Cable
-User's Manual with Warranty Information

FEATURES

- 18 Hours Playtime* for headphone
- 5 Hours Playtime* for speaker

*Applicable at 50% of maximum volume. Results will lower with increased volume.

SPECIFICATIONS

For RBK9000 Headphone
Bluetooth Version: V5.4
Bluetooth Range: Up to 33 Feet (10 Meters)
Battery Type: 160mAh Lithium Ion Battery
Charge Time: Approximately 2 Hours

For RBK9000 Speaker
Bluetooth Version: V5.4
Bluetooth Range: Up to 33 Feet (10 Meters)
Battery Type: 500mAh Lithium Ion Battery
Charge Time: Approximately 3 Hours

CLOSER LOOK



① Next Track / Volume +
② ON/OFF
③ Previous Track / Volume -
④ Answer Call /Play/Pause
⑤ Charging Port
⑥ LED indicator Light
⑦ Auxiliary Port
⑧ Microphone



① Dust cap
② Charging Port
③ ON/OFF/Play/Pause
④ LED indicator Light

CHARGING

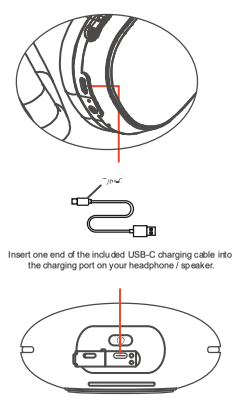

Insert one end of the included USB-C charging cable into the charging port on your headphone / speaker.



BLUETOOTH PAIRING

Once the **product** is ON, you can connect it to a Bluetooth device. Look for "RBK9000 Wireless Speaker" / "RBK9000 Wireless **Headphone**" on your phone's Bluetooth pairing list and make sure that Bluetooth is ON.



Once paired, the **product's** Indicator light will turn solid blue, indicating that the **product** is successfully connected with your phone.



USING YOUR SPEAKER

Power On / Off
Press and hold the power button to turn on/off the speaker.

Play/Pause music
When playing music, press the multifunction button to pause. Press the multifunction button again to resume playing music.

USING YOUR HEADPHONE

Play/Pause music
When playing music, press the multifunction button to pause.
Press the multifunction button again to resume playing music.

Volume + / Next track
Press the Volume + / Next track button to increase the volume.
Press and hold the Volume + / Next track button to advance to the next track.
Voice Assistant: Press and hold the Call button to activate your smart device's Voice Assistant.

Volume - / Previous track
Press the Volume - / Previous track button to decrease the volume.
Press and hold the Volume - / Previous track button to return to the previous track.

Call Controls
When receiving an incoming call, press the Call button once to accept call, press again to end call. If you press and hold the Call button, it will reject the incoming call instead of picking it up.

Voice Assistant: Press and hold the Call button to activate your smart device's Voice Assistant.

⚠ Warning
To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using the product.

MAINTENANCE AND CARE

-Use a soft cloth or paper towel to clean your product. Never use any harsh chemicals or detergents for cleaning. Make sure your product is dry before charging.

-When your product is unused, it should be stored in a cool, dry place.

- Never tug or yank on a cable connected to your product. Connect and disconnect cables as carefully as possible.

- Never expose your product to high temperatures or extreme cold.

FCC STATEMENT

FCCID: 2AL9B-RBKHP
FCCID: 2AL9B-RBKSPK

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

CSI ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call 1-800-592-9541 for 24/7 support.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

2025 CSI
Edison NJ 08817

© Reebok International Limited, All rights reserved. Reebok® and ® are trademarks of Reebok International Limited.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International, is under license. Other trademarks and trade names are those of their respective owners.