FOLDABLE

DETACHABLE AUDIO CABLE

Bluetooth

2-in-1 Headphones

Power Bank

User's Manual
For Item: TEM015

Important Safety Precautions

When using your headphones, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR HEADPHONES.
2. Do not use your headphones near water. Clean using a dry or slightly moist cloth.
3. Do not place your headphones on any wet surfaces.
4. Do not allow children or the infirm to play with your headphones without adult supervision.
5. Do not expose your headphones to excessive heat, flames or fire.
6. Always press all buttons or switches carefully. Do not manhandle your headphones.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your headphones to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your headphones are in need of service.
10. Do not drop, puncture or expose your headphones to excessive trauma.
11. Your headphones are not intended for commercial use.
12. Unplug this device when not in use for long periods of time or during lightning storms.
13. When charging do not place on textiles or flammable synthetic materials. Keep your headphones and charging cable on a dry, cool even surface.

CAUTION

BATTERY WARNING:

-The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.

-Do not dispose of in fire or expose to excessive heat.
-Do not crush, puncture, incinerate, or short circuit external contacts.
-Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing the iVibe 2-In-1 Headphones, item TEM015. You can use your headphones with most smartphones and Bluetooth devices to stream music and enjoy hands-free calling. Please read this manual first before using your headphones in order to get the best results.

Package Contents

-Bluetooth Headphones
-Power Bank
-Carrying Pouch
-Carabiner Clip
-Aux Cable
-Charging Cable
-User's Manual with Warranty Information

Specifications

Bluetooth Version: V5.3
Bluetooth Range: Up to 33 Feet (10 Meters)
Charging Input: DC 5V
Battery Type:200mAh Lithium Ion Battery
Charge Time: Approximately 2~3 Hours
Play Time: Approximately 30 Hours

*Applicable at 50% of maximum volume. Results will be lower when volume is higher.

A Quick Look at Your Device

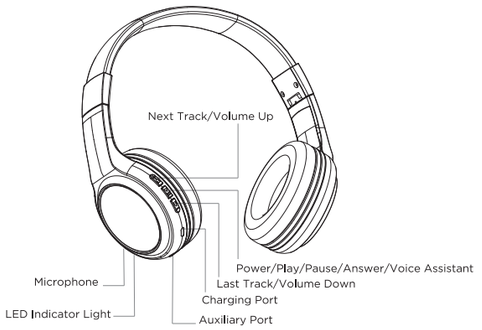

Charging Your Headphones



1. The USB charging cable has a Micro USB-C plug and a standard USB plug.

2. Insert the USB charging cable's Micro USB-C plug into the charging port on your headphones.



3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.

4. The LED Indicator Light turns red while the headphones are charging then turns off once charging is complete.

NOTES:

--Charging can take up to three hours to complete when the battery is fully drained.

--Remove the charging cable once charging is complete.

--Overcharging could reduce the life of the battery.

--A charged battery will lose its capacity if it is not used on a regular basis.

Important: To avoid a complete discharge of the battery, charge your headphones at least once every six months.

Bluetooth Pairing

1. Press and hold the power button to power on your headphones.

2. The LED indicator light will alternately flash red and blue to indicate that your headphones are in pairing mode.

3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "TEM015."

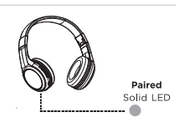

4. The LED Indicator will illuminate blue whenthe devices have paired.

Using Your Headphones

1. Press and hold the power button to power on your headphones. If they have been previously paired to your Bluetooth device, they will remain paired each time they are powered on.

2. Press the Play/Pause Button to play a track. Press it again to pause a track.

3. Press and hold the + Button to advance to the next track in a playlist. Press and hold the - Button to return to the last track in a playlist.

4. Press the + Button repeatedly to increase the volume. Press the - Button repeatedly to decrease the volume.

5. Press the Answer button to answer an incoming call or end a call. Press and hold the Answer button to reject an incoming call.

6. Quickly tap the Answer button twice to activate Siri or Google Voice Assistant.

Auxiliary Input Mode

You can also use a 3.5mm auxiliary cable to connect audio devices through the Auxiliary Port on your headphones.

Note that some of your headphones' button capabilities may be disabled when there is a wired connection through the Auxiliary Port.

Maintenance and Care

-Before using your headphones, inspect the ports to make sure that they are clear of dust and debris before charging.
-Use a soft cloth to clean your headphones. Never use any harsh chemicals or detergents. Make sure your headphones are dry before using.
-When your headphones are not in use, they should be stored in a cool, dry place.
-Never tug or yank on the charging cable while it is connected to your headphones. Connect and disconnect this cable as carefully as possible.
-Never expose your headphones to high temperatures, extreme cold, high humidity or excessive moisture or water.
-Please recycle or dispose of your headphones properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your headphones for further information.

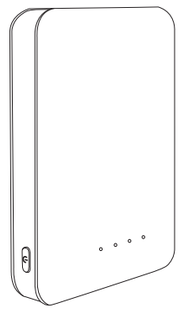

Power Bank

Specifications

Battery type: 4800mah lithium battery
Input interface: TYPE-C
Charging interface: Type-C/USB-A
Input: 5V 2A
Output: 5V 2A(MAX)
Material: ABS
Maximum power: 10W
Size: 90*62*24mm

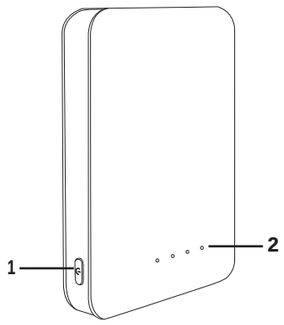

1.Power On/Off

Press power button to power on, press the power button again to power off.

2.Battery level indicator

Each LED represent 25% of the product's battery level.

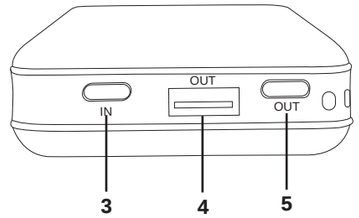

3.Charging port (Input)

How to Charge the Power Bank:
To charge the power bank, insert the USB-C cable's smaller end into the charging port marked "IN" on the power bank and insert other end to the USB port on a computer or USB charging adapter . The maximum input supported by this product is 5V 2A. Each lit LED indicator represents 25% of the battery charge.

4.USB-A Charging port (Output)

How to Charge Other Devices Using Our Power Bank:
Our power bank can supply power to small electronic devices. To do so, insert the USB-C cable's smaller end or the USB-A end into the port marked "OUT" for output. The maximum input supported is 5V 1A, and each lit LED indicator signifies 25% of the battery charge.

5.USB-C Charging port (Output)

Using USB-C and USB-A Outputs Simultaneously:
Both USB-C and USB-A outputs can be used at the same time, each providing an output of 5V 1A.

Important:

The power bank cannot provide power output while it is charging. Please do not attempt to charge the power bank and using our power bank to charge your other device at the same time.

FCC Statement

FCCID: 2AL9B-TEM015

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in the portable exposure condition without restriction.

SAKAR One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.
This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at www.sakar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

SAKAR One Year Warranty (continued)

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

© 2024 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 1 800 592 9541
www.vivitar.com