LINNER

USER MANUAL

Soapbuds True Wireless Stereo Earbuds

Dear Valued Customer

Thanks for choosing this product!
In order to make full use of this item and avoid misuse, please read the manual carefully before using it.

What's in the Box

Charging case ×1 piece

TWS earbuds ×1 pair

Manual ×1 piece

Type-C charging cable ×1 piece

(The above pictures of accessories are for reference only)

Structure of Soapbuds

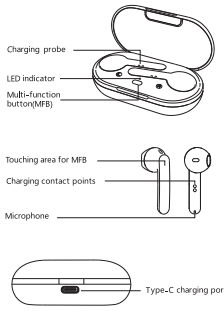

Instruction for wearing

Wearing earbuds and adjust the right angle as the picture shows. It's OK when we feel comfortable and stable.

Closer microphone makes a crystal clear phone calls

Power on

Open the charging case, the earbuds will power on automatically and re-connect to the phone that has been connected before.

Connecting Bluetooth of mobile phone

The first step:The earbuds in the pairing mode
Method 1:
For first use, open the charging case, the earbuds will power on automatically and enter the pairing mode.

Method 2:
When earbuds in the charging case, open the upper cover and long press the charging case button for 3 seconds until white light flickers 10 times, earbuds will get into pairing mode.(a. during pairing mode,please keep the charging case open until pairing successfully;b. the charging case white light will be off after 10 seconds, but it will not affect pairing)
The second step: phone searching and connecting
Turn on Bluetooth function of phone to search Linner Soapbuds and then connect. It will show connected succes sfully.

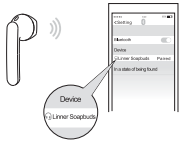

Notice:

1.After earbuds are connected with mobile phone, when you open charging case, earbuds will connect to the last connected mobile phone automatically. If the last connected mobile phone is out of connection range or Bluetooth function is not on, earbuds will get into searching status.

2.The pairing mode lasts 10 minutes at most. Earbuds will power off automatically if they are not connected with any bluetooth-enabled device during this period. If need to be connected again, please operate as "Power on" and "Connecting bluetooth of mobile phone" steps.
3.If out of the bluetooth range, earbuds will disconnect with Bluetooth-enabled device and will re-connect if back to the right distance within 10 minutes.

Power off

Method 1:
Put the earbuds into the charging case, and close the upper lid, the earbuds will be powered off automatically after 3 seconds(But if the charging case runs out of power,earbuds will fail to turn off and you need to recharge promptly.)
Method 2:
Earbuds will turn off when they run out of power.
Method 3:
Earbuds will power off automatically if they are not connected with any bluetooth-enabled device within 10 minutes.

Siri Function

Triple click will activate Siri function and exit with same operation.

Answering a Call

Double click either earbuds at touching area

Ending a Call

Double click either earbuds at touching area

Rejecting a Call

Keep touching either earbuds for 2S

Switching Phone Call between Earbuds and Mobile Phone

Keep touching either earbuds for 2S

Music Playing

Play/Pause:Double click either earbuds at touching area
Previous track: Keep touching the left earbud for 2S Next track: Keep touching the right earbud for 2S

Notice:

1.If a phone call comes during music play, the earbuds will play music automatically after the call ends.
2.Music will pause if using Siri , and will re-play music automatically after exit Siri.
3.If using only one earbud, the earbud can go next track only, cannot go previous track by this operation.

Master-Slave Switch

Take out either earbud from the charging case, it can connect with Bluetooth-enabled device and be used as a wireless earbud independently.And the other can be paired with it quickly anytime when taking out of the charging case.
When the master earbud runs out of the power, or place the master into the charging case, the slave will switch to the master automatically and keep working.

Lights instruction

Earbuds are not fully charged, it will charge automatically when putting into charging case.

1.When earbuds are not fully charged, open the upper cover or short press charging case button, the orange light will be off after 10 seconds.
2.When earbuds are fully charged, open the upper cover or short press the charging case button, green light will be off after 10 seconds

If earbuds are out of charging case, it will show the battery status of charging case when opening the upper cover.

1.When battery over 50%, green light will be on for 10 seconds.
2.When battery between 10%-50%, orange light will be on for 10 seconds.
3.When battery under 10%, orange light will flicker.

When earbuds in charging case, short press charging case button, it will show battery status of charging case.

1.When battery over 50%, green light will be on for 10 seconds.
2.When battery between 10%-50%, orange light will be on for 10 seconds.
3.When battery under 10%, orange light will flicker for 10 seconds.



Earbuds lights instruction

1.Earbuds in charging case, charging pin contact well, orange lights are always on.
2.Earbuds are in searchable status of Bluetooth, orange lights flicker slowly.
3.Earbuds connect with device successfully, orange lights are off.
4.Earbuds are in pairing mode, orange lights flicker quickly.

Product Specification

Model #:	Soapbuds
Dimensions:	16.56*41.17*17.49mm(earbuds)
	73*39.19*27mm(charging case)
Bluetooth version:	V5.0
Transmission distance:	10 meter
Input Voltage:	DC 5V/1A
Battery capacity:	3.7V/35mAh (esrbuds)
	3.7V/500mAh (charging case)
Working time:	4H
Charging time:	2.5H
Waterproof level:	IPX4

Factory Resetting

Step 1.
Put earbuds into charging case and keep the case open.
Step 2.
Press and hold charging case button for 10 seconds until the indicator flashes green for 5 times, factory resetting is finished.All the pairing history will be cleared off.

Safety Notifications

1.Please use the products according to user manual. And please do not disassemble or modify the device for any reason. Or the earbuds may breakdown or burn.
2.Do not drop the product to any liquid or wash it.
3.Do not charge the earbuds with charger which is over-voltage. Use the charger with rated voltage and current of 5V/1A. Or it will damage the battery.
4.Do not use or store the earbuds in an environment where the temperature is too high or too low (Below 0 degrees or above 45 degrees.)
5. Do not block the earbduds, such as charging interface, LED indicator or microphone.
6.Do not use the earbuds overtime and over-volume. This may make you dizzy or be harmful to your hearing.
7.Do not use the equipment under thunderstorm environment.Thunderstorm may cause abnormal operation of the equipment, signal interruption, etc.

FQAs:

Entry	Handling method
How to re-match two earbuds together?	Put two earbuds into the charging case, press charging case button 3 times continuously, until white light flickers 5 seconds and then off, that means two earbuds re-match successfully.
Connect earbuds to other mobile phone?	Put earbuds into charging case, long pres charging case button for 3 seconds, the s indicator will flash white for 10 seconds, then the earbuds go to pairing mode, capable of connecting with other phone.
The earbuds has no any action or shut down.	Put earbuds into charging case and close charging case for 10 seconds, Re-open charging case and earbuds can work properly.
Distinguish master and slave.	The device supports master-slave switching,The first earbud which turn on will be the master.

NOTE: This equipment has been tested and found to comply with the limits for a
Class B digital device, pursuant to part 15 of the FCC Rules. These limits are
designed to provide reasonable protection against harmful interference in a
residential installation. This equipment generates uses and can radiate radio
frequency energy and, if not installed and used in accordance with the instructions,
may cause harmful interference to radio communications. However, there is no
guarantee that interference will not occur in a particular installation. If this
equipment does cause harmful interference to radio or television reception, which
can be determined by turning the equipment off and on, the user is encouraged to
try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the
receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance
could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following
two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may
cause undesired operation.

SHENGYUAN TECHNOLOGY (SHENZHEN) CO., LTD.
Address: Floor 19th-A, South Tower, China Academy of Science and Tech Development Building, No.9 Gaoxin South 1st Ave., Nanshan District, Shenzhen
Customer service hotline: 400-0755-705
Official website: www.linner.com.cn

FCC ID:2AMNM-LINNER