80mm

125mm

User Guide for CLOUD PICTURE FRAME

Cloud Album
Photo
Music
Slim design
Clock & Calendar

封面

Introduction

Thanks for your purchasing the WiFi Digital Photo Frame from our company! We hope you will enjoy this innovative sending & displaying method of all your digital photos!

Before operation the unit, please read this manual thoroughly and retain it for future reference. This manual will help you use many of the exciting and useful features to make your WiFi Digital Photo Frame viewing more enjoyable.

This WiFi Digital Photo Frame lets you view digital photos directly from your smart phone & memory cards. You will be able to create a slideshow using multiple transition effects or display one photo at a time. No computer, digital camera or cable connection is required.

Let's start to keep your nice photos displaying everyday in this WiFi Digital Photo Frame.

Important safety precautions

Always follow these basic safety precautions when using your WiFi Digital Photo Frame. This will reduce the risk of fire, electric shock and injury.

Warning: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

Warning: To prevent risk of electric shock, do not remove the cover. There are no user serviceable parts inside. Refer all servicing to qualified personnel.

- The WiFi Digital Photo Frame is for indoor use only.
- Do not block the ventilation holes on the back of the WiFi Digital Photo Frame at any time.
- Keep your WiFi Digital Photo Frame out of direct sunlight and heat sources.
- Protect the power cable. Route power cables so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attentionto the point where the cable attaches to the WiFi Digital Photo Frame.
- Only use the supplied AC adapter with the WiFi Digital Photo Frame. Using anyother adapter will invalidate your warranty.

Cleaning the screen.
Treat the screen gently.
To clean fingerprints or dust from the LCD screen, it is recommended to use a soft, non-abrasive cloth such as a camera lens cloth.
If you use a commercial LCD cleaning kit, do not apply the cleaning fluid directly to the LCD screen. Clean the LCD screen with the cleaning solution applied to the cleaning cloth.

Cleaning the WiFi Digital Photo Frame
Clean the outer surface of the WiFi Digital Photo Frame (excluding the screen), with a soft cloth.

Table of Content

Whats in the box ---- 1
Features ---- 1
Control Illustration ---- 2
Buttons Illustration ---- 2
Connecting Illustration ---- 3
Getting Started ---- 3
How to the Phone Application ---- 6
How to the WiFi Digital Photo Frame ---- 10
Main Menu ---- 10
Specifications ---- 19

Whats in the box

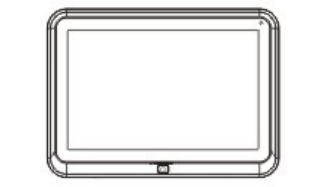
WiFi Digital Photo Frame

AC Adapter

User's Manual

Features

-Easy & instant sharing photos from your smart phone to the Wi-Fi Digital Photo Frame.
-With 10.1" High-Definition (1280 x 800) Touchscreen, viewing photos on delicate image display and operating easily with the friendly OS.
-Connects fast & stable to WIFI wireless network, small frame to see a big world.
-Create your own family members album, one WiFi Photo Frame is available for several binding accounts.
-Supports one APP account to bind several WiFi Photo Frames, pushing photos to all of binding frames in one time.
-Ultra slim design and various color available, the most sweetest decoration in your home.
-Auto slideshow photos in various transaction modes with Clock, Calendar & background music.
-Music playback with rhythmic beat and video supported in various formats.
-Considerable weather forecast & Clock, practical functions for daily life.
-Light-sensor makes the panel automatically adjust its brightness to ambient environment.
-Night mode clock will be auto-activated at night after lights off, it's more comfortable for your eyes to read the time in dark environment.

-Built-in 8G memory, available for storing thousands of photos, keeps your every moment of joy in the frame.
-Supports SD/SDHC/USB flash drive (up to 32G), easy to plug & play.
-With auto-turn on/off timer, and several alarm setup options.
-Offering 10G cloud storage in 5 years for free.

Control Illustration

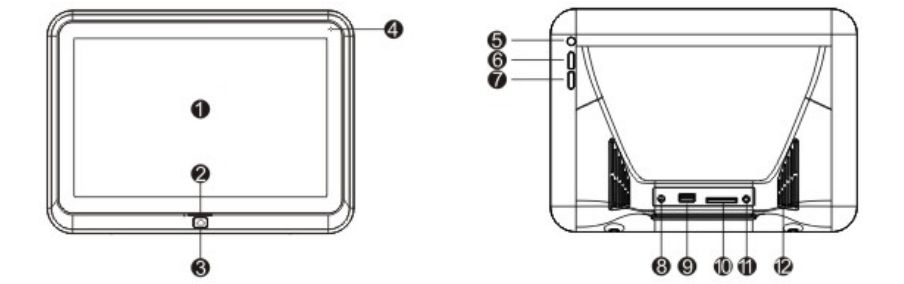

❶ 10.1" LCD TouchScreen ❷LED ❸Home ❹Light Sensor
❺ Power ❻❼ Volume Buttons ❽DC Port ❾USB 2.0 Port
❿ SD/SDHC Card Slot ⓫Earphone Port ⓬Speaker

Buttons Illustration

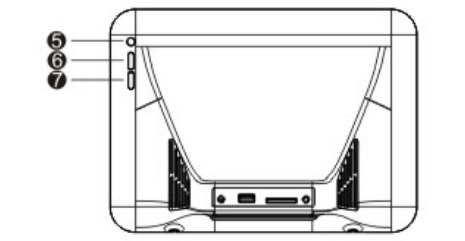

❺ Power ❻ Volume+ ❼ Volume-

Connecting Illustration

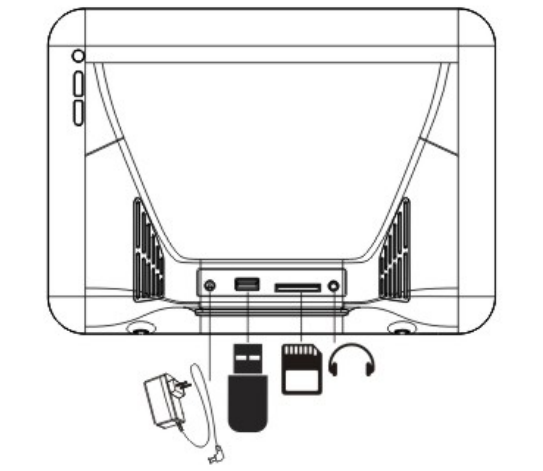

Getting Started

Step 1: Plug in the power adapter.
Connect the adapter to DC socket, the WiFi Digital Photo Frame will auto power up.

Step 2: Follow the Wizard to setup WiFi Photo Frame Frame

After the WiFi Digital Photo Frame displaying the boot animation, please follow the Wizard to start the setup.

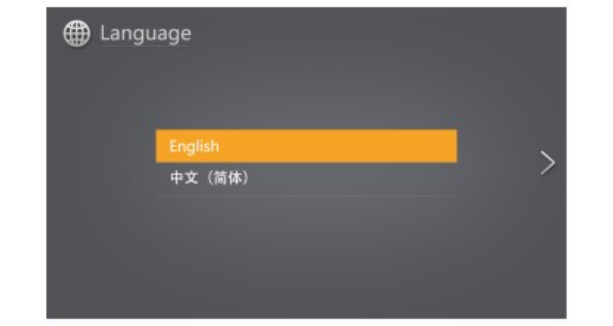

1.Select your language.

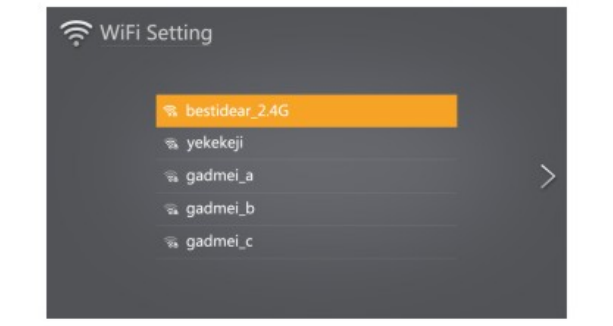

2.Select the available WiFi connection and enter the password.
3.When the WiFi is connected, you can scan the QR code or search "Framate" from APP store or Google APK store to download the Phone

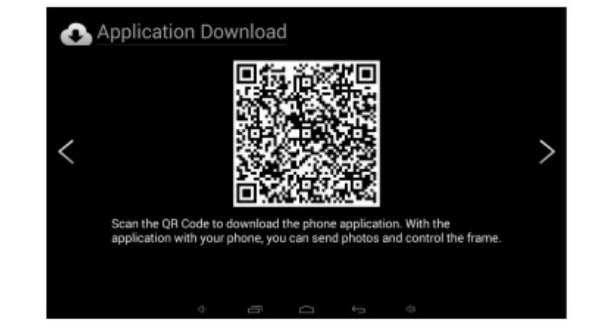

Scan the QR Code to download the phone application. With the application with your phone, you can send photos and control the frame.

Application.
4.Open the Phone Application to register a new account and bind this account with WiFi Digital Photo Frame by scanning the device QR code or enter device code. (You could find the device QC code and device code from Wizard or Setup>Device Manage.)

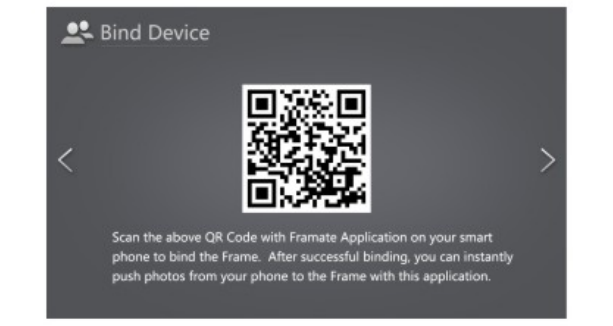

Scan the above QR Code with Framate Application on your smart phone to bind the Frame. After successful binding, you can instantly push photos from your phone to the Frame with this application.

5.After successful binding, your can send photo or short video from mobile phone to the WiFi Digital Photo Frame. Let's go sharing your happiness with your families.

How to get the Phone Application

1. Download the application "Framate" either scan the QR code on the frameor search from APP store/Google Play.

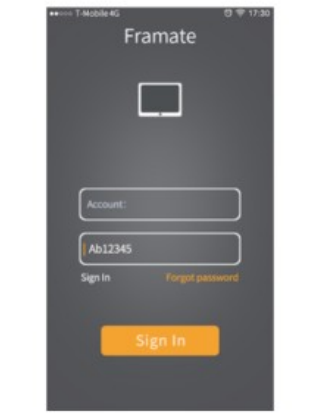

2. Open the Application and start to sign up a new account. If you also have account, please sign in directly.

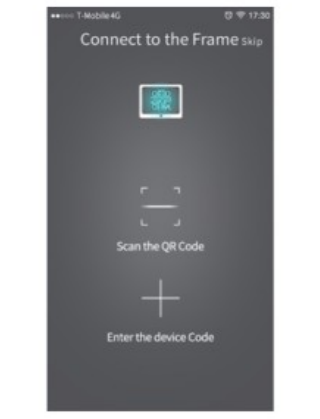

3. Scan the device QR code on the frame or enter device code to bind up the phone & the frame. After successful binding, you can send photos now!

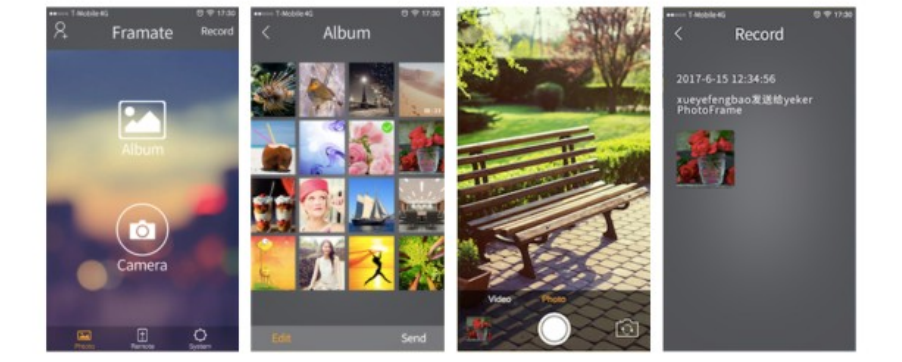

4. Press Album to choose sending photos from local album or press Camera to take a new photo or short video. If you want to bind another frame, press the icon on the top left. Besides, you can check the sending record from the icon on the top right.

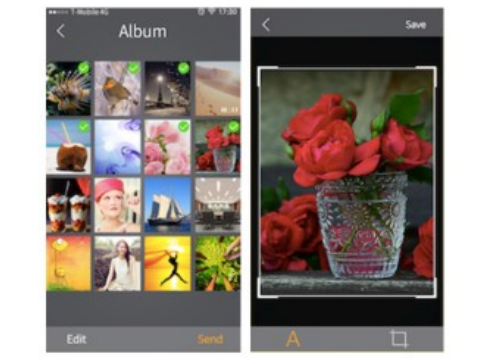

5. You can send 6 photos all at once. Or before sending one photo, press "Edit" at the left bottom to adjust the photo display area or add subtitle to the photo.

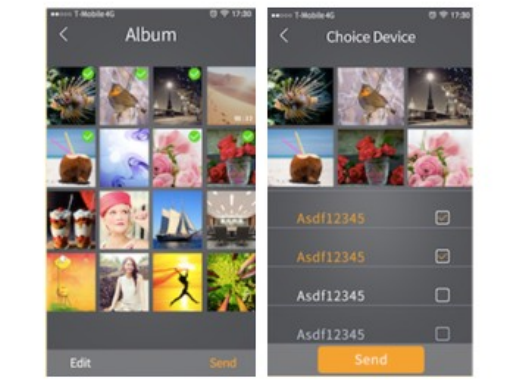

6. If one phone binds several frames, you can send same photos to those frame all at once.

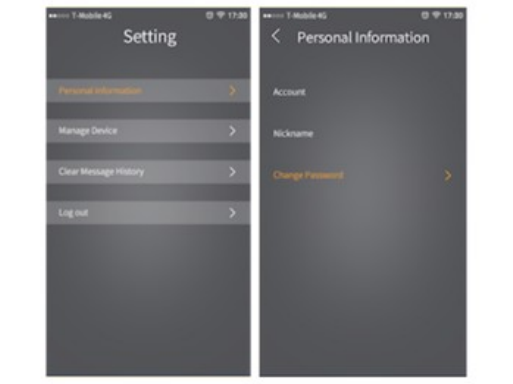

7. In the System Settings, you can access the options and adjust the settings.

How to use the WiFi Frame

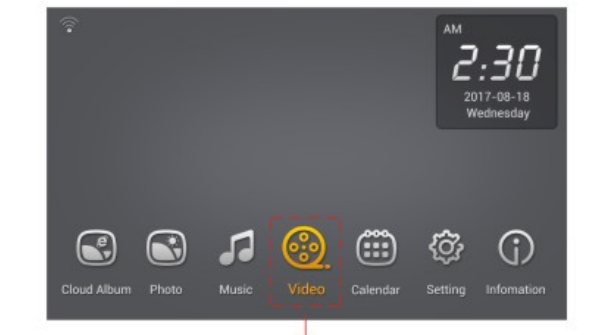

Main Menu

Option

The main menu is shown as above, you can touch the icons on the panel to enter different functions.

The menu consists of CLOUD ALBUM, PHOTO, MUSIC, VIDEO, CALENDAR, SETTING, INFORMATION, CLOCK & WEATHER.

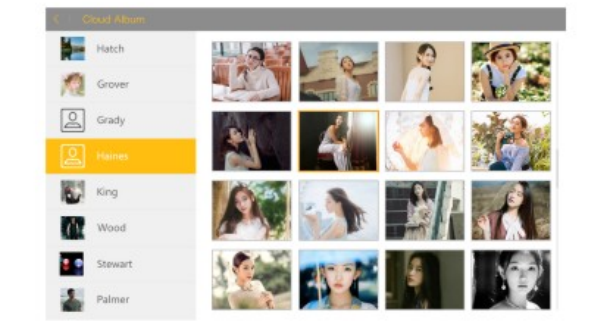

CLOUD ALBUM

In the Cloud Album, you can find those photos sent through mobile phones which are already categorized by different account. By this way, it's easy for you to locate which family member's photos

Select & touch one category, you can review and start this album's slideshow..

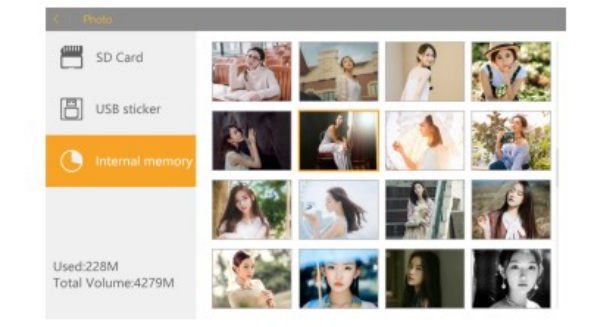

The main menu is shown as above, you can touch the icons on the panel to enter different functions.

The menu consists of CLOUD ALBUM, PHOTO, MUSIC, VIDEO, CALENDAR, SETTING, INFORMATION, CLOCK & WEATHER.

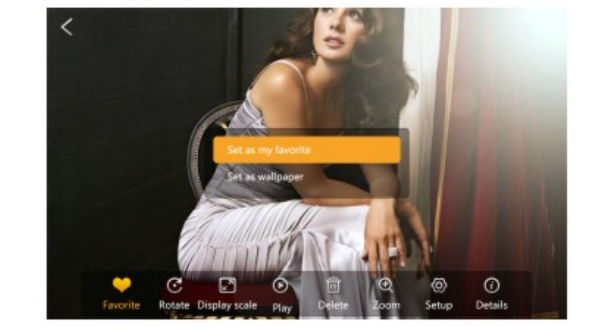

PHOTO

When you touch the Photo function, the slideshow begins automatically. Touch the panel during slideshow, the Frame will pause and pop up a menu.

Favorite - Highlight your favorite photos or set your favorite photo as wallpaper.
Rotation - Adjust photo to suitable angle by tapping this icon.
Aspect Ratio - Select to display photo in Original ratio or Auto-set full screen.
Play/Pause - Play or pause the slideshow.
Delete - Delete the current photo.
Zoom+ - Zoom in the current photo.
Settings- Set up the Calendar Background, Slideshow Effects, Slideshow Interval & Background Music.
Info- Check the current photo information.

Tapping the left arrow on the top left to exit slideshow, and choose to display from different categories.

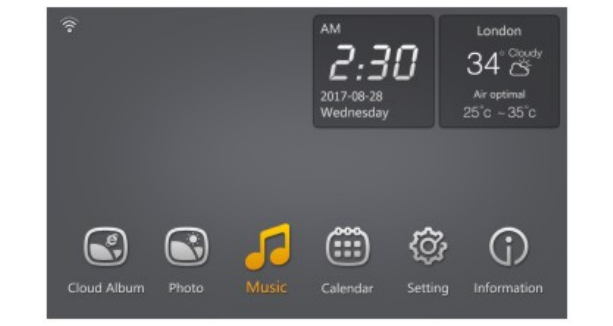

Music

Tapping the Music icon from main menu to active the music player, which supports playing music from SD card, USB stick or Local memory.

Select the playlist from the left side and tap on the function icons on the bottom to switch play/pause/previous song or next song. Control volume by touching the sound bar at right.

Option

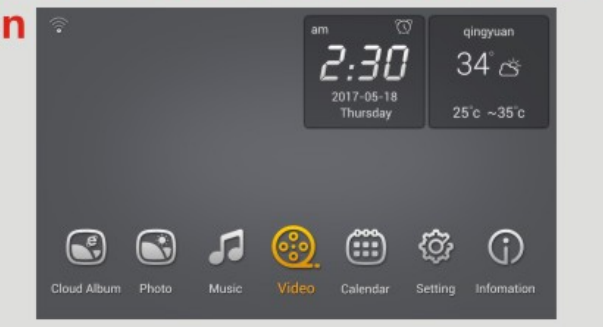

Video

Tapping the Video icon from main menu to active the video player, which supports playing videos from SD card, USB stick or Local memory.

Easy control the video playing status by tapping on the function icons.

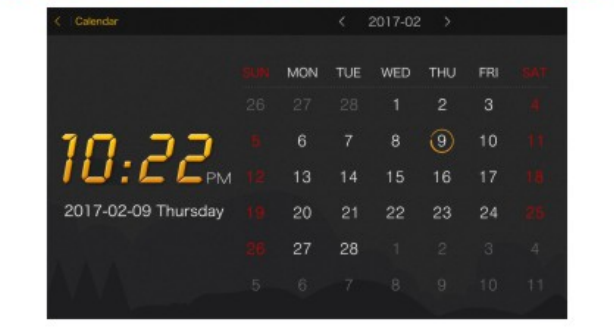

Calendar

Tapping the Calendar icon from main menu to read Clock & Calendar. By tapping on the right & left arrow on the top to switch monthly.

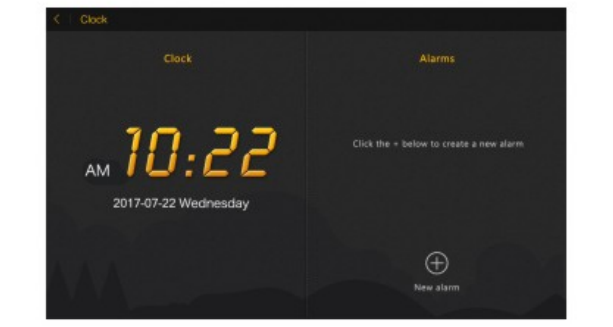

Clock

In the Clock & Alarm function, you could adjust the time setting and set up different alarms.

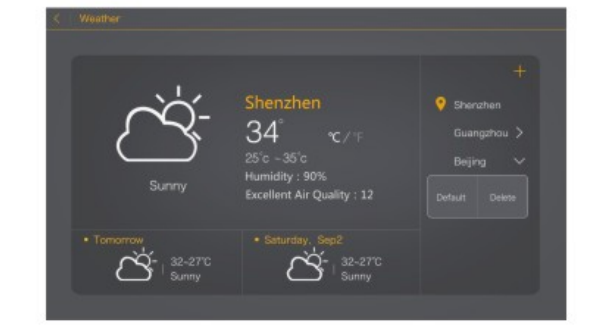

Weather

When you setup your location, the weather forecast will automatically show 3days weather of your local city. You can see different cities weather by adding others city, tapping on the city name to switch city's weather.

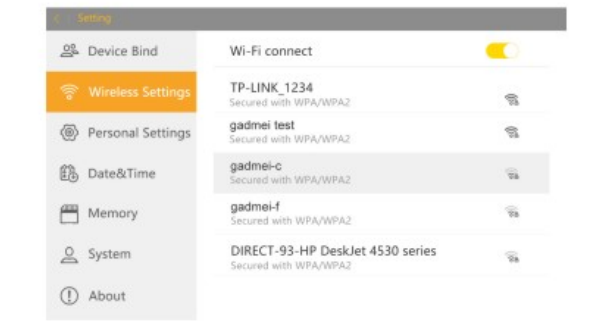

Settings

In the settings menu, you will have many options to customize the way your WiFi Digital Photo Frame operates.

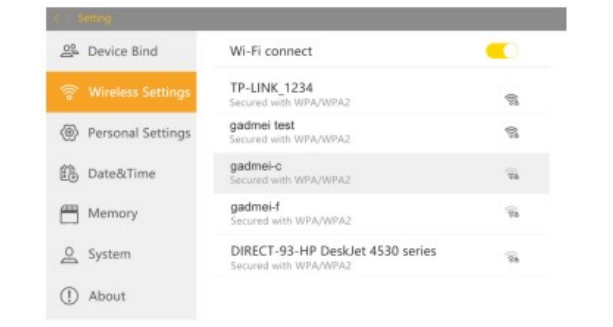

1.WiFi Connection
You can enable or disable the WiFi connection in this setting. When the WiFi is enable, the frame will scan all available WiFi and show below, choose the available WiFi and enter right password to connect the Frame with internet.

If the WiFi is set to invisible, your can build the connection by Other Network and enter the WiFi name & password.

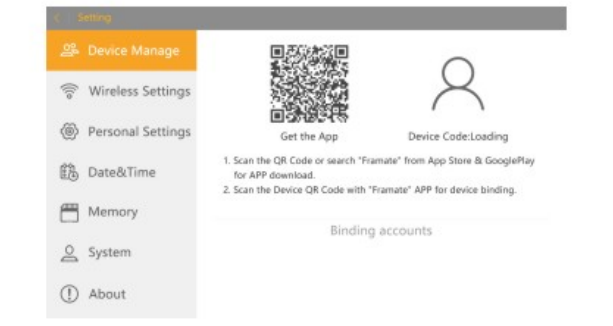

1. Scan the QR Code or search "Framate" from App Store & GooglePlay for APP download.
2. Scan the Device QR Code with "Framate" APP for device binding.

2.Device Manage
n this setting, you can find the Application download QR code and the Device QR code. Follow the instruction to bind your phone the WiFi Photo Frame.

Besides, you can manage the phone accounts binding to this frame.

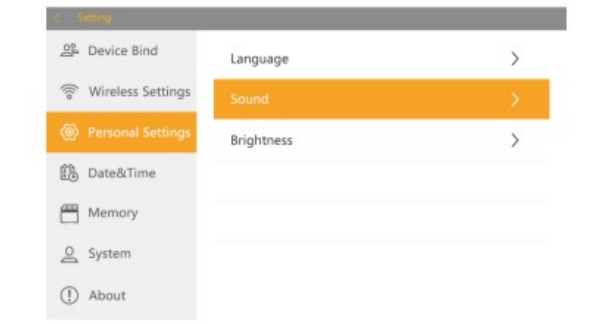

3.Customized Settings
-Language: Different languages for options.
-Country: Different countries for options.
-Sound: To adjust the media volume and notification volume, enable the touch sounds.
-Brightness: To adjust the brightness of the display.
-Screensaver: To turn on/off the screensaver and adjust the relative settings.
.

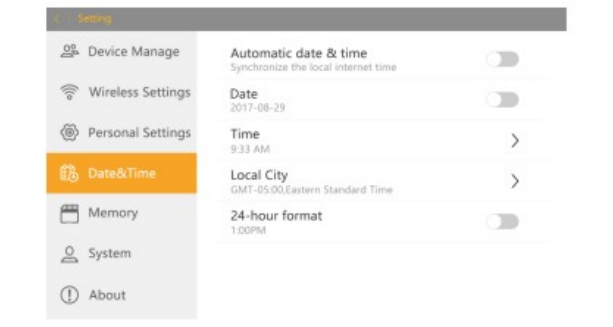

Automatic date & time: Synchronize the local internet time
Date: 2017-08-29
Time: 9:33 AM
Local City: GMT-05:00,Eastern Standard Time
24-hour format: 1:00PM

4.Date & Time
To adjust the date & time setting for the frame.

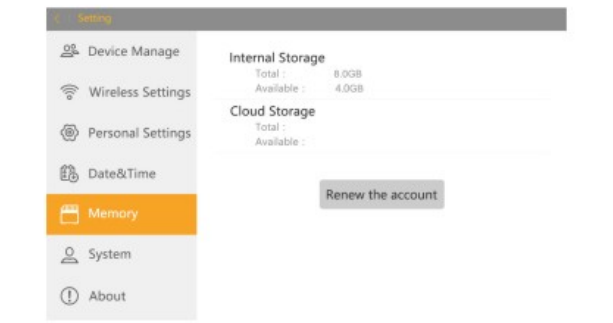

Internal Storage
Total : 8.0GB
Available : 4.0GB
Cloud Storage
Total :
Available :

5.Storage & Cloud Usage
You can find the frame internal memory storage information here, as well as SD card & USB stick if available. The cloud storage & service condition are available to check from here.

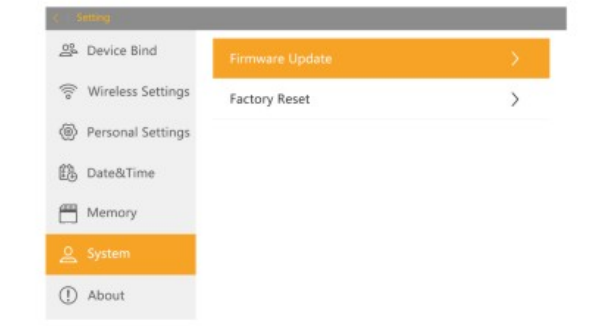

6.System Manage
To update the system online or restore the system to default settings.

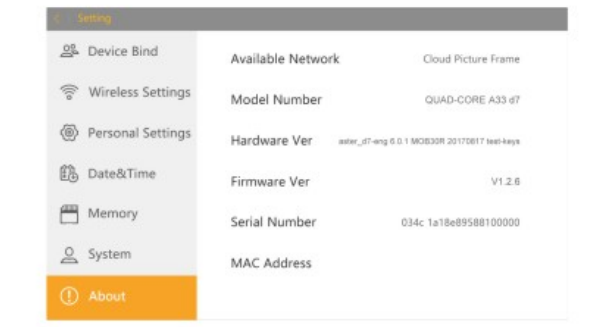

Available Network: Cloud Picture Frame
Model Number: QUAD-CORE A33 d7
Firmware Ver: V1.2.6
Serial Number: 034c 1a18e89588100000
MAC Address

7.About
This option display system information of the frame.

Specifications

Panel Size	10.1" LCD (1280 x800)
Memory	8G
WiFi	YES
Media Slots	SD（SDHC）/ USB stick Max 32G
Photo Formats	JPG
Music Formats	Mp3
Adapter Power Input	AC110-240 ~ 50/60Hz
Adapter Power Output	DC5V ⎓ 2A
Power Consumption	≤10W

Disposal of the product
In order to preserve the ecology please dispose of this unit properly so that it can be recycled. Do not dispose to unsorted waste.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE:THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.SUCH MODIFICATIONS COULD VOID THE USER' S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged totry to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

封底