GDR 43 3B LT

STEP 1

Putting Opener into Programming Mode

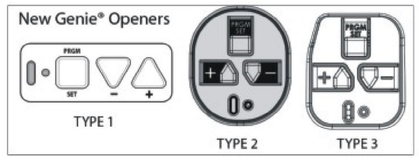

These are 3 types of programming button pads. Type 1 is shown in these steps. All buttons perform the same function and programming is the same for all types shown above.

Place operator into programming mode:

TYPE 1-2-3

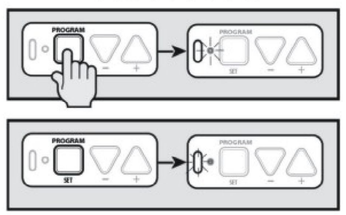

1. Press and hold the program button until the round LED turns blue, then release.
2. The round LED will go out and the long LED will begin flashing purple.

Proceed to STEP 2

-OR

Genie® openers and external receivers manufactured between 1995 to 2011

Place operator into programming mode:

1. Press & release Learn Code button once. The red LED will begin to flash.

Proceed to STEP 2

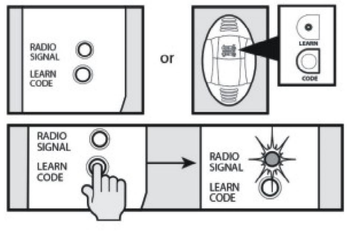

STEP 2

Programming a Remote to the Opener

Note: Once in programming mode, you will have approximately 30 seconds to perform this step.

Note: While programming remote buttons, stand at least 5 feet away from the opener. This ensures you have proper communication between the remote and the opener.

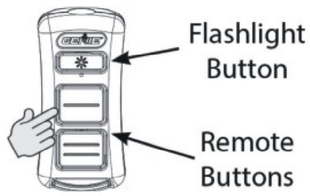

1. Slowly press and release the remote button of your choice two times. The opener LEDs will flash and go off, indicating you have successfully programmed your remote.
2. Press and release the same button a third time and door will open or close.

NOTE: It is possible to press the remote button too quickly or lightly. If the LEDs do not go OFF, press the remote button several more times to achieve confirmation.

STEP 3

Lost or Stolen Remote/Erasing all Remotes

Instruction pertains to all button pad TYPES shown in section 1

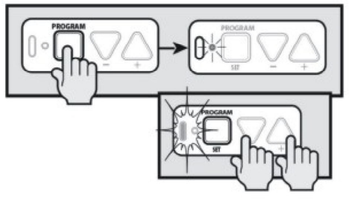

New Genie® Openers

1. Press and hold the program button until the round LED turns blue, then release.
2. Press and hold the Up(+) Down (-) buttons at the same time, until the both LEDs flash blue and go OFF.

-OR

Genie® openers and external receivers manufactured between 1995 to 2011

- To erase all remote devices from all other types of Genie® openers, press and hold the Learn Code Button until the LED stops blinking.

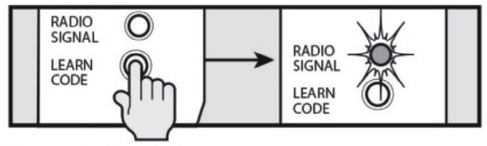

Start at step 1 to reprogram your remotes.

NOTE: Clearing remote control memory from the power head will clear ALL programmed remote sand wireless keypads. Your opener will no longer recognize any signal from any remote device, including a missing remote device.

STEP 4

Using the LED Flashlight

Press the LED Flashlight button once.

LED Flashlight will operate until button is pressed again or when 4 minutes have passed.

After 4 minutes the LED will flash indicating that light will turn off automatically.

a) The statement “Remove and immediately recycle or dispose of used batteries according to localregulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.”

b) The statement “Even used batteries may cause severe injury or death.”

c) The statement “Call a local poison control center for treatment information.”

d) A statement indicating the compatible battery type(CR2032).

e) A statement indicating the nominal battery voltage.

f) The statement “Non-rechargeable batteries are not to be recharged.”

g) The statement “Do not force discharge, recharge, disassemble,heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage orecplosion resulting in chemical burns.”

a) The statement “Ensure the batteries are installed correctly according to polarity (+ and -).”

b) The statement “Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.”

c) The statement “Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.”

d) The statement “Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.”

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
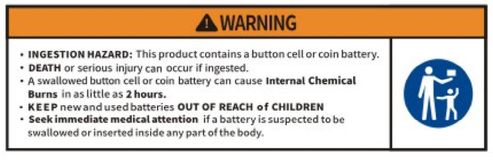
(2) This device must accept any interference received, including interference that may cause undesired operation.