ART DEPARTMENT			
Job # / Filename 2017-07-07_SI_ToyRCMonsterSpinningCar_BlkBluRed_BlkRed		Product Line Sharper Image	
Designer Elena McMillin	Brand Manager Lisa Nagamoto	Finished Size 9.35" L x 7.38" D x 7.68" H / 23.75cm L x 18.7cm D x 19.5cm H	
File Format Adobe Illustrator CC (live)/CS4 (OL)	Fonts Trade Gothic, Univers, Helvetica, September, Eurostyle, Future Bugler	Color (Spot or 4C) 4 Color Process	# of Colors 4
Printing Process / Finishing Matte PP Coating		Comments	

MerchSource
All copyright, trademark and patent rights or any other intellectual property rights or material associated with the content provided herein, and its selection, coordination and arrangement of such content, are owned exclusively by METROSOURCE LLC., or any third-party licensors. The use or misuse of any copyrights/trademarks, patents or any other intellectual property or materials, except as permitted herein, is expressly prohibited. Any infringements shall be prosecuted to the fullest extent of the law, both foreign and domestic.

SHARPER IMAGE®

RC 360° RALLY CAR THUNDER TUMBLER®

BOX CONTAINS THE FOLLOWING FREQUENCY:
- ☐ 27 MHz
- ☐ 49 MHz

BATTERY OPERATED PLAY VEHICLE

AGES 6 AND UP

⚠ WARNING! CHOKING HAZARD - Small parts. Not suitable for children under 3 years.

SHARPER IMAGE®

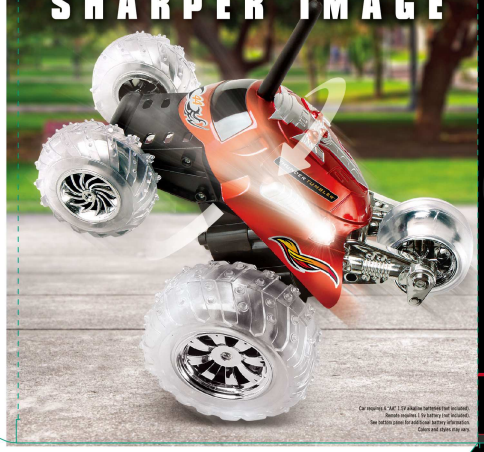

Car requires 6 "AA" 1.5V alkaline batteries (not included).
Remote requires 2 9V battery (not included).
See bottom panel for additional battery information.
Colors and styles may vary.

SHARPER IMAGE®

RC 360° RALLY CAR THUNDER TUMBLER®

AGES 6+

360 DEGREE SPINS
SPINS AND FLIPS

TWO FREQUENCIES
COMPETITIVE RACING

SHARPER IMAGE®

RC 360° RALLY CAR
THUNDER TUMBLER®

OPERATING INSTRUCTIONS

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

BATTERY DOOR

REMOTE CONTROL (SOLD SEP.)

LOCK/UNLOCK BUTTON

POWER ON/OFF SWITCH

BATTERY PACK (SOLD SEP.) SEE BATTERY INFORMATION

USE FRESH BATTERIES FOR BEST PERFORMANCE

Operation requires 4 "AA" 1.5V alkaline batteries (not included) for car and one 9V battery (not included) for remote control.

1. To open battery door, unscrew screw.
2. Locate the battery compartment on the back of the car. Insert batteries as indicated.
3. Prevent debris on bottom of car to release battery pack, as it could damage wheels.
4. Insert battery pack and remote battery to "ON" position.
5. To operate car, hold the car on hard surface such as wood or tile.

GENERAL CONTROLS

ACTION BUTTON

Action Button
Press and hold the action button to have the car perform a spinning action.

Spinning Action
Press and hold the control stick to activate the spinning action.

SPINNING ON REAR WHEEL (ACTION BUTTON)

Forward
Press both control sticks forward.

Reverse
Press both control sticks backward.

To perform the car in 360 degrees, push the control sticks in opposite directions.

SAFETY PRECAUTIONS

- Always supervise children when using this product.
- Do not operate car in the street or highway.
- Do not operate car near water, on grass or in dirt.
- Do not operate car in the presence of children.
- Do not operate car in the presence of flammable gases or explosive materials.
- Do not operate car in the presence of electrical appliances.
- Do not operate car in the presence of metallic objects.
- Do not operate car in the presence of other cars.
- Do not operate car in the presence of other cars.
- Do not operate car in the presence of other cars