底部不干胶尺寸：884x52mm

MINISO

PRODUCT MANUAL
MANUEL D'UTILISATEUR
دليل المستخدم
MANUAL DE USO
使用說明書

METAL LOW BASS WIRELESS SPEAKER
HAUT-PARLEUR MÉTAL SANS FIL FAIBLE BASSE
سماعة لاسلكي مضخم صوت معدن
ALTAVOZ INALÁMBRICO METÁLICO DE GRAVE BAJO
金屬重低音藍牙音箱

MODEL: A109

Dear customer

Thank you for using Miniso Wireless Speaker. Please read this manual carefully before use. Using it properly can enable it to release the best function. MINISO Wireless Speaker has stylish appearance, true-to-life sound and multiple functions. The whole series have the patent of appearance design. The system adopting the industry-leading technology enables you to enjoy the excellent sound effects anytime at home, outdoors, during a trip or during work. It provides perfect experience when you play music on your laptops, digital music players and other audio-visual players, leading you to a better life with beautiful music!


Specifications


Model No.: A109
Bluetooth Pairing Name: MINISO-A109
Bluetooth Version: Bluetooth V5.1
Battery Capacity: Lithium-ion battery 3.7V/600mAh
Sound System: Stereo
Charge Time: About 2 Hours
Music Playtime: About 3.5 Hours (At 70% Volume)
Standby Time: 2 Days
Support Protocols: A2DP,AVCTP,AVDTP,AVRCP, HFP,SPP,SMP, ATT,GAP,GATT,RFCOMM,SDP
Input Charging Standard: Micro USB, DC5V / 500mA
Frequency Response: 60Hz-18KHz
Wireless Effective Distance: Single speaker≥10 meters, Double speakers≥7 meters

Cautions

1. Use and store the product at room temperature.
2. Do not expose the product to rain or damp environment.
3. Do not drop the product in case of damaging it.
4. Do not disassemble, repair or modify the product by yourself.
5. Has built-in irreplaceable Lithium-ion battery. Do not throw the product in fire to avoid danger.
6. Children are not allowed to use the product.
7. Keep it away from strongly magnetic objects to avoid affecting the function of the product.
8. To prolong battery lifespan, charge the speakers at least once every 3 months if not using them for a long time.

Product Overview

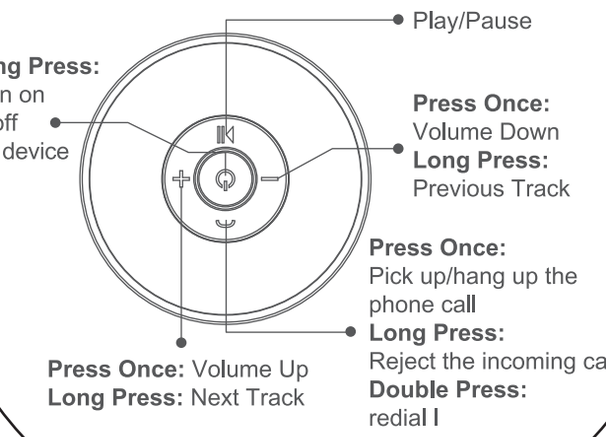

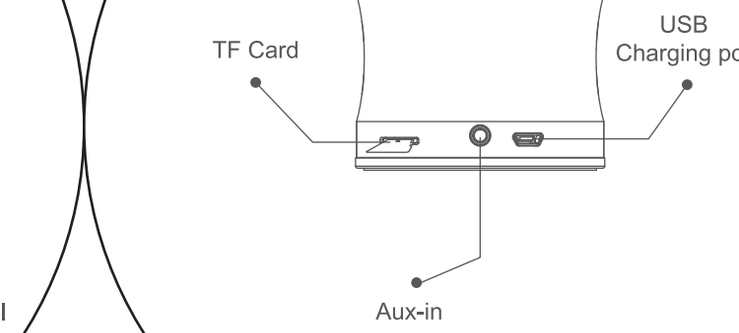

Function and Operation Instructions

Turn On: Hold the power switch for 3 seconds to turn on the speaker, the blue indicator light will flash.

Turn Off: Hold the power switch for 3 seconds, the blue indicator light will dim out.

Pairing Mode: When turned on, press twice the Power Switch of either of the speakers, it will enter pairing mode, and the blue indicator light flashes slowly when pairing is successful.

Successful Pairing: Blue indicator light flashes slowly. When the BT is successfully paired with the phone: the blue light stays on.

Answer/Hang up a call: Press Phone call button to answer or hang up a call.

Reject an incoming call: Hold the Phone call button for 3 seconds to reject the incoming call.

Redial: Press the Phone call button twice to redial.

Previous/Next Track: Long press Volume button to previous/next.

Volume up/down: Press Volume button to increase/ decrease the volume.

Power status: Can be shown on the screen of the phone operated in IOS system.


Charging: Red indicator light stays on.

Fully Charged: Red indicator light off dims out.


Low Battery: A prompt “Beep” will be heard.

Operation Instruction Chart


Quick-start Guide

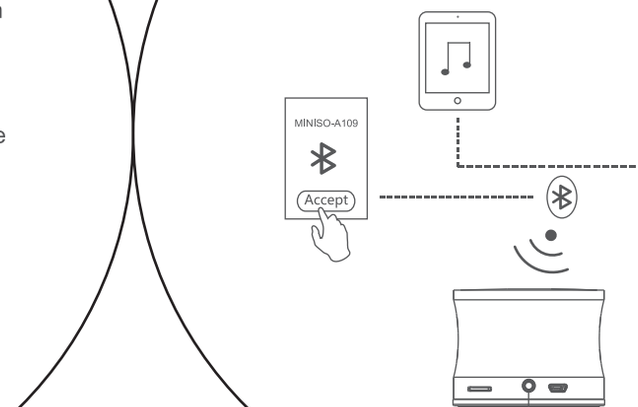

Two-machine Interconnection
For Pairing Mode (Another one needs to be purchased separately)




1. The Bluetooth of device has been turned off.
2. Make sure no micro SD card is inserted in your speaker
3. Hold the power switch to turn on both devices



4. Double click the Power Switch of one of the speakers. When a prompt “Du” is heard, BT is successfully connected and the blue indicator light is on. (If not paired in 30 secs, repeat steps 2 and 3.
5. Turn on Bluetooth settings to search and get paired. The blue indicator light flashes slowly when successfully connected.

Note:
a. After successfully paired for the first time, both devices will automatically pair with each other and connect to your BT device next time.
b. If failing to auto pair, remove BT device from the records on your device and repeat all above steps to get paired again.

Reset
When the device crashes and is out of control, you can reset it. Find the Reset touch point in the Memory card slot (the silver cube in the middle of the green panel under the hole). Use a round needle (sewing needle, cell phone card thimble, bent straight paper clip or any other thin needle that can conduct electricity) to drag across the Reset touch point.



Status of Indicator Light

	Red Light	Blue Light
Charging	Stay on	⁄
Fully Charged	⁄	⁄
Standby	⁄	Stay on
Playing	⁄	Flashes slowly
Reading card	⁄	Flashes slowly
BT Searching	⁄	Flashes quickly

Accessories

Charging Cable*1, Wireless Speaker*1, User Manual*1

Troubleshooting

1.Wireless speaker fails to connect to the phone.
Solution: Check if the speaker is in Pairing Mode and whether the phone has BT function on and is searching for pairing device. Or check the list of BT device on your digital device and remove Speaker from the list, and follow the user manual to reconnect the speaker with your device.

2.Cannot turn on the speaker.
Solution: Check if your speaker has sufficient battery, and charge the device.

3.Can the battery of the Wireless speaker be replaced?
Answer: No. Lithium-ion polymer in the speaker is not removable.

4.Can I use the speaker at a high volume for a long time?
Answer: To prolong the use life of the speaker, that is not recommended.

5.Unable to connect the speaker with the phone within 10 meters
Solution: BT is wireless so that it is very sensitive to objects between the Speaker and the connected device. Check if there are any metal or other objects that may affect connection within the effective distance.

6.Cannot hear audio playing when the speaker is connected to the computer or phone.
Solution: Check whether the computer’s audio output is already connected to Wireless device and whether the Bluetooth in the computer supports A2DP protocol. Make sure the volume is up on your phone or computer.

7.Can I operate the Apps of my phone through the Speaker after connecting the BT speaker to the phone?
Answer: Some apps may not support being operated through the speaker due to their settings.

FCC Warning:
This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

底部不干胶尺寸：884x52mm