LUGULAKE®

Living a Beautiful Life

To Lugulake Customer:
We are always here to solve your problem.
Contact us, we will respond
you within 24 hours.
Email: support@lugulake.us
Tel: 1-626-244-8606
Website: www.lugulake.us

LUGULAKE®




T-200X User Manual

FCC ID:2ANY4T-200X

2.1 Computer Multimedia Speaker

LUGULAKE®

Package Contents:

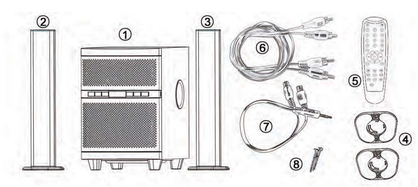

① 8" Subwoofer	1 pcs	⑤ Remote Control	1 pcs
②, 2" L Speaker	1 pcs	⑥ RCA Cable	1 pcs
③ 2" R Speaker	1 pcs	⑦ 3.5mm-to-RCA Cable	1 pcs
④ Speaker Floorstand	2 pcs	⑧ Hook for TV soundbar system installation	1 bag

LUGULAKE®


Specifications:

BT Protocol: A2DP, BT 4.0 Enabled
Output power(RMS): 35watt*1+17.5watt*2
Frequency Response: subwoofer 30HZ-104HZ; L/R speaker 135HZ-20KHZ
Power Supply: 100-120v ~50/60Hz 0.4A
S/N Ratio:>= 70dB, separation:>=40dB
Size: 240W*345D*354Hmm （9.45*13.58*13.94inches）
subwoofer: 405W*50D*66Hmm(15.95*1.97*2.60inches) L/R speaker
Net Weight: 6.6 kg （14.54 pound）

LUGULAKE®


Keys on remote and panels of subwoofer

Front panel keys:

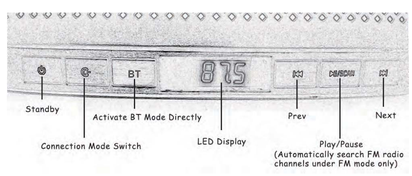


LUGULAKE®

Back Panel keys:

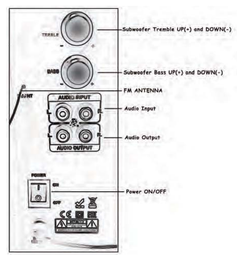

LUGULAKE®

Remote control:

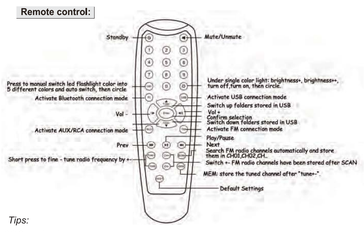

Tips:

* 0-9 number keys:
1.under FM connection mode:
press "1" to select "CH01" which has been stored after "SCAN"
press "1014" to select "101.4"MHz radio channel
2.under USB connection mode:
press "1" to select the song numbered in "1" in current folder.


* For FM connection mode use only:
Tune+ - , CH+ - , MEM , SCAN

* For USB connection mode use only:
Folder ∧ ∨ : switch up and down folders stored in USB


LUGULAKE®

Installation:

1.TV Soundbar System install

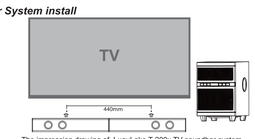


The impression drawing of LuguLake T-200x TV soundbar system

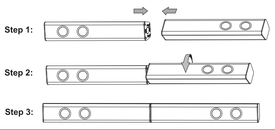

LUGULAKE®

2.Floorstand computer speaker system install

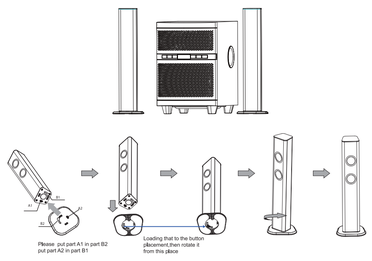


LUGULAKE®

Connection mode:

a.AUX (RCA) connection

1.TV&DVD/CD Connection

Step1: Finish cable connection as in the following pic:

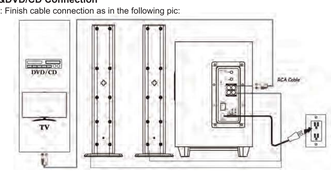

Step2: Press power-on on the back panel of subwoofer.
Step3: Press ⏻ on the front panel of subwoofer or on the remote.
Step4: Press ✱ on the front panel of subwoofer to "AU" mode or Press AUX on the remote to activate AUX mode. " AU " will be shown on the LED display.
Step5: Play Audio/video files on your devices to enjoy.
Other steps: volume up or down, tremble up or down, bass up or down, LED light changing for your actual use.

LUGULAKE®

2.Computer, DVD/CD, iPod/MP3,Note book Connection

Step1: Finish cable connection as in the following pic:

Step2: Press power-on on the back panel of subwoofer.
Step3: Press ⏻ on the front panel of subwoofer or on the remote.
Step4: Press ✱ on the front panel of subwoofer to "AU" mode or Press AUX on the remote to activate AUX mode. " AU " will be shown on the LED display.
Step5: Play Audio/video files on your devices to enjoy.
Other steps: volume up or down, tremble up or down, bass up or down, LED light changing for your actual use.

LUGULAKE®

b.BT connection


Step1: Finish cable connection as in the following pic:

Step2: Press power-on on the back panel of subwoofer.
Step3: Press ⏻ on the front panel of subwoofer or on the remote.
Step4: Press ✱ on the front panel of subwoofer or Press BT on the remote to activate BT mode.
" bt " will be shown on the LED display in the front panel of subwoofer
Step5: activate Bluetooth on your source device(phone,pad,etc) and search "TV BAR", pair (default pair code 0000, if needed).
Step6: Play Audio/video files on your devices to enjoy.
Other steps: volume up or down, tremble up or down, bass up or down, LED light changing for your actual use

LUGULAKE®

C:USB connection

Step1: Finish cable connection as in the following pic:

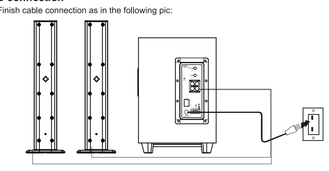


Step2: Press power-on on the back panel of subwoofer.
Step3: Press ⏻ on the front panel of subwoofer or on the remote.
Step4: Press ✱ on the front panel of subwoofer to USB mode or Press USB on the remote to activate USB mode. USb will be shown on the LED display
Step5: Play Audio/video files on your devices to enjoy.
Other steps: volume up or down, tremble up or down, bass up or down, fold up or down (on remote), LED light changing for your actual use.

LUGULAKE®

d:FM connection

Step1: Finish cable connection as in the following pic:

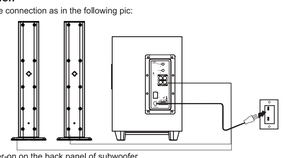

Step2: Press power-on on the back panel of subwoofer.
Step3: Press on the front panel of subwoofer or on the remote.
Step4: Press on the front panel of subwoofer to FM mode or Press FM on the remote to activate FM mode.
FM will be shown on the LED display
Step5: Press " H/SCAN " on front panel of subwoofer or on the remote to automatically search FM radio channels and memorize them in "CH 01" "CH02" "CH…".
Step6: Enjoy your radios by switching channels with pressing number on the remote.
For example: press 1, it will switch into "CH 01".
Press "875" to select 87.5 MHz channel, "1026" to select 102.6 MHz channel.
Other steps: volume up or down, tremble up or down, bass up or down, LED light changing for your actual use.
LuguLake T-200X supports Digital FM with 100 channels capacity from FM 87.5MHz to 108MHz.

LUGULAKE®

More Information:

a.Warning

- Do not place T-200x in the high-temp, humid environment, preventing it from raining.
- In order to avoid electric shock or other accidents, do not disassemble T-200x without any professional guidance.
- In case any liquids sparked into the subwoofer, switch off the power and unplug the power cable immediately.
- Do not keep T-200x close to the fire.

b.Problem shooting

Problem	Possible Cause	Solution
T-200x does not turn on	Power cable not connected	Check connection
T-200x does not respond to remote	Battery is empty	Replace battery
Sound reproduction too soft	Volume of T-200x too low	Increase volume of T-200X and your source device
BT can not connect	Error BT driver/software installed in your source device	Get the right BT driver/software from your device retailer and install
No sound reproduction	Source device produces no signal	Digital output on the source device not activated
	Cable connected in error/defective cable	Check the connection of the source device to T-200x, or change the cable if necessary
	Under BT mode, distance is too far	Put your BT source device close to T-200x
	BT source device not connected successfully	Restart T-200x

LUGULAKE®

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Warranty:

LuguLake One-Year Limited Warranty Summary
LuguLake warrants the included speaker products and accessories against defects in materials and workmanship for one year from the date of original retail purchase. LuguLake does not warranty against normal tear, nor damage caused by accident or abuse. Call charges and international shipping charges may apply depending on location.
LuguLake offers technical support service for lifetime free.
Easy to contact by:
Tel: 1-626-244 8606
Email: support@lugulake.us
We are always here to solve your problems.