
版本号:V1

此页为封面


Quick Installation Guide

DEVICEINFORMATION

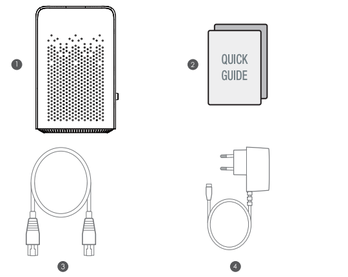


1. Router
2. Quick Guide
3. Ethernet cable
4. Power Adapter

DEVICEINFORMATION

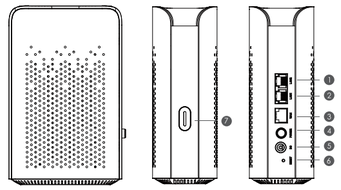

1. LAN2
2. LAN1
3. WAN
4. POWER
5. DC
6. RESET
7. Mesh

CONNECT

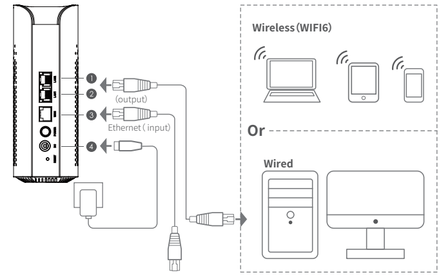

GET TO KNOW THE ROUTER

LED indicators

Color	Status	Description
Red	Solid on	Power on and start.
	Blinking	Failed to connect to the internet.
Green	Solid on	Networking succeeds. Excellent connection quality.
	Blinking	Networking succeeds. Poor connection quality.
Blue	Blinking	Networking by MESH button
Off		Power off

Ports & Buttons

Port/Button	Description
RESET	Reset button. To restore the Device to factory settings: After the Device completes startup, press the button for more than 5 seconds and release it. All LED indicators will light off in a few seconds.
DC	Power jack. Please use the included power adapter to connect the Device to a power source.
POWER	Power switch. Used to switch on/off the Device power.
WAN /LAN	WAN ports. Used to connect to a modem or the Ethernet jack for internet access. LAN ports. Used to connect to such devices as switches, computer and game machines.

SUGGESTIONS/COMMON PROBLEM

For optimal WiFi performance, it is recommended to position the router according to the following guidelines:
- Place the router in an elevated, open, and unobstructed location, avoiding confined spaces or corners.
- Ensure all router antennas are positioned upright.
- Keep the router away from metal obstructions such as electrical boxes and metal racks.
- Position the router away from electrical devices that may cause interference, such as microwaves, ovens, refrigerators, and cordless phones.

Here are the steps to set up the router:
1.Power on the router.
2.Connect the WAN port of the router to the LAN port of your modem or the Ethernet jack using an Ethernet cable.
3.Connect your wireless client, such as a smartphone, to the WiFi network of the router. Alternatively, you can use an Ethernet cable to connect the computer to one of the LAN ports (1/2) of the router.

Here is the corrected version of the FAQ:
FAQ

Q1: I cannot access the internet after configuration. What should I do?
A1: Try the following solutions first:
Check if the WAN port of the router is properly connected to a modem or Ethernet jack.
If the issue persists, try the following solutions:
For WiFi-enabled devices, ensure they are connected to the WiFi network of the router.
For wired devices:
Check if your wired devices are connected to a LAN port properly.
Ensure that wired devices are set to obtain an IP address and DNS server address automatically.

Q2: How do I reset the router?
A2: When the router is working normally, press and hold the WPS/RST button for about 5 seconds. Release the button when the LED indicator blinks rapidly. The router will enter the reset mode. Do not disconnect the DC power supply during this process. Wait for about 2-3 minutes, and the device will restart.

FCC STATEMENT

FCC regulatory conformance：

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SAFETY INFORMATION

CAUTION!

NOTICE: To prevent fire and electric shock, do not expose this device to rain or moisture. In order to avoid any possible risk of electric shock, never attempt to open the unit. In case of the unit breaking down, repair of the unit should be carried out by qualified technicians. No part of this unit should be repaired by users.

Safety Precautions
Before conducting any operation, please read the operation instructions and safety precautions carefully and follow them to prevent accidents. The warning and danger items mentioned in other documents do not encompass all safety precautions that must be observed. They serve as supplementary information, and installation and maintenance personnel should understand the fundamental safety precautions that need to be adhered to.

For wall mounting, the equipment is suitable for mounting at heights ⩽ 2m only.
For desktop mounting, the device must be horizontally mounted for safe usage.
Do not use the device in areas where wireless devices are prohibited.
Please use the provided power adapter.
The mains plug serves as the disconnecting device and should be easily operable.
The power socket should be installed near the device and easily accessible.
Operating environment: Temperature: 0°C to 45°C; Humidity: (10% - 90%) RH, non-condensing; Storage environment: Temperature: -40°C to +70°C; Humidity: (5% - 90%) RH, non-condensing.
Keep the device away from water, fire, high electric fields, high magnetic fields, and flammable and explosive materials.
Unplug the device and disconnect all cables during lightning storms or when the device is not in use for extended periods.
Do not use the power adapter if its plug or cord is damaged.
If you notice smoke, abnormal sounds, or odors while using the device, stop using it immediately, disconnect the power supply, unplug all connected cables, and contact the after-sales service personnel.
Unauthorized disassembly or modification of the device or its accessories voids the warranty and may pose safety risks.

技术要求：

1. 成形尺寸：95 * 95mm
2.产品不能变形、压痕、划伤、脏污等缺陷
3.图案文字印刷清晰，色差在允许范围内
4.风琴折
5.80g书纸，4C

更改记录					
	DCN/ECN编号	版本	变更内容	签名	日期

设计		名称	说明书	材料	
产品部审核					
市场部审核				单位	mm
硬件版审核		型号		共 张	第 张
质量部审核		图号	SY.SMS.XXXX	深圳感臻智能股份有限公司	
审批		物料编号	XXXXXX	Shenzhen SEI Robotics Co., Ltd.	

未注尺寸公差	
0<L⩽200	1mm
200<L⩽400	2mm