Smart Pet Feeder



Product Manual

V 3.15.1

Catalogue

Please read this manual carefully before use to ensure safe use of the intelligent automatic feeder.




Feeder (subject to the actual product)

List of accessories (subject to the actual product)



1

Product Introduction

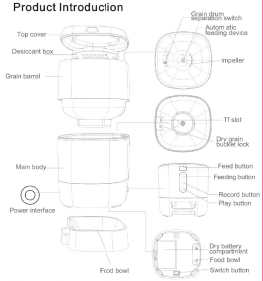

Battery use instructions: When the external power fails, the device will automatically enable the installed battery to power the device. (Note: the device cannot charge the battery)

2

Operation Guide

1、Thefirst use

(1)Openthe top cover of the feeder and remove the power cord adapter from the accessories.
(2)Plug he power cord into the power connector on the rear of the main unit and connectthe adapter to power.
(3)Place the main unit in a horizontal position and the food bowl is installed at the corresponding position of the main unit.
(4)Add pet dry food to the feeder bucket.
(5)The desiccant is placed in the desiccant box by default. Please replace it regularly for long-term use (do not use cleaning)
(6)The battery compartment can be installed with 3sections of No. 1 battery for manual feeding when
there is no electricity (optional).
(7)Bind the feeder to the Smart Life app to set up the feeding and planning of the pe.

2、Thefunction description

Feed button: Short press to eat one, long press for 5 seconds to restore the factory settings
Record button: Press and hold the "Record button" to record the sound to remind the pet to eat (10 seconds)
Play button: Plays the recorded sound.
Rocker switch: Feeder switch.
Dry battery compartment: Three ' st batteries can be installed for power supply.


3、BindSmart Life APP

3.1 APP download and installation

Scan the QR code below to download the Smart Life app and complete the installation.


3

3.2、Regis-tered APP

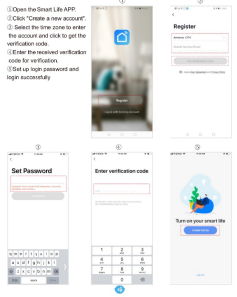


4

3.3、Quick Configuration

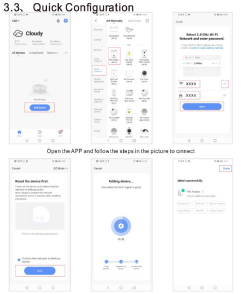

5


4、WiFi Feeder APP Interface Introduction

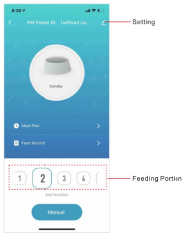

6

Cleaning/maintenance

Afterthe feeder has been used for a period of time, the bowl and the bucket should be cleaned with a cleaning agent to avoid the occurrence of bacteria that affect the health of the pet due b the long time left by the food residue.



1. The upper showed machine parts can be renoved from the main feeder and cleaned with detergent and water.
2. The drying box in the upper cover is rotated counterclockwise to remove it.
3. The grain drum is dismantled by rotating the "grain barrel separation switch".
4. The bowl is taken out by pulling down.
5. After cleaning, it must be dried or air-dried before being assembled into a whole main feeder for use.

▲ This feeder is suitable for dry foods smaller than 12 m m. Freeze-driedfood is not available. Please keep the environment dry.

7

Attentions

1. Please place the device correctly; prevent the pet from tipping over the device. This device is only suitable for small and medium pets under 20kg.
2. Please replace the desiccant in the storage lid regularly. No desiccant is needed.
3. Please keep the food bucket dry and sealed, and check regularly to ensure food residue.Precautions
4. Do not drop all substances other than pet dry food into the grain bin. Otherwise, the device may be used abnormally or even cause pet safety problems.
5. To prevent the pet from falling over the product, it is recommended to place the corner or against the wall.
6. The product anti-battering lineshould be installed as co-cealed as possible to prevent the equipment from being damaged by the pet biting the wire.
7. If children are using this device, be sure to use it under cdult guidance.
8. After installing the spare dry battery, you can manually operate the device to provide normal power supply during power failure.
9. Regularly clean the food bucket and food bowl.
10. This device is not recommended for young pets within three months.

Maintenance records:
Maintenance time:
Fault conditions:
Fault cause:
Trouble shooting:
Return and exchange proof:
Date of validity:
Original device ID:
New device ID:
maintenance personne signature:
Maintenance Department seal:

FAQ

Q:The feederis not connected, what is he problem, what to do?

A: 1.Check if the machine is normal: Check the status of the device indicator. After the power is turned on, the blue indicator light flashes. When the network is connected, it will be on. There will be a drop tone before the network is configured.
2.Check if the Wi-Fi username and password are normal: Wi-Fi username and password cannot have special characters. It is recommended to use English letters + number signs.
3.Uninstall the software and reinstall the software.Please authorize the APP to obtain the location information and access the network permissions during the installation process.
Follow the above steps, and enter the correct wifi password. If you still have difficulties, please contact customer service.

Q:When connecting the feeder, sometimes it can be connected normally, sometimes not. how to dea with it?
A:Check if the machine's food outlet is blocked. At this time, the blue indicator is always on.

Q:Why does the feeding time differ by tens of seconds from the current time?
A:The parameters set on the APP will have an error of about 30 seconds depending on the timing of he network environment.

Q:How to quickly reconnect after the machine is disconnected?
A: 1.Exit the APP and re-enter, wait for the data update.
2.Switches from the feeding interface to the video interface and waits for the video to refresh.

Q:Feeder requirements for network type?
A:The feeder must use a wifi signal that satisfies the wifi 802.11bgn protocol.

FCC Statement:

This equipment has been tested and found to comply with the imits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmfu interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by oneor more of the following measures:
- Reorient or relocate the receiving antenna.
- In crease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Caution: An> changes or modifications to this device notexplicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC R ules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference hat may cause undesired operation.

RF Exposure Information:

This equipment complies with FCC radiation exposure limits se forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &your body.

单页尺寸：100*127mm