

AG-10N说明书

280×420mm 竖对折，横4折

受控文件

版本

变更记录

A0

初版发行

A1

删除电池后盖文字

A2

横3折 更改为 横4折

折后尺寸：140x105mm

AROMA®



AG-10N
ELECTRIC GUITAR AMP

User Manual

EN

AROMA®



AG-10N
多功能电吉它音箱

用户手册

CN

非常感谢您购买AROMA品牌音箱AG-10N。

本手册讲述了AG-10N的安装和操作信息，为了帮助您充分了解、使用您的新设备，请仔细阅读，并将其保存以供日后参考。

重要安全说明

避免放置的地方

- 直射阳光处
- 潮湿或潮湿的环境
- 灰尘过多的地方
- 强烈震动的环境
- 靠近磁场的区域

⚠ 电源

本产品内置可充电锂离子电池，即使长时间不使用，建议每三个月充电一次，以确保电池性能。为获得最佳电池寿命，请在-10至45度的环境下使用。

远离其他电源设备

将本产品远离手机或无线发射设备，以避免使用时受到干扰。

小心操作

避免用力按压按钮或操作部件，以防损坏设备。

清洁

如设备表面变脏，请用干燥的软布擦拭。不要使用含有易燃化学成分清洁剂，如苯或稀释剂。

防止异物进入

请勿将液体容器放置在产品旁边。如果液体进入设备，可能会导致设备故障、火灾或电击。请特别注意不要让金属物品进入设备内部。

主要特征

便携设计：小巧设计，轻松携带，随时随地享受音乐。

续航能力：内置大容量锂电池，配备Type-C充电口，随时保持“满能量”。

功率出色：10瓦输出，为您的演奏提供足够动力。

数字先锋：采用先进的DSP处理技术，带来卓越音质。

丰富音色：提供3种高品质音色，满足各种音乐风格需求，还包含延迟（Delay）和混响（Reverb）两种基础空间效果。

智能控制：内置触控功能，增加演奏的节奏感。


智能连接：具备蓝牙和OTG功能，轻松直播和录制，设备互联互通。

连接音箱

1. 将音箱的主音量旋钮（MASTER）调至最小位置，避免开机时音量过大。
2. 将吉他连接线插入音箱面板上的输入接口（INPUT），完成吉他与音箱的连接。
3. 长按电源开关按钮（POWER），开启音箱。
4. 调节音量旋钮至合适音量，如按模式按钮（MODE）切换想要的音色，并根据需要调整音色，达到理想的音效效果。
5. 如需使用鼓机、蓝牙，根据鼓机、蓝牙说明进行操作。

按照以上步骤操作，您即可顺利开始演奏！

面板介绍

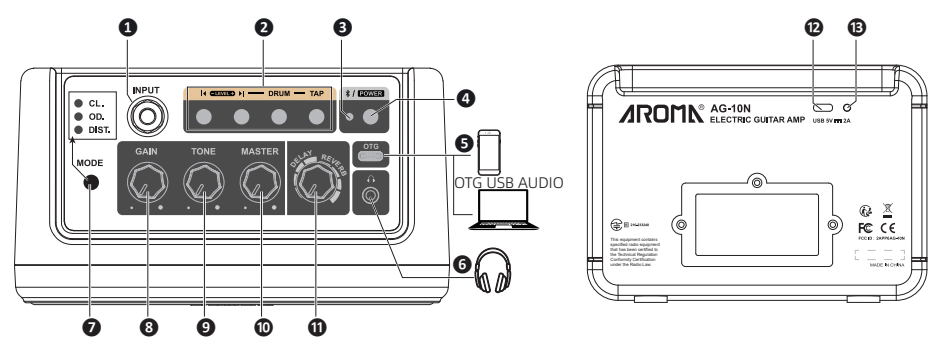

- ① INPUT: 电吉它6.35mm输入口
- ② 鼓机模块: 参见“鼓机功能”
- ③ 电源/蓝牙指示灯: 手机后指示灯常亮，如果电池电量低，指示灯短暂闪烁，并发出提示音警告您需要充电。开启蓝牙后，将会有提示音且持续闪烁，手机连接蓝牙后，指示灯常亮
- ④ 蓝牙/POWER: 长按开启/关闭电源，短按开启/关闭蓝牙
- ⑤ OTG: OTG USB 数字音频信号输入/输出口
- ⑥ 耳机接口: 3.5mm耳机接口
- ⑦ MODE: 音色切换按钮，短按切换不同音色，与LED指示灯同步
- ⑧ CL: Clean清亮音色 | OD: Overdrive过载音色 | DIST: Distortion失真音色
- ⑨ GAIN: 增益旋钮，控制乐器输入的增益值
- ⑩ TONE: 音色旋钮，控制乐器的音色
- ⑪ MASTER: 总音量旋钮，控制乐器信号总音量
- ⑫ DELAY/REVERB: 延迟/混响按钮，调节延迟/混响总量
- ⑬ USB SV: Type-C电源充电口，5V=2A; 参见“产品充电”
- ⑭ 充电指示灯: 充电时指示灯呈红色常亮，充满后指示灯呈绿色常亮。

鼓机功能

本音箱配备了强大且实用的内置鼓机功能，丰富您的音乐创作和练习体验。

一、主要特点

1. 即兴练习支持: 提供随时随地的即兴练习支持，让您捕捉音乐灵感。
2. 丰富的节奏型选择: 提供20种不同节奏类型，涵盖多种风格，满足您的多样化需求。
3. TAP 速度控制: 独特的Tap按钮，通过按键速度控制鼓机节奏，增强演奏的灵活性和趣味性。

二、鼓机操作

1. “H M”按钮: 短按: 选择上一首或下一首节奏型。长按: 调节鼓机音量。
2. “DRUM”按钮: 开启或关闭鼓机功能。
3. “TAP”按钮: 通过按键速度直接控制鼓机速度。

三、本音箱共有20条鼓机节奏（参见下图鼓机节奏表）


001	002	003	004	005	006	007	008	009	010
Pop1	Pop2	Pop3	Shuffle1	Rock1	Metal1	Metal2	Shuffle2	Funk1	Jazz
011	012	013	014	015	016	017	018	019	020
Funk2	Rock2	Rock3	Metal3	Rock4	Metal4	Latin	Samba	Fusion1	Fusion2

无论您是专业音乐人士还是音乐爱好者，这款音箱的鼓机功能将为您的音乐旅程增添色彩。

产品充电

当音箱蓝牙指示灯短暂闪烁一次并伴随“滴滴”的提示音时，表示电量低，需要充电。

1. 请使用随附的Type-C充电线，并选择具有正规安全标志、输出5V=2A的充电器或移动电源。
2. 充电过程中，充电指示灯会呈红色，当指示灯常亮绿色时表示充电完成。

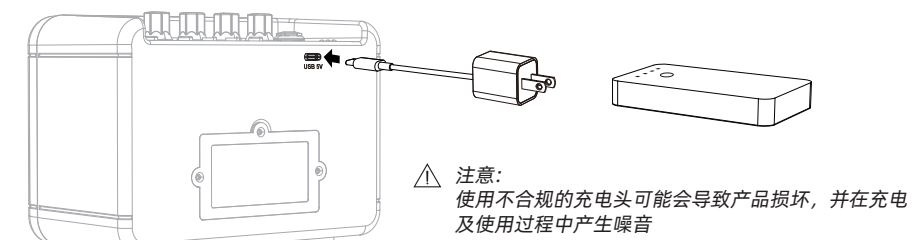


电池拆卸及安装

1. 使用螺丝刀拧开电池后盖，小心取出旧电池，注意卡扣和电源接口位置，如图①所示。
2. 将新电池按照红线向上、白线中间、黑线向下的方向插入卡槽，确保其稳固，如图②所示。
3. 确认设备恢复正常开机，装上电池后盖，并拧紧螺丝，如图③所示。

⚠ 注意

- 本音箱只能使用原装电池AB-30（需另行购买）。
- 请严格按照当地法规回收或处理废旧电池，避免儿童接触，不要将电池丢入家庭垃圾桶中或焚烧。
- 更换电池时，请确保电池安装牢固且方向正确。

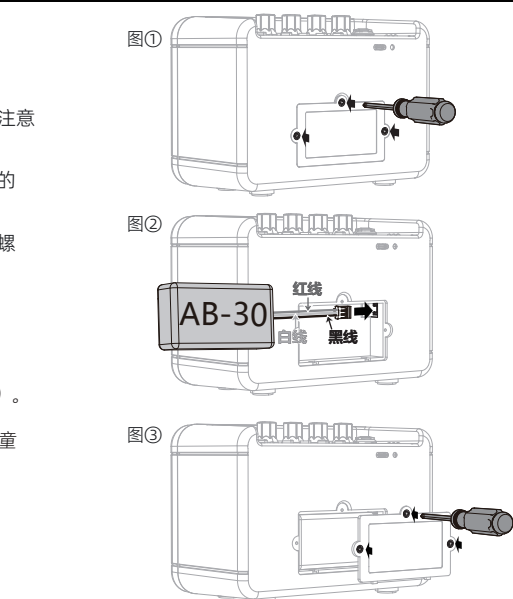

蓝牙功能

1. 短按蓝牙开机按钮（POWER），蓝色LED灯闪烁两次并伴随提示音“叮咚”，表示蓝牙启动，此时若未有设备连接时，指示灯会保持常亮闪烁。
2. 手机开启蓝牙功能，自动搜索设备名称“AG-10N”，点击连接。当连接成功时，设备将发出提示音“滴”。



省电模式

本音箱具备智能的省电功能。当音箱在10分钟内未检测到任何信号输入时，将自动进入关机状态。此设计避免了因疏忽关机导致的电量浪费，同时也有助于节能环保。

产品规格

喇叭峰值功率	10W
音频信号效果种类	3种（清音/过载/失真）
效果种类	2种（混响/延迟）
鼓机节奏型	20种
蓝牙版本	5.3
输入/输出接口	1个吉他输入接口，1个耳机输出接口，1个OTG接口，1个Type-C充电接口
采样率	44100Hz/16bit
电源	3.7V/3000mAh 聚合物锂电池
充电	5V=2A Type-C
充电时长	约2.5小时
满电使用时长	约6.5小时
喇叭	喇叭3寸全频喇叭，4Ω
尺寸	166×92×117mm
净重	675g
包装清单	主机x1，USB Type-C充电线x1，说明书x1，合格证x1

Bluetooth® 文字商标和徽标为蓝牙技术联盟的注册商标。深圳市阿诺玛乐有限公司对此类商标的任何使用均已获得许可，其他商标和商品名称为其各自所有者的所有。



执行标准：GB 4943.1-2022



AROMA®



AG-10N
ELECTRIC GUITAR AMP

User Manual

EN

Thank you for purchasing AROMA AG-10N.

Please read the user guide before using the device and keep it for reference.

Important Safety Instructions

Avoid placing in the following locations:

- Direct sunlight
- High temperature or humid environments
- Dusty areas
- Strongly vibrating environments
- Near magnetic fields

⚠ Power Supply

This product is equipped with a rechargeable lithium-ion battery. Even if not in use for extended periods, it is recommended to charge the battery every three months to maintain its performance. For optimal battery life, use the product in environments between -10 to 45 degrees Celsius.

Keep Away from Other Electrical Devices

Keep this product away from mobile phones or wireless transmitting devices to avoid interference during use.

Handle with Care

Avoid pressing buttons or operating parts too forcefully to prevent damage.

Cleaning

If the device surface becomes dirty, wipe it with a dry, soft cloth. Do not use flammable cleaning agents such as benzene or thinner.

Prevent Foreign Objects from Entering

Do not place containers with liquids near the product. If liquids enter the device, it may cause malfunction, fire, or electric shock. Be especially careful not to let metal objects enter the device.

Main Features

Portable: Compact design, easy to carry, enjoy music anytime, anywhere.

Powerful Battery: Equipped with a high-capacity lithium battery and Type-C charging port, always keeping "full energy".

Digital Power Output: 10W output provides sufficient power for your performance.

Digital Pioneer: Advanced DSP processing technology delivers superior sound quality.

Rich Tones: Offers 3 high-quality tones to meet various musical styles, along with basic spatial effects of delay and reverb.

Built-in Rhythm: The built-in drum machine function enhances the rhythm of your performance.


Smart Connectivity: Equipped with Bluetooth and OTG functions, easy live streaming and recording, seamless device connection.

Connecting the Amplifier

1. Turn the master volume knob (MASTER) on the amplifier to the minimum position to avoid excessive volume when powering on.
2. Plug the guitar cable into the input jack on the amplifier panel to complete the connection between the guitar and the amplifier.
3. Long press the power switch (POWER button) to turn on the amplifier.
4. Adjust the volume knob to a suitable level, and adjust the tone as needed to achieve the desired sound effect.
5. For using the drum machine or Bluetooth, please follow the guide of how to use them.

Follow these steps to start your performance smoothly!

Panel Introduction

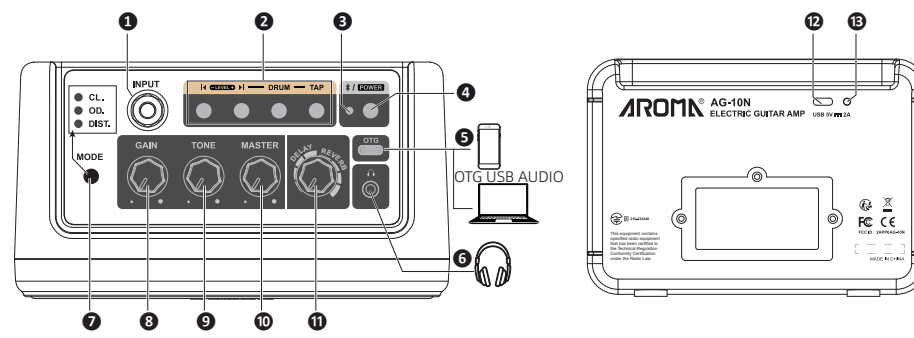

- ① INPUT: 6.35mm input jack for electric guitar
- ② Drum Machine Module: See "Built-in Drum Machine Function, Section Two"
- ③ Power/Bluetooth indicator: after power-on the indicator light remains on constantly. If low battery, the indicator light will flash rapidly and a warning tone is emitted to alert you that charging is required. After turning on Bluetooth, there will be a notification sound and light will flash, after connected the light will remain on
- ④ Bluetooth/POWER: long press to turn power on/off. Short press to turn Bluetooth on/off
- ⑤ OTG: OTG USB digital audio signal input/output port
- ⑥ Headphone jack: 3.5mm headphone jack
- ⑦ MODE: Tone selection button, short press to switch between different tones, synchronized with the LED light
- ⑧ CL: Clean | OD: Overdrive | DIST: Distortion
- ⑨ GAIN: Gain knob, controls the gain value of the instrument input
- ⑩ TONE: Tone knob, controls the tone of the instrument
- ⑪ MASTER: Master volume knob, controls the overall instrument signal volume
- ⑫ DELAY/REVERB: Delay/Reverb knob, adjusts the overall delay/reverb amount
- ⑬ USB SV: Type-C power charging port, 5V=2A, see "Product Charging"
- ⑭ Charging indicator: The indicator light remains red when charging, and turn green after fully charged.

● 产品料号 1.5.03.0329000

● 材质/工艺 70g书写纸黑色印刷

● 物料名称 AG-10N中英文说明书

● 设计师 欧阳楠/钟溢成

● 审核人 刘强

● 核准人 易华

● 日期 2026 4 10

● 文件编号 AROMA-RD-BZ-02