


Material: 128g art paper , Size: 70 x 108mm
Note : folding but without nail

COVER

BACK



CIPHER BLUETOOTH
USER GUIDE

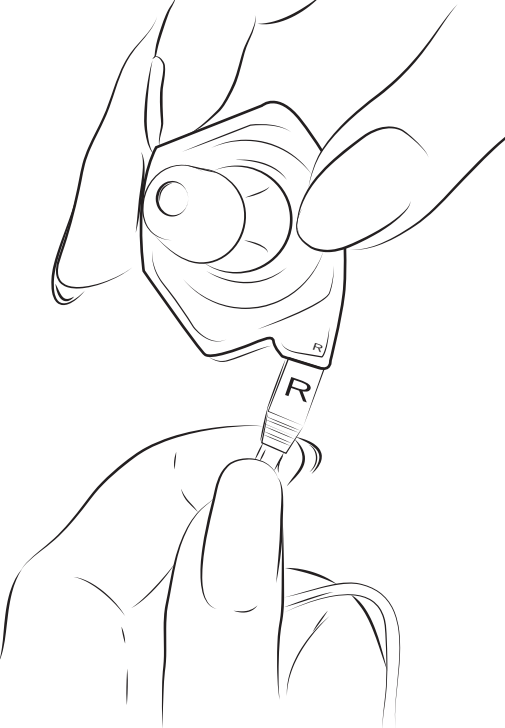

CONNECT
RELIER




CHARGE

www.audeze.com

IB-200-008675-00 V1.0
© 2018 Audeze LLC All Rights Reserved.

ACC1085


CIPHER FUNCTIONS

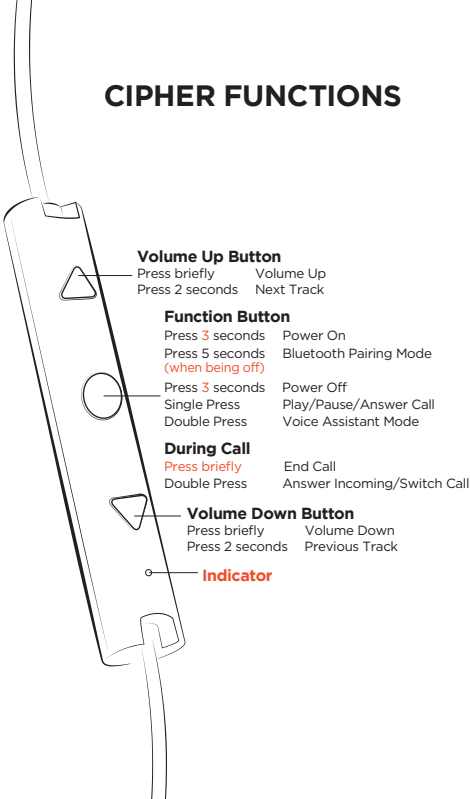

- Volume Up Button**
Press briefly Volume Up
Press 2 seconds Next Track
- Function Button**
Press 3 seconds Power On
Press 5 seconds Bluetooth Pairing Mode (when being off)
Press 3 seconds Single Press Power Off
Double Press Play/Pause/Answer Call
Voice Assistant Mode
- During Call**
Press briefly End Call
Double Press Answer Incoming/Switch Call
- Volume Down Button**
Press briefly Volume Down
Press 2 seconds Previous Track
- Indicator**

POWER ON Press second button and hold	HOLD 3 SECONDS • ◀ ○ ▶
POWER OFF Press second button and hold	HOLD 3 SECONDS • ◀ ○ ▶
BLUETOOTH PAIRING Press second button and hold	HOLD 5 SECONDS • ◀ ○ ▶
PLAY / PAUSE Press second button	PRESS • ◀ ○ ▶
VOLUME UP Press third button	PRESS • ◀ ○ ▶
VOLUME DOWN Press first button	PRESS • ◀ ○ ▶
PREVIOUS TRACK Press first button and hold	HOLD 2 SECONDS • ◀ ○ ▶
NEXT TRACK Press third button and hold	HOLD 2 SECONDS • ◀ ○ ▶
ANSWER / END CALL Press second button	PRESS • ◀ ○ ▶
REJECT CALL Press second button and hold	HOLD 2 SECONDS • ◀ ○ ▶
DURING CALL - END CALL Press second button	PRESS • ◀ ○ ▶
DURING CALL - ANSWER INCOMING Press second button twice	PRESS 2X • ◀ ○ ▶
DURING CALL - SWITCH CALL Press second button twice	PRESS 2X • ◀ ○ ▶
VOICE ASSISTANT Press second button twice	PRESS 2X • ◀ ○ ▶

CIPHER FUNCTIONS

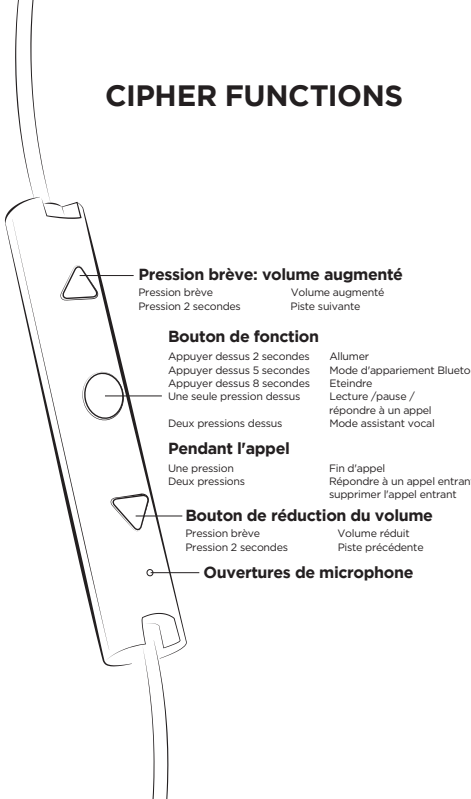

- Bouton de fonction**
Pression brève Volume augmenté
Pression 2 secondes Piste suivante
- Bouton de réduction du volume**
Pression brève Volume réduit
Pression 2 secondes Piste précédente
- Ouvertures de microphone**

ALLUMER Appuyez sur le deuxième bouton et maintenez-le enfoncé	HOLD 2 SECONDS • ◀ ○ ▶
ÉTEINDRE Appuyez sur le deuxième bouton et maintenez-le enfoncé	HOLD 8 SECONDS • ◀ ○ ▶
BLUETOOTH PAIRING Appuyez sur le deuxième bouton et maintenez-le enfoncé	HOLD 5 SECONDS • ◀ ○ ▶
JOUER / PAUSE Appuyez sur le deuxième bouton	PRESS • ◀ ○ ▶
MONTER LE SON Appuyez sur le troisième bouton	PRESS • ◀ ○ ▶
BAISSER LE VOLUME Appuyez sur le premier bouton	PRESS • ◀ ○ ▶
PISTE PRÉCÉDENTE Appuyez sur le premier bouton et maintenez-le enfoncé	HOLD 7 SECONDS • ◀ ○ ▶
PISTE SUIVANTE Appuyez sur le troisième bouton et maintenez	HOLD 7 SECONDS • ◀ ○ ▶
RÉPONSE / FIN D'APPEL Appuyez sur le deuxième bouton	PRESS • ◀ ○ ▶
REJETER UN APPEL Appuyez sur le deuxième bouton et maintenez-le enfoncé	HOLD 2 SECONDS • ◀ ○ ▶
PENDANT L'APPEL - FIN D'APPEL Appuyez sur le deuxième bouton	PRESS • ◀ ○ ▶
PENDANT L'APPEL - REPONSE ENTRANT Appuyez deux fois sur le deuxième bouton	PRESS 2X • ◀ ○ ▶
PENDANT UN APPEL - SUPPRIMER L'APPEL ENTRANT Appuyez deux fois sur le deuxième bouton	PRESS 2X • ◀ ○ ▶
ASSISTANT VOCAL Appuyez deux fois sur le deuxième bouton	PRESS 2X • ◀ ○ ▶