English 1

Deutsch 27

Flysocks

User Manual

Package Contents 1
Safety Information 2
How to Use 11
FAQ 21
Technical Specifications 23
Warranty 24

EN Scan the QR code to access Google User Manual.

DE Scannen Sie den QR-Code, um auf die englische Bedienungsanleitung zuzugreifen.

FR Scannez le code QR pour accéder au manuel d'utilisation en anglais.

ES Escanee el código QR para acceder al manual de usuario en inglés.

IT Scansiona il codice QR per accedere al manuale utente in inglese.

NL Scan de QR-code om toegang te krijgen tot de Engelse gebruikershandleiding.

PL Zeskanuj kod QR, aby uzyskać dostęp do angielskiej instrukcji obsługi.

PT Digitalize o código QR para aceder ao manual do utilizador em inglês.

SV Skanna QR-koden för att komma åt den engelska användarhandboken.

DA Scan QR-koden for at få adgang til den engelske brugervejledning.

NO Skann QR-koden for å få tilgang til den engelske brukerhåndboken.

FI Skannaa QR-koodi päästäksesi englanninkieliseen käyttöoppaaseen.

CS Naskenujte QR kód pro přístup k anglické uživatelské příručce.

SK Naskenujte QR kód pre prístup k anglickej používateľskej príručke.

HU Olvassa be a QR-kódot az angol nyelvű használati útmutató eléréséhez.

RO Scanați codul QR pentru a accesa manualul de utilizare în limba engleză.

EL Σαρώστε τον κωδικό QR για πρόσβαση στο εγχειρίδιο χρήσης στα αγγλικά.

TR İngilizce kullanım kılavuzuna erişmek için QR kodunu tarayın.

ENGLISH

PACKAGE CONTENT



Note

Before using the camera, make sure that the memory card is inserted and formatted with the camera.

SAFETY INFORMATION

Please read carefully and refer to the manual for use. Keep this manual for future reference. This chapter contains important safety information. Failure of these instructions may result in fire, malfunction, electric shock, illness, personal injury, damage, etc. not covered by the limited warranty and consumable items, as it may cause damage to the camera, personal injury, or confusion.

Fire and Electric Shock

- If the camera is damaged, has water risk, or is also recorded, please power it off immediately and remove the battery. Please stop it. Continuing to use the camera may cause fire, electric shock, or damage to the camera.
- Do not use or store your camera near water, such as a pool, bathtub, sink, or laundry basin. Do not place or store objects on the camera. Avoid exposing the camera to rain or moisture, or it may cause fire, electric shock, or damage to the camera.

Battery Use

- Do not use the camera near sources of heat or direct sunlight for a long time. Do not use or store your camera in places with high temperatures, such as inside a car on a hot day or in direct sunlight. Exposure to excessive heat can shorten the lifespan of electronic devices or batteries, cause the battery to overheat, or even cause a fire.
- Do not use or store your camera in places with low temperatures, such as cold areas. When the temperature of the camera returns to normal operating temperatures, moisture can form inside the camera. This can damage the camera's electronic components and circuits.
- Do not use or store your camera in places with high humidity, such as a bathroom or outdoor areas with high humidity. Exposure to excessive humidity can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high dust, such as a dusty construction site. Exposure to excessive dust can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high vibration, such as a moving vehicle. Exposure to excessive vibration can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high magnetic fields, such as near a magnet or a magnetic field. Exposure to excessive magnetic fields can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high static electricity, such as a dry environment. Exposure to excessive static electricity can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high pressure, such as a deep sea. Exposure to excessive pressure can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high altitude, such as a mountain. Exposure to excessive altitude can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high radiation, such as a nuclear power plant. Exposure to excessive radiation can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high pollution, such as a polluted area. Exposure to excessive pollution can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high noise, such as a construction site. Exposure to excessive noise can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high light, such as a stage. Exposure to excessive light can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high temperature, such as a hot spring. Exposure to excessive temperature can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high humidity, such as a swamp. Exposure to excessive humidity can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high dust, such as a desert. Exposure to excessive dust can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high vibration, such as a moving vehicle. Exposure to excessive vibration can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high magnetic fields, such as near a magnet or a magnetic field. Exposure to excessive magnetic fields can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high static electricity, such as a dry environment. Exposure to excessive static electricity can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high pressure, such as a deep sea. Exposure to excessive pressure can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high altitude, such as a mountain. Exposure to excessive altitude can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high radiation, such as a nuclear power plant. Exposure to excessive radiation can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high pollution, such as a polluted area. Exposure to excessive pollution can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high noise, such as a construction site. Exposure to excessive noise can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high light, such as a stage. Exposure to excessive light can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high temperature, such as a hot spring. Exposure to excessive temperature can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high humidity, such as a swamp. Exposure to excessive humidity can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high dust, such as a desert. Exposure to excessive dust can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high vibration, such as a moving vehicle. Exposure to excessive vibration can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high magnetic fields, such as near a magnet or a magnetic field. Exposure to excessive magnetic fields can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high static electricity, such as a dry environment. Exposure to excessive static electricity can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high pressure, such as a deep sea. Exposure to excessive pressure can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high altitude, such as a mountain. Exposure to excessive altitude can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high radiation, such as a nuclear power plant. Exposure to excessive radiation can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high pollution, such as a polluted area. Exposure to excessive pollution can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high noise, such as a construction site. Exposure to excessive noise can affect the performance of the camera's electronic components and circuits.
- Do not use or store your camera in places with high light, such as a stage. Exposure to excessive light can affect the performance of the camera's electronic components and circuits.

Do not disassemble or attempt to remove the battery.

Do not disassemble or attempt to remove the battery, or it will void the warranty. In case of malfunction, please seek professional assistance or contact the dealer.

Environmental Requirements

- Operating environment: temperature 14°F to 104°F (-10°C ~ 40°C). Storage environment: temperature 5°F to 140°F (-20°C ~ 60°C).
- Do not use or store in environments with strong interference fields.

Waste disposal

It is forbidden to throw away the camera and accessories at will. Please dispose of waste according to local laws.

Other warnings

- For cameras with WiFi or Bluetooth, please use them in places with good signal. Poor signal may cause camera malfunctions, incorrect transmission, or failure to send photos.
- Please abide by local laws and regulations on the use of wireless devices.
- Please abide by local laws and regulations on personal privacy protection.

Check before use

To ensure your enjoyment, please take a test shot to check before use. We are not responsible for additional losses caused by improper use or camera failure.

About the manual

- The manual is for reference only. The final product shall prevail.
- We reserve the right to update the content of the manual without prior notice.
- To improve the user experience, the app may be upgraded without prior notice. There will be no reminder in the manual.
- All rights reserved for this manual. Parts or all of this manual may not be reproduced or altered in any way.

Computer System Requirements

To view photos and videos on your computer, make sure your computer meets or exceeds the following specifications:

- Windows: Intel Core i5 or higher, 8 GB RAM or higher, Windows 10 or later
- Operating System: Windows XP or later
- MAC: Minimum: Intel Core i5, 8 GB RAM
- Operating System: macOS 10.12 or later

Storage: 500GB or more of free disk space

USB Interface: Standard USB 2.0 or higher

Screen Resolution: 1920×1080 pixels or higher

Please note that if your computer does not meet these specifications, it may not function properly when connected to the camera.

PRODUCT INTRODUCTION



1. Lens hole
2. Magnet
3. Battery cover lock/USB hole
4. Tripod hole
5. Metal screw hole

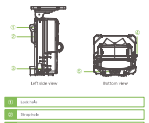

1. Lens hole
2. Magnet
3. Battery cover lock/USB hole
4. Tripod hole
5. Metal screw hole

FRONT COVER OPEN VIEW

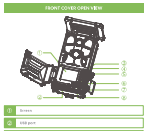

1. Screen
2. Indicator light
3. Menu Button
   - Short press: Menu/Return/Photo/Video/Delete
   - Long press: Power on/off
4. Up Button/Message Page Forward
   - Short press: Switch / Zoom in / Move up
   - Long press: Switch
5. Down Button/Voice Memo/Playback
6. OK Button/Confirm
   - Short press: Confirm/Switch
   - Long press: Camera mode: Switch Shooting Mode; Playback mode: Slideshow
7. Battery Cover
8. Micro SD Card Slot

INSTALLATION GUIDE

Download the Flysocks app

Follow the instructions in the app to connect the camera to Wi-Fi. You can then use the app to operate the camera, adjust settings, preview, and download files.

Memory Card Installation

Before the first use, open the cover, and insert the memory card (sold separately) into the camera's card slot according to the direction shown in the diagram. Ensure the memory card is correctly inserted. Do not forcefully remove when powered on.

Note

1. Ensure the memory card is inserted and formatted by the camera.
2. Do not insert or remove the memory card while the camera is powered on. Turn off the camera before inserting or removing the card.
3. Use a UHS-I Class 3 or higher memory card with a minimum capacity of 32GB. Ensure the memory card is compatible with your device.

HOW TO USE

Power on

Use the ON/STANDBY switch to TEST, the screen will turn on, indicating that the camera has been successfully powered on. If the screen does not turn on, please check if the battery is placed correctly and if the battery is fully charged. If the problem persists, please contact customer service for assistance.

Change Preview Mode

When the ON/STANDBY switch is set to TEST, you can change the preview mode. Press MODE to cycle through "Photo Mode" → "Video Mode" → "Playback Mode". In each mode, the corresponding icon is displayed in the upper-left corner of the screen.

- Photo mode
- Video mode
- Playback mode

Pressing MODE will change the preview mode, not the camera's work mode. To change the camera's work mode, you must operate and save the settings in the menu.

Test

To ensure the normal operation of the camera, please take a test shot before use:

1. Slide the ON/STANDBY switch to TEST and press OK to take a photo.
2. Press MODE to enter "Video mode" and press OK to record a video.
3. Press MODE to enter "Playback mode" and press the up/down buttons to check whether the camera is working properly.

Monitor Shooting

Set the camera's orientation as needed. Make sure the camera's lens is turned in the shooting area.

Slide the ON/STANDBY switch to ON. The working indicator light is green, and the camera enters the monitoring shooting state. If the camera detects motion, the camera enters the recording shooting state. Here, the camera automatically detects and records moving animals or people.

PHOTO MODE

Slide ON/STANDBY switch to TEST , the camera enters the Photo mode, and the screen displays as follows:

1. Photo mode
2. Photo resolution
3. Memory used
4. Anti-knock sensitivity
5. Number of shots remaining
6. Battery Level Indicator
7. Battery Level Of Camera Battery
8. Current Battery Level for the Active Battery / Power Source
9. Date
10. Time

Power Off

Before powering off the camera, you must slide the ON/STANDBY switch to TEST, then press and hold the OK button for 3 seconds. The screen will turn off, indicating that it is safe to remove all the batteries. After powering off the camera, wait for 5 seconds before placing it in storage.

VIDEO MODE

Press MODE to enter the menu, set the mode to video mode, and the screen displays as follows:

1. Video mode
2. Sound recording
3. Video resolution
4. Memory used
5. Anti-knock sensitivity
6. Remaining video recording time
7. Battery Level Of Camera Battery
8. Battery Level: 4x Batteries
9. Current Battery Level for the Active Battery / Power Source
10. Date
11. Time

PLAYBACK MODE

The Playback by the camera can be played back on the screen. You can slide the toggle back to the ON/STANDBY switch to TEST and press MODE to enter playback mode.

Type	Description	Notice
View Files	In playback mode, the screen displays the photos or videos in the memory card. You can in the upper left corner to view the current file number.	
	▶ Video files	
	🖼 Image photos and	
	📁 Empty folders	
Delete Files	In playback mode, press the up and press MENU to enter the option interface. Select to delete one or all files.	⚠You cannot be restored after deleting files. Please operate with caution.

MENU AND PARAMETER SETTINGS

This chapter facilitates configure camera parameters.

Press MENU in any interface. Press MENU again to switch between the three menu pages: Shooting Menu, Setup Menu, and Playback Menu. Use the up and down buttons to move the cursor to select the desired option. After selecting a specific option, press MENU to return to the previous operation. After completing your settings, press OK to confirm and save the menu. The operations for different settings in the shooting menu are the same.

Press the ON/STANDBY switch to set to ON to enter the camera to operate according to the configured parameters.

Menu Type	Parameter	Setting Options	Description	Notice
Shooting Menu	Video Resolution	1080P 720P	Set the video resolution. Higher resolutions produce clearer videos but require more storage space.	
	Video Length	1 min 3 min 5 min	Set the maximum duration for each video recording. The camera will automatically stop recording when the set time is reached.	
	Loop Recording	On Off	When enabled, the camera will automatically overwrite the oldest video files when the storage is full, ensuring continuous recording.	
	Motion Detection	On Off	When enabled, the camera will start recording when motion is detected.	
	Motion Detection Sensitivity	Low Medium High	Adjust the sensitivity of motion detection. Higher sensitivity will trigger recordings more easily.	
	Motion Detection Recording Time	10 s 20 s 30 s	Set the duration for recording after motion is detected.	
	Time Stamp	On Off	When enabled, the date and time will be displayed on the video.	
	Anti-knock Sensitivity	Low Medium High	Adjust the sensitivity to reduce shaky footage. Higher sensitivity is more effective at reducing shake.	
	Anti-knock Recording Time	10 s 20 s 30 s	Set the duration for recording after anti-knock is triggered.	
Basic Settings	Language	English Deutsch Français Español Italiano Nederlands Polski Português Svenska Dansk Norsk Suomi Čeština Slovenčina Magyar Română Ελληνικά Türkçe	Select the language for the camera's menu and interface.	
	Date & Time		Set the current date and time for the camera.	
	Auto Power Off	Never 1 min 3 min 5 min	Set the time for the camera to automatically power off when idle.	
	Screen Brightness	Low Medium High	Adjust the screen brightness.	
	Screen Timeout	30 s 1 min 3 min 5 min	Set the time for the screen to turn off when idle.	
	Indicator Light	On Off	Control the indicator light.	
	Beep Sound	On Off	Control the beep sound.	
	Frequency	50Hz 60Hz	Set the frequency to match the local power supply.	
	Format		Format the memory card.	⚠ Formatting will delete all data.
	Default Settings		Restore all settings to factory defaults.	
	Version Info		Display the camera's firmware version.	

Menu Type	Parameter	Setting Options	Description	Notice
Shooting Menu	Video Resolution	1080P 720P	Set the video resolution. Higher resolutions produce clearer videos but require more storage space.	
	Video Length	1 min 3 min 5 min	Set the maximum duration for each video recording. The camera will automatically stop recording when the set time is reached.	
	Loop Recording	On Off	When enabled, the camera will automatically overwrite the oldest video files when the storage is full, ensuring continuous recording.	
	Motion Detection	On Off	When enabled, the camera will start recording when motion is detected.	
	Motion Detection Sensitivity	Low Medium High	Adjust the sensitivity of motion detection. Higher sensitivity will trigger recordings more easily.	
	Motion Detection Recording Time	10 s 20 s 30 s	Set the duration for recording after motion is detected.	
	Time Stamp	On Off	When enabled, the date and time will be displayed on the video.	
	Anti-knock Sensitivity	Low Medium High	Adjust the sensitivity to reduce shaky footage. Higher sensitivity is more effective at reducing shake.	
	Anti-knock Recording Time	10 s 20 s 30 s	Set the duration for recording after anti-knock is triggered.	
Basic Settings	Language	English Deutsch Français Español Italiano Nederlands Polski Português Svenska Dansk Norsk Suomi Čeština Slovenčina Magyar Română Ελληνικά Türkçe	Select the language for the camera's menu and interface.	
	Date & Time		Set the current date and time for the camera.	
	Auto Power Off	Never 1 min 3 min 5 min	Set the time for the camera to automatically power off when idle.	
	Screen Brightness	Low Medium High	Adjust the screen brightness.	
	Screen Timeout	30 s 1 min 3 min 5 min	Set the time for the screen to turn off when idle.	
	Indicator Light	On Off	Control the indicator light.	
	Beep Sound	On Off	Control the beep sound.	
	Frequency	50Hz 60Hz	Set the frequency to match the local power supply.	
	Format		Format the memory card.	⚠ Formatting will delete all data.
	Default Settings		Restore all settings to factory defaults.	
	Version Info		Display the camera's firmware version.	

WARRANTY

Flysocks products are covered by a 24-month limited warranty starting date of purchase. The warranty is extended to all normal consumers as required by the EU Directive 1999/44/EC.

The limited warranty covers product defects for one year after the original purchase date. We will apply for a new battery and free free refund for a mistaken order and overcharging when operated incorrectly and conditions.

Applicability of warranty

This warranty does not apply if:

- The product has been tampered with or the assembly and hardware removed or damaged.
- The product has been altered or modified by someone other than Flysocks.
- The product has been used in a way that is not recommended by the product's user manual, including but not limited to misuse, abuse, neglect, or improper maintenance.
- The product's serial number has been removed or defaced.
- The product is damaged due to accidents, natural disasters, power surges, or other external factors beyond Flysocks's control.
- The product is used for commercial purposes, including but not limited to rental, resale, or use in a business setting.

Flysocks is not responsible for any damages that may occur during the warranty period.

Flysocks has no obligation to repair any products that can not be get covered under warranty.

Replacement Procedure

If a product is defective during the warranty period, repair or a replacement product will be sent at no charge to you. You will be notified of delays. The maximum wait is extends to the original and if repair item or out-of-stock models. Purchase receipt, order number, or other proof of purchase may be required. If a replacement is required, the defective product must be returned to us. We may request proof of purchase and other information before processing a claim. If we approve the claim, we will send you a replacement product at no charge, or we may refund you the purchase price of the product, at our discretion.

If a warranty claim is found to be defective and is still covered under this warranty, we will repair or replace the product at our discretion. We will notify you of the decision and provide you with instructions on how to proceed. If a replacement product is sent, it will be shipped to you at no charge. If a refund is issued, it will be for the original purchase price of the product.

Flysocks is not responsible for any damages that may occur during the warranty period, including but not limited to loss of data, loss of profits, or damage to other property. We are not liable for any indirect, incidental, or consequential damages.

FCC COMPLIANCE INFORMATION STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

EU DECLARATION OF CONFORMITY

Hersteller/Fabricant:	Meitu(China)Limited
Anschrift/Adresse:	4th Floor, Building 4, No.1 Ronghua Middle Road, Beijing Economic-Technological Development Area, Beijing, China
Telefonnummer/Tél:	0776-8900 (Montag bis Freitag, 9:00 bis 18:00 Uhr)
Faxnummer/Fax:	/
E-Mail-Adresse/Courriel:	support@flysocks.com
Produktbeschreibung:	Digitalkamera
Modell/Modèle:	E306WH
Handelsname:	Flysocks
Marke/Marque:	Flysocks

Hiermit erklären wir, dass das oben genannte Produkt den folgenden Richtlinien und Normen entspricht:

Par la présente, nous déclarons que le produit susmentionné est conforme aux directives et normes suivantes :

Niederspannungsrichtlinie 2014/35/EU	Directive basse tension 2014/35/UE
EMV-Richtlinie 2014/30/EU	Directive CEM 2014/30/UE
RoHS-Richtlinie 2011/65/EU	Directive RoHS 2011/65/UE
Funkanlagenrichtlinie 2014/53/EU	Directive relative aux équipements radioélectriques 2014/53/UE
EN 62368-1:2020+A11:2020	
EN 55032:2015+A11:2020+A1:2020	
EN 55035:2017+A11:2020	
EN 301 489-1 V2.2.3 (2019-11)	
EN 301 489-17 V3.2.4 (2020-09)	
EN 300 328 V2.2.2 (2019-07)	
EN 300 440 V2.2.1 (2018-09)	
EN 50581:2012	

Ort und Datum der Ausstellung/Lieu et date de délivrance: Beijing, 2024.05.28

Name und Unterschrift des befugten Vertreters/Nom et signature du représentant autorisé:

DEUTSCH

PACKUNGSINHALT



Hinweis

Bevor Sie die Kamera verwenden, stellen Sie sicher, dass die Speicherkarte eingelegt und mit der Kamera formatiert ist.

SICHERHEITSHINWEISE

Bitte lesen Sie die Anleitung sorgfältig durch und beachten Sie sonne der Bedienung. Bewahren Sie diese Handbuch zum späteren Nachschlagen gut auf. Dieses Kapitel enthält wichtige Sicherheitshinweise. Die Nichtbeachtung dieser Anweisungen kann zu Brand, Fehlfunktionen, elektrischen Schlägen, Verletzungen, Schäden usw. führen, die nicht durch die beschränkte Garantie und Verbrauchsmaterialien abgedeckt sind, da sie Schäden an der Kamera, Verletzungen oder Verwirrung verursachen können.

Feuer und Stromschlag

- Wenn die Kamera beschädigt ist, Wasser Risiko hat oder aufgezeichnet wird, schalten Sie sie sofort aus und entfernen Sie die Batterien. Bitte stoppen Sie es. Die weitere Verwendung der Kamera kann zu Brand, Stromschlag oder Schäden an der Kamera führen.
- Verwenden oder lagern Sie Ihre Kamera nicht in der Nähe von Wasser, wie z. B. in einem Pool, einer Badewanne, einem Waschbecken oder einem Waschbecken. Stellen oder lagern Sie keine Gegenstände auf der Kamera. Vermeiden Sie es, die Kamera Regen oder Feuchtigkeit auszusetzen, da dies zu Brand, Stromschlag oder Schäden an der Kamera führen kann.

Verwendung von Batterien

- Nutzen Sie die Kamera nicht für längere Zeit in der Nähe von Wärmequellen oder direkter Sonneneinstrahlung. Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohen Temperaturen, wie z. B. in einem Auto an einem heißen Tag oder in direkter Sonneneinstrahlung. Übermäßige Hitze kann die Lebensdauer elektronischer Geräte oder Batterien verkürzen, dazu führen, dass sich die Batterie überhitzt, oder sogar einen Brand verursachen.
- Verwenden oder lagern Sie Ihre Kamera nicht an kalten Orten, wie z. B. in kalten Gebieten. Wenn die Temperatur der Kamera wieder normale Betriebstemperaturen erreicht, kann sich im Inneren der Kamera Feuchtigkeit bilden. Dies kann die elektronischen Komponenten und Schaltkreise der Kamera beschädigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Luftfeuchtigkeit, wie z. B. in einem Badezimmer oder im Freien in feuchten Gebieten. Übermäßige Luftfeuchtigkeit kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Staubaufkommen, wie z. B. auf einer staubigen Baustelle. Übermäßiger Staub kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit starken Vibrationen, wie z. B. in einem fahrenden Fahrzeug. Übermäßige Vibrationen können die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit starken Magnetfeldern, wie z. B. in der Nähe eines Magneten oder eines Magnetfelds. Übermäßige Magnetfelder können die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher statischer Elektrizität, wie z. B. in einer trockenen Umgebung. Übermäßige statische Elektrizität kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Druck, wie z. B. in der Tiefsee. Übermäßiger Druck kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit großer Höhe, wie z. B. auf einem Berg. Übermäßige Höhe kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Strahlung, wie z. B. in einem Kernkraftwerk. Übermäßige Strahlung kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Verschmutzung, wie z. B. in einem verschmutzten Gebiet. Übermäßige Verschmutzung kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Lärm, wie z. B. auf einer Baustelle. Übermäßiger Lärm kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Licht, wie z. B. auf einer Bühne. Übermäßiges Licht kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Temperatur, wie z. B. in einer heißen Quelle. Übermäßige Temperatur kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Luftfeuchtigkeit, wie z. B. in einem Sumpf. Übermäßige Luftfeuchtigkeit kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Staubaufkommen, wie z. B. in einer Wüste. Übermäßiger Staub kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit starken Vibrationen, wie z. B. in einem fahrenden Fahrzeug. Übermäßige Vibrationen können die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit starken Magnetfeldern, wie z. B. in der Nähe eines Magneten oder eines Magnetfelds. Übermäßige Magnetfelder können die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher statischer Elektrizität, wie z. B. in einer trockenen Umgebung. Übermäßige statische Elektrizität kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Druck, wie z. B. in der Tiefsee. Übermäßiger Druck kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit großer Höhe, wie z. B. auf einem Berg. Übermäßige Höhe kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Strahlung, wie z. B. in einem Kernkraftwerk. Übermäßige Strahlung kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Verschmutzung, wie z. B. in einem verschmutzten Gebiet. Übermäßige Verschmutzung kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Lärm, wie z. B. auf einer Baustelle. Übermäßiger Lärm kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Licht, wie z. B. auf einer Bühne. Übermäßiges Licht kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Temperatur, wie z. B. in einer heißen Quelle. Übermäßige Temperatur kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Luftfeuchtigkeit, wie z. B. in einem Sumpf. Übermäßige Luftfeuchtigkeit kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Staubaufkommen, wie z. B. in einer Wüste. Übermäßiger Staub kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit starken Vibrationen, wie z. B. in einem fahrenden Fahrzeug. Übermäßige Vibrationen können die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit starken Magnetfeldern, wie z. B. in der Nähe eines Magneten oder eines Magnetfelds. Übermäßige Magnetfelder können die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher statischer Elektrizität, wie z. B. in einer trockenen Umgebung. Übermäßige statische Elektrizität kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hohem Druck, wie z. B. in der Tiefsee. Übermäßiger Druck kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit großer Höhe, wie z. B. auf einem Berg. Übermäßige Höhe kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträchtigen.
- Verwenden oder lagern Sie Ihre Kamera nicht an Orten mit hoher Strahlung, wie z. B. in einem Kernkraftwerk. Übermäßige Strahlung kann die Leistung der elektronischen Komponenten und Schaltkreise der Kamera beeinträ