声波电动牙刷



使用说明书

产品型号：LJ-ST216

①

请仔细阅读本产品的说明书。

警告：

1. 每次使用前都要检查是否有明显的损坏，如果损坏或产生异味，请勿使用。
2. 在充电线和底座处之间，请勿使用电源线及适合于产品标示值的电源适配器。
3. 如果充电器有任何损坏，请勿使用。
4. 本产品（含充电器）、控制（遥控）装置仅供家庭使用，禁止商用或出租用。
5. 充电器不可在室外或湿度超标的地点使用。
6. 请勿在可燃或易爆环境中使用。
7. 如果您的口腔或牙龈有过敏症状，或者在刷牙时感到疼痛，请在使用本牙刷前咨询牙医。
8. 如果您发现使用本牙刷后有出血现象，或出血加剧或扩散出口腔周，停用刷牙并咨询医生。
9. 请勿使用非原装充电器或更换电池。
10. 若您是儿童在使用电器设备时，应在成人的监督下使用。
11. 本产品不适合于婴幼儿使用，非婴幼儿使用时，应在成人的监督下使用。
12. 请勿将牙刷浸入水中。
13. 如果牙刷不慎掉入水中，不可进行再次使用。
14. 如果牙刷内含有电池或认证，小心打开或者破解（例如不当点击或手段），请勿使用非原装或其他电器配件刷新。

产品规格：

产品型号	具体型号详情
产品重量	0.44公斤
工作电压	110v-240V/60
额定功率	2W
开关方式	按键式开关
震动方式	125HZ
显示内容	5 Level Mini Eco Sensitive Clean模式指示灯
震动频率	31000次/分钟-33000次/分钟
工作时间	约120分钟（新电池时）
充电方式	感应式充电（可与快速充电时长相差：90%）
产品种类	防水IPX7
充电电流	250mA
电池规格	锂电池 型号：ER14505 1600mAh
快速提醒	充电量，充电指示灯闪烁提示
防水等级	IPX7

②

配件规格：

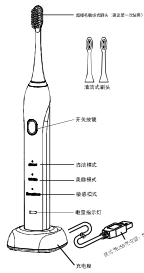

③

故障诊断：

情况	可能原因	措施
震动频度减弱	1、牙刷充电不足。 2、刷头与主体连接松动或脏。	1、将牙刷充电时间充足至少24小时，使用直到电量耗尽，牙刷会发出提示音，此时充电时间至少为两小时。 2、将刷头与主体连接松动或脏。
刷毛已老化，牙齿处理工作效能降低	1、正常使用后超过3个月。 2、刷毛出现明显磨损、弯曲或变色现象。	1、为保证牙齿健康，建议更换新的刷头。 2、定期检查刷毛状态，及时更换。
充电不工作	1、检查充电器是否连接到电源插座，并确认插座是否有电。 2、检查充电器是否损坏，如有损坏，请更换充电器。 3、检查充电器是否与牙刷正确连接。	1、请充电

关于充电：

- 首次使用之前，请进行开机，确保设备电量处于充满状态。
- 4个月以上没有使用，请对牙刷进行充电5小时以上，充满电后，另确保可连续使用60天。
- 电量关所有颜色，特定大大指的是电池寿命，请用完电量及充电。
- 使用过程中，如充电指示灯由绿闪转变为恒绿状态表示此牙刷电量不足。
- 请将牙刷连接充电底座上放置于充电座上，连通电源并连接入充电开始充电。
- 充电过程中，指示灯闪烁，电池充满电后，指示灯长亮。
- 如果强长时间没有充电，那么再次充电时指示灯会等待（60分钟才会亮，确保正常充电。
- 您至少一年使用完电池充电一次，否则可以下充电指南，并正常使用直至电池充电寿命。

④

关于保养：

清洁刷头

1. 每次使用后请用清水冲洗刷头，并晾干。
2. 不要经常使用，请勿使用含有研磨剂的牙膏。

清洗牙齿主体

1. 每次使用后，请保持干燥。
2. 请勿将刷头浸入水中。
3. 不要用清水冲洗牙齿底座或连接电源。

清洁充电座

1. 保持充电座的清洁，以确保充电效率。
2. 定期清洁底座，使用柔软湿润的布擦拭。
3. 用干净的布擦拭即可，避免使用。

更换刷头

1. 牙刷建议每三个月更换一次刷头。

刷牙时间：

1. 刷牙建议，每次刷牙两分钟。
2. 使用时，轻压即可，请勿按照刷毛使用，这会损伤牙齿和牙龈，并且会损伤牙齿表面，引起牙龈问题和牙齿敏感。

使用步骤

第一步

取出牙刷并将其中电池充电，直到电池显示指示灯为绿色为止。

⑤

第二步

将牙刷头小心插入刷毛轴，牙刷头和主体间保持紧密有一定间隙，这是牙刷头正常震动的必要部分。

第三步

将底盖牙膏在刷头上，先用其他部位再放入口中，再启动牙刷。

第四步

将充电座连接电源，确保电源指示灯亮起，表示充电正常。

第五步

轻轻开启开关，以避免设备损坏。选择合适的震动模式。

⑥

第六步

将牙刷头小心插入嘴里，牙刷头和主体间保持紧密有一定间隙，这是牙刷头正常震动的必要部分。

第七步

启动震动模式，开始刷牙。

第八步

刷牙时间建议为两分钟，每次刷牙时间不宜过长，以免损伤牙齿和牙龈。

⑦

第九步

刷完后，关闭牙刷电源，并将刷头取下清洗干净。

3种模式专业护理：

1. 在产品使用完后，请关闭电源开关，并将牙刷头取下清洗干净，以防止污垢和细菌的积聚。
2. 请勿将牙刷头浸泡在水中，以免损坏电机和电池。
3. 请勿使用硬毛刷或研磨性清洁剂，以免损坏牙刷头和牙龈。
4. 如果您的牙刷头出现磨损或变形，请及时更换新的牙刷头，以确保最佳的清洁效果。

⑧

6. 在充电座底下可以长按不松放6秒进入锁电工作方式可以锁住按键，防止在一下机时候意外开启电源，这时点亮所有进行红绿蓝显示的指示灯表示锁键锁定成功。
7. 在锁定状态下，按键将不起作用，防止在充电时意外开启电源，只有在解锁状态下，按键才能正常使用。

注意：

1. 请勿将本品浸入水中或将其清洗干净。
2. 请勿将本品用于除牙齿以外的其他用途。
3. 请勿在有易燃气体或者腐蚀性物质的环境中使用本品。
4. 如果您的牙齿不慎掉落，请勿将其放入口中，以免造成窒息危险或其他伤害。
5. 请勿将本品暴露在极端温度下，例如将其放在汽车中，因为这可能会导致损坏。
6. 请勿将本品用于商业或公共场所，仅限个人使用。

禁止：

1. 请勿使用电量不足或电压不稳定的电源。
2. 请勿将本品用于除牙齿以外的其他用途，例如清洁其他物品或表面。
3. 请勿将本品用于医疗或治疗目的，例如治疗牙齿疾病或口腔问题。
4. 请勿将本品用于儿童或宠物，以免造成伤害或损坏。

⑨

保修及服务

此产品是一件设计精良、经过严格测试的电器，并且拥有出厂时的保证。如果您在使用过程中遇到任何问题，请参考以下故障排除指南，或联系我们的客户服务团队以获得帮助。

以下情况将不在保修服务范围之内：

1. 使用不当引起的人为损坏，例如将水下或浸泡，使用不适当的配件，不适当的安装，不按说明书使用，或试图拆解或修改该产品。
2. 一般磨损和外观变化，例如刮擦、凹痕或褪色，这些不会影响产品的正常使用。
3. 正常损耗零部件的更换，例如刷头（Brush Head）和电池（Battery）。

保修条款

1. 我们保证本产品在正常使用情况下，自购买之日起两（2）年内，不会出现材料或工艺缺陷。
2. 保修仅适用于原始购买者，且不可转让。
3. 保修不适用于因滥用、疏忽、意外损坏或未经授权的维修或改装而造成的损坏。
4. 为了获得保修服务，请保留您的购买收据或发票作为购买证明。

⑩

Made in China

客户信息

完本卡保修

产品名称		产品型号	
销售日期		联系电话	
销售商名称		地址	
销售员姓名			
购买地点		销售单价	
保管地点			
销售问题描述			

QC 合格

Made in China

客户信息

完本卡保修

产品名称		产品型号	
销售日期		联系电话	
销售商名称		地址	
销售员姓名			
购买地点		销售单价	
保管地点			
销售问题描述			

QC 合格

Please read the manual of this product carefully before using.

Warning

1. Please check if it has any obvious damage every time before use. Do not use it if there is a damage or bad smell.
2. Please check if the travel power voltage operates with the voltage marked on the electric toothbrush when you connect the USB charging line.
3. Do not charge it if the charging stand has any damage.
4. Do not use the charging cable and the charging stand in damp locations such as bathroom and poly bag any type of storage.
5. The charging stand can not be used as table or nearby the extremely hot surface.
6. Do not use it while you are taking a bath or shower.
7. Please stop using it if you feel pain in your gums or if you had an operation recently or gums ever be part 2 months.
8. Please consult your dentist if you have a bleeding or even the bleeding gums ever 1 month after using it.
9. Please use the charger that is the one manufacturer recommends.
10. Please consult your doctor or the manufacturer that installed the device before using if you are implanted pacemaker or have implanted other devices.
11. Not suitable for children, teens, and operators who can not see this safety guideline. They are prohibited to operate it using by their safety guideline.
12. Please put it beyond children's and babies' reach. Do not use it as toys.
13. Please clean the toothbrush head thoroughly with soaps and rinsing after brushing. Brushing your teeth if there is hydrogen peroxide, sodium bicarbonate, or baking soda (abrasive) that are ingredients in white toothpastes) in the toothpaste.

Product Specifications:

Product Name	Electric Toothbrush
Product Type	LJ-ST216
Working Voltage	100V-240V/50HZ
Rated Power	2W
Switching Pattern	Touch Switch
Display	LED
Display Content	5 Level Mini Eco Sensitive Clean Indicator
Vibration Frequency	31000r/min-33000r/min/minute
Working Time	About 240 minutes （Connect with USB charger for 24h）
Charging Mode	Induction Charging
Charging Time	About 2.5 hours
Charging Current	250mA
Battery Specification	Lithium battery 1600MAH/3.7V
Power Indicator	When the power is low, the power indicator light flashes.
Waterproof Grade	IPX7

①

Part Specifications

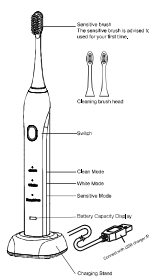

②

Trouble Diagnosis:

Conditions	Possible Reasons	Measures
No vibrate, or weak vibrating is weakening.	1) The toothbrush is pressed too hard on your teeth. 2) The toothbrush head is not tightened.	1) Put the toothbrush head on your teeth lightly. Pressing it too hard will damage your teeth and gums. 2) Tighten the brush head.
The toothbrush lifetime for a long time, but it has been charged.	1) The body has not been used up the charger correctly. 2) The battery is aging.	1) Continue charging the toothbrush for more than 24 hours. 2) The battery power is low. Please charge it before using when the old has not been used over 6 months.
The toothbrush will not work even if the body is in use.	Charger circuit is incorrect, or the connection of the body and charger is not good, and vibrator fail to vi.	Change the toothbrush.

About Charging:

1. Start the toothbrush before you first use it. Use up the residual amount of electricity and charge the toothbrush.
2. If you have not used it for over 6 months, it will be able to be used normally for 60 days after being fully charged.
3. Charge the toothbrush after cleaning the device to make the lithium battery fully be greatly shortened if you charge it when there is some power left.
4. In the charging process, the toothbrush will be in power if the charging indicating light shines several seconds continuously and stop working.
5. Put the toothbrush body on the charging stand and confirm that the charger has been connected to the power supply. At this time, the indicating light turns red, showing that the charging begins.
6. In the charging process, the indicating light shines. When the battery is fully charged, the indicating light turns green.
7. It is normal for the indicating light to glow after only 20 minutes when the toothbrush is recharged because the toothbrush haven't been charged for a long time.
8. Discharge the toothbrush thoroughly at least once a year. Unplug the charging stand and exhaust the battery power by using the toothbrush normally when you discharge the brush.

③

About Maintenance:

Clean the Toothbrush Head

1. Clean the brushing and toothbrush head and after you use the toothbrush every time.
2. Do not use it for brushing so that it will not be transformed easily and fall out.

Clean the Toothbrush Body

1. Clean it with water and let it natural drying.
2. Do not immerse it in water.
3. Do not clean it with water above 40 degrees or acidic cleansing solution.

Clean the Charging Base

1. Clean the smoothness of the charging stand and its shells with soft cloth.
2. Do unplug the outlet before cleaning. 3. If not, an electric shock will be caused easily.
3. Clean the plug with dry cloth or water to avoid the short circuit.

Change the Toothbrush Head

Dentists advise that the toothbrush head should be changed every 3 months.

Time for Brushing Your Teeth:

1. Dentists advise that you should brush your teeth for 2 minutes every time.
2. When using, you will feel a massage pause every 30 seconds, and reminds you to clean the four areas in your mouth evenly in order to achieve the best cleaning effects.

Using Steps:

Step 1: Put the electric toothbrush into the charging base and charge it for 5-8 hours when you first use it.

④

Step 2: Insert the toothbrush head into the toothbrush body by aligning them a gap must be left between the head and the body which is necessary for the head to vibrate normally.

Step 3: Squeeze moderate toothpaste on the toothbrush head, soak the head, put it into your mouth, and start the toothbrush.

Step 4: Move the toothbrush slowly at an angle of 45 degrees between the brushing and your gumline.

Step 5:Hold the toothbrush body gently and move it slowly in a circular motion. Do not press or clean it forcibly.

⑤

Step 6: Rinse your mouth with clean water and wash the toothbrush head after you brush teeth.

3 Patterns of Professional Nursing:

This product has 3 built-in cleaning modes: Clean, white and sensitive, providing customized tooth cleaning experience for you.With it, you can switch the modes at your will in order to care and beautify your teeth in different scenes.

a.Clean: Alternate dental plaque through Up&Down of Motor.

b.White: Powerful whitening and brightening, at 473RPM

c.Sensitive: A extremely gentle mode suitable to the sensitive teeth and gums.

d. In the case that there is still power in the battery of the product, at any time point press the power on button can be started up, the gear position is in the last shutdown memory.Click the switch gear and then rotate the three gears.Long press above 0.5 seconds to shut down.

⑥

f. Long press the power on button for 6 seconds to enter the discharge operation mode switch function in the charging situation(Note: when working, the host machine will be placed on the charging stand, At this point, press the power button to switch to the corresponding mode according to the disclosure) shift light. After selecting the mode, move the host machine away from the charging stand and other instructions will be put out to complete the setting.

Mode 1: default discharge mode.The motor vibrates every 30 seconds during discharge, and stops automatically after 3 minutes of operation.

Mode 2: at any time after starting the machine, press the "stop" button 3/5 minutes. Then the working time of the next cycle will be increased from 2 minutes to 5 minutes pressing the "stop" button two times.

Mode 3: there is no time limit for discharging after starting up. Please give a prompt every 30 seconds until the battery is dead.

Notice:

1.Do not shave the toothbrush head with your hands or razors.
2.Do not unplug the plug in order to avoid fire or danger if you have not used the toothbrush for a long time.

Notice:

It is possible for you to have the pending or slight bleeding when you begin to use the toothbrush even if you are healthy. This is because the gums is not used to this stimulus at your first use. These symptoms will usually cease within 1 or 2 weeks if they last over 2 weeks, then your gums may have some problems. Under this circumstances, you should stop using the toothbrush and consult the doctor.

Forbidding:

1.Do not immerse the charging stand in water or any liquids.
2.Please ensure that the power plug of the charging stand is totally dry after cleaning the toothbrush and then connect the plug to the power supply.
3.The product contains built-in rechargeable batteries, so do not put it into the fire to avoid explosion. Do not disassemble or pierce the battery.
4.Do not refuse to use this product.Do not use it again if damaged because of the burns and fire.
5.Do not reload it, disassemble, or fix this product by yourself.
6.Please keep this product away from the strong electromagnetic field like the induction cooker when you are charging it.

⑦

Warranty and Service

This product is a well-designed, high-quality appliance that comes with a warranty. If you experience any issues while using it, please refer to the troubleshooting guide below or contact our customer service team for assistance.

The following conditions are not covered within the warranty service:

1.Accidental damage caused by improper use, such as improper access to water, the use of incorrect accessories, improper installation, failure to operate in accordance with the user manual, damage caused by attempting to repair or modify the product, or damage caused by misuse or neglect.
2.Normal wear and tear, such as scratches, dents, or fading of appearance, which do not affect the normal use of the product.
3.Replacement of consumable parts, such as brush heads and batteries, which have a limited lifespan.

Warranty Terms:

1. We warrant that this product will be free from defects in materials and workmanship under normal use for a period of two (2) years from the date of purchase.
2. The warranty is non-transferable and applies only to the original purchaser.
3. The warranty does not cover damage caused by misuse, neglect, accidental damage, unauthorized repairs or modifications to the product.
4. To obtain warranty service, you must provide proof of purchase, such as a receipt or invoice.

⑧

Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.