
YSS004 BS081RL1 英文说明书
展开尺寸：420*140mm
成品尺寸：105*140mm
颜色：4C+4C
材质：128g 双铜纸
工艺：无特殊工艺

正面

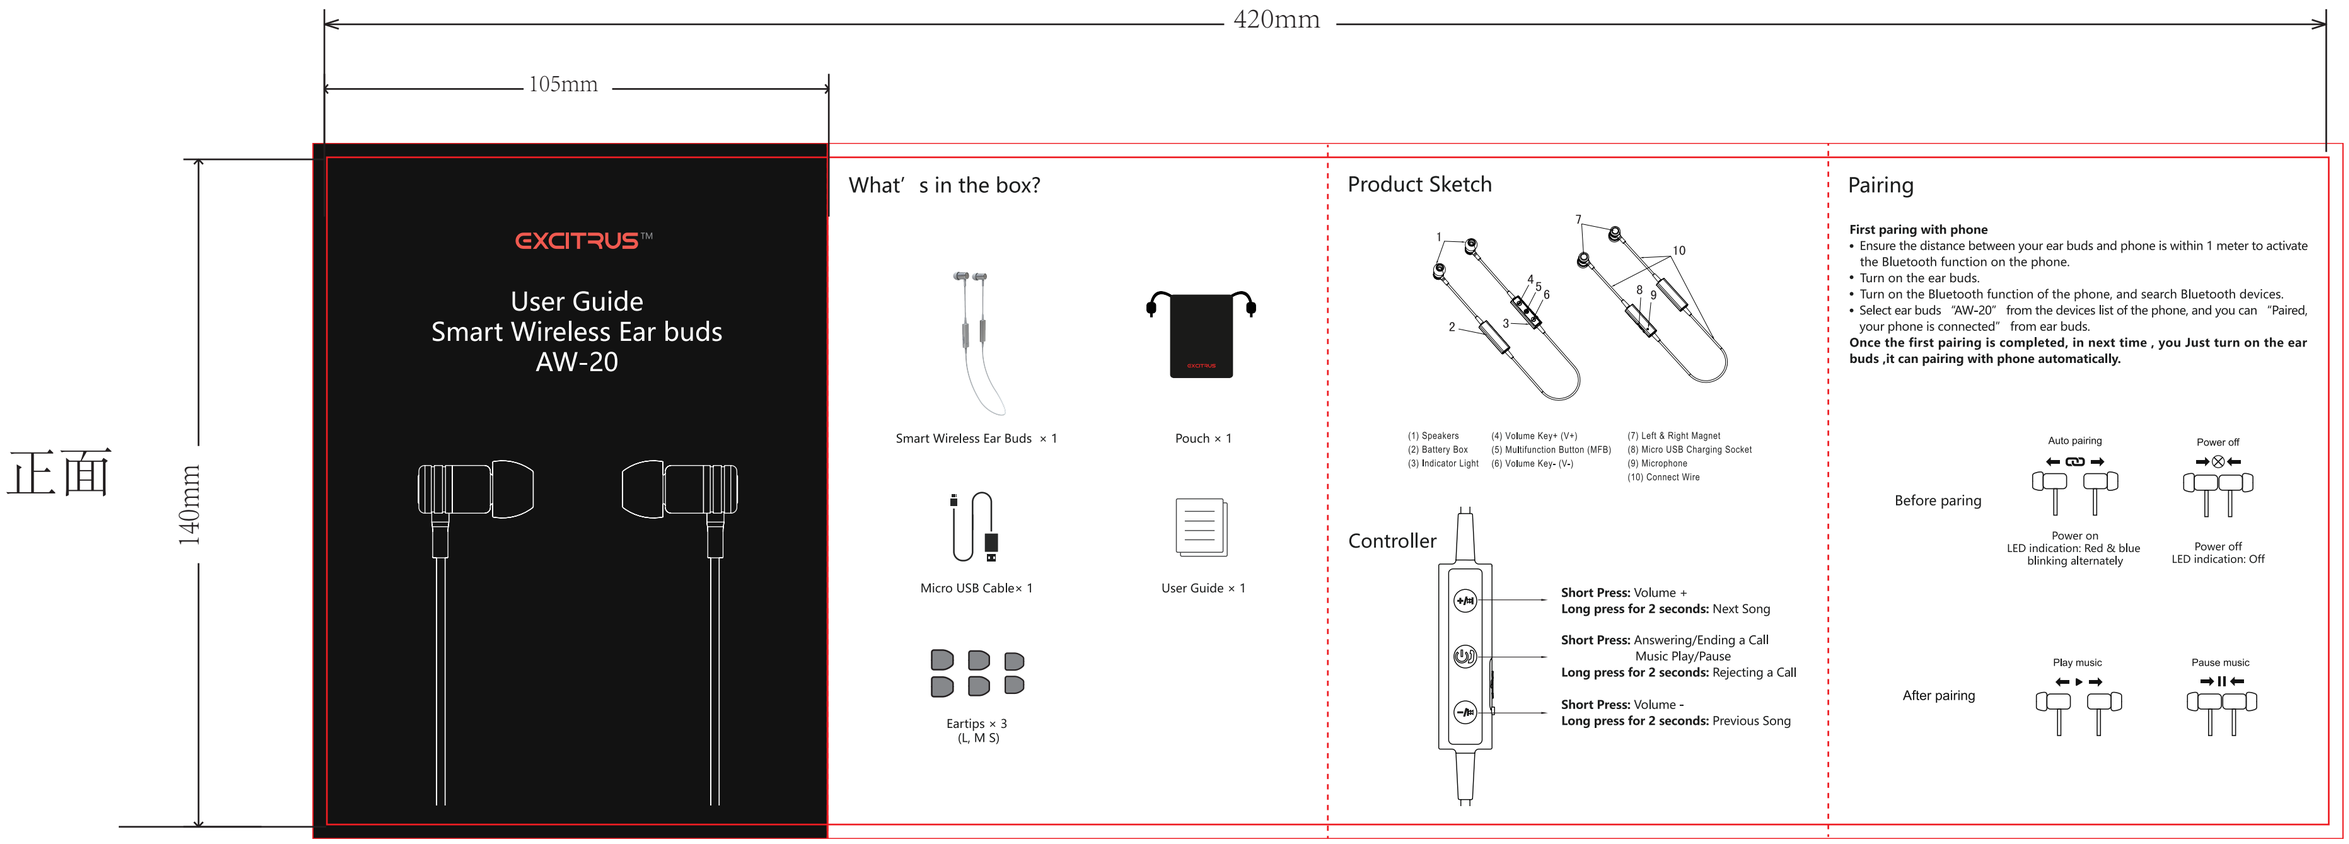

What’ s in the box?

Smart Wireless Ear Buds × 1

Pouch × 1

Micro USB Cable× 1

User Guide × 1

Eartips × 3
(L, M S)

Product Sketch

(1) Speakers
(2) Battery Box
(3) Indicator Light
(4) Volume Key+ (V+)
(5) Multifunction Button (MFB)
(6) Volume Key- (V-)
(7) Left & Right Magnet
(8) Micro USB Charging Socket
(9) Microphone
(10) Connect Wire

Controller

Short Press: Volume +
Long press for 2 seconds: Next Song

Short Press: Answering/Ending a Call
Music Play/Pause
Long press for 2 seconds: Rejecting a Call

Short Press: Volume -
Long press for 2 seconds: Previous Song

Pairing

First paring with phone
- Ensure the distance between your ear buds and phone is within 1 meter to activate the Bluetooth function on the phone.
- Turn on the ear buds.
- Turn on the Bluetooth function of the phone, and search Bluetooth devices.
- Select ear buds “AW-20” from the devices list of the phone, and you can “Paired, your phone is connected” from ear buds.

Once the first pairing is completed, in next time , you Just turn on the ear buds ,it can pairing with phone automatically.

反面

Charging
- Prior to using the ear buds for the first time or no use for a long time, please fully charge the battery.
- Approximately 2 hours are required to fully charge the ear buds.
- The indicator light turns red while being charged, and will turn blue automatically after being fully charged.
- When the ear buds is running out of battery, the indicator light will flash red (the ear buds will switch off automatically when the battery is drained). Please charge the ear buds as above steps in time to prolong the battery's useful life (Charging indication will be delayed for a few minutes if the ear buds has not been used for a long time or the battery is drained)..

Note 1 : Use only the qualified charger to charge the ear buds, if use other device may violate the validation or the maintenance article of this product and may cause danger.
Note 2 : Do not attempt to force open the built-in battery as this could damage the ear buds.

Answering a Call
When a call is coming, you can answer it with the ways as follows:
Way 1 : Press MFB once.
Way 2 : Separate the magnetic ear buds and answer (When magnet stay together)
Way 3 : Answer the call with your phone.

Ending a Call
You can end the call you are answering with the ways as follows:
Way 1 : Press MFB once.
Way 2 : Separate the magnetic ear buds and answer (When magnet stay together)
Way 3 : Answer the call with your phone.

Rejecting a Call
Press and hold MFB for 2 seconds to reject the call.

Mute
During a call, press and hold “V+” for 3 seconds, the ear buds will enter into MUTE MODE. In MUTE MODE, the speaker will sound “Beep” twice every 10 seconds, you could cancel the MUTE MODE if press and hold “V+” for 3 seconds again..

The Last Number Redialing
Press MFB twice to redial the last phone number (when connect with phone).

Calling Transferring
During a call, press “V- “ for 2 seconds and you will hear “Beep” prompt voice and can shift the call between cellphone and ear buds.

Two-call Handling
When you are answering a call, there is another call coming:
- Press MFB 2 seconds to end the current call and answer another one.
- Shortly press MFB once to answer another call and hold on the current one.
- After the above operation “2” settled, shortly press MFB to transfer one call to another.

Note:
All the above operations have to respect the precondition that Phone supports Bluetooth hands free profile V1.5 and Phones are running under call holding function(Network service) from telecom.

Music Pause /Playing
Way 1 : Shortly press MFB to PLAY music(paired and standby condition), press MFB again to PAUSE music.
Way 2 : Pull apart the magnetic ear buds to play music while click them together to PAUSE.

Note:
- When the magnetic ear buds click together to PAUSE music while separate it to PLAY. It’ s not suitable to use this function frequently unless delay about 10 seconds.
- When playing music, it’ s suggested to use MFB to answer a call, it’ s normal for music keep on playing if use magnetic function to hang up the call under this circumstance(It’ s suggested not use magnetic function to hang up calls in this circumstance).
- During playing music, the magnetic ear bud is separated, shortly press MFB or use phone to pause music, you should delay 10 seconds to stick together ear buds then it will not re-start music.

Adjusting the Volume
In call or music playing state, shortly press “V+ ” or “V-” once to adjust the volume. When the volume up to maximum or minimum, you could hear “Beep” voice prompt.

Forward/Backward
Press and hold “V+” or “V-” for 2 seconds to forward the next song or backward the previous song.
Note:
Due to technology of difference phones, it’ s not sure for all phones can go back to the previous song, it may be back to the beginning.

Delete Pairing Record on the Ear Buds
- In ON and not connected mode, press and hold “V+” and “V-” until the red and blue light flashes twice at the same time, you will hear “Beep” prompt voice, then press and hold MFB for 3 seconds, the pairing record on the ear buds will be deleted.
- When all the pairing record is deleted, after the ear buds turn on again, it couldn’ t connected automatically and enter into pairing mode directly.

Headset Resetting
In any state, as long as the ear buds is charging, it will be reset.

Maintenance
- Do not use abrasive cleaning solvents to clean the ear buds.
- Do not allow the ear buds to touch with any sharp objects as this will cause
- scratching and damage.
 Please keep headset away from high-temperature, humidity and dust.

Specification
Product Name: Smart Wireless Ear Buds
Model Number: AW-20
Bluetooth Version: Bluetooth 4.1
Bluetooth Profile: HSP,HFP,A2DP,AVRCP
Frequency Response: 20Hz-20KHz
Supported Audio Format(s): SBC , MP3 , AAC
Battery: 60mAh Lithium Battery
Charging Connector: Micro-USB
Charging Time : 2 hours

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Troubles and Troubleshooting

Troubles	Cause	Troubleshooting
Unable to turn on	Low battery	Charing ear buds for 2-3 hours
Unable to turn off	Can't turn off when turned on	Charge the ear buds to reset
No sounds after pairing	Incorrect pairing	Pairing again
Flashing red light when calling	Battery low	Please charge the ear buds immediately
No indication when charging	MicroUSB charging cable has no voltage output or DC power supply does not output	Check whether the MicroUSB charging cable is plugged in or DC power switch is turned on
Turn off automatically	Low battery	Charge the ear buds for 2 to 3 hours
Tremolo in music playing and calling	Music issue or the volume is too loud	Turn down the volume
Magnetic function disorder	Due to too frequent operations	Charge and reset
No magnetic control function	Check if have dirty nd sweat on both horn head magnets	Clean the dirty and sweat on the horn head magnets
Noise or echo when calling	Caused by environmental interference or the distance between the earphone and the device is too far or the volume is too loud	Move to another place, or reducing the distance between ear buds and devices or turning down the volume
Low voice of the calling party	Ear buds are not equipped correctly	Adjust the position of the ear buds
Pairing and connecting slowly	Too many pairing records	Delete the pairing record as user guide