

Lani Wireless Speaker & Light Instruction Manual
ITEM: ME26703

CAMPING LIGHT OPERATION

1. Short Press: Turn Light On / Off

2. Short Press: Switch Between Cold / Warm Light

3. Double Click: Sleep Mode (Light gradually dims from current brightness over 30 minutes until light turns off)

4. Long Press: Brighten / Dim Light

WIRELESS CONNECTIVITY

1. Long Press to Power Device On (Pairing status appears after power on)

2. Select speaker from list of Bluetooth devices

3. Speaker is now paired to device

MODE SWITCH

Press Mode Switch button to toggle between wireless connection and SD card mode.

TANDEM MODE

1. With both speakers on at the same time, double click the Mode Switch button on one of the speakers to enter TWS tandem mode.

2. Connect your device to one of the speakers and both speakers will automatically connect.

PLAY OPERATION

Power On / Off	Long Press	Short Press
Pause / Play	Long Press	Short Press
Next Song	Long Press	Short Press
Volume Up	Long Press	Short Press
Previous Song	Long Press	Short Press
Volume Down	Long Press	Short Press

TECHNICAL SPECIFICATION

Output Power	5 W
External Magnetic Horn	4 Ω 5 W ◆45mm
Number of Speakers	Single Speaker
Battery Capacity	3.7 V 500 mAh
Resolution	≥ 90 dB
Signal-to-Noise Ratio	≥ 80 dB
Operating Voltage	DC 1 A / 5 V
Scenario	Jerry 5.4
Play Time	1.5 - 2.5 h
Charging Time	≈ 1.5 h
Product Dimensions	110 * 85 * 85 mm
Lighting Color Temperature	Warm Light: 1800K / Cool Light 6500 K
Illumination Brightness	230 Lumen
Lighting Battery Life	≈ 3h (70% Brightness)

WARNING

- Do not expose this product to rain or humidity.
- Do not disassemble, repair or modify this product.
- Store and use the product at room temperature.
- Do not drop the product to avoid damage due to falling.
- Please use the rated voltage of the speaker to charge the power supply.
- Unauthorized disassembly will void the warranty.
- Prolonged exposure to high volume may cause hearing damage, avoid excessive volume.

CAUTION

- There is a danger of explosion if the battery is not replaced properly, and it should only be replaced with the same type or an equivalent type of battery.
- Batteries should not be exposed to environments such as sunlight, fire or similar excessive heats.

PRODUCT LIST

Device

Type-C Charging Cable

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in the residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into the outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Manuel d'instructions de l'enceinte sans fil et lampe Lani

ARTICLE : MEZBT03

FONCTIONNEMENT DE LA LAMPE DE CAMPING

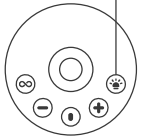

1. Appui court : Allumer / Éteindre la lumière

2. Appui court : Basculer entre lumière froide / chaude

3. Double clic : Mode veille (la lumière diminue progressivement depuis la luminosité actuelle sur 30 minutes jusqu'à l'extinction)

4. Appui long : Augmenter / Diminuer la luminosité

CONNECTIVITÉ SANS FIL

1. Appui long pour allumer l'appareil. Le statut de couplage apparaît après la mise sous tension.



2. Sélectionner l'enceinte dans la liste des appareils Bluetooth



3. L'enceinte est maintenant couplée à l'appareil.



COMMUTATEUR DE MODE

Appuyer sur le bouton Commutateur de mode pour basculer entre la connexion sans fil et le mode carte SD.



MODE TANDEM

1. Les deux enceintes étant allumées en même temps, double-cliquer sur le bouton Commutateur de mode sur l'une des enceintes pour activer le mode tandem TWS.



2. Connecter votre appareil à l'une des enceintes et les deux enceintes se connecteront automatiquement.



FONCTIONNEMENT DE LA LECTURE

	Appui long	Marche / Arrêt
	Appui court	Pause / Lecture
	Appui long	Chanson suivante
	Appui court	Volume +
	Appui long	Chanson précédente
	Appui court	Volume -

SPÉCIFICATION TECHNIQUE

Power output	5 W
External magnetic speaker	4 Ω 5 W 45mm
Number of speakers	Single speaker
Battery capacity	3.7V 500 mAh
Resolution	± 80 dB
Signal-to-noise ratio	≥ 80 dB
Operating voltage	DC 1 A / 5 V
Shaking	Jerry 5.4
Reading time	1.5 - 2.5 h
Charging time	≈ 1.5 h
Product dimensions	116 * 85 * 85 mm
Lighting temperature	Warm light: 1800K / Cold light: 6500K
Illuminance	230 Lumen
Autonomy in lighting mode	≈ 3h (luminosity at 70 %)

AVERTISSEMENT

- Do not expose the product to rain or humidity.
 - Do not disassemble, repair or modify the product.
 - Store and use the product at ambient temperature.
 - Do not drop the product to avoid damage or injury.
 - Use the nominal voltage of the speaker for charging.
 - Unauthorized disassembly voids the warranty.
 - Exposure to high volume may cause hearing damage.
1. There is a risk of explosion if the battery is not replaced correctly: it must not be replaced with a battery of the same type or of a different type.
2. Batteries must not be exposed to environments such as direct sunlight, fire or other heat sources.

MISE EN GARDE

1. Il y a un risque d'explosion si la batterie n'est pas remplacée correctement : elle ne doit être remplacée que par une batterie du même type ou d'un type équivalent.
2. Les batteries ne doivent pas être exposées à des environnements tels que la lumière solaire directe, le feu ou toute autre source de chaleur excessive.

PRODUCT LIST

- Appareil
- Câble de charge Type-C

DÉCLARATION FCC

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes:

- Cet appareil ne doit pas causer d'interférences nuisibles.
- Cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement non désiré.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler le droit de l'utilisateur à utiliser l'équipement.

Remarque: Cet équipement a été testé et déclaré conforme aux limites applicables aux appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour assurer une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. Cet équipement génère, utilise et peut émettre de l'énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément aux instructions, peut provoquer des interférences nuisibles aux communications radio. Cependant, il n'est pas garanti qu'aucune interférence ne se produira dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception radio ou télévisuelle, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- Reorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.
- Brancher l'équipement sur une prise appartenant à un circuit différent de celui auquel le récepteur est connecté.
- Consulter le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

L'appareil a été évalué et déclaré conforme aux exigences générales d'exposition aux radiofréquences. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

