




How to connect DuoMon EGG with your phone for first time

STEP 1

Turn on Bluetooth in phone

Go to Pokemon Go APP
Tap "Main Menu" in the MAP view.

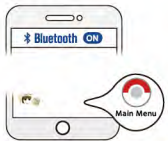


※ Insert two AAA batteries and turn on DuoMon. 1P and 2P LED will flash green several times and wait for connection.

STEP 2

Tap "Settings" at the top right

Go to bottom and tap "Pokemon Go Plus". There is "available devices" list shown below.

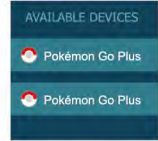


A green light will flash if DUOMON EGG doesn't connect with any phone.



STEP 3

To pair and connect.


Press 1P or 2P button on DUOMON EGG. A light will appear at the center of Pokemon Go Plus icon on the Available Device list. Tap that device to start connecting with DuoMon EGG.

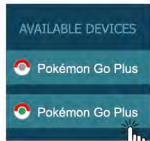

STEP 4

Connect successfully

The Pokemon Go Plus icon shown as below when connected successfully.

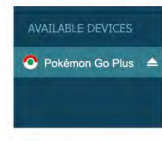

A white light will flash when DUOMON EGG is connected.



STEP 5



DUOMON may lose connection from your phone sometimes. (Green light will flash when disconnect.)

To reconnect : In Map View, touch the Pokemon GO Plus icon. (Purple light flashes if connection successful)

When DUOMON EGG is rebooted, all the connection will be reset (Green light flashes). You can reconnect to the previous phone or pair to a new phone.

Light sound and vibration description

Indicator light	Red flashes	Green	Purple
Status	Low battery	Awaiting connection or Signal disconnected	Signal connection successful
Sound	Battery low Please replace the battery	Lost connection or Signal disconnected	NA
Vibration	NA	single vibration twice	NA

Indicator light	Blue	Green	Yellow	White	Red	Multicolor	White	Red	Red	Red
Status	Within range of a PokeStop	A Pokemon is nearby	A Pokemon is nearby (haven't caught)	Catching Pokemon	Pokemon runs away.	Successfully catching a Pokemon or visiting a PokeStop	Item bag is full	Out of Pokeballs	Out of range of the PokeStop / Pokemon box is full	Mobile phone network disconnect
Sound	NA	NA	New Pokemon in range (haven't caught)	NA	NA	NA	Item bag is full	Out of Pokeballs	Pokemon storage is full	Network error
Vibration	NA	NA	NA	NA	NA	NA	Dual vibration triple	Tri-vibration triple	single vibration twice	single vibration twice

Additional Instructions

DUOMON tips

1. If bag is full and cannot collect items from Pokestop, first deactivate "Nearby Pokestop" notification in Go app setting.
2. If out of red Pokeballs and temporarily cannot capture, first deactivate "Nearby Pokémon" notification in Go app setting.

DUOMON consumes very little power and has power-saving and standby mode features.

Pokemon app will automatically disconnect from DUOMON EGG every hour. If not reconnected after 10min, DUOMON EGG will go into standby mode. Player can press Go Plus connection icon in app anytime and automatically call up DUOMON to reconnect.

PS Turn off DUOMON EGG when you don't use it to save the battery power

NOTIFICATIONS

Nearby Pokemon
Nearby Pokestop

Function and light description

※ (1P/2P setting separately)

Press DuoMon EGG button to switch between the different light functions.

Press once and go from Blue > Yellow > Purple > Green > White > Green/Purple in order. Switch to the desired light option, then set up based on the instructions right.

Low battery

DUOMON EGG will announce "Low Battery" and flash Red twice when the battery is low power, the announcement will stop after half hour but keep flashing Red twice



1. Blue : Counting announcement

In the blue light function, the number of Pokemon captured via DUOMON EGG within 24 hours of the connection status and the number of times of spinning the Pokestop will be broadcast.

Long press the button for 3 seconds, the statistics of Pokemon and the Pokestop will be reset to zero.



2. Yellow : Sound setting

It announce the sound setting currently.

Long press the button for 3 seconds, you can change setting by order: Volume up > Volume down > Sound off.

When the sound setting is off, the menu description would be announced but volume down.



3. Purple : Vibration setting

It announce the vibration setting currently.

Long press the button for 3 seconds to switch off/on the vibration setting.



4. Green : Live notification setting

Long press 3 seconds to switch on/ off the announcement as following:

1. The counting numbers.
2. Item bag is full.
3. out of Pokeball.
4. Pokemon storage is full.
5. NEW Pokemon in range (haven't caught)



5. White : The setting of auto catching the New Pokemon.

Long press 3 seconds to switch on/off the auto catching new Pokemon.

- On : DUOMON EGG will catch New Pokemon.
- Off : DUOMON EGG will announce New Pokemon is in range, you may catch it by yourself.



6. Green / Purple : Connection status

Green : Not Connecting
Purple : Connecting

Long press 3 seconds to enter sleeping-mode. (Red light flashes)
Long press 3 seconds again to wake up DUOMON EGG (Green light flashes)

DUOMON EGG can't connect to your phone in sleeping-mode.



DUOMON EGG と端末の初回ペアリング

STEP 1

端末のBluetoothをオン

Pokemon Goを開くメニューをクリック



※ DUOMON EGGに単三乾電池を2個入れてからオンにして、1Pと2Pは緑色が数回点滅してから待機モードになる。

STEP 2

Pokemon GOの『設定』をクリック

下までスクロールして、『Pokemon Go Plus』をクリック、「使用可能なデバイス」が表示される




ペアリングした事のないDUOMON EGGのLEDは緑に点滅する



STEP 3

ペアリングと接続


DUOMON EGGの1P又は2Pをクリック、「使用可能なデバイス」のどれかが光る、それをクリックすると自動的にペアリングと接続する

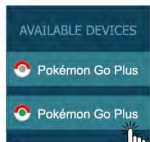

STEP 4

接続成功

接続成功すると、「使用可能なデバイス」が図のように点灯する

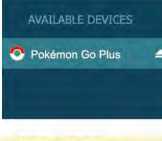

ペアリング成功のDUOMON EGGのLEDは白に点滅する



STEP 5



以前DUOMON EGGは端末とペアリングしたけど接続が切れた場合、LEDは緑に点滅する。APPのGO Plusをクリックすると、DUOMON再接続する（接続が成功の場合はパープルに点滅する）

DUOMON EGGはペアリング解除しなくても他の端末との接続が可能。LEDは緑に点滅してあれば他の端末に接続できる。電源スイッチをオフしてからもう一回オンにするとすべての接続が切れて、LEDは接続なしの緑に点滅する。

ペアリングと接続状態を表示

ランプ	赤点滅	緑	パープル
状態	電池残量不足	待機中、接続中断	接続成功
音声	バッテリーが低下 バッテリーを交換してください	なし、接続が切断されました	なし
振動	なし	シングル振動2回	なし

ランプ	青	緑	黄色	白	赤	レインボー	白	赤	赤	赤
状態	ポケストップ発見	ポケモンが発見した	ポケモンが発見した (ゲットしたことがない)	ポケモンをゲット中	ポケモンが逃げた	ポケモンがゲットした/ ポケストップを回した	道具がいっぱいです	モンスターボールが 無くなりました	ポケストップを離れた/ ポケモンボックスがいっぱい	ネット回線異常
音声	なし	なし	ポケモンを発見しました	なし	なし	なし	道具がいっぱいです	モンスターボールが 無くなりました	ポケモンボックスがいっぱい	ネット回線異常
振動	なし	なし	なし	なし	なし	なし	ダブル振動3回	トリプル振動3回	シングル振動2回	シングル振動2回

補足説明

DUOMON EGGご使用のテクニック

1. バッグがいっぱいでポケストップの補給ができなくなる場合、APPの設定でPokemon GO Plusにある「ポケストップの通知」をオフにすると、自動的に補給はやめる
2. モンスターボールが無くなって、ゲットできない場合、APPの設定にある「ポケモンの通知」をオフにすると、自動的にゲットはやめる。

DUOMON EGGの電池消費が極めて低い、しかも下記の省エネ機能と待機機能がある

DUOMON EGGはおよそ1時間ごとAPPとの接続が切れる。接続が切れて10分以内再接続しない場合、DUOMON EGGは待機モードになる。APPのGO PlusをタップするとDUOMONが自動的に接続する。

PS 不用時に電源スイッチをオフすると使用可能時間は延長する。

通知

近くのポケモン
近くのポケストップ

機能とランプの色の説明

※ (1Pと2Pは個別に設定可能)

DUOMON EGGのボタンを押すと、ランプの色と機能が変わる

ボタンを押すたびに機能が変わる。
青->黄色->パープル->緑->白->緑/パープルの順で繰り返す。設定したい機能の色に切り替えて、下記の通りに設定する。

電池残量が低い

電池残量が低い場合、DUOMON EGGは電池残量不足のお知らせ音声を数秒ごとに発する。同時に両方のランプは赤に点滅する。お知らせ音声はおよそ30分後止まるけどランプは赤に点滅し続ける。



1. 青：計算をアナウンス

ランプの色は青の場合、24時間内にDUOMON EGGでゲットしたポケモンの数とポケストップを回した回数をアナウンスする。

ランプは青のままにボタンを3秒間押すとポケモンの数とポケストップを回した回数の計算は0になる。



2. 黄色：通知音の音量設定

ランプは黄色の場合、通知音音量の設定ができる。

ランプは黄色のままにボタンを3秒間押すと通知音音量が設定できる：音量が大->小->オフの順です。音声オフにするとメニューの音声は小になる。



3. パープル：振動機能

ランプはパープルの場合、振動機能の状態をアナウンスする。

ランプはパープルのままにボタンを3秒間押すと振動機能をオンまたはオフに設定できる。



4. 緑：実況をアナウンス

ランプは緑の場合、実況の設定状態をアナウンスする。

ランプは緑のままにボタンを3秒間押すと実況機能をオンまたはオフに設定できる。実況機能はオフの場合でも、お知らせ音声アナウンスする。



5. 白：新しいポケモンをゲット機能

ランプは白色の場合、新しいポケモンをゲット機能の状態をアナウンスする

ランプは白色のままにボタンを3秒間押すと新しいポケモンゲット機能がオンまたはオフに設定できる。

新しいポケモンをゲット機能がオフの場合、新しいポケモンが発見しても自動的にゲットしないけど、手動でポケモンをゲットする又はポケモンが逃げたまでお知らせし続ける。



6. 緑/パープル：接続状態をお知らせする

ランプは緑の場合、未接続とアナウンスする。パープルの場合、接続中とアナウンスする。

ボタンを3秒間を押すとスリープモードになり、ランプは赤に点滅する。ボタンを3秒間を押すとスリープモードが解除、ランプは緑に点滅する。

スリープ状態で接続できない



初次使用 DUOMON 如何與手機配對

STEP 1

開啟手機藍芽

進到 Pokemon Go 遊戲，點選『主選單』



※ 裝入2顆AAA電池，開關切至ON時 DUOMON EGG，1P及2P狀態燈會閃綠燈數下後進入工作模式等待連線。

STEP 2

點選『設定』

往下滑行到底，點選『Pokémon Go Plus』，在下方會看到可用的裝置




DUOMON EGG在未與任何手機配對前，LED會閃綠燈。



STEP 3

配對與連接


按壓 DUOMON EGG 1P或2P上的按鈕，手機上其中一個可用裝置中心點會有亮燈反應，點選手機上欲配對的可用裝置後，即開始與 DUOMON EGG 做配對與連接。

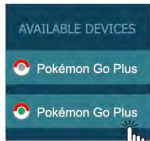

STEP 4

連線成功

連接成功後，APP上的可用裝置會如圖示般長亮。

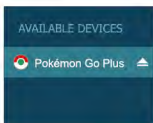

配對到的 DUOMON EGG LED燈號則是閃白燈。



STEP 5

連線成功

若 DUOMON EGG 之前已與手機配對成功，只是失去與手機的訊號連接，此時LED會閃綠燈；只要再按下手機APP地圖表右上的GO Plus圖示，就可以重新與DUOMON EGG連接。（連線成功閃紫燈）

DUOMON EGG不需解除配對即可連接另一支手機帳號，只需確定燈號是閃綠燈即可連接另一支手機，將電源開關關閉再開啟可以切斷所有連線恢復成未連線閃綠燈狀態。

配對與連線狀態顯示

指示燈號	● 紅燈閃爍	● 綠燈	● 紫燈
狀態	電量過低	等待連線 或 連線中斷	連線成功
音效	電量過低 請更換電池	無 或 連線中斷了	無
震動	無	單震2次	無

指示燈號	○ 藍燈	○ 綠燈	○ 黃燈	○ 白燈	○ 紅燈	○ 七彩燈	○ 白燈	○ 紅燈	○ 紅燈	○ 紅燈
狀態	發現補給站	發現寶可夢	發現寶可夢 (未捕捉過)	捕捉寶可夢中	寶可夢逃脫	捕捉寶可夢/ 補給站補給成功	道具滿了	沒有紅球了	遠離補給站 / 寶可夢盒子已滿	手機網路中斷
音效	無	無	新寶可夢出現了	無	無	無	道具滿了	沒有紅球了	寶可夢盒子滿了	手機網路中斷
震動	無	無	無	無	無	無	雙震3次	三震3次	單震2次	單震2次

功能與燈號說明

*1P、2P可個別設定

按下DUOMON EGG的按鈕，可切換不同燈號的功能

每按一次可切換不同功能，依序為
藍燈 -> 黃燈 -> 紫燈 -> 綠燈 -> 白燈 ->
綠/紫燈，以此順序循環，切換到要設定的
選項燈號後，再依右方的說明進行設定。

低電壓

當電池電量過低時 DUOMON EGG會發出電
量過低警報同時會閃雙紅燈，警報音會間歇
性的發報持續半小時後停止，但燈號會持續
閃雙紅燈。



1. 藍燈：播報統計

進到此選單時會亮藍燈，同時播報連線
狀態24小時內經由DUOMON EGG 抓
到的寶可夢數量及刷補給站的次數。
在此選單時長按按鍵3秒，寶可夢及補
給站的統計會歸零。



2. 黃色：語音大小設定

進到此選單時會播報目前語音聲音大小
的設定。
長按按鍵3秒可以設定語音聲大小：
聲音大聲 > 聲音小聲 > 聲音關閉。
聲音關閉時選單聲音會改為小聲撥放。



3. 紫燈：震動功能

進到此選單時會播報目前震動功能的
設定為開啟或關閉。

長按按鍵3秒可以開啟或關閉震動功能。



4. 綠燈：實況播報功能

進到此選單時會播報目前實況播報的
設定為開啟或關閉。

長按按鍵3秒可以開啟或關閉實況播報
功能；實況播報功能關閉時，警告播報
依舊會播報。



5. 白色：捕捉新寶可夢

進到此選單時會播報目前捕捉新寶可夢的設定為
開啟或關閉。

長按按鍵3秒可以開啟或關閉捕捉新寶可夢功能。
捕捉新寶可夢功能關閉時，若發現新寶可夢時將全面
停止自動捕捉，會持續提醒直到手動捕捉或新寶可夢
逃走了。



6. 綠燈 / 紫燈：連線狀態

顯示綠色燈號時會播報目前未連線，
顯示紫燈燈號時會播報目前連線中。
長按按鍵3秒進入休眠模式且閃爍紅
燈；長按按鍵3秒退出休眠模式且閃
爍綠燈。
休眠模式無法連線。

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Non-modification Statement:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Radiation Exposure Statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Compatible with iPhone 7 or higher devices with iOS Ver. 13 or higher installed.
Compatible with Android devices with 2 GB RAM or more. Bluetooth Smart
(Bluetooth Ver. 4.0 or higher)
capability and Android Ver. 7.0 or higher installed.

Copyright © Sperry Corporation All Rights Reserved.

DUOMON EGG is the trademark of Sperry Corporation. Pokemon / Pokemon Go
/ Pokemon Go Plus are the trademarks of Nintendo. The other trademark names
are the used marks, trademarks or registered trademarks of the corresponding
companies. This Product is not sponsored, endorsed, or approved by Nintendo,
The Pokémon Company Or Niantic.

Made in Taiwan
SPERRY CORPATION
369 Fu-Shin Noth Road Taipei Taiwan
www.dualcatchmon.com
Brand : MEGACOM
Model No : DM - 1299
Power Rating : DC 3V AAA batteries*2



Operation Frequency : 2402MHz ~ 2480MHz
Output Power : 0dBm
Hereby, Sperry Corporation declares that the radio equipment type
Catchmon Go is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the
following internet address : www.dualcatchmon.com
Copyright 2022 Sperry Corporation All rights Reserved

バージョンについて

低消費電力のBluetoothに接続したスマートフォン、並びにPokemon Goのゲーム
のAPPがあるものをご使用下さい。 iPhone7 plusまたはそれ以上のバージョン、並
びにiOS 13またはそれ以上のバージョンでのご使用をお勧めします。
2GB RAMまたはそれ以上の容量があるBluetooth バージョン4.0またはそれ以上の
バージョン、並びにAndroid 7.0またはそれ以上のバージョンのAndroid端末のご
使用をお勧めします

著作権について

DUOMON EGG, Megacom は、SPERRY CORPORATIONの登録商標です。
Pokemon・Pokemon Go・Pokemon Go Plus・ポケモンは、任天堂株式会社の登録商標です。
当製品は、Nintendo・The Pokemon Company・Niantic(ナイアンティック株式会社)
によって公認された製品ではありません。
本マニュアルに記載されている他の商品名・登録商標は説明のためだけに引用されており
、その権利は各社に帰属します

Made in Taiwan
SPERRY CORPORATION
369 Fu-Shin Noth Road Taipei Taiwan
www.dualcatchmon.com
Brand : MEGACOM
Model No : DM - 1299
Power Rating : DC 3V AAA batteries*2(not included)

201-220038

Copyright 2022 Sperry Corporation All rights Reserved .



補充說明


DUOMON EGG 小撇步

- 1.若是包包已滿，無法再轉補給站，可以先取消手機內
GO Plus 的 "附近的寶可補給站"的通知。
- 2.若是沒有紅球，暫時無法抓寶，則可先取消手機內
GO Plus 的 "附近的寶可夢"的通知。

DUOMON EGG 電力設計耗電量極低，並有下列省電與待機裝置

寶可夢 APP 大約每一小時會自動與 DUOMON EGG 斷線，若斷線後10分鐘內沒有再連線，DUOMON
EGG將會進入待機狀態，玩家可隨時按下手機APP上的 GO Plus 連線符號，自動喚醒 DUOMON EGG
重新連線。

PS 您也可以直接關閉電源延長使用時間



版本說明

需使用擁有低耗能藍芽連線的智慧型手機並且搭載Pokemon Go 遊戲APP。
建議使用 iPhone 7 或更高版本並帶有 iOS 13系統 或更高版本。建議使用含有 2GB RAM 或
更多容量，藍芽智能4.0或更高版本並帶有安卓7.0或更高版本的安卓手機。

版權說明

DUOMON EGG為 SPERRY CORPORATION 的註冊商標。Pokemon、Pokemon GO
、Pokemon GO Plus，寶可夢為日商任天堂股份有限公司的註冊商標。本手冊內提到的其
他所有產品名稱即任何商標僅供說明使用，並且為個別所有公司的專屬財產。本產品不是
由Nintendo、The Pokemon Company、或 Niantic 公司所贊助、認可、同意出品，為非原
廠官方認證產品。

Taiwan regulatory informantion(NCC)

「取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率
、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾
合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合
法通信，指依電信管理法規作業之無線電通信。低功率射頻器材須忍受合法通信或工業
、科學及醫療用電波輻射性電機設備之干擾。」

Made in Taiwan
SPERRY CORPORATION
www.dualcatchmon.com
Brand : MEGACOM
Model No : DM - 1299

XXXXXXXXXXXXXXXXX
Copyright 2022 Sperry Corporation All rights Reserved .

