

# DUOMON 3





## Product Main Introduction

English

- DuoMon 3 x1

DuoMon 3 features a round design and comes with Bluetooth and wireless charging capabilities, with a battery capacity of 500mAh. Wireless charging requires a DM3 edition Magnetic Charging Pad (included)

- DuoMon 3 Charging Pad x1


The maximum charging power can reach 15W, and it also supports wireless charging for mobile phones.

- C to C Charging Cable x1

Supports PD30W and includes an LED charging indicator.


- Storage Bag x1

- User Manual x1

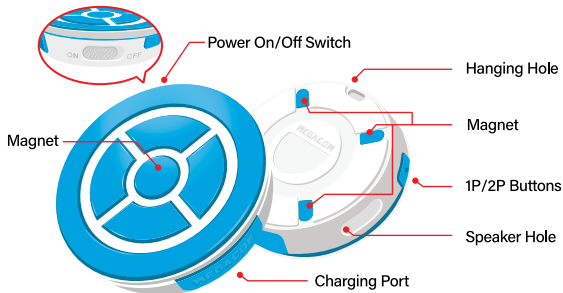



## Magnetic Charging Pad

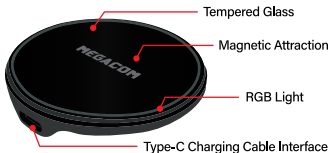

### Specifications

Input: DC 9V/1.5A-2.5A, 5V/1.5A  
Output: 15W/10W/7.5W/5W  
Charging Distance:  $\leq 10\text{mm}$   
Charging Efficiency:  $\leq 80\%$

### Product Features

1. Built-in magnets and wireless charging transmitter coils; placing DuoMon 3 or a magnetic phone will automatically attract and initiate wireless charging.
2. Standby Mode: After three cycles of the color marquee, the green LED indicator stays on continuously, indicating that the device has entered standby mode.
3. Charging Mode: The LED indicator light displays a blue breathing light.
4. FOD Automatic Foreign Object Detection: Intelligent identification of foreign objects, such as detecting coins, keys, or other metal items, will pause charging and the blue light will flash.
5. Comprehensive Protection: Including temperature control, short circuit protection, overvoltage protection, overcurrent protection, and compliance with BSMI safety standards.

1



DuoMon 3 with Wireless Charging

2




Supports wireless charging for mobile phones



## How to Pair DuoMon 3 with Your Phone for the First Time



- 1 Ensure that the Bluetooth on your phone is turned on. Turn on the DuoMon 3 switch, and the 1P and 2P status lights will flash green a few times, indicating standby mode and waiting for connection.



- 2 Enter the Pokemon Go game, click on 'Main Menu,' select 'Settings,' choose the Connected Devices & Services, and click on 'Accessory Devices.'



- 3 Then you will see the available device 'Pokemon Go Plus' listed below. DuoMon 3 will flash green when it's not connected to any phone. Please press the DuoMon 3 device button (1P/2P) that you wish to connect. One of the available device centers on the phone will have a green light flashing. Click on it to start pairing and connecting with the button.



- 4 After a successful connection, the LED indicator on DuoMon 3 will flash purple, and the available device on the phone will remain lit as shown in the pictures.

**Note:** For the initial pairing, please do not pair from the Bluetooth list in the phone settings. Please initiate the pairing process from within the game.



- 5 If DuoMon 3 was previously successfully paired with the phone but has lost its signal connection, the LED will flash green. Simply press the Poke Ball icon in the top right corner of the map, and you can reconnect with DuoMon 3.

## Download MEGACOM Center

1



Download MEGACOM CENTER APP from the store

2



Turn on MEGACOM CENTER APP, press any button on DuoMon 3 for the APP to detect. Once detected, click on DuoMon 3 in APP to initiate device pairing and connection.

3



Click on 'More Settings' to view the current firmware version and confirm whether you want to proceed with the update.



## DuoMon 3 button menu and indicator lights

※ 1P and 2P need to be set separately.



### 1. Blue : Quantity Statistics

When pressed to the **blue** light menu, it will broadcast the number of Pokemon caught and the number of PokeStops spun by DuoMon 3 within the last 24 hours. Press and hold the button for 3 seconds to reset the statistics for both Pokemon and PokeStops.



### 2. Yellow: Volume settings

When pressed to the **yellow** light menu, it will broadcast the current volume level setting.  
Press and hold the button for 3 seconds to adjust the volume: Volume Up> Sound Off > Volume Down.  
When sound is turned off, menu sounds will be broadcasted at a lower volume.



### 3. Green/Purple: Connection Status

This menu indicator light can determine the connection status of the button: Green: Not connected Purple: Connected

※ **Sleep Mode:** Long-press this menu button until the red light flashes, and the button will enter sleep mode. In sleep mode, the button will not be detected by the mobile phone. Sleep mode is indicated by a red light.

※ **Restore to Default Settings:** Simultaneously press the 1P and 2P buttons until the green light flashes three times,

Adjustments to other settings, including vibration and language version changes, can be made within the MEGACOM Center.



## Connection Status Indicators

| Light Indicator                                                                                                | Connection Status                      | Sound                                  | Vibration                                 |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------|----------------------------------------|-------------------------------------------|
|  Green                         | Waiting for connection or Disconnected | None or Lost Connection                | Triple vibration, three times(disconnect) |
|  Purple                        | Connection Successful                  | Pokemon Go connected                   | None                                      |
|  Flashing Red                  | Low Battery                            | Battery low,<br>please replace battery | None                                      |
| ※ When the low battery or disconnection alert sound is active, simply press any button to interrupt the alert. |                                        |                                        |                                           |

| Light Indicator                                                                          | In-Game Status                                          | Sound                   | Vibration                  |
|------------------------------------------------------------------------------------------|---------------------------------------------------------|-------------------------|----------------------------|
|  Blue    | PokeStop in range                                       | None                    | None                       |
|  Green   | Pokemon in range                                        | None                    | None                       |
|  White   | Catching Pokemon                                        | None                    | None                       |
|  Rainbow | Pokemon caught /<br>PokeStop spun successful            | None                    | None                       |
|  Yellow  | Pokemon escaped                                         | None                    | None                       |
|  Red     | New Pokemon in range                                    | New Pokemon in range    | None                       |
|                                                                                          | Item bag is full /<br>PokeStop spin failed (speed-lock) | Item bag is full        | Double vibration,<br>twice |
|                                                                                          | Out of red Poke Balls                                   | Out of Poke Balls       | Double vibration,<br>twice |
|                                                                                          | Pokemon storage is full                                 | Pokemon storage is full | Double vibration,<br>twice |
|                                                                                          | Mobile phone network issue                              | Network error           | None                       |



## Additional Instructions

- 1.If your item bag is full and unable to spin PokeStops, please temporarily disable the "Nearby PokeStops" notification in the GO Plus settings.
- 2.If you are out of Red Balls and unable to catch Pokemon, you can temporarily disable the "Nearby Pokemon" notification in the GO Plus settings.

### NOTIFICATIONS

#### Identify Nearby Pokemon

If disabled, your Pokemon GO Plus will not be able to catch Pokemon.

#### Identify Nearby PokeStops

If disabled, your Pokemon GO Plus will not be able to interact with PokeStops.

#### Push Notifications

DuoMon 3 features a one-touch reconnect function and is equipped with a power-saving mechanism.

According to the game rules, the Pokemon GO app will automatically disconnects from DuoMon 3 approximately 1 hour. If the reconnection is not initiated within 3 minutes after disconnection, DuoMon 3 will enter power-saving mode, and the LED light will stop flashing. Simply press the Poke Ball icon in the top right corner of the map to reconnect with DuoMon 3,

**PS** P.S. To extend usage time, it is recommended to either turn off the power or set the button to sleep mode.

## Low Battery

When the battery level is too low, DuoMon 3 will broadcast a low battery alert with flashing dual red lights. The alert broadcast will intermittently play for half an hour before stopping. Simply press the button at any time to stop the alarm, but the dual red lights will keep flashing.



## 主產品介紹

中文

### • DuoMon 3 x1

產品採圓形設計，具備藍芽、無線充電功能，電池容量500mha。  
無線充電需搭配DM3專用無線充電盤（隨附）

### • DuoMon 3 充電盤 x1


最大充電功率可達15W，也可支援手機無線充電。

### • C to C充電線 x1

支援PD30W，含LED充電符號。


### • 收納包 x1

### • 說明書 x1

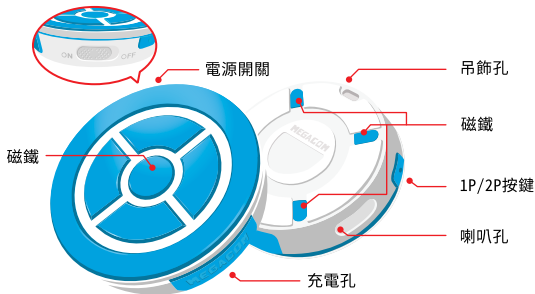



## DM3專用無線充電盤

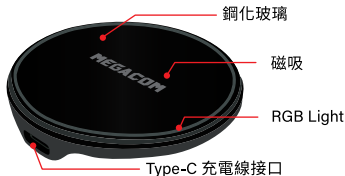

### 參數規格

輸入：DC 9V/1.5A-2.5A, 5V/1.5A  
輸出：15W/10W/7.5W/5W  
充電距離：≤ 10mm  
充電效率：≤ 80%

### 產品特點

1. 內置磁鐵及無線充電發射線圈，放置DuoMon 3或磁吸手機將自動吸附並開啟無線充電
2. 待機模式：彩色跑馬燈跑3圈後，綠色LED指示燈常亮，進入待機狀態
3. 充電模式：LED指示燈呈藍呼吸燈
4. FOD自動異物檢測：智能識別異物，如偵測到硬幣、鑰匙等金屬物品，會暫停充電並有藍燈閃爍
5. 全方位保護，包括溫度控制、短路防護、過壓保護、過流保護，並通過BSMI安規檢測。

①



DUOMON3 搭配 無線充電


②



支援手機無線充電



## 初次使用 DuoMon 3 如何與手機配對



- 1 請確保手機藍芽已開啟。打開DuoMon 3開關，1P及2P狀態燈會閃綠燈數下並進入待機模式等待連線。



- 2 進到Pokemon Go 遊戲，點選『主選單』點選『設定』選擇已連結的裝置及服務，點選外部裝置



- 3 DuoMon 3 在未與任何手機連接時，LED會閃綠燈。請選擇要連接 DuoMon 3 1P或2P，並按壓本體上方的按鈕，手機上其中一個可用裝置中心點會有綠燈閃爍，點選後手機即開始與 DuoMon 3 進行配對與連接。



- 4 連接成功後，DuoMon 3 LED燈號則是閃紫燈，手機上的可用裝置會如圖示般常亮。

注意：請勿從[手機設定藍芽清單]中配對，請從遊戲內進行藍芽配對



- 5 若DuoMon 3 之前已與手機配對成功,只是失去與手機的訊號連接,此時LED會閃綠燈;只要再按下地圖右上的精靈球圖示,就可以重新與DuoMon 3 連接

## 下載MEGACOM Center

1



商店下載  
MEGACOM CENTER APP

2



打開MEGACOM CENTER APP,請按壓 DuoMon 3任意按鈕以便APP偵測。  
APP偵測到裝置後,請點選「DuoMon 3」  
進行裝置配對連接

3



點選更多設定,可查看目前  
軟體版本,並確認是否要進  
行更新。



## DuoMon 3按鍵選單及燈號

※1P、2P須個別設定



### 1. 藍色：播報統計

按壓至藍燈選單時，將播報此按鈕24小時內經由 DuoMon 3抓到的寶可夢數量及刷補給站的次數。  
長按按鍵3秒，寶可夢及補給站的統計會歸零。



### 2. 黃色：音量設定

按壓至黃燈選單時，將播報目前音量大小的設定。  
長按按鍵3秒可以設定音量大小：  
聲音大聲 > 聲音關閉 > 聲音小聲。  
聲音關閉時，選單聲音會改為小聲播報。



### 3. 綠色/紫色：連線狀態

此選單可判別按鈕連線狀態  
綠色：未連線    紫色：已連線

※休眠模式

長按此選單按鍵直到紅燈閃爍，按鈕會進入休眠模式。  
休眠模式下，按鈕將無法被手機偵測。休眠模式顯示紅燈

※恢復初始設定

同時按下 1P 與 2P 按鍵至閃爍三下綠燈，可重置所有設定

其他設定調整，包含震動、語言版本更改等，請至MEGACOM Center內調整



## 連線狀態提示說明

| 燈號提示                          | 連線狀態        | 音效         | 震動           |
|-------------------------------|-------------|------------|--------------|
| ○ 綠燈                          | 等待連線 或 連線中斷 | 無 或 連線中斷了  | 連線中斷<br>三震三次 |
| ○ 紫燈                          | 連線成功        | 寶可夢已連線     | 無            |
| ○ 紅燈閃爍                        | 電量過低        | 電量過低 請更換電池 | 無            |
| *當電量過低或者連線中斷播報警音時,可按壓任一按鍵中斷播報 |             |            |              |

| 燈號提示  | 遊戲中狀態         | 音效      | 震動   |
|-------|---------------|---------|------|
| ○ 藍燈  | 發現補給站         | 無       | 無    |
| ○ 綠燈  | 發現寶可夢         | 無       | 無    |
| ○ 白燈  | 捕捉寶可夢中        | 無       | 無    |
| ○ 七彩燈 | 捕捉寶可夢/補給站補給成功 | 無       | 無    |
| ○ 黃燈  | 寶可夢逃脫         | 無       | 無    |
| ○ 紅燈  | 發現寶可夢(未捕捉過)   | 新寶可夢出現了 | 無    |
|       | 道具滿了          | 道具滿了    | 雙震2次 |
|       | 沒有紅球了         | 沒有紅球了   | 雙震2次 |
|       | 寶可夢盒子已滿       | 寶可夢盒子已滿 | 雙震2次 |
|       | 網路連線異常        | 網路連線異常  | 無    |



## 補充說明

1. 若是包包已滿，無法再轉補給站，可以先取消手機內GO Plus 的"附近的寶可補給站"的通知。
2. 若是沒有紅球，暫時無法抓寶，則可先取消手機內 GO Plus 的 "附近的寶可夢"的通知。

### 通知

#### 附近的寶可夢

關閉時 Pokemon GO Plus 不會捕捉寶可夢

#### 關閉附近的寶可夢補給站

關閉時 Pokemon GO Plus 不會旋轉寶可補給站

#### 推薦通知

## DUOMON3 具一鍵重連功能，並設有省電機制

依據遊戲規則，寶可夢APP約每小時會自動與DuoMon 3 斷線，玩家可隨時按下寶可夢APP地圖右上角的精靈球符號，喚醒DuoMon 3 重新連線。若斷線後3分鐘內沒有再連線，DuoMon 3 將進入省電模式，LED燈也會停止閃爍，但仍可一鍵重連。

**PS** 若要延長使用時間，建議可直接關閉電源，或將按鈕設為休眠模式。

## 低電量

當電池電量過低時 DUOMON3 會發出電量過低警報同時會閃雙紅燈，警報音會間歇性的發報持續半小時後停止，或可隨時按下按鈕中止發報，但燈號會持續閃雙紅燈。



## 製品の主な機能

日本語

- DuoMon 3 x1

DuoMon 3の特徴は丸いデザインで、Bluetoothとワイヤレス充電できます。バッテリー容量は500mAhです。

- DuoMon 3 充電トレイ x1


最大充電出力は15Wで、スマートフォンのワイヤレス充電にも対応します。

- C to C 充電ケーブル x1

LED充電シンボル付きでPD30W対応します。


- 収納バッグ x1

- 取扱説明書 x1

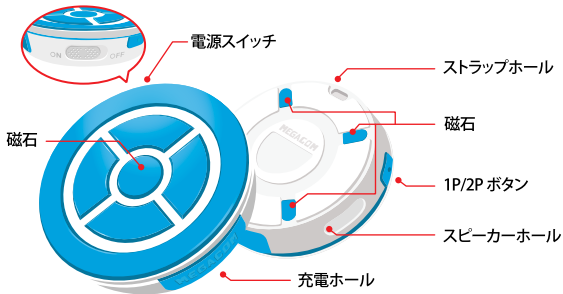



## マグネット式充電トレイ

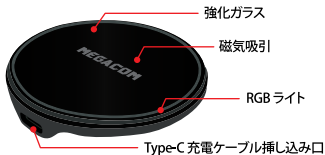

### 仕様

入力: DC 9V/1.5A-2.5A, 5V/1.5A

出力: 15W/10W/7.5W/5W

充電距離: ≤10mm

充電効率: ≤80%"

### 製品の特徴

1. マグネットとワイヤレス充電コイルを内蔵し、DuoMon 3またはマグネット式携帯電話を置くと自動的に吸着され、ワイヤレス充電が開始されます。
2. スタンバイモード: カラフルな走馬灯を3回回してから、緑色のLEDライトが点灯し、スタンバイモードに入ります。
3. 充電モード: LEDライトは青いライトでゆっくり点滅します。
4. FOD自動異物検出: コイン、鍵などの金属異物が検出された場合、インテリジェントな識別機能により充電が中断され、青いライトが点滅します。
5. 全面的に守る: 温度制御、ショートを防止、過電圧を防止、過電流を防止などの機能を備えた上に、BSMIの安全テストに合格しています。

①



DuoMon3はワイヤレス充電に対応します

②



スマートフォンのワイヤレス充電に対応します



## 初回使用! DuoMon 3とデバイスをペアリングする方法



- 1 DuoMon 3の電源スイッチを入れて、1Pと2Pが点滅したら接続待ちのスタンバイモードに入ります。端末のBluetoothをオンにしてからPokémon Goを開いて、「メインメニュー」を選択してください。



- 2 「設定」→「デバイス／サービスの接続」→「外部デバイス」の順にタップすると、一番下に「Pokémon Go Plus」があります。



- 3 DuoMon 3はどの端末にもペアリングされていない場合、LEDライトは緑に点滅します。DuoMon 3の1Pまたは2Pをタップすると、いくつかの「使用可能なデバイス」の中の一つが緑に点滅します。この「使用可能なデバイス」をクリックするとDuoMon 3とのペアリングと接続が始まります。



- 4 接続成功するとDuoMon 3のLEDライトは紫色に点滅します。端末の「使用可能なデバイス」は写真のように点灯します。

注意: 端末の「設定」でのBluetooth接続をしないでください。ゲームでのBluetooth接続をしてください



- 5 DuoMon 3は端末にペアリングしていただくと未接続の場合、LEDライトは緑に点滅します。「Pokémon Go Plus」画面の右上のモンスターボールをタップするとDuoMon 3との再接続ができます。

## MEGACOM CENTERをダウンロード

1



APPストアにて  
MAGACOM CENTER  
をダウンロード

2



任意にDuoMon 3のボタンを押して、APPを検索  
してください。  
検索出来たらDuoMon 3をタップしてペアリングと  
接続してください。

3



「さらに設定」をタップすると今  
のソフトウェアのバージョンが  
確認できます。  
アップデートもできます。



## DuoMon 3 ボタンメニューとライト

※1P・2Pは別々に設定してください。



### 1. 青いライト：統計をアナウンス

青いライトが出てくるまでボタンを押すとこのボタンで24時間以内DuoMon 3がゲットしたポケモンの数と回したポケストップの回数をアナウンスします。ボタンを3秒間長く押すとポケモンの数と回したポケストップの回数は0に戻ります。



### 2. 黄色ライト：音量調整

黄色ライトが出てくるまでボタンを押すと音量の調整がアナウンスします。

ボタンを3秒間長く押すと音量調整ができます。

音量をオフする場合、メニューを選ぶ時小さい音量でアナウンスします。



### 3. 緑ライト／紫ライト 接続状態

ボタンの接続状態が確認できます。 \*\*スリープモード  
メニューのボタンを赤ライトまで長く押すと、ボタンはスリープモードに入ります。スリープモード中ボタンは端末に検出されることができなくなります。スリープモードの表示は赤ライトです。

緑ライト：未接続 紫ライト：接続済み

\*初期セットアップにする

同時に1Pと2Pを緑ライトが三回点滅まで押すと、初期セットアップします。

その他の設定、例えば振動・言語変更などはMEGACOM CENTERにて設定できます。



## 接続状態説明

| ライト                                              | 接続状態        | 提示音              | 振動            |
|--------------------------------------------------|-------------|------------------|---------------|
| ○ 緑ライト                                           | 接続待ちまたは接続中断 | 無 または 接続中断       | 3回の連続振動が三回します |
| ○ 紫ライト                                           | 接続成功        | ポケモンが繋がった        | 無             |
| ○ 赤ライト点滅                                         | 電池残量が低い     | 電池残量が低い、交換してください | 無             |
| ※電池残量が低いや接続が中断のためアラーム音が鳴ると、任意にボタンを押すとアラーム音が止めます。 |             |                  |               |

| ライト     | ゲーム中の状態                    | 提示音         | 振動     |
|---------|----------------------------|-------------|--------|
| ○ 青いライト | ポケストップを発見                  | 無           | 無      |
| ○ 緑ライト  | ポケモンを発見                    | 無           | 無      |
| ○ 白いライト | ポケモンをゲット中                  | 無           | 無      |
| ○ 虹ライト  | ポケモンをゲット/<br>ポケストップを回す(成功) | 無           | 無      |
| ○ 黄色ライト | ポケモンが逃げた                   | 無           | 無      |
| ○ 赤ライト  | ポケモンをゲット<br>ゲットした事がない      | 新しいポケモンが現れた | 無      |
|         | 道具がいっぱい                    | 道具がいっぱい     | 二回連続振動 |
|         | モンスターボールがない                | モンスターボールがない | 二回連続振動 |
|         | ボックスがいっぱい                  | ボックスがいっぱい   | 二回連続振動 |
|         | ネット回線異常                    | ネット回線異常     | 無      |



## 補足説明

1. バッグがいっぱいになってポケストップを回せない場合、GO Plusの「近くのポケストップ」というお知らせ機能をオフにしてください。
2. モンスターボールが無くなってポケモンをゲットできない場合、GO Plusの「近くのポケモン」というお知らせ機能をオフにしてください。

### 通知

#### 近くのポケモン通知

オフにするとPokémon GO Plusはポケモンをゲットしなくなります。

#### 近くのポケストップ通知

オフにするとPokémon GO Plusはポケストップを回しません。

#### バッテリー通知

DuoMon 3はワンクリックで再接続機能があります。しかも省エネです。

ゲームのルールとしては、Pokémon GOは一時間ごとDuoMon 3との接続が中断されます。接続が中断された場合、Pokémon GOの右上にあるモンスターボールをタップすると、DuoMon 3との接続が再開できます。3分間以内再接続しない場合、DuoMon 3はLEDライトを消えて、スリープモードに入ります。スリープモードになっても、Pokémon GOの右上にあるモンスターボールをタップすると、DuoMon 3との接続が再開できます。

**PS** 電池の消費を抑えたい場合、DuoMon 3の電源をオフするか、またはスリープモードに設定してください。

## 電池残量が低い

電池残量が低い場合、DuoMon 3は赤ライトを点滅しながら「電池残量が低い」のアラーム音が鳴ります。アラーム音は30分間断続的になります。30分後アラーム音は止まるけど赤ライトは連続的に二回ずつ点滅します。

**装置説明** 建議智慧型手機內含2GB或更多的記憶體。為確保兼容性及穩定性，iOS建議使用 iPhone 7以上機型，並搭載iOS 14以上版本系統；Android機型則建議使用8.0或更高版本的作業系統。

## Taiwan regulatory information(NCC)

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

---

**Device Instructions** Compatible with devices featuring 2GB or more RAM. Compatible with iPhone 7 or later devices with iOS version 14 or higher, Android devices with an OS version 8 or higher.

## Copyright

Pokemon / Pokemon Go / Pokemon GO Plus are the trademarks of Nintendo. The other trademarks names are the used marks, trademarks or registered trademarks of the corresponding companies. This Product is not sponsored, endorsed, or approved by Nintendo, the Pokemon Company Or Niantic.

---

**バージョンについて** 低消費電力のBluetoothに接続したスマートフォン、並びにPokemon GoのゲームのAPPがあるものをご使用下さい。iPhone7 plusまたはそれ以上のバージョン、並びにiOS 13または以上のバージョンでのご使用をお勧めします。2GB RAMまたはそれ以上の容量があるBluetooth バージョン4.0またはそれ以上のバージョン、並びにAndroid 7.0またはそれ以上のバージョンのAndroid端末のご使用をお勧めします

## 著作権について

DUOMON, Megacom は、SPERRY CORPORATIONの登録商標です。  
Pokemon・Pokemon Go・Pokemon Go Plus・ポケモンは、任天堂株式会社の登録商標です。当製品は、Nintendo・The Pokemon Company・Niantic(ナイアンティック株式会社)によって公認された製品ではありません。  
本マニュアルに記載されている他の商品名・登録商標は説明のためだけに引用されており、その権利は各社に帰属します

## FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Non-modification Statement :

Changes or modifications not expressly approved by the party responsible for compliance could void

the user's authority to operate the equipment.

Radiation Exposure Statement :

The device has been evaluated to meet general RF exposure requirement,

The device can be used in portable exposure condition without restriction.

MEGACOM

DuoMon 3

Model No : DM-1311

Part NO : SW-2541

Nominal Capacity : 500mAh



Magnetic Wireless Charger

Model No : DM-1331

Input : DC 9V/1.5A-2.5A, 5V/1.5A

Output : 15W/10W/7.5W/5W



Made in Taiwan

SPERRY CORPORATION

[www.megacomshop.com](http://www.megacomshop.com)

Copyright 2024 Sperry Corporation All rights Reserved .



Contact Us



お問い合わせ