

版本	变更单号	修改内容	修改人	日期
REV.1				

ATUMTEK

User Manual

ATUMTEK 1.4m Selfie Stick Tripod with Wireless Remote Shutter

Product Introduction

Smartphone Holder
Adjustable sliding bracket
Aluminum alloy telescopic arm
Wireless Remote Shutter
Bottom stem

Product Parameters

Weight	Approx 12.3 oz
Folded Size	Φ 1.5*12.2 inch
Height in Selfie Stick Mode	53.9 inch
Height in Tripod Mode	55 inch
Phone Holder Size	from 2.2 inch to 3.6 inch
Wireless Remote Shutter Distance	<10 m (33ft)
Remote Battery Capacity	50 mAh(To take around 1,5000 pictures.)
Input	5 V/1 10 mA, Type-C charging port
Compatible Devices	fit ISO 7.0 and above, Android 5.0 and above devices.

How to take out/ put back the wireless remote shutter

Type-C Charging Port
(To recharge and reactive remote every 2 or 3 months.)

① Lift remote from the bottom and take it out
② Put the top part of the remote back first, then press the bottom part to secure it.
Note: There is a clear sound when the remote is put back in the right way.

How to use

Step 1 Open and Adjust Selfie Stick Tripod.

Tripod Mode

First, slightly unlock the 3 legs on the bottom. Then pull out the phone holder and hold the pole to pull the whole extendable pole out, the tripod will fully open automatically. This is similar to an umbrella structure. (Be careful not to pinch your fingers.) Finally, adjust the extendable pole height to find best shooting location.

ATTENTION: Tripod can only be used when it is fully opened, ensuring that the tripod is stable enough.
WRONG: Please do not pull the 3 legs directly to open the tripod.

Selfie Stick Mode

Just pull out the extendable pole to use as Selfie Stick.

Step 2: Attach the Phone Device on.

Using the phone, to stretch the phone holder to a suitable length easily, then release it in order to put the phone inside phone holder. Please avoid getting the phone buttons stuck.

Step 3: Rotate Phone Holder for Suitable Angle.

Phone In Landscape Position
Phone In Portrait Position

ATUMTEK

Thank you for choosing ATUMTEK!

ATUMTEK provides warranty coverage of 36 month on all of its brand name products purchased through authorized channels. support@atumtek.com

EC REP

UK REP

Poline GmbH
Seimmes Str. 40/239 Duesseldorf Germany
Syncoele UK Ltd
C/O Lis and Co 100 Portland Street, Manchester, M1 6N

Step 4 Release Phone Device and Close Tripod.

Using the phone, to stretch the phone holder to a suitable length easily, then release it in order to take out the phone.
Push the extendable pole back to close the tripod.
WRONG: Please do not push the 3 legs directly to close the tripod.

Wireless Remote Shutter Instructions

1. Turn On/Off:

Press and hold the camera button on the remote shutter for 3 seconds to turn the remote on or off. The green indicator light flashes slowly when the remote is on and not connected. If there's no connection for 10 minutes, the remote will shut down.

2. Connect via Bluetooth:

Turn on the remote shutter and go to your phone's Bluetooth settings. Search for and connect to "ATUMTEK" Bluetooth name. Once fully connected, the remote indicator light will turn solid green. If you have multiple ATUMTEK remotes, make sure to clear other devices and then rename the remotes to distinguish between them.

3. Taking Pictures and Videos with the Remote Shutter

After connecting the remote to your phone, open your phone camera and press the remote button once to take a picture. To take a video, select the video option in the camera and then press the remote button once to start recording. Press the button again to stop recording. Note: >The remote cannot control phone apps. >If there is no clicking for 10 minutes, the remote will shut down.

4. Low Battery & Recharging

Remotes could not open when it is low battery. The red light will be on while charging. You will not be able to use the remote while it is charging. The indicator light will be off after fully charged. Note: >It takes around 30 mins to fully charge the remote. >The new tripod already comes with a fully charged remote.

About Android System Phones Connection:

Some Android phones use phone volume button to control camera or zoom. Please reset on phone camera settings, find volume key function, set the volume key function to shutter. (Do not select zoom or focus.)

To access this ATUMTEK product instructions in different languages, please scan the QR code provided. Once scanned, you'll be directed to a PDF document, which you can open in your browser and download for your reference.

German User Manual

Spanish User Manual

French User Manual

Italian User Manual

Japanese User Manual

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


IC Warning

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
This Class B digital apparatus complies with Canadian ICES 003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
IC RF Statement:
When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.


型号	ATSS126	图名	ATSS126说明书		公差 ± 0.05
材料	105g双铜纸单黑印刷	风琴折			
设计	刘海涛	2023.04.18	颜色	单色	尺寸 165*85mm
审核			深圳市理德铭科技股份有限公司		单位 mm
批准					页码 1 / 1
					比例 1 : 1
					物料编号

User Manual

ATUMTEK 1.4m Selfie Stick Tripod
with Wireless Remote Shutter

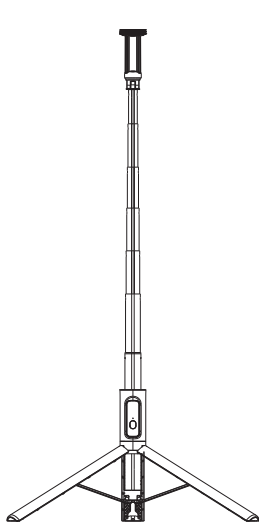

製品紹介

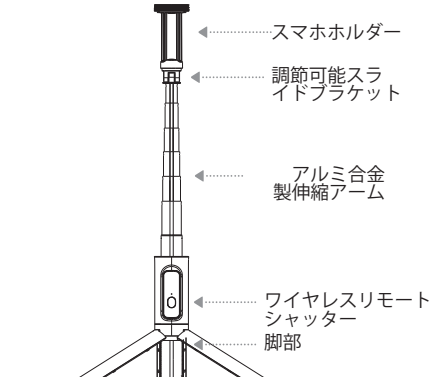


製品仕様

素材	ABS+アルミニウム合金
重量	約350g
折りたたみサイズ	Φ3.8×31cm
セルフリースティックモードの高さ	1.37m
三脚モードの高さ	1.4m
携帯ホルダーのサイズ	5.5cmから9.2cmまで
ワイヤレスリモートシャッター距離	<10m (33フィート)
リモートバッテリー容量	50mAh (約1,5000枚の写真を撮るため)
入力	5V / 110mA, Type-C充電ポート
対応デバイス	ISO7.0以上、Android 5.0以上のデバイスに対応しています。

1

無線リモートシャッターを取り外す/戻す方法

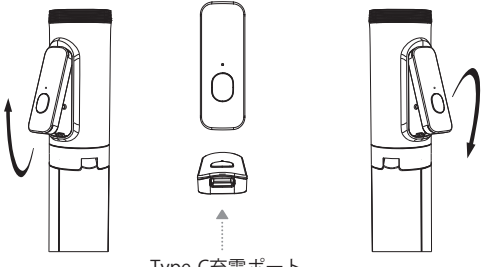


- ① リモートを下部から持ち上げて取り外します。
- ② まずリモートの上部を戻し、次に下部を押して固定します。
注: リモートを正しい方法で戻すと、はっきりとした音がします。


使い方

ステップ1 自撮り棒の三脚を開いて調整する。

三脚モード
最初に、下部の3本の脚をわずかに解除します。
次に、電話ホルダーを引き出し、棒を持って全体の伸縮可能な棒を引き出すと、三脚は自動的に完全に開きます。これは傘の構造に似ています。(指を挟まないように気をつけてください。)
最後に、伸縮可能な棒の高さを調整して、最適な撮影位置を見つけます。
注意: 三脚は完全に開いているときだけ使用でき、三脚が十分に安定していることを確認してください。
誤り: 三脚を直接3本の脚を引っ張らないでください。

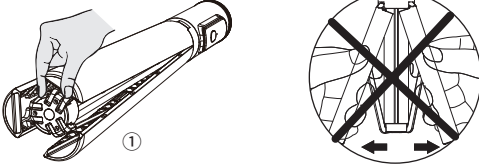


2

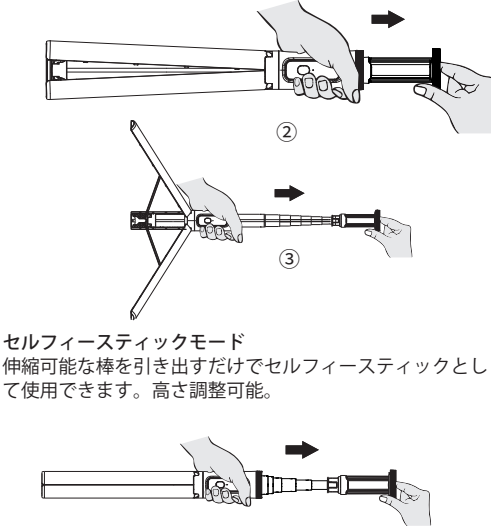


セルフリースティックモード
伸縮可能な棒を引き出すだけでセルフリースティックとして使用できます。高さ調整可能。

ステップ2: 電話機器を取り付けます。
電話を使って、電話ホルダーを簡単に適切な長さまで伸ばし、電話をホルダーに入れてから解放してください。電話のボタンが詰まらないように注意してください。

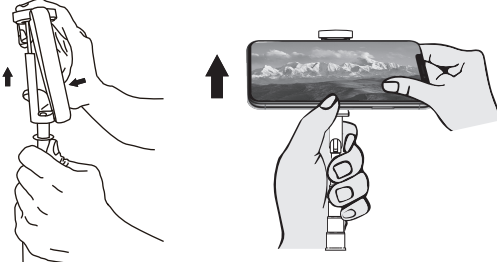

3

ステップ3: 適切な角度に電話ホルダーを回転します。

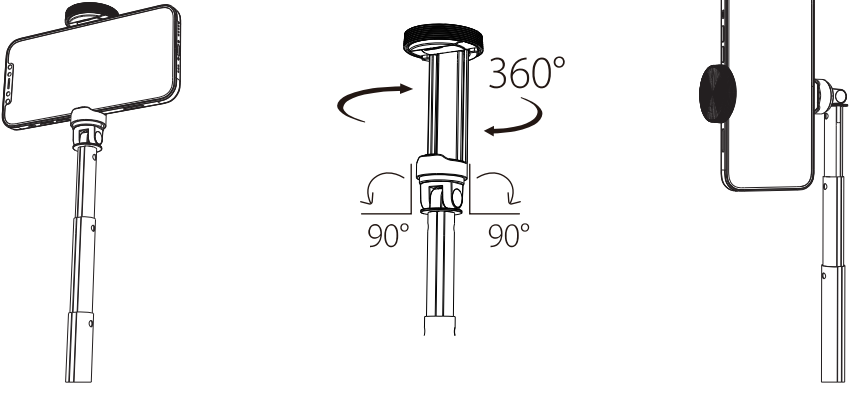

横向きの位置の電話


縦向きの位置の電話

4

ステップ4: 電話機器を解放して三脚を閉じます。

電話を使って、電話ホルダーを簡単に適切な長さまで伸ばし、電話を取り出すために解放してください。

伸縮ボールを押して三脚を閉じます。
間違い: 三脚を閉じるために3本の脚を直接押さないでください。

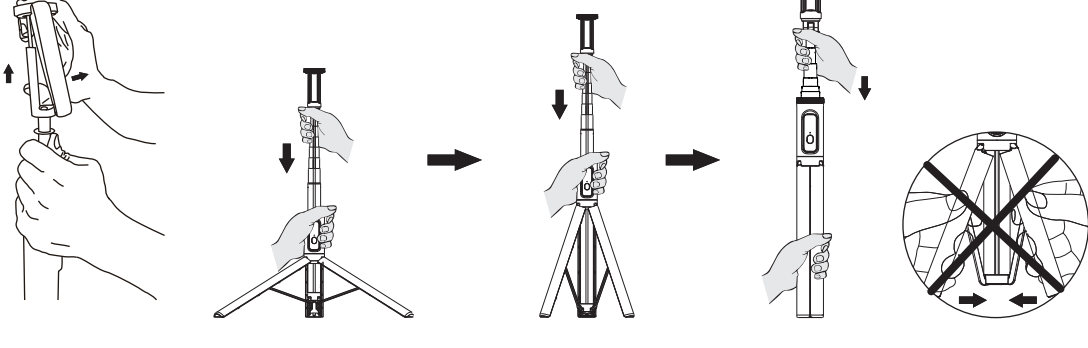

5

ワイヤレスリモコンシャッターの使用説明書


- 1. オン/オフ:**
リモートシャッターのカメラボタンを3秒間押し続けて、リモートをオンまたはオフにします。リモートがオンで接続されていない場合、緑色のインジケータライトがゆっくり点滅します。10分間接続がない場合、リモートはシャットダウンします。
- 2. Bluetoothで接続する場合:**
リモートシャッターをオンにして、携帯電話のBluetooth設定に移動します。
"ATUMTEK" Bluetooth名を検索して接続します。完全に接続されると、リモートのインジケータライトが緑色になります。
複数のATUMTEKリモートがある場合は、他のデバイスをクリアしてから、リモートの名前を変更して区別するようにしてください。
- 3. リモートシャッターで写真やビデオを撮る方法**
リモートを電話に接続した後、電話のカメラを開いて、リモートボタンを1回押して写真を撮影します。
ビデオを撮るには、カメラでビデオオプションを選択してから、リモートボタンを1回押して録画を開始します。もう一度ボタンを押して録画を停止します。
注意: *リモートは電話アプリをコントロールできません。
*10分間クリックがない場合、リモートはシャットダウンします。

6

- 4. 低バッテリーと充電**
低バッテリーでリモートは開けません。
充電中は赤い光が点灯します。充電中にリモートを使用することはできません。
充電が完了すると、インジケータライトが消えます。
注意: *リモートの完全充電には約30分かかります。
*新しい三脚にはすでに完全充電されたリモートが付属しています。

アンドロイドシステムの携帯電話に関する接続について

一部のアンドロイドの携帯電話では、携帯電話の音量ボタンをカメラまたはズームの操作に使用します。携帯電話のカメラ設定をリセットし、音量キーの機能を検索して、シャッターに設定してください(ズームやフォーカスを選択しないでください)。

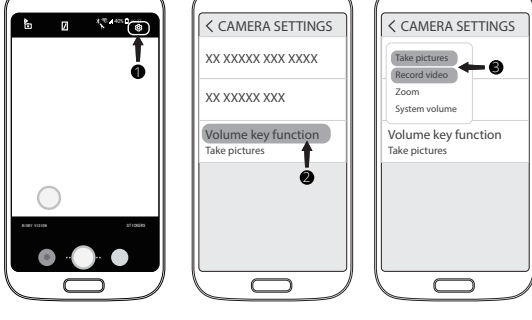

7