Model: DR02 D-PL

AUKEY

User Manual
Wi-Fi Dual Dash Camera

Aukey Technology Co.,Ltd.
Email: support-de@AUKEYofficial.com
Room 1122, Building F08, South China City
Electronic Trading Centre, Longgang District,
Shenzhen, Guangdong, P.R.C.

Contents

English ..... 01 – 16
Deutsch ..... 17 – 31
Français ..... 32 – 46
Español ..... 47 – 62
Italiano ..... 63 – 77

说明书尺寸：90x120mm
材质：105g铜版纸
印刷：单黑
装订方式：骑马钉

Thank you for purchasing the AUKEY DR02 D-PL Wi-Fi Dual Dash Camera. Please read this user manual in detail to avoid misuse and keep it for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

Dash Wi-Fi Dual Dash Camera (Front and Rear)
Rear Camera Extension Cable
128 GB Micro SD Cable with SD Adapter
32H GB Micro SD Cable
Two Stickers Mounts for Front Camera
Two Stickers Mounts for Rear Camera
Car Charger with USB Adapter
No Cable Clips
User Manual
Warranty Card

Product Diagram

Front Camera

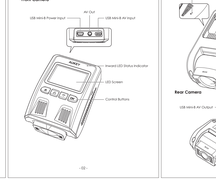

Rear Camera

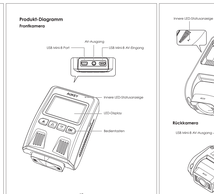

Specifications

Model	DR02 D-PL
Image Sensor	Sony Sensor IMX307 2.3 Megapixel CMOS Sensor
CPU	Novatek 96570
Screen	1.5" LCD
Angle of View	Front camera: 170° Rear camera: 132°
Aperture	Front camera: f/1.8 Rear camera: f/2.0
Exposure Value	1.0, -0.5, -1.0, -1.5, +0.5, +1.0, +1.5
Recording Resolutions	Front camera: 1080p (1920x1080), 720p (1280x720), WVGA, VGA Rear camera: 1080p (1920x1080), 720p (1280x720), WVGA, VGA
Videoformate	MP4
Sound Recording	On / Off
Recording Modes	Normal Recordition, Time-Lapse and Emergency Recording
Gravity Sensor Sensitivity	Low / Middle / High sensitivity
Micro SD Card Slot	Class 10 or Higher, 128 GB Max
Input	DC 5V/2.1A
Operating Temperature	-10°C - 70°C (14°F - 158°F)
Materials	ABS, PC, glass
Dimensions	Front camera: 71 x 51 x 37mm / 2.8" x 2" x 1.46" Rear camera: 64 x 35 x 28mm / 2.5" x 1.4" x 1.1"

System LED Indicators

There are four indicators in total. Each camera unit has an LED indicator that shows the current status of the camera. Additionally, the front camera unit has an LED indicator that flashes the interior of the vehicle and an LED indicator that flashes the exterior of the vehicle to alert you to various indicator (both for your reference). The outward LED indicators on both cameras can be switched off if you want the dash camera to be more discreet.

To toggle between Standard Lines and Grid Lines, press OK.

Indicator LED Status	Inward LED Status Indicator	Outward LED Status Indicator	Screen Indicator	Meaning
Solid Green	Solid Green	Flashing Green	Pairing Red	On - Normal working
Flashing Green	Flashing Green	Flashing Red	On - Recording

Note: For detailed battery life mode, only the inward LED indicator will be on and flashing. Once motion is detected, all indicators will operate the same as a normal recording.

Control Buttons

Button	Recording Mode	Playback & Setup Menu	Playback Mode
▲	Enter Emergency Recording	Return to previous menu	Return to previous page
▼	View playback footage	Move up	Delete / Rewind
OK	Turn on/off Audio Recording	Move down	Lock & Unlock / Fast-forward
◀	Take a snapshot (long press)		

⏻	Toggle screen view and turn off the screen	Enter / Confirm	Play / Pause
Reset Button	Short press to restart the device (Will not affect saved files)		

There are 3 screen view options. Dual view, front camera, and rear camera. When the dash camera is powered on, press the OK button to switch views to switch off the screen (recording continues). Screen Saver setting can also be used to automatically switch off the screen after 1 or 3 minutes of use.

Using a Micro SD Card

The camera doesn't include internal storage and requires a micro SD card to function. (Class10+ recommended and 128GB Max Capacity Supported.) A 128GB micro SD card should store around 32 hours of 1080p recordings. Use a micro SD card from a well-known brand to ensure reliability. Format the micro SD card first before using it for the first time. Format micro SD card with "Normal Formatting" in "Playback & Setup Menu" (Format in Dash Camera Setup) to prepare the card for first use. If the dash camera functions well, but prompts no video recording, format the micro SD card. For best performance, format periodically (after backing up any important files). "Normal Formatting" in Settings can be set as weekly.

Note: Please use a Class 10 micro SD memory card (128 GB max) for reliable recording and performance. Format new micro SD card in the dash camera before first time use.

Installation & Powering On/Off

Insert the micro SD card into the card slot and the exact way the cables must be connected. You may wish to connect and test the dash camera before installing it in your vehicle. For convenient testing in your home, a power bank or wall charger with 1A or 2A USB port can be used as an alternative to the car charger.

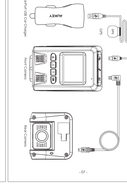

1. For optimal performance, install the AUKEY DR02 D-PL front / rear camera in the top center of your front / rear windshield, facing directly. Attached camera lens can be adjusted up and down as needed.
2. Use the 32ft Mini-B Cable (with a L-shaped connector at one end) to connect the two cameras. The L-shaped mini-B connector is to be inserted into the front of the front camera and the other end into the Mini-B mini-B Output of the rear camera.
3. Connect the 12ft USB Mini-B Cable (with a standard USB-A connector at one end) to one of the car charger ports and the front camera Mini-B Power Input.

Vehicle interior cable routing should be as shown in the following two diagrams. Use the cable clips to help fix the two cables conveniently and discreetly. Careful placement of the cables can prevent all wasting trim and unsightly cables.

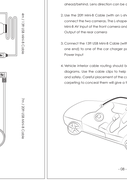
Windshield
Rear Mounting Location
Rear Camera
Front Camera
Front Mounting Location
Rear Camera Extension Cable
Mini-B Cable
Car Charger
Cable Clip
Cable Clip
Cable Clip