封面区域
红色虚线为封面示意区域，请勿印刷

402mm
67mm
67mm
268mm

lunaProducts **EN**

PHOTOELECTRIC SMOKE ALARM

10012168-001

Model: LPSMOKE01.345.1

IMPORTANT!PLEASE READ CAREFULLY AND SAVE.
Read this instruction manual carefully before installing your Smoke Alarm Device's operation. If you are installing this Smoke Alarm Device for use by others, you must leave this manual—or a copy of it—with the end user.

- The pictures shown are for reference only.
- As the technology is constantly updated, if actual operation is inconsistent with the user manual, please refer to the actual operation, and the final interpretation rights is reserved to the manufacturers.

Luna Products, LLC
5958 Owens Ave STE150 Carlsbad, CA

SAFETY INFORMATION

⚠ WARNING!
- Never ignore any alarm. If the unit alarms and you are not testing it, it is warning you of a potentially dangerous situation that requires your immediate attention.
- Do not paint the unit. Paint overspray could prevent smoke from reaching the unit. The unit cannot provide an alarm if the smoke does not reach them.
- The unit will not alert hearing impaired residents. It is recommended that you install special units with visual and vibration alarms to alert hearing impaired residents.

⚠ CAUTION!
- Not recommended for operation in areas where the temperature may fall below 40°F (4.4°C) or rise above 100°F (37.8°C) or in areas where the humidity is less than 10% or greater than 95%.
- Do not stand too close to the unit when the alarm is sounding. Exposure to the horn at close range may harm your hearing.
- Do not paint over the unit. Paint may clog the openings to the sensing chamber and prevent the unit from operating properly.

PACKING LIST

Part Name	Quantity
Smoke alarm	1 Piece
Mounting bracket	1 Piece
Battery	1 Piece
Screw	2 Pieces
Anchor plug	2 Pieces
Manual	1 Piece
Disassembly pin	1 Piece
Adhesive Pad	1 Piece

PRODUCT DIAGRAM

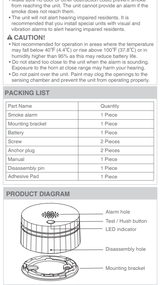

TECHNICAL SPECIFICATIONS

Working Voltage	DC9V (EVECR123A)
Battery Life	3 years
Sensor Type	Photoelectric
Alarm Sound Level	≥ 85dB (at 3m straight ahead)
Temperature Range	40°F (4.4°C) to 100°F (37.8°C)
Humidity Range	≤ 95%RH (no condensation)
Alarm Sensitivity	1.9%/ft ± 0.3(1%/m OBS)
Dimensions	Φ70 x H37mm

RECOMMENDED INSTALLATION LOCATIONS

NOTICE - THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION'S STANDARD 72 (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269).

The National Fire Protection Association (NFPA) recommends installing a smoke alarm in the following areas:
- In every room in the path of escape routes and basements.
- In every sleeping area and in every bedroom.
- If your bedroom, hallway or large room is more than 30feet (9.1m) long, install an alarm at each end.
- At the top of the first-to-second floor stairway and on the basement ceiling near the entry of the stairs.
- Installing on the ceiling is recommended; mount the smoke alarm at least 4 inches (10cm) away from the side wall.

(See Figure 1)
- When installing the alarm on the wall, mount the alarm 4-12inches (10-30cm) below the ceiling.(See Figure 1)
- If you have a sloped, peaked or cathedral ceiling, the alarm should be installed within 3feet (90cm) of the peak of the ceiling measured horizontally.(See Figure 2)

IMPORTANT:
One smoke alarm on every level and in every bedroom.

Figure 2

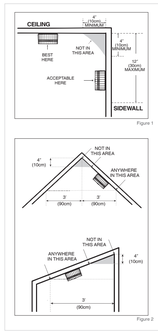

Figure 1

LOCATIONS TO AVOID

For best performance, please avoid installing a smoke alarm in these areas:
- In dusty or dirty areas. Dirt and dust can build up and impair performance.
- In areas where the normal ambient temperature is below 40°F (4.4°C) or exceeds 100°F (37.8°C), such as garages and unfinished attics.
- In high humidity areas. Moisture or steam may cause nuisance alarms.
- Near fresh air vents, ceiling fans, or in very drafty areas. Drafts can blow smoke away from the unit, preventing it from reaching the sensing chamber.
- In kitchens, garages, and furnace rooms. Burning material produces combustion products which could cause your smoke alarm to go off unnecessarily.
- Less than 4inches (10cm) from the peak of an "A" frame type ceiling. The "Dead air" space may prevent smoke from reaching the smoke alarm.
- Near fluorescent lights, amateur radios, or other devices that may transmit an RF signal, as electrical "noise" can interfere with the sensor.

HOW TO INSTALL THE SMOKE ALARM

The smoke alarm is designed to be mounted on the ceiling, or on the wall if necessary. Screw the smoke alarm to the ceiling or wall using the included screws.

1.Press and insert the keyholes hole of the alarm with the disassembly pin. Remove the mounting bracket from the back of the alarm by holding the mounting bracket and twisting the alarm in the direction indicated on the alarm cover.(See Figure 3)

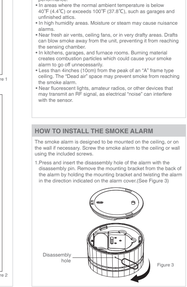

Figure 3

2.Locate the mounting bracket in your chosen position, and mark the screw holes on the ceiling or the wall.

3.Drill the holes at the marks with a 3/16" (5 mm) drill bit. Insert the anchor plugs (if supplied) into the holes drilled in the ceiling or wall using the screws provided.(See Figure 4)

4.Attach the smoke alarm to the mounting bracket and turn clockwise to lock the alarm.(See Figure 5)

5.Test the smoke alarm. See "WEEKLY TESTING".

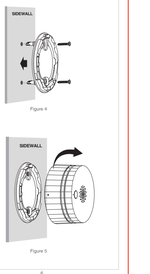

Figure 4

Figure 5

LED INDICATOR AND AUDIBLE ALARM

CONDITION	LED INDICATOR	AUDIBLE ALARM	NOTE
Standby condition	Red LED flashes once every 54 seconds.	None	Standby
Test condition	Red LED flashes rapidly.	3 short quick beeps	Weekly testing
Alarm condition	Red LED flashes rapidly.	3 short quick beeps	-
Hush condition	Red LED flashes once every 10 seconds.	None	None(Duration:about 10 minutes)
Low battery	Red LED flashes once every 54 seconds.	1 beep every 54 seconds	Replace battery
Hush for low battery warning	Red LED flashes once every 54 seconds.	None	None(Duration:about 12 hours)
Malfunction	Red LED flashes twice every 54 seconds.	2 beeps every 54 seconds	Replace alarm
End of life	Yellow LED flashes three times every 54 seconds.	3 beeps every 54 seconds	Replace alarm

WHAT TO DO WHEN THE ALARM SOUNDS

If the alarm sounds, check for fires first. If no fire is present, check to see if the alarm caused by nuisance alarm (caused by cooking smoke, etc.), if a fire is discovered, follow these steps.
- Have all occupants immediately exit the premises.
- Crawl low under any smoke, because unless you must escape through the smoke.
- Stay close to the floor if the air is smoky. Cover your nose and mouth with a cloth (preferably damp).
- Meet at your planned meeting place outside your home and make sure everyone has safely exited.
- Never return to a burning building for any reason.
- Call the fire department.
- These are situations where a smoke alarm may not be effective to protect against fire as stated in the NFPA Standard 72: For instance:
  a) Smoking in bed.
  b) Leaving children home alone.
  c) Cleaning with flammable liquids, such as gasoline.

⚠ CAUTION!
- An indication that current studies have shown smoke alarms may not awaken all sleeping individuals, and that it is the responsibility of individuals in the household that are capable of assisting others to provide assistance to those who may not be awakened by the alarm sound, or to those who may be incapable of safely evacuating the area unassisted.

⚠ WARNING!
- Never remove the batteries to stop an unwanted alarm (caused by cooking smoke, etc.). This will disable the alarm, so it cannot detect smoke. Instead open a window or fan the smoke away from the unit.

USING THE SILENCE FEATURE

The Silence Feature can temporarily quiet an unwanted alarm for approximately 10 minutes. If the smoke is not dense, the alarm will silence immediately and the red LED will flash every 10 seconds. If smoke around the unit is dense enough to suggest a potentially dangerous situation, the unit will stay in alarm or may re-alarm quickly. This feature is to be used only during an unwanted alarm condition, such as smoke caused by cooking. To use this feature, press the "Test/Hush" button on the cover.

⚠ WARNING!
- Before using the silence feature, identify the source of the smoke and be certain a safe condition exists. If you do not know the source of the smoke, do not assume it is an unwanted alarm. Not responding to an alarm can result in property loss, injury or death.
- The silence feature is only for your convenience and will not correct a problem. Always check your home for a potential problem after any alarm. Failure to do so can result in injury or death.

SILENCING THE LOW BATTERY WARNING

This silence feature can temporarily quiet the low battery warning "chirp" for up to 12 hours. You can silence the low battery warning "chirp" by pressing the Test/Hush button on the alarm cover.

Replace the battery as soon as possible, this unit will not operate without battery power!

SILENCING THE END OF LIFE SIGNAL

When the alarm issue end of life warning signals, Replace the alarm immediately! It will not detect anymore.
This silence feature can temporarily quiet the end of life warning "chirp" for approximately 24 hours. You can silence the end of life warning "chirp". The horn will chirp, acknowledging that the end of life silence feature has been activated.

TESTING AND MAINTENANCE

WEEKLY TESTING
It is important to test this unit weekly to make sure it is working properly.

Using the Test/Hush button to test this Smoke Alarm. Press and hold the Test/Hush button on the cover until the alarm sounds (this unit may continue to alarm for a few seconds after you release the button). If it does not alarm, make sure the unit is receiving power, and test it again. If it still does not alarm, replace it immediately. During testing you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause.

⚠ WARNING!
- Test the alarm device weekly to ensure proper operation. If the alarm is not working properly, it cannot alert you to a problem.
- NEVER use an open flame of any kind to test this alarm. You might accidentally damage or set fire to the unit or to your home.
- DO NOT stand close to the alarm when the horn is sounding, always stand an arms-length away from the unit when testing.

REGULAR MAINTENANCE

To keep the alarm working properly, follow these simple methods:
- Test the alarm at least once a week to verify the unit's alarm and battery are working properly.
- Clean the alarm annually by using compressed air or a vacuum cleaner hose. Never use water, cleaners or solvents as they may damage the unit.
- If the smoke alarm cannot be cleaned to avoid unwanted alarms, replace the alarm immediately.
- When you hear the low battery warning ("chirp" approximately once every 54 seconds), replace the battery immediately.

BATTERY REPLACEMENT

The smoke alarm requires one 3V battery: CR123A.
The battery can be purchased at your local retail stores or where you purchased this alarm.

⚠ WARNING!
- Use only batteries specified by this User's Manual. Use of a different battery will have a detrimental effect on smoke alarm operation. Constant exposures to high or low temperatures or high humidity may reduce battery life.
- Unit will not operate without battery power. Alarm will warn you in advance when battery is running low so that you can replace it.

AGENCY PLACEMENT RECOMMENDATIONS

NFPA 72 Chapter 29
"For your information, the National Fire Alarm and Signaling Code, NFPA 72, reads as follows:"
"29.5.1 *Required Detection.*"
"29.5.1.1 Where required by other governing laws, codes, or standards for a specific type of occupancy, approved single and multiple-station smoke alarms shall be installed as follows:
(1) *In all sleeping rooms and guest rooms.*
(2) *Outside of each separate dwelling unit sleeping area, within 21 ft (6.4 m) of any door to a sleeping room, with the distance measured along a path of travel.*
(3) On every level of a dwelling unit, including basements.
(4) On every level of a residential board and care occupancy (small facility), including basements and excluding crawl spaces and unfinished attics.
(5) "In the living area(s) of a guest suite.
(6) In the living area(s) of a residential board and care occupancy.

(Reprinted with permission from NFPA 72®, National Fire Alarm and Signaling Code®, Copyright © 2010 National Fire Protection Association, Quincy, MA 02269. This reprinted material is not the complete and official position of the National Fire Protection Association, on the referenced subject which is represented only by the standard in its entirety.)

National Fire Alarm and Signaling Code® and NFPA 72® are registered trademarks of the National Fire Protection Association, Inc., Quincy, MA 02269.)

CALIFORNIA STATE FIRE MARSHAL (CSFM)

Early warning detection is best achieved by the installation of fire detection equipment in all rooms and areas of the household as follows:
A smoke alarm installed in each separate sleeping area (in the vicinity, but outside bedrooms), and Heat or smoke alarms in the living rooms, dining rooms, bedrooms, kitchens, hallways, finished attics, furnace rooms, closets, utility and storage rooms, basements, and attached garages.

LIMITATIONS OF SMOKE ALARMS

Smoke alarms can help save lives by providing an early warning of a fire, but they are not foolproof. Smoke Alarms can only work if they are properly located, installed, and maintained, and if smoke reaches them.
- This smoke alarm device is NOT designed to be the PRIMARY protection for buildings that require complete fire alarm systems. Buildings of this type include hotels, motels, dormitories, hospitals, nursing homes, and group homes. This is true even if they were once single family homes. However, this smoke alarm device may be used inside individual rooms as supplemental protection.
- Smoke alarms cannot work without power. The battery-powered alarm use only batteries specified by this User's Manual. Use of a different battery will have a detrimental effect on smoke alarm operation.
- Smoke alarms should be tested at least once a week to ensure continued protection. Smoke Alarms cannot prevent or extinguish fires.
- Smoke alarms cannot provide an alarm if the smoke does not reach them. Therefore, smoke alarms may not sense the smoke from fires in chimneys or walls, on roofs, or on a different floor.
- Smoke alarm devices can sound them alarms only when they detect smoke. Smoke alarm devices detect combustion particles in the air, but they may not detect all fires. This smoke alarm device is designed to give audible warning of a developing fire. However, many fires are ball-burning, explosive, or intentional. Others are caused by carelessness or safety hazards. Smoke may not reach the unit quickly enough to ensure safe escape.
- Smoke alarms may not alert all individuals. The alarm horn is loud in order to alert individuals to a potential danger. However, there may be limiting circumstances where a household member may not hear the alarm. This may be due to the distance or an impair one's ability to hear the smoke alarm. Special purpose units, like those with visual and vibration alarms, should be installed for hearing impaired residents.
- Smoke alarm devices have limitations. This smoke alarm device is not foolproof and is not warranted to protect lives or property from fire. Smoke alarm devices are not a substitute for insurance. Homeowners and renters should insure their lives and property. In addition, it is possible for the smoke alarm device to fail at any time. The manufacturer always replace a smoke alarm after 10 years from date of purchase.

FCC STATEMENT
47 CFR 15.105(b) 47 CFR 15.21
FCC Compliance
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment generates and uses radio frequency energy. If it has been tested and found to comply with Class B digital electronic, designed to provide reasonable protection against harmful interference in a residential environment.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and the receiver.
RF Exposure: This equipment complies with FCC RF radiation exposure limits for an uncontrolled environment.

ISED STATEMENT
ICES-GEN Compliance Statement
This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.
RF Exposure: This equipment complies with ISED RF exposure limits for an uncontrolled environment.

SAFETY INFORMATION

⚠ WARNING!
- Ne jamais ignorer une alarme. Si l'appareil émet une alarme et que vous ne le testez pas, il vous avertit d'une situation potentiellement dangereuse. Le cas échéant, vous devez prendre immédiatement des mesures.
- Ne pas peindre l'appareil. La peinture pourrait obstruer les ouvertures de la chambre de détection et empêcher l'appareil de fonctionner correctement.

LISTE D'EMBALLAGE

NOM OU COMPOSANT	QUANTITÉ
Avertisseur de fumée	1 Pièce
Support de montage	1 Pièce
Batterie	1 Pièce
Vis à vis	2 Pièces
Boutons d'ancrage	2 Pièces
Manuel	1 Pièce
Goupille de démontage	1 Pièce
Tapis adhésif	1 Pièce

DIAGRAMME DE PRODUIT

INDICATEUR LED ET ALARME SONORE

CONDITIONS	INDICATEUR LED	ALARME AUDIBLE	NOTE
Condition de veille	Le voyant rouge clignote une fois toutes les 54 secondes.	-	En attente
Condition d'essai	Le voyant rouge clignote rapidement	3 bips courts et rapides	Tests hebdomadaires
Condition d'alarme	Le voyant rouge clignote rapidement	3 bips courts et rapides	-
Condition d'affaissement	Le voyant rouge clignote une fois toutes les 10 secondes.	-	Aucun (durée environ 10 minutes)
Batterie faible	Le voyant rouge clignote une fois toutes les 54 secondes.	1 bip toutes les 54 secondes	Remplacer la batterie
Hush pour l'avertissement de batterie faible	Le voyant rouge clignote une fois toutes les 54 secondes.	-	Aucun (durée environ 12 heures)
Dysfonctionnement	Le voyant rouge clignote deux fois toutes les 54 secondes.	2 bips toutes les 54 secondes	Remplacer l'alarme
Fin de vie	Le voyant jaune clignote trois fois toutes les 54 secondes.	3 bips toutes les 54 secondes	Remplacer l'alarme

QUE FAIRE LORSQUE L'ALARME RETENTIT

Si l'alarme retentit, vérifiez d'abord s'il n'y a pas d'incendie. S'il n'y a pas d'incendie, vérifiez si l'alarme n'est pas due à une nuisance (fumée de cuisson, etc.). Si un incendie est découvert, suivez les instructions suivantes :
- Faites sortir immédiatement tous les occupants du lieu.
- Rampez sous la fumée, car en restant debout, vous risquez de vous étouffer par celle-ci.
- Restez près du sol si l'air est enfumé. Couvrez-vous le nez et la bouche avec un chiffon (de préférence humide).
- Rendez-vous à l'endroit prévu à l'extérieur de votre domicile et assurez-vous que tout le monde est présent.
- Ne retournez jamais dans un bâtiment en feu, quelle que soit la raison.
- Appelez les services d'incendie.
- Il s'agit de situations dans lesquelles un avertisseurs de fumée peut ne pas être efficace pour protéger contre l'incendie, comme le stipule la norme 72 de la NFPA. Il s'agit par exemple des situations suivantes: a) Fumer au lit.
b) Laisser les enfants seuls à la maison.
c) Nettoyer avec des liquides inflammables, telle que l'essence.

⚠ ATTENTION !
- Les études actuelles des études actuelles ont montré que les avertisseurs de fumée peuvent ne pas réveiller toutes les personnes endormies, et qu'il est de la responsabilité des personnes du foyer qui sont capables d'aider les autres de fournir une assistance à ceux qui peuvent ne pas être réveillés par le son de l'alarme, ou à ceux qui peuvent être incapables d'évacuer la zone en toute sécurité sans aide.

AVERTISSEMENT!

- Ne retirez jamais les piles pour éteindre une alarme non désirée (causée par de la fumée de cuisson, etc.). Cela désactiverait l'alarme et l'empêcherait de détecter la fumée. Ouvrez plutôt une fenêtre ou éventez la fumée de l'appareil à l'aide d'un ventilateur.

UTILISATION DE LA FONCTION SILENCE

La fonction Silence permet de faire taire temporairement une alarme indésirable pendant environ 10 minutes. Si la fumée n'est pas très dense, l'alarme se tait immédiatement et le voyant rouge clignote toutes les 10 secondes. Si la fumée autour de l'appareil est suffisamment dense pour suggérer une situation potentiellement dangereuse, l'appareil restera en alarme ou pourra se réarmer rapidement. Cette fonction ne doit être utilisée qu'en cas d'alarme connue, par exemple en cas de fumée causée par la cuisson. Pour utiliser cette fonction, appuyez sur le bouton "Test/Hush" situé sur le couvercle.

AVERTISSEMENT!

- Avant d'utiliser la fonction silence, identifiez la source de la fumée et assurez-vous que les conditions de sécurité sont réunies. Si vous ne connaissez pas la source de la fumée, ne supposez pas qu'il s'agit d'une alarme indésirable. Ne pas réagir à une alarme peut entraîner des pertes matérielles, des blessures ou la mort.
- La fonction silence n'est là que pour vous faciliter la tâche et ne permet pas de remédier à un problème. Après une alarme, vérifiez toujours que votre maison ne présente pas de problème potentiel. Le non-respect de cette consigne peut entraîner des blessures ou la mort.

FAIRE TAIRE L'AVERTISSEMENT DE BATTERIE FAIBLE

Cette fonction de silence peut temporairement faire taire le signalement de batterie faible pendant 12 heures au maximum. Vous pouvez faire taire le signal sonore de batterie faible en appuyant sur le bouton Test/Hush situé sur le couvercle de l'alarme.

Remplacez la pile dès que possible, car l'appareil ne fonctionne pas sans pile!

FAIRE TAIRE LE SIGNAL DE FIN DE VIE

Lorsque le signal de fin de vie indique le remplacement de fin de vie, remplacez-la immédiatement ! Elle ne détectera plus rien. Cette fonction de silence peut temporairement faire taire le « chirp » de fin de vie pendant environ 24 heures. Vous pouvez faire taire le signal sonore de fin de vie. L'avertisseur sonore émet un bip, confirmant que la fonction de mise en sourdine de l'avertissement de fin de vie a été activée.

LES ESSAIS ET LA MAINTENANCE

TESTS HEBDOMADAIRES
Il est important de tester cet appareil chaque semaine pour s'assurer qu'il fonctionne correctement.

Utilisez le bouton Test/Hush pour tester ce avertisseurs de fumée. Appuyez sur le bouton Test/Hush situé sur le couvercle de l'appareil et maintenez-le enfoncé jusqu'à ce que l'alarme retentisse (l'appareil peut continuer à sonner pendant quelques secondes après que vous avez relâché le bouton). Si l'alarme ne retentit pas, assurez-vous que l'appareil est alimenté en électricité, puis testez-le à nouveau. Si elle retentit toujours pas d'alarme, remplacez-le immédiatement. Pendant le test, vous entendrez un signal sonore fort et répétitif : 3 bips, pause, 3 bips, pause.

AVERTISSEMENT!

- Testez régulièrement l'alarme chaque semaine pour vous assurer qu'il fonctionne correctement. Si l'alarme ne fonctionne pas correctement, elle ne peut pas vous alerter en cas de problème.
- N'utilisez JAMAIS de flamme nue, quelle qu'elle soit, pour tester cette alarme. Vous risqueriez d'endommager accidentellement ou de mettre le feu à l'appareil ou à votre maison.
- NE PAS se tenir à proximité de l'alarme lorsque le klaxon retentit; toujours se tenir à une longueur de bras de l'unité lors des tests.

ENTRETIEN RÉGULIER

Pour assurer le bon fonctionnement de l'alarme, suivez ces quelques conseils :
- Testez l'alarme au moins une fois par semaine pour vérifier que l'appareil et la batterie fonctionnent correctement correctement.
- Nettoyez l'alarme chaque année à l'aide d'air comprimé ou d'un tuyau d'aspirateur. N'utilisez jamais d'eau, de nettoyants ou de solvants, car ils pourraient endommager l'appareil.
- Si le avertisseurs de fumée ne peut pas être nettoyé pour éviter les alarmes intempestives, remplacez-la immédiatement.
- Lorsque vous entendez l'avertissement de pile faible ("chirp" toutes les 54 secondes environ), remplacez immédiatement la pile pour continuer à vous protéger.

REMPLACEMENT DE LA BATTERIE

Le avertisseurs de fumée nécessite une pile de 3V: CR123A.
La pile peut être achetée dans les magasins local ou à l'endroit où vous avez acheté ce détecteur.



⚠ AVERTISSEMENT!
- N'utilisez que les piles spécifiées dans ce manuel de l'utilisateur. L'utilisation d'une pile différente aura un effet néfaste sur le fonctionnement du avertisseurs de fumée. Une exposition constante à des températures élevées ou basses ou à une forte humidité peut réduire la durée de vie des piles.
- L'appareil ne fonctionne pas sans pile. L'alarme vous avertit à l'avance lorsque la batterie est faible afin que vous puissiez la remplacer.

RECOMMANDATIONS DE PLACEMENT DE L'AGENCE

NFPA 72 Chapitre 29
"Pour votre information, le Code national de signalisation et d'alarme incendie, NFPA 72, se lit comme suit :"
"29.5.1 *Détection requise.*"
"29.5.1.1 Lorsque d'autres lois, codes ou normes en vigueur l'exigent pour un type d'occupation spécifique, le système de détection de l'incendie doit être mis en place, pour un type d'occupation spécifique, des détecteurs de fumée à station et multipostes approuvés doivent être installés comme suit :
(1) *Dans toutes les chambres à coucher et chambres d'hôtes.*
(2) *"A l'extérieur de chaque zone de sommeil d'un logement séparé, à moins de 21 pieds (6,4 m) de toute porte d'une pièce de sommeil, la distance étant mesurée le long d'un chemin de circulation.*
(3) A chaque niveau d'un logement, y compris les sous-sols.
(4) Sur chaque niveau d'une résidence de type pensionnat ou foyer, y compris les sous-sols et à l'exclusion des vides sanitaires et des greniers non aménagés.
(5) "Dans la ou les pièces d'habitation d'une suite de résidence.
(6) Dans la ou les pièces d'habitation d'une pension de famille.

(Reimprimé avec l'autorisation de NFPA 72®, National Fire Alarm and Signaling Code®, Copyright © 2010 National Fire Protection Association, Quincy, MA 02269. Ce matériel réimprimé n'est pas la position complète et officielle de la National Fire Protection Association, la position complète et officielle de la National Fire Protection Association sur le sujet référencé qui est représentée uniquement par la norme dans son intégralité.)

National Fire Alarm and Signaling Code® et NFPA 72® sont des marques déposées de la National Fire Protection Association, Inc, Quincy, MA 02269.

COMMISSAIRE AUX INCENDIES DE L'ETAT DE CALIFORNIE (CSFM)

La meilleure façon d'assurer une détection précoce est d'installer un équipement de détection d'incendie dans toutes les pièces et zones de la maison, comme suit:
Un avertisseurs de fumée installé dans chaque chambre à coucher séparée (à proximité, mais en dehors des chambres), et des détecteurs de chaleur ou de fumée dans les salles de séjour, les salles à manger, les à coucher, cuisines, greniers, armoires, salles de stockage, placards, pièces de service et de stockage, sous-sols et garages attenants.

LES LIMITES DES AVERTISSEURS DE FUMÉE

Les avertisseurs de fumée peuvent contribuer à sauver des vies en signalant rapidement un incendie, mais ils ne sont pas infaillibles. Les avertisseurs de fumée ne peuvent fonctionner que s'ils sont correctement placés, installés et entretenus, et si la fumée les atteint.
- Ce avertisseur de fumée n'est PAS conçu pour être la protection PRIMAIRE des bâtiments qui nécessitent des systèmes d'alarme incendie complets. Les bâtiments de ce type comprennent les hôtels, les motels, les dortoirs, les hôpitaux, les maisons de retraite et les foyers de groupe. Ceci est vrai même s'il s'agit d'anciennes maisons unifamiliales. Toutefois, ce dispositif de détection de fumée peut être utilisé à l'intérieur des pièces individuelles comme protection supplémentaire.
- Les avertisseurs de fumée ne peuvent pas fonctionner sans électricité. Les avertisseurs de fume fonctionnent sur piles n'utilisant que les piles spécifiées dans le présent manuel d'utilisation. L'utilisation d'une pile différente aura un effet néfaste sur le fonctionnement du avertisseur de fumée.
- Les avertisseurs de fumée doivent être testés au moins une fois par semaine pour garantir une protection continue. Les avertisseurs de fumée ne peuvent pas empêcher ou éteindre les incendies.
- Les avertisseurs de fumée ne peuvent pas émettre d'alarme si la fumée n'atteint pas les appareils. Par conséquent, les alarmes de fumée peuvent ne pas détecter la fumée provenant d'incendies dans les cheminées ou les murs, sur les toits ou à un autre étage.
- Les avertisseurs de fumée ne peuvent déclencher leur alarme que lorsqu'ils détectent de la fumée. Les avertisseurs de fumée détectent les particules de combustion dans l'air, mais ils ne peuvent pas détecter les flammes ou les gaz. Ce avertisseur de fumée est conçu pour donner un avertissement sonore d'un incendie en cours. Cependant, de nombreux incendies sont causés par une combustion rapide, des explosifs ou des actes intentionnels. D'autres sont dus à des négligences ou à des risques pour la sécurité. La fumée peut ne pas atteindre l'unité assez rapidement pour permettre une évacuation en toute sécurité.
- Les avertisseurs de fumée n'alertent pas forcément tous les individus. L'alarme est bruyante afin d'alerter les individus d'un danger potentiel. Cependant, il peut y avoir des circonstances limitatives où un membre du foyer ne peut pas entendre l'alarme dans certaines circonstances. La concentration d'alcool ou de drogues peut également altérer la capacité d'une personne à entendre le avertisseur de fumée. Des unités spéciales, comme celles dotées d'alarmes visuelles et vibratoires, doivent être installées pour les résidents malentendants.
- Les avertisseurs de fumée ont des limites. Ce avertisseur de fumée n'est pas infaillible et n'est pas garanti pour protéger des vies ou biens contre le feu. Les avertisseurs de fumée ne remplacent pas l'assurance. Les propriétaires et les locataires doivent assurer leur vie et leurs biens. En outre, il est possible que l'appareil ne fonctionne pas à un moment donné. Vous devez toujours remplacer un avertisseur de fumée au bout de 10 ans à compter de la date d'achat.

FCC/ISED NOTICE
FCC STATEMENT
47 CFR 15.105(b) 47 CFR 15.21
FCC Compliance
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment generates and uses radio frequency energy. If it has been tested and found to comply with Class B digital electronic, designed to provide reasonable protection against harmful interference in a residential environment.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and the receiver.
RF Exposure: This equipment complies with FCC RF radiation exposure limits for an uncontrolled environment.

ISED STATEMENT
ICES-GEN Compliance Statement
This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.
RF Exposure: This equipment complies with ISED RF exposure limits for an uncontrolled environment.

lunaProducts **FR**

AVERTISSEUR DE FUMÉE PHOTOÉLECTRIQUE

10012168-001

Model: LPSMOKE01.345.1

IMPORTANT! Veuillez lire attentivement et sauvegarder.
Ce manuel d'utilisation contient des informations importantes sur le fonctionnement de l'avertisseur de fumée. Si vous installez ce détecteur de fumée pour une autre utilisation, vous devez laisser ce manuel ou une copie de celui - ci à l'utilisateur final.

* Les images présentées sont pour référence seulement.
* Comme la technologie est constamment mise à jour, si le fonctionnement réel n'est pas conforme au Manuel de l'utilisateur, le fonctionnement réel prévaudra et l'interprétation finale appartient au fabricant.

Luna Products, LLC
5958 Owens Ave STE150 Carlsbad, CA

INFORMATIONS DE SÉCURITÉ

⚠ AVERTISSEMENT!
- N'ignorez jamais une alarme. Si l'appareil émet une alarme et que vous ne le testez pas, il vous avertit d'une situation potentiellement dangereuse. Le cas échéant, vous devez prendre immédiatement des mesures.
- Ne peignez pas l'appareil. La peinture peut obstruer les ouvertures de la chambre de détection et empêcher l'appareil de fonctionner correctement.

⚠ ATTENTION !
- Il est déconseillé de l'utiliser dans des zones où la température risque de tomber en dessous de 40°F (4.4°C) ou monter au-dessus de 100°F (37.8°C) ou dans une humidité supérieure à 95%, car cela peut réduire la durée de vie de la batterie.
- Ne vous tenez pas trop près de l'appareil lorsque l'alarme retentit. L'exposition à la trompe à courte distance peut nuire à votre audition.
- Ne pas peindre l'appareil. La peinture peut obstruer les ouvertures de la chambre de détection et empêcher l'appareil de fonctionner correctement.

LISTE D'EMBALLAGE

NOM OU COMPOSANT	QUANTITÉ
Avertisseur de fumée	1 Pièce
Support de montage	1 Pièce
Batterie	1 Pièce
Vis à vis	2 Pièces
Boutons d'ancrage	2 Pièces
Manuel	1 Pièce
Goupille de démontage	1 Pièce
Tapis adhésif	1 Pièce

DIAGRAMME DE PRODUIT

INDICATEUR LED ET ALARME SONORE

CONDITIONS	INDICATEUR LED	ALARME AUDIBLE	NOTE
Condition de veille	Le voyant rouge clignote une fois toutes les 54 secondes.	-	En attente
Condition d'essai	Le voyant rouge clignote rapidement	3 bips courts et rapides	Tests hebdomadaires
Condition d'alarme	Le voyant rouge clignote rapidement	3 bips courts et rapides	-
Condition d'affaissement	Le voyant rouge clignote une fois toutes les 10 secondes.	-	Aucun (durée environ 10 minutes)
Batterie faible	Le voyant rouge clignote une fois toutes les 54 secondes.	1 bip toutes les 54 secondes	Remplacer la batterie
Hush pour l'avertissement de batterie faible	Le voyant rouge clignote une fois toutes les 54 secondes.	-	Aucun (durée environ 12 heures)
Dysfonctionnement	Le voyant rouge clignote deux fois toutes les 54 secondes.	2 bips toutes les 54 secondes	Remplacer l'alarme
Fin de vie	Le voyant jaune clignote trois fois toutes les 54 secondes.	3 bips toutes les 54 secondes	Remplacer l'alarme

QUE FAIRE LORSQUE L'ALARME RETENTIT

Si l'alarme retentit, vérifiez d'abord s'il n'y a pas d'incendie. S'il n'y a pas d'incendie, vérifiez si l'alarme n'est pas due à une nuisance (fumée de cuisson, etc.). Si un incendie est découvert, suivez les instructions suivantes :
- Faites sortir immédiatement tous les occupants du lieu.
- Rampez sous la fumée, car en restant debout, vous risquez de vous étouffer par celle-ci.
- Restez près du sol si l'air est enfumé. Couvrez-vous le nez et la bouche avec un chiffon (de préférence humide).
- Rendez-vous à l'endroit prév