

55mm

PROSCAN

BLUETOOTH SPEAKER  
MODEL NO: PSP1354-ASST  
INSTRUCTION MANUAL




This pictures is only provided for reference.  
Please refer to the actual unit!  
PROSCAN, and the PROSCAN logo are trademarks used  
under license by CURTIS INTERNATIONAL LTD.  
— www.proscan-brand.com.

- Safety Instructions**
- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids
  - Do not use the unit if it has been dropped or damaged in anyway.
  - Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
  - Do not put objects into any of the openings. Keep the unit free from dust, lint etc.
  - Do not use this unit for anything other than its intended use.
  - Keep the unit out of reach of children
  - This product is not a toy
  - Do not use abrasive cleaning solvents to clean
  - To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity
  - Do not operate around water (e.g. bathroom, swimming pool etc.)
  - Do not expose to excessive heat such as sunshine, fire etc
  - Never immerse the unit in water or any other liquid for cleaning purposes

**Content:**  
Bluetooth Speaker  
Mirco Charging Cable  
Carabiner  
Instruction Manual

**Instruction**

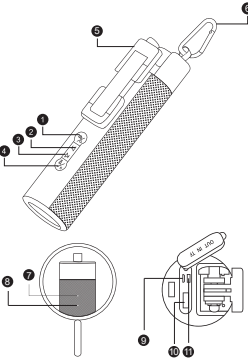

- On/off button/Selfie button/Mode button
- Short press: To Play Previous Song Long press: To Decreasing Volume
- Short press: To Play Next Song
- Flashlight / Play/Pause button
- Selfie stick clamp
- Carabiner
- Bluetooth indicator light
- Battery indicator light
- Micro charging port
- USB flash drive input
- TF card slot

**Instructions (How to use the wireless mode)**

- Turn on the speaker by pressing and hold the on/off button (1), the bluetooth mode will be on automatically
- Double press the "M" button (1) to browse through the mode options
- Stop pressing the "M" button when hearing the command "bluetooth mode"
- The indicator light (10) now flashes green
- Turn on the Bluetooth menu on your wireless device (phone, tablet, laptop, i.e.) and select "Pro PSP1354"
- Pair the device
- Play music

**Instructions (How to use the selfie function)**

- Turn on the speaker by pressing and hold the on/off button (1)
- Paired the speaker by using your smartphone
- Hold your smartphone on the selfie stick clamp(5)
- Turn on the camera on your smartphone and then take pictures by pressing the selfie button (1).

**Instructions (How to use the TF-card mode)**

- Turn on the speaker by pressing and hold the on/off button (1)
- Insert the TF-card into the TF card slot (11)and the music will start playing automatically
- Instructions (How to use the USB flash drive)**
- Turn on the speaker by pressing and hold the on/off button (1)
- Insert the USB flash drive into the USB flash drive slot (10) and the music will start playing automatically

**Instructions (How to use the FM Radio mode)**

- Turn on the speaker by pressing the on/off button (1)
- Please unfold the selfie stick clamp(5) work as an antenna.
- Double press the "M" button (1) to browse through the mode options, Stop pressing the "M" button when hearing the command "FM mode"
- The speaker will now search for channels automatically, this might take few minutes. When the search is finished the speaker will stay on a channel. Short press the button (3) and button (2) to change the channel.

**Instructions (How to use Power Bank)**

- Charging mobile devices: Connect the USB cable to the mobile device and connect the other end of the USB cable to the USB port (10) of the speaker device, then it will start charging automatically.
- Remark: The power bank function is used for emergency only and it is for smartphone only. You can not use it as Standard power bank.

**Instructions (How to charge the speaker)**

- Insert the charging cable into the micro charging port (9)
- Insert the USB-A side into a 5V USB charger or other power source
- During the charging process, a red indicator light will remain on, and the light will be off when fully charged.

**Specifications:**

|                   |                            |
|-------------------|----------------------------|
| Bluetooth version | 5.1                        |
| Bluetooth range   | 10 meter(max)              |
| Max output power  | 5W                         |
| Battery type      | Rechargeable Li-on battery |
| Battery capacity  | 1200 mAh                   |
| Charging time     | About 3-4 hours            |
| Working time      | About 3-4 hours            |

**Attention/ Danger !**

- Too avoid hearing damage, limit the time you use this sound source at high volume and set the volume to a safe level. Prolonged exposure to high volumes can cause hearing damage.

**Precautions:**

- Only charge the speaker with a 5V/1A charger.
- Handle with care and avoid falling on the ground.
- Don't place heavy objects on the item.
- Children should be supervised while operating the item.
- Working temperature is between 0 C - 45° C .
- Don't use the speakers with wet hands

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

**90 day Warranty**

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE. PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE. Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

For service assistance and product information please call: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15,  
MISSISSAUGA, ON, L5S 2A3  
www.curtisint.com

PROSCAN

ENCEINTE BLUETOOTH  
N° DE MODÈLE : PSP1354-ASST  
MANUEL D'INSTRUCTIONS




Ces images ne sont fournies qu'à titre de référence.  
Veuillez vous référer à l'unité réelle !  
PROSCAN et le logo PROSCAN sont des marques de commerce  
utilisées sous licence par CURTIS INTERNATIONAL LTD.  
— www.proscan-brand.com.

- Consignes de sécurité**
- Gardez l'appareil à l'écart des sources de chaleur, de la lumière directe du soleil, de l'humidité, de l'eau et de tout autre liquide
  - N'utilisez pas l'appareil s'il est tombé ou a été endommagé de quelque façon que ce soit.
  - Les réparations de l'équipement électrique ne doivent être effectuées que par un électricien qualifié. Des réparations incorrectes peuvent mettre l'utilisateur en danger.
  - Ne placez aucun objet dans les ouvertures. Gardez l'appareil à l'abri de la poussière, des peluches, etc.
  - N'utilisez pas cet appareil pour autre chose que l'usage auquel il est destiné.
  - Gardez l'appareil hors de portée des enfants
  - Ce produit n'est pas un jouet
  - N'utilisez pas de solvants abrasifs pour nettoyer
  - Pour minimiser le risque d'incendie ou de choc électrique, évitez d'utiliser dans des conditions humides telles que la pluie ou l'humidité
  - Ne pas utiliser près de l'eau (par exemple, salle de bain, piscine, etc.)
  - Ne pas exposer à une chaleur excessive comme le soleil, le feu, etc.
  - Ne plongez jamais l'appareil dans l'eau ou tout autre liquide à des fins de nettoyage

**Contenu:**  
Haut-parleur Bluetooth  
Câble de charge Mirco  
Carabiner  
Manuel d'instructions

**Instruction**

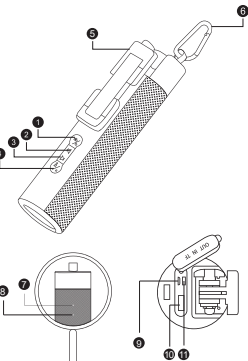

- . Bouton ON / OFF / BOUTON SELIE / Bouton de mode
- . Court presse: jouer la chanson précédente Longue presse: pour diminuer le volume
- . Court presse: pour jouer la chanson suivante
- . Bouton de lampe de poche / play / pause
- . Pince de bâton de selfie
- . Carabiner
- . Bluetooth Light
- . Lumière de l'indicateur de la batterie
- . Port de micro-charge
- . Entrée du lecteur flash USB
- . Slot de carte TF

**Instructions (comment utiliser le mode sans fil)**

- Allumez le haut-parleur en appuyant sur et maintenez le bouton ON / OFF (1), le mode Bluetooth sera automatiquement
- Double appuyez sur le bouton "M" (1) pour parcourir les options de mode
- Arrêtez d'appuyer sur le bouton "M" lorsque vous entendez la commande "Mode Bluetooth"
- Le voyant de l'indicateur (10) clignote désormais le vert
- Allumez le menu Bluetooth sur votre appareil sans fil (téléphone, tablette, ordinateur portable, c'est-à-dire) et sélectionnez "Pro PSP1354"
- Associez l'appareil
- Jouer de la musique

**Instructions (comment utiliser la fonction selfie)**

- Allumez le haut-parleur en appuyant sur et maintenez le bouton ON / OFF (1)
- a associé le haut-parleur en utilisant votre smartphone
- Tenez votre smartphone sur la pince de bâton de selfie (5)
- Allumez l'appareil photo sur votre smartphone, puis prenez des photos en appuyant sur le bouton Selfie (1).

**Instructions (comment utiliser le mode TF-carte)**

- Allumez le haut-parleur en appuyant sur et maintenez le bouton ON / OFF (1)
- Insérez la carte TF dans la fente de la carte TF (11) et la musique commencera à jouer automatiquement
- Instructions (comment utiliser le lecteur flash USB)
- Allumez le haut-parleur en appuyant sur et maintenez le bouton ON / OFF (1)
- Insérez le lecteur flash USB dans la machine à sous USB Flash Drive (10) et la musique commencera à jouer automatiquement

**Instructions (comment utiliser le mode radio FM)**

- Allumez le haut-parleur en appuyant sur le bouton ON / OFF (1)
- Veuillez déplier la pince de bâton de selfie (5) et sélectionnez "Pro PSP1354"
- Associez l'appareil
- Double appuyez sur le bouton "M" (1) pour parcourir

les options de mode, arrêtez d'appuyer sur le bouton "M" lorsque vous entendez la commande "Mode FM"

-Le haut-parleur recherchera désormais automatiquement les canaux, cela pourrait prendre quelques minutes. Une fois la recherche terminée, le haut-parleur restera sur un canal. Appuyez à court sur le bouton (3) et le bouton (2) pour modifier le canal.

**Instructions(comment utiliser la banque d'alimentation)**

Chargement des appareils mobiles: connectez le câble USB à l'appareil mobile et connectez l'autre extrémité du câble USB au port USB (10) du dispositif de haut-parleur, puis il commencera à charger automatiquement.

Remarque: La fonction de banque d'alimentation est utilisée uniquement pour l'urgence et elle est uniquement pour le smartphone. Vous ne pouvez pas l'utiliser comme banque d'alimentation standard.

**Instructions (comment charger l'orateur)**

- Insérez le câble de charge dans le port micro-charge (9)
- Insérez le côté USB-A dans un chargeur USB 5V ou une autre source d'alimentation
- Pendant le processus de charge, un voyant rouge restera allumé et la lumière sera éteinte lorsqu'elle sera complètement chargée.

**Specifications:**

|                              |                             |
|------------------------------|-----------------------------|
| Version Bluetooth            | 5.1                         |
| Gamme Bluetooth              | 10 mètres (max)             |
| Puissance de sortie maximale | 5W                          |
| Type de batterie             | Batterie Li-on rechargeable |
| Capacité de la batterie      | 1200 mAh                    |
| Temps de charge              | Environ 3-4 heures          |
| Temps de travail             | Environ 3 -4 heures         |

**Attention / Danger !**

Pour éviter tout dommage auditif, limitez le temps d'utilisation de cette source sonore à un volume élevé et réglez le volume à un niveau sûr. Une exposition prolongée à des volumes élevés peut provoquer des lésions auditives.

**Précautions :**

- Ne chargez le haut-parleur qu'avec un chargeur 5 V / 1 A.
- Manipulez l'appareil avec précaution et évitez de le faire tomber au sol.
- Ne placez pas d'objets lourds sur l'appareil.
- Les enfants doivent être surveillés lorsqu'ils utilisent l'appareil.
- La température de fonctionnement est comprise entre 0° C to 45° C.
- N'utilisez pas le haut-parleur avec les mains mouillées

REMARQUE : cet équipement a été testé et déclaré conforme aux limites des appareils numériques de classe B, conformément à la partie 15 des règles de la FCC.

Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère des utilisations et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement cause des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne de réception.
- Augmenter la distance entre l'équipement et le récepteur.

Pour faire une réclamation de garantie, veuillez envoyer un e-mail à support2@curtiscs.com ou appeler le 1-800-968-9853.

**90 joursdegarantie**

Ce produit est garanti contre tout défaut de matériel et de fabrication pendant une période de quatre-vingt-dix (90) jours à compter de la date d'achat d'origine. Pendant cette période, votre seul recours est la réparation ou le remplacement de ce produit ou composant jugé défectueux, à notre choix; Cependant, vous êtes responsable de tous les coûts associés au retour du produit. Si le produit ou le composant n'est plus disponible, nous le remplacerons par un produit similaire de valeur égale ou supérieure. Avant l'envoi d'un produit de remplacement, le produit doit être rendu inutilisable ou nous être renvoyé. Cette garantie ne couvre pas la verre, les filtres, l'usure normale, une utilisation non conforme aux instructions imprimées, ni les dommages matériels résultant d'un accident, d'une altération, d'une utilisation abusive ou abusive. Cette garantie s'applique uniquement à l'acheteur initial ou au destinataire du cadeau. Conservez le reçu de vente original, car une

preuve d'achat est nécessaire pour faire une réclamation de garantie. Cette garantie est annulée si le produit est utilisé pour un usage autre que domestique ou s'il est soumis à une tension ou une forme d'onde autre que celle indiquée sur l'étiquette (par exemple, 120V ~ 60Hz).

Nous excluons toute réclamation pour des dommages spéciaux, accessoires et consécutifs causés par une violation de la garantie explicite ou implicite. Toute responsabilité est limitée au montant du prix d'achat.

Toute garantie implicite, y compris toute garantie légale ou condition de qualité marchande ou d'adéquation à un usage particulier, est refusée sauf dans la mesure où la loi l'interdit, auquel cas cette garantie ou condition est limitée à la durée de cette garantie écrite. Cette garantie vous confère des droits légaux spécifiques. Vous pouvez avoir d'autres droits légaux qui varient selon votre lieu de résidence. Certains états ou provinces n'autorisent pas les limitations de garanties implicites ou de dommages

spéciaux, accessoires ou indirects, les limitations ci-dessus peuvent ne pas vous concerner. Pour un service plus rapide, trouver le modèle, le type et les numéros de série sur votre appareil.

JOIGNEZ VOTRE PREUVE D'ACHAT ICI, UNE PREUVE D'ACHAT EST NÉCESSAIRE POUR OBTENIR UN SERVICE DE GARANTIE. Veuillez avoir l'information suivantes lorsque vous contactez l'équipe d'assistance:

- Nom, adresse et numéro de téléphone.
- Numéro de modèle et numéro de série.
- Une description claire et détaillée du problème.
- Preuve d'achat comprenant le nom, l'adresse et la date d'achat du revendeur ou du détaillant.

Pour obtenir assistance et information appelez: 1-800-968-9853.

Curtis International Ltd.

www.curtisint.com  
7045 BECKETT DRIVE, UNIT 15,  
MISSISSAUGA, ON, L5S 2A3

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.