


Greetings from realme Mobile

This guide will show you how to use the phone and its important functions. You may also visit realme official website to get more information about the phone.

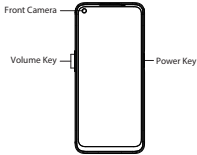

Warning:

- Do not place the phone or battery near or inside the heating equipments, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.

- When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C~35°C.

- Back cover can't be removed.

How to reboot the phone:

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to transfer contents from an old phone to a new phone

You can quickly transfer contents such as photos, videos, music, contacts, messages, and apps from an old phone to a new phone via realme Clone Phone. 1 Scan the QR code below using the old phone to install "Clone Phone"; on the new phone, launch "Clone Phone" directly.



2 Follow the prompts on the screen to complete the data transfer.

Standard accessories

You are provided with the following standard accessories:

- 1 Phone, 1 Charger, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool, 1 Protective Case.

English

Specification

Product		RMX3388	Radio Waves Specifications		
			Radio	Frequency	Max. Output Power
Main screen parameter		16.5cm(6.5")	GSM	850MHz	33.3dBm
				900MHz	33.8dBm
				1800MHz/1900MHz	30.3dBm
Dimension		162.5x74.8x8.5(mm)	WCDMA	Bands 1/2/4	23.8dBm
				Bands 5/6/8/19	24.3dBm
Battery		4890mAh/18.92Wh(Min) 5000mAh/19.35Wh(Typ)	LTE FDD	Bands 1/2/3/4/66	23.8dBm
				Bands 5/8/12/17/18/19/20/26/28	24.3dBm
Camera		16Megapixels Front 48Megapixels+2Megapixels +2Megapixels Rear	LTE TDD	Band 7	23.5dBm
				Bands 38/39/40/41	23.8dBm
				n1/n3/n38/n40/n41/n77/n78	23.8dBm
Operating temperature		0℃-35℃	5G NR	n7	23.5dBm
				n5/n8/n20/n28	24.3dBm
			Bluetooth	2.4-2.4835GHz	11.5dBm(EIRP)
			2.4G Wi-Fi	2.4-2.4835GHz	17dBm(EIRP)
SAR Values	CE SAR	< 2.0W/kg(Head) < 2.0W/kg(Body)	5G Wi-Fi	5.15-5.35GHz; 5.47-5.725GHz	16.5dBm(EIRP)
				5.725-5.85GHz	13dBm(EIRP)
			NFC	13.56MHz	42dBuA/m @10m

عند الشحن، يرجى وضع الجهاز في بيئة ذات درجة حرارة غرفة عادية وتبوية جيدة. يوصى بشحن الجهاز في بيئة ذات درجة حرارة تتراوح بين 5 درجة مئوية و35 درجة مئوية.

كيفية إعادة تشغيل الهاتف:

اضغط مع الاستمرار على زر التشغيل وزر رفع الصوت في الوقت نفسه حتى يتم عرض الرسم المتحرك لتشغيل هاتف realme لإعادة تشغيل الهاتف.

كيفية نقل المحتويات من هاتف قديم إلى هاتف جديد

يمكنك نقل محتويات مثل الصور والفيديوهات والموسيقى وجهات الاتصال والرسائل والتطبيقات من هاتف قديم إلى هاتف جديد بسرعة عبر تطبيق نسخ الهاتف من realme.

١ امسح رمز QR أدناه باستخدام الهاتف القديم لتثبيت "نسخ الهاتف". وعلى الهاتف الجديد، افتح "نسخ الهاتف" مباشرة.




٢ اتبع التعليمات الموجودة على الشاشة لإكمال نقل البيانات.

الملحقات القياسية

سيتم تزويدك بالملحقات القياسية التالية:

- ١ هاتف، ١ شاحن، ١ سماعة أذن، ١ أداة لإدخال وإخراج بطاقة SIM
١ كابل بيانات USB، ١ دليل أمان، ١ دليل سريع.

خالص التحيات من الهاتف المحمول realme
سيظهر لك هذا الدليل كيفية استخدام الهاتف ووظائفه الهامة. يمكنك أيضًا زيارة موقع الويب الرسمي للهاتف realme للحصول على مزيد من المعلومات حول الهاتف.

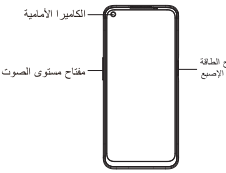

تحذير:

لا تضع الهاتف أو البطارية بالقرب من أجهزة التسخين أو الطبخ أو الأواني ذات الضغط العالي أو بداخلها (على سبيل المثال أفران الميكروويف والموقد الذي يعمل بالغاز والفرن الكهربائي والسخان والموقد الذي يعمل بالضغط وسخان المياه وموقد الغاز، وما إلى ذلك) وذلك لمنع سخونة البطارية بدرجة مفرطة مما قد يتسبب في حدوث انفجار.

نُصح باستخدام الشاحن والبطارية وكابل البيانات الأصليين. فقد تتسبب الشواحن أو

كبلات البيانات أو البطاريات غير المعتمدة من الشركة المصنعة في حدوث

صدمة كهربائية أو حريق أو انفجار أو مخاطر أخرى.

الغطاء الخلفي لا يمكن نزع.

Arabic

المواصفات الفنية

طرز المنتج	RMX3388
خصائص شاشة العرض الرئيسية	6.5 بوصة
الأبعاد	162.5×74.8×8.5 (ملليمتر)
البطارية	4890mAh/18.92Wh(Min) 5000mAh/19.35Wh(Typ)
الكاميرا	16 ميجابكسل أمامية 48 ميجابكسل + 2 ميجابكسل خلفية
درجة حرارة التشغيل	35°C — 0°C
قيم SAR	CE SAR
قيم SAR	(رأس) < 2.0W/kg (جسم) < 2.0W/kg

Quick Guide

RMX3388

realme

