


realme

Quick Guide

RMX3921

Greetings from realme mobile

This guide briefly show you how to use the phone and its important functions. For more and detailed information of the phone and user guidance, please visit: www.realme.com/eu/support.

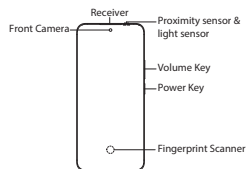

Warning

- Do not place the phone or battery near or inside heating equipment, cooking equipments, high pressure vessels (such as microwave ovens, induction cooker, electric oven, heater, pressure cooker, water heater, gas stove, etc.) to prevent the battery overheating which may lead to an explosion.
- The original charger, data cable and battery shall be used. Unapproved chargers, data cables, or batteries that are not certified by the manufacturer may result in electric shock, fire, explosion, or other hazards.
- Back cover can't be removed.

- When charging, please place the device in an environment that has a normal room temperature and good ventilation. It is recommended to charge the device in an environment with temperature ranging from 5°C~35°C.

How to reboot the phone

Press and hold the Power Button and Volume Up Button at the same time until the realme boot animation is displayed to reboot the phone.

How to Transfer Old Mobile Content to a New Mobile

You can use realme Clone Phone to easily transfer photos, videos, music, contacts, messages, apps, etc from your old phone to the new one.
1. If you have an old Android phone, first scan the QR code below, then download and install Clone Phone, next open Clone Phone on both the new and old phones, and follow the on-screen instructions to complete the operation.



<https://i.clonephone.coloros.com/download>

2. If you have an old iPhone, open Clone Phone on the new phone directly, and follow on-screen instructions to sign in to iCloud account and sync the files.

Standard accessories

1 Phone, 1 Charger, 1 USB data cable, 1 Safety Guide, 1 Quick Guide, 1 SIM Ejector Tool, 1 Protective Case.

realme



Specification

Product	RMX3921
Main screen parameter	17.02cm(6.7")
Dimension	161.34×73.91×8.41(mm)
Battery	5050mAh/19.75Wh(Min) 5200mAh/20.34Wh(Typ)
Camera	50 Megapixels + 50 Megapixels +8 Megapixels Rear 32 Megapixels Front
Operating temperature	0°C~35°C
SAR Values	CE SAR <2.0W/kg(Head) <2.0W/kg(Body)

Radio Waves Specifications		
Radio	Frequency	Max. Output Power
GSM	850MHz/900MHz	33.5dBm
	1800MHz/1900MHz	30.5dBm
WCDMA	Bands 1/5/6/8/19	24.3dBm
	Bands 2/4	23.8dBm
LTE FDD	Bands 1/3/66	23.8dBm
	Bands 2/4/7	23.3dBm
	Bands 5/18/19/26	24.3dBm
	Bands 8/12/13/17/20/28	24.3dBm
LTE TDD	Bands 38/39/40	23.8dBm
	Band 41	25.8dBm
5G NR	n1/n3/n5/n8/n20/n38/n66/n77	23.8dBm
	n7/n40	23.3dBm
	n28	24.1dBm
	n41	25.3dBm
Bluetooth	2.4-2.4835GHz	19.18dBm(EIRP)
	2.4-2.4835GHz	19.5dBm(EIRP)
2.4G Wi-Fi	5.15-5.25GHz	20.5dBm(EIRP)
	5.25-5.35GHz; 5.47-5.725GHz	19.5dBm(EIRP)
5G Wi-Fi	5.725-5.85GHz	13.5dBm(EIRP)
	13.56MHz	42dBuA/m @10m
NFC		

English

عند الشحن، يرجى وضع الجهاز في بيئة ذات درجة حرارة غرفة عادية وتهوية جيدة. يوصى بشحن الجهاز في بيئة ذات درجة حرارة تتراوح بين 5 درجة مئوية و35 درجة مئوية.

كيفية إعادة تشغيل الهاتف:

اضغط مع الاستمرار على زر التشغيل وزر رفع الصوت في الوقت نفسه حتى يتم عرض الرسم المتحرك لتشغيل هاتف realme لإعادة تشغيل الهاتف.

كيف يمكنك نقل ما تم تخزينه على هاتفك القديم إلى هاتف جديد؟

يمكنك استخدام "استنساخ الهاتف" من realme لنقل الصور ومقاطع الفيديو ومقاطع الموسيقى و جهات الاتصال و الرسائل و التطبيقات و ما الي ذلك بسهولة من هاتفك القديم الي الهاتف الجديد .

١ إذا كان لديك هاتف Android قديم فقم أولاً بوضع رمز الاستجابة السريعة أدناه ، ثم قم بتزليل وتثبيت التطبيق و بعد ذلك افتح " استنساخ الهاتف " على كل من الهاتفين الجديد و القديم و اتبع التعليمات الظاهرة على الشاشة لإكمال العملية.



<https://i.clonephone.coloros.com/download>


٢ إذا كان لديك هاتف iPhone قديم فافتح "استنساخ الهاتف" على الهاتف الجديد و اتبع التعليمات الظاهرة على الشاشة لتسجيل الدخول الي حساب iCloud و مزامنة الملفات.

الملحقات القياسية

سيتم تزويدك بالملحقات القياسية التالية: ١ هاتف، ١ شاحن، ١ أداة لإدخال وإخراج بطاقة SIM ١ كابل بيانات USB، ١ دليل أمان، ١ دليل سريع، ١ غطاء حماية.

خالص التحيات من الهاتف المحمول realme

سيظهر لك هذا الدليل كيفية استخدام الهاتف ووظائفه الهامة. يمكنك أيضاً زيارة موقع الويب الرسمي للهاتف realme للحصول على مزيد من المعلومات حول الهاتف.

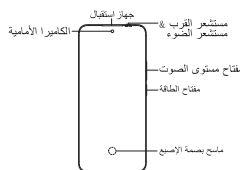

تحذير:

- لا تضع الهاتف أو البطارية بالقرب من أجهزة التسخين أو الطبخ أو الأواني ذات الضغط العالي أو بداخلها (على سبيل المثال أفران الميكروويف والموقد الذي يعمل بالحث والفرن الكهربائي والسخان والموقد الذي يعمل بالضغط وسخان المياه وموقد الغاز، وما إلى ذلك) وذلك لمنع سخونة البطارية بدرجة مفرطة مما قد يتسبب في حدوث انفجار.
- يُنصح باستخدام الشاحن والبطارية وكابل البيانات الأصليين. فقد تتسبب الشواحن أو كابلات البيانات أو البطاريات غير المعتمدة من الشركة المصنعة في حدوث صدمة كهربائية أو حريق أو انفجار أو مخاطر أخرى.
- الغطاء الخلفي لا يمكن نزع.

المواصفات الفنية

طراز المنتج	RMX3921
خصائص شاشة العرض الرئيسية	6.7 بوصة
الأبعاد	161.34×73.91×8.41 (ملليمتر)
البطارية	5050mAh/19.75Wh(Min) 5200mAh/20.34Wh(Typ)
الكاميرا	32ميجابكسل أمامية 50ميجابكسل + 50ميجابكسل + 8ميجابكسل خلفية
درجة حرارة التشغيل	0°C~35°C
قيم SAR	CE SAR (رأس) <2.0W/kg (جسم) <2.0W/kg

Arabic

مواصفات الموجات اللاسلكية		
لاسلكي	التردد	أقصى طاقة إخراج
GSM	850MHz/900MHz	33.5dBm
	1800MHz/1900MHz	30.5dBm
WCDMA	Bands 1/5/6/8/19	24.3dBm
	Bands 2/4	23.8dBm
LTE FDD	Bands 1/3/66	23.8dBm
	Bands 2/4/7	23.3dBm
	Bands 5/18/19/26	24.3dBm
	Bands 8/12/13/17/20/28	24.3dBm
LTE TDD	Bands 38/39/40	23.8dBm
	Band 41	25.8dBm
5G NR	n1/n3/n5/n8/n20/n38/n66/n77	23.8dBm
	n7/n40	23.3dBm
	n28	24.1dBm
	n41	25.3dBm
Bluetooth	n78	25.7dBm
	2.4-2.4835GHz	19.18dBm(EIRP)
2.4G Wi-Fi	2.4-2.4835GHz	19.5dBm(EIRP)
	5.15-5.25GHz	20.5dBm(EIRP)
5G Wi-Fi	5.25-5.35GHz; 5.47-5.725GHz	19.5dBm(EIRP)
	5.725-5.85GHz	13.5dBm(EIRP)
NFC	13.56MHz	42dBuA/m @10m