Tronsmart

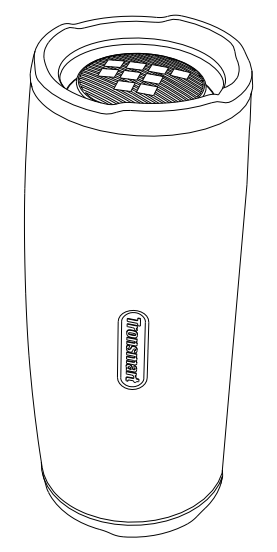

MIRTUNE C3 PLUS
USER MANUAL

CONTENTS

English .... 01~09
Italiano .... 10~18
Español .... 19~27
Deutsch .... 28~36
Français .... 37~45
русский .... 46~54
Polski .... 55~63

说明书尺寸85*85mm
80g书写纸
黑白正反印
手风琴
总页数30P

English

Thank you for purchasing the Tronsmart Mirtune C3 Plus Portable Outdoor Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: **support@tronsmart.com.**

Package Contents

1 x Mirtune C3 Plus Portable Outdoor Speaker
1 x Type-C Charging Cable
1 x Warranty Card
1 x User Manual
1 x SoundPulse® Card
1 x Lanyard

Specifications

Model	Mirtune C3 Plus
Bluetooth Version	5.3
Bluetooth Profile	A2DP/AVRCP/HFP/HSP
Audio Codec	SBC
Bluetooth Range	Over 15m/49ft (open area)
IP Rating	IPX7
Output Power	30W
Input Power	5V/2A, via Type-C port
Frequency Range	55Hz-20kHz
Battery	5200mAh(7.4V/2600mAh)
Playtime(Varied by Volume Level & Audio Content)	Up to 18 Hours(On a 50% Volume)
Charging Time	3 Hours
Frequency Band	2402-2480MHz
Maximum Transmit Power	4dBm

Button Configuration

① Power On/Power Off
② Bluetooth
③ Volume -/Previous Track
④ Play/Pause
⑤ Volume +/Next Track
⑥ SoundPulse EQ Button
⑦ Type-C Charging Port

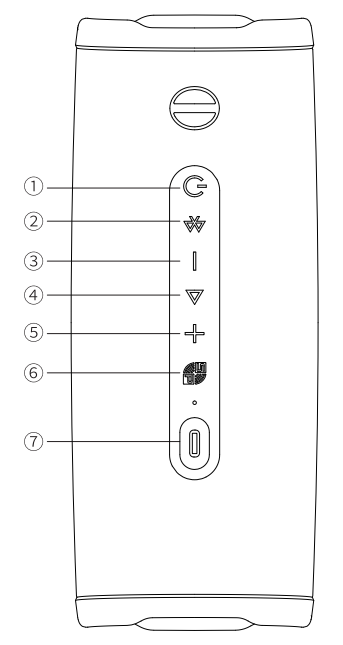

How to Operate

⏻	Press for 2s to turn on
	Press for 2s to turn off
— & ▷	Press once to forced off
ᛒ	Press once to disconnect from device
	Press for 3s to enter stereo pairing mode
	Press once to exit stereo pairing mode
	Press for 8s to reset
	Press once to switch audio between speaker & phone dialing
▦	Press once to enter/exit SoundPulse EQ Mode
+	Press once to turn up volume
	Press for 2s to skip to next track
▷	Press once to play/pause music
	Press once to answer/end a call
	Press for 2s to reject a call
	Double press to activate voice assistant
—	Press once to turn down volume
	Press for 2s to skip to previous track

How to Use

1. Turn On/Off

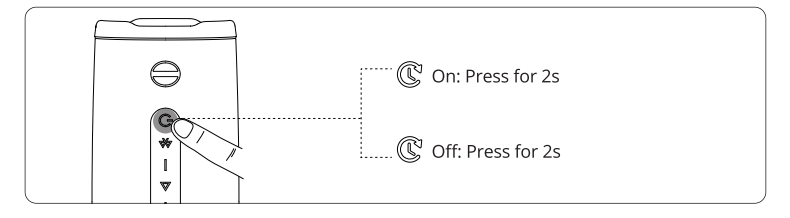

On	White Indicator On
Off	White Indicator Off

2. Bluetooth Connection

Search & click 'Tronsmart Mirtune C3 Plus' to connect.

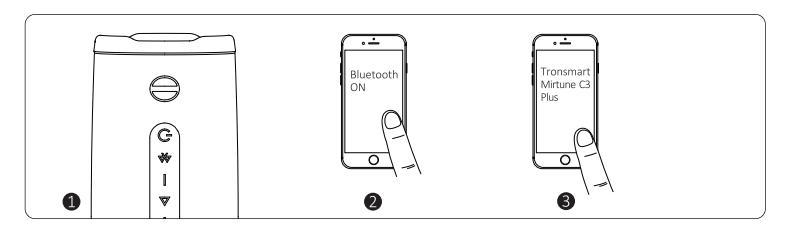

Pairing	Bluetooth Indicator Flashes
Connected	Bluetooth Indicator on

3. Disconnect from Bluetooth

Quickly connect to another device, you could press the 'Bluetooth' button once to disconnect from Bluetooth.

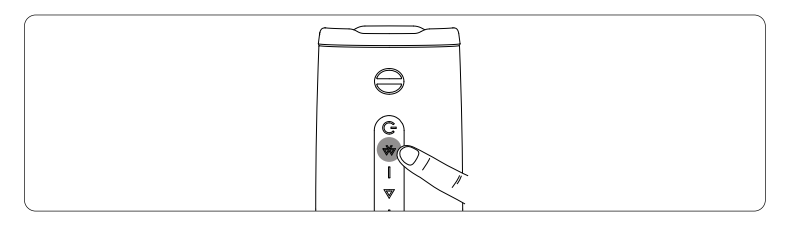

4. Enter/Exit Stereo Pairing Mode

Connect 2 Tronsmart Mirtune C3 Plus speakers to enjoy powerful stereo sound.

1) Turn on both speakers. Please make sure they don't pair with any device.

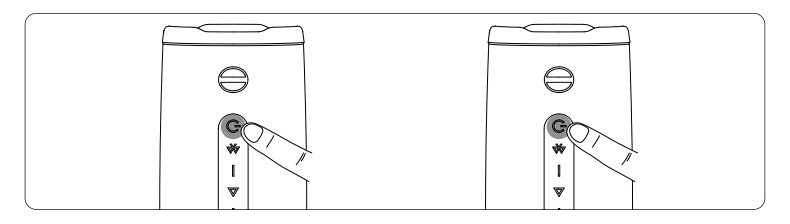

2) Press the 'Bluetooth' Button for 3s on either speaker(Host Speaker) to enter stereo pairing mode, the Bluetooth indicator of the host speaker flashes quickly while the vice one stays on.(Press once to exit)

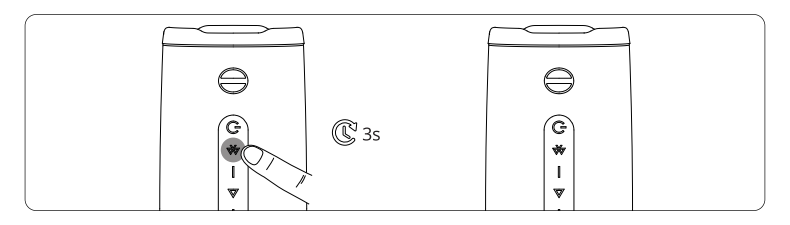

3) If paired successfully, the power indicator of host speaker will stay on while vice one will off.

4) Search & click 'Tronsmart Mirtune C3 Plus' to connect.

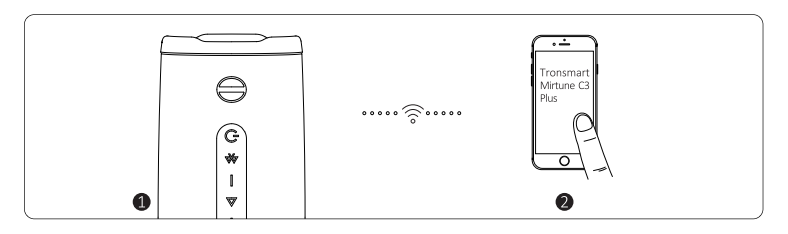

5. Dual Audio Modes

A. Search & click 'Tronsmart Mirtune C3 Plus' to connect with device A.

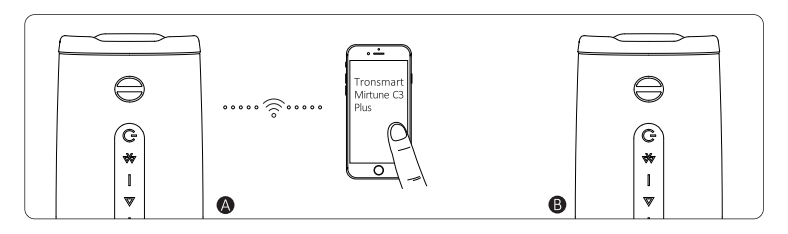

B. Disconnect 'Tronsmart Mirtune C3 Plus' from the device A(Note that do not clear the pairing record on the device).

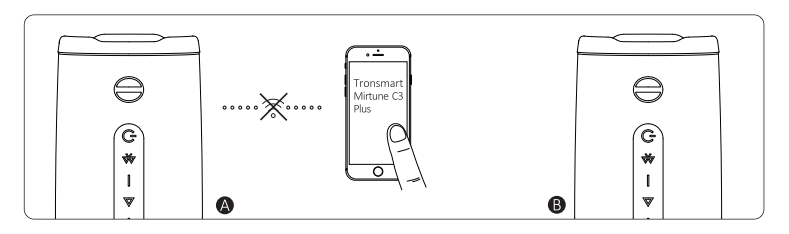

C. Tronsmart Mirtune C3 Plus will re-enter pairing mode.

D. Search & click 'Tronsmart Mirtune C3 Plus' to connect with the device B.

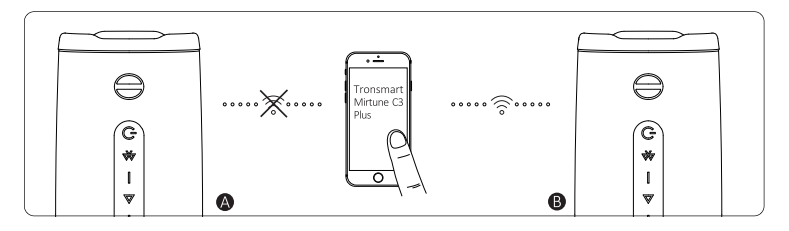

E. Click 'Tronsmart Mirtune C3 Plus' on device A to connect.

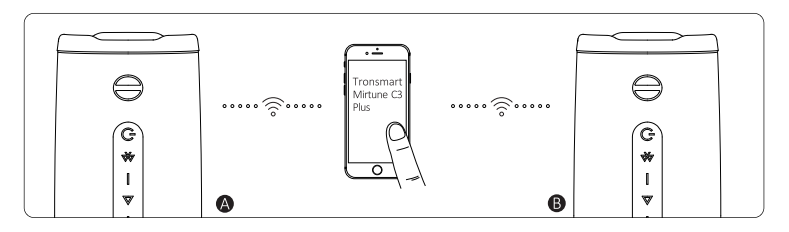

6. Indicators

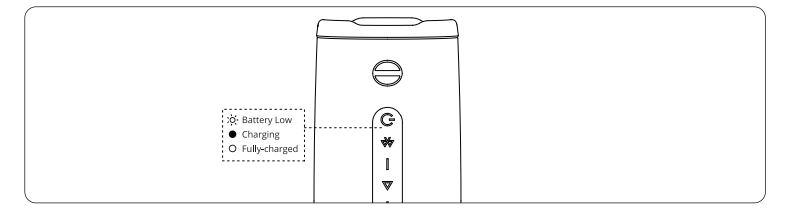

Charging Indicator Flashes red	Battery Low
Charging Indicator Stays Red	Charging
Charging Indicator Off	Fully-charged

7. Reset

Press 'Bluetooth' button for 8s.

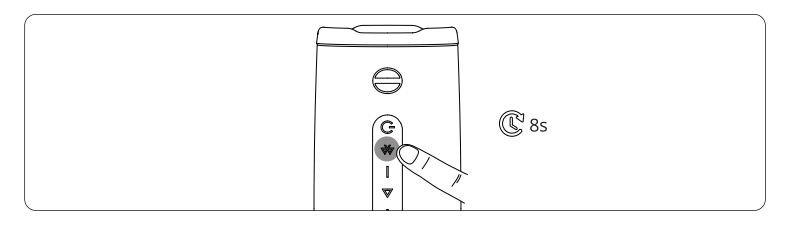

8. Auto Power Off

The speaker will auto-off after 30 minutes if it does not pair with any device or play any music. When on low battery, the speaker will power off automatically as well.

Tronsmart App

Download 'Tronsmart App' via Google Play or App Store.

Available on the App Store — ANDROID APP ON Google play

Apple & the Apple logo are trademarks of Apple Inc.

Google Play & the Google Play logo are trademarks of Google Inc.

How to Connect Tronsmart App?

1. Turn on Bluetooth setting on your device, search & click 'Tronsmart Mirtune C3 Plus' to connect.
2. Open 'Tronsmart' App & allow to access Bluetooth on your device.
3. Slide to find out 'Mirtune C3 Plus' & click to connect.
4. If connected successfully, you could customize Equalizers, lights, etc.

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your 'Tronsmart Mirtune C3 Plus Portable Outdoor Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at**support@tronsmart.com**.

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Tronsmart

SHENZHEN GEEKBUY E-COMMERCE CO., LTD.
Warehouse 101H, No. 49 South Wuhe Avenue, Wuhe Community,
Bantian Street, Longgang District, Shenzhen
Email: support@tronsmart.com
800-270-1082 (USA & Canada)
+86-755-23603740 (Global)

FCC ID: 2AV3Z-MIRTUNEC3PLUS

www.tronsmart.com Made in China

Italiano

Grazie per aver acquistato l'altoparlante portatile Tronsmart Mirtune C3 Plus. Si prega di leggere il manuale utente prima dell'uso e di tenerlo a portata di mano per riferimento futuro. Per ulteriori domande o commenti, si prega di contattarci via e-mail all'indirizzo: **support@tronsmart.com.**

Contenuto della Confezione

1 x altoparlante portatile Mirtune C3 Plus
1 x cavo di ricarica di tipo C
1 x scheda di garanzia
1 x manuale utente
1 x scheda SoundPulse®
1 x Cordino

Specifiche

Modello	Mirtune C3 Plus
Versione Bluetooth	5.3
Profilo Bluetooth	A2DP/AVRCP/HFP/HSP
Codec Audio	SBC
Portata Bluetooth	Oltre 15 m/49 piedi (area aperta)
Grado IP	IPX7
Potenza in Uscita	24 W
Potenza in Ingresso	5 V/2 A, tramite porta di tipo C
Gamma di Frequenza	55 Hz – 20 kHz
Batteria	5200 mAh (7,4 V/2600 mAh)
Tempo di Riproduzione (Varia in Base al Livello del Volume e al Contenuto Audio)	Fino a 18 ore (con volume al 50%)
Tempo di Ricarica	3 Ore
Banda di Frequenza	2402-2480 MHz
Potenza di Trasmissione Massima	4 dBm

Configurazione Pulsanti

① Accensione/Spegnimento
② Bluetooth
③ Pulsante SoundPulse EQ
④ Volume +/Traccia Successiva
⑤ Riproduzione/Pausa
⑥ Volume -/Traccia Precedente
⑦ Porta di Ricarica Type-C

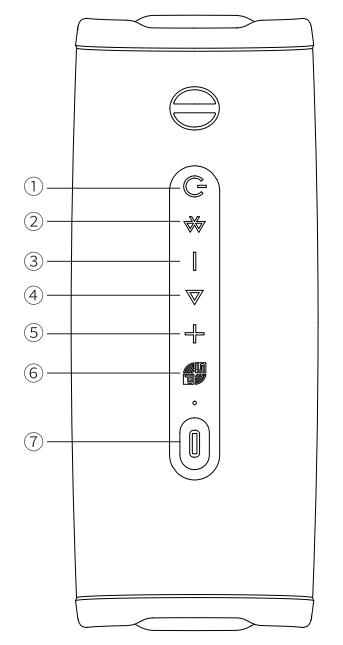

Come Funziona

⏻	Premere per 2 secondi per accendere
	Premere per 2 secondi per spegnere
— & ▷	Premere per 10 secondi per forzare lo spegnimento
ᛒ	Premere una volta per disconnettersi dal dispositivo
	Premere per 3 secondi per entrare in modalità di associazione stereo
	Premere una volta per uscire dalla modalità di associazione stereo
	Premere per 8 secondi per reimpostare
	Premere una volta per alternare l'audio tra altoparlante e chiamata telefonica
▦	Premere una volta per entrare/uscire dalla modalità SoundPulse EQ
+	Premere una volta per aumentare il volume
	Premere per 2 secondi per passare alla traccia successiva
▷	Premere una volta per riprodurre/mettere in pausa la musica
	Premere una volta per rispondere/terminare una chiamata
	Premere per 2 secondi per rifiutare una chiamata
	Premere due volte per attivare l'assistente vocale
—	Premere una volta per abbassare il volume
	Premere per 2s per passare alla traccia precedente

Come Usare

1. Accensione/Spegnimento

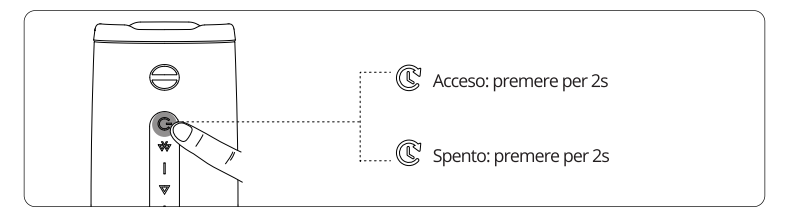

Acceso	Indicatore Bianco Acceso
Spento	Indicatore Bianco Spento

2. Connessione Bluetooth

Cerca e fai clic su "Tronsmart Mirtune C3 Plus" per connetterti.

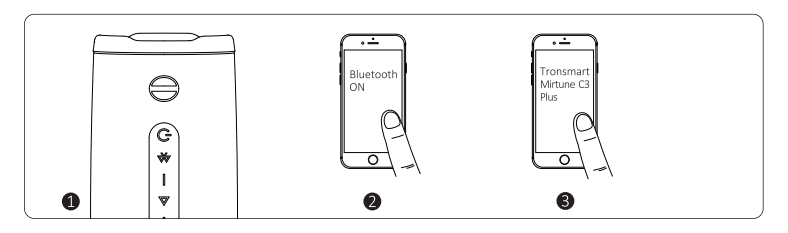

Associazione	Indicatore Bluetooth Lampeggia
Connesso	Indicatore Bluetooth Acceso

3. Disconnetti dal Bluetooth

Connettiti rapidamente a un altro dispositivo, puoi premere una volta il pulsante "Bluetooth" per disconnetterti dal Bluetooth.

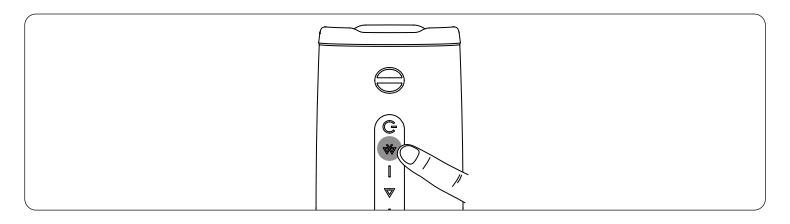

4. Entra/Esci dalla modalità di associazione stereo

Collega 2 altoparlanti Tronsmart Mirtune C3 Plus per goderti un potente suono stereo.

1) Accendi entrambi gli altoparlanti. Assicurati che uno degli altoparlanti sia entrato in modalità di associazione.

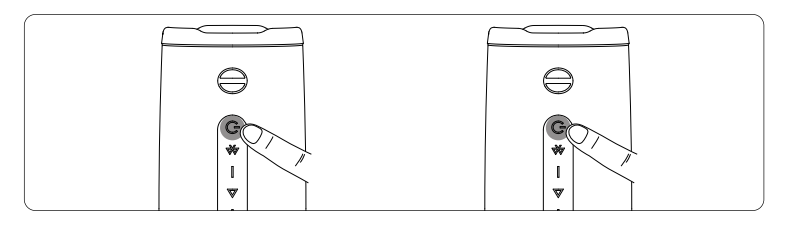

2) Premi il pulsante "Bluetooth" per 3s su uno degli altoparlanti (altoparlante host) per entrare in modalità di associazione stereo, l'indicatore Bluetooth dell'altoparlante host lampeggia rapidamente mentre l'altro rimane acceso. (Premi una volta per uscire)

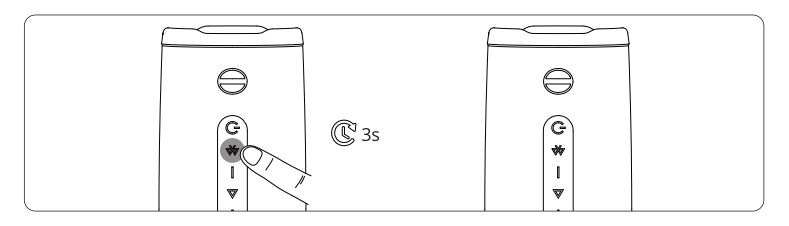

3) Se l'associazione è avvenuta correttamente, l'indicatore di alimentazione dell'altoparlante host rimarrà acceso mentre l'altro si spegnerà.

4) Cerca e clicca su "Tronsmart Mirtune C3 Plus" per connetterti.

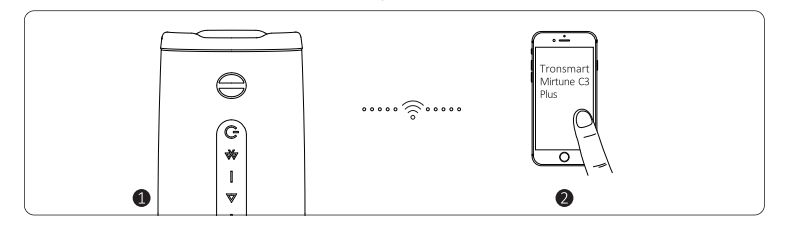

5. Modalità Audio Doppie

A. Cerca e clicca su "Tronsmart Mirtune C3 Plus" per connetterti al dispositivo A.

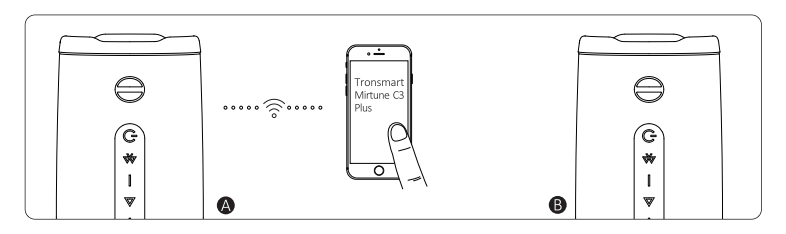

B. Scollega "Tronsmart Mirtune C3 Plus" dal dispositivo A (nota che non cancellare il record di associazione sul dispositivo).

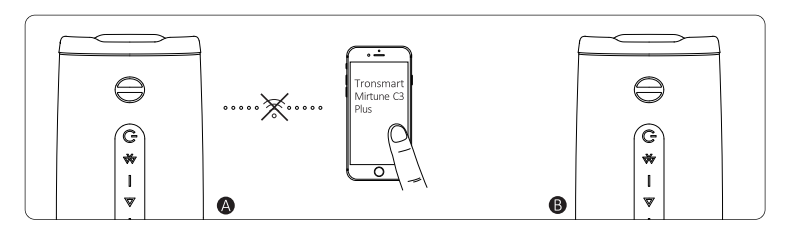

C. Tronsmart Mirtune C3 Plus rientrerà in modalità di associazione.

D. Cerca e clicca su "Tronsmart Mirtune C3 Plus" per connetterti al dispositivo B.

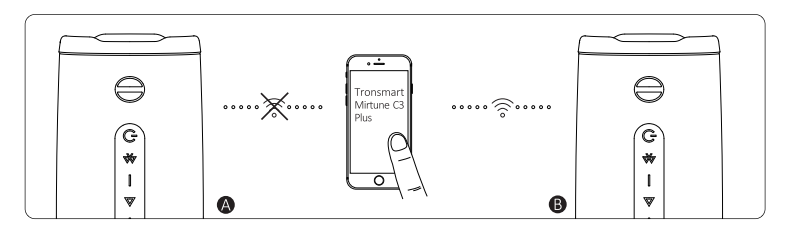

E. Clicca su "Tronsmart Mirtune C3 Plus" sul dispositivo A per connetterti.

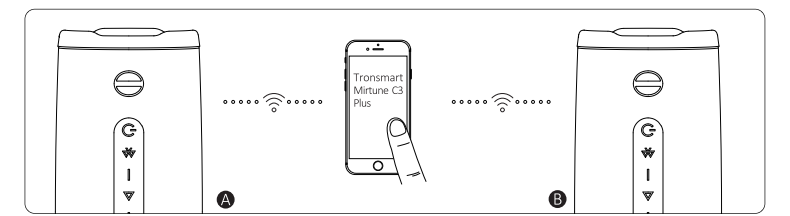

6. Indicatoriv

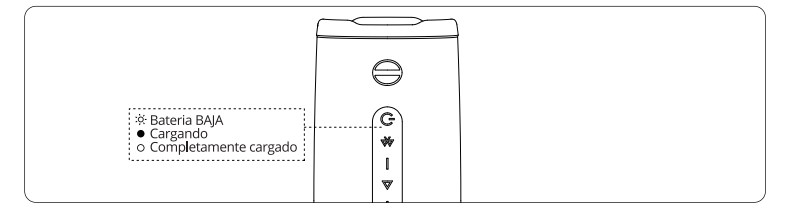

Indicatore di carica lampeggia in rosso	Batteria scarica
Indicatore di carica rimane rosso	In carica
Indicatore di carica spento	Completamente carica

7. Reinizializzare

Premi il pulsante "Bluetooth" per 8 secondi.

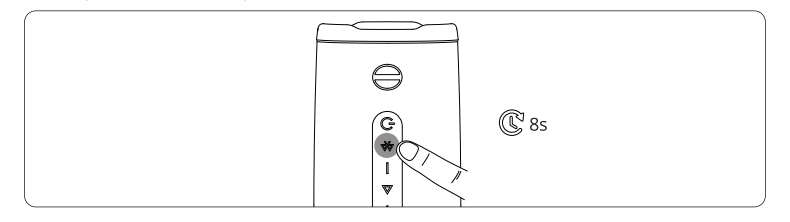

8. Spegnimento Automatico

L'altoparlante si spegnerà automaticamente dopo 30 minuti se non si associa a nessun dispositivo o non riproduce musica. Quando la batteria è scarica, l'altoparlante si spegnerà automaticamente.

App Tronsmart

Scarica "App Tronsmart" tramite Google Play o App Store.

Available on the App Store — ANDROID APP ON Google play

Apple e il logo Apple sono marchi di Apple Inc.

Google Play e il logo Google Play sono marchi di Google Inc.

Come Collegare l'app Tronsmart?

1. Attiva le impostazioni Bluetooth sul tuo dispositivo, cerca e fai clic su "Tronsmart Mirtune C3 Plus" per connetterti.
2. Apri l'app "Tronsmart" e consenti l'accesso al Bluetooth sul tuo dispositivo.
3. Scorri per trovare "Mirtune C3 Plus" e fai clic per connetterti.
4. Se la connessione è riuscita, puoi personalizzare equalizzatori, luci, ecc.

Cura e Manutenzione

- Non utilizzare alcun tipo di detergente o materiale di pulizia per pulire il prodotto poiché qualsiasi tipo di sostanza chimica potrebbe rendere questo dispositivo inutilizzabile.
- Non smontare questo prodotto. Non contiene parti riparabili dall'utente.
- Non lasciarlo cadere o saltarci sopra e trattarlo con cura per ottenere le migliori prestazioni.
- Conservare il prodotto in un luogo asciutto. Polvere, sporcizia e umidità possono accumularsi sul corpo del prodotto se conservato in un luogo ostile.
- Non smaltire questo prodotto nel fuoco o le batterie potrebbero esplodere o perdere.

Informazioni sulla Garanzia

Il tuo "Tronsmart Mirtune C3 Plus Portable Speaker" è garantito al proprietario originale per 12 mesi dalla data di acquisto contro difetti di materiale e fabbricazione in normali condizioni di utilizzo e assistenza. Tronsmart non è responsabile per l'uso accidentale di questo prodotto e la sua responsabilità non supererà il prezzo di acquisto del prodotto. In caso di problemi durante l'utilizzo del prodotto, non esitare a contattare il nostro team di assistenza clienti all'indirizzo support@tronsmart.com.